




# ASSEMBLY INSTRUCTION FOR






## MIRROR


### MC400MR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PARTS LIST				
NO.	PART DESC.	PART	CODE	QTY
A	MIRROR		MC400MR	1 pc
B	MIRROR SUPPORT		PMC400MRSLT	2 pcs
C	DRESSER		MC400DR	1 pc

HARDWARE LIST					
NO.	HARDWARE DESC.	PART	SIZE	CODE	QTY
1	ALLEN BOLT		M6 x 35mm	PMC400MRHW	8 pcs
2	SPRING WASHER		M8		8 pcs
3	FLAT WASHER		M8 x 18mm		8 pcs
4	ALLEN KEY		M4		1 pc
5	TIPPING RESTRAINT			PMC400ATKT	1 pc

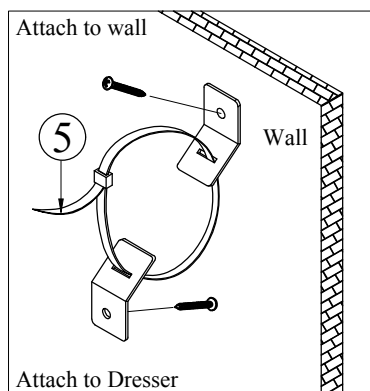

**STEP 2 :** Assembly the tipping Restraint (5) .  
the Tipping restraint must be attached at back  
of Dresser above and on the right or left

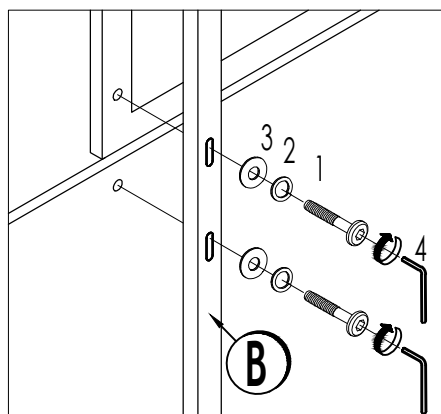

**STEP 1:** Attach the Mirror Supports (B) to Mirror (A) and  
Dresser (C) by using Allen Key M4 (4) to tight  
Flat Washer (3), Spring Washer (2) and Allen Bolt (1).

