

ASSEMBLY INSTRUCTION FOR KING BED

B-3690-3-KH/B-3690-3-KF1/B-3690-3-QKR
B-3690-8-KH/B-3690-8-KF1/B-3690-8-QKR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST FOR HEADBOARD


No.	Part Description	Code.	Q'ty
A	Headboard		1
B	Left & Right Headboard Leg	PB-3690-3-HBLEG PB-3690-8-HBLEG	2
C	Headboard Bottom Stretcher	PB-3690-3-KHSTR PB-3690-8-KHSTR	1

HARDWARE LIST FOR HEADBOARD

No.	Hardware Description		Code.	Q'ty
1		Flat washer 5/16"	PB-3690-KBHW	8
2		Spring washer 5/16"		8
3		Allen Bolt 5/16"*2"		8
4		Allen key 5/32"		1

Headboard Hardware Packed with Headboard

 Only tighten all bolts when all bolts aligned with bolt inserts.

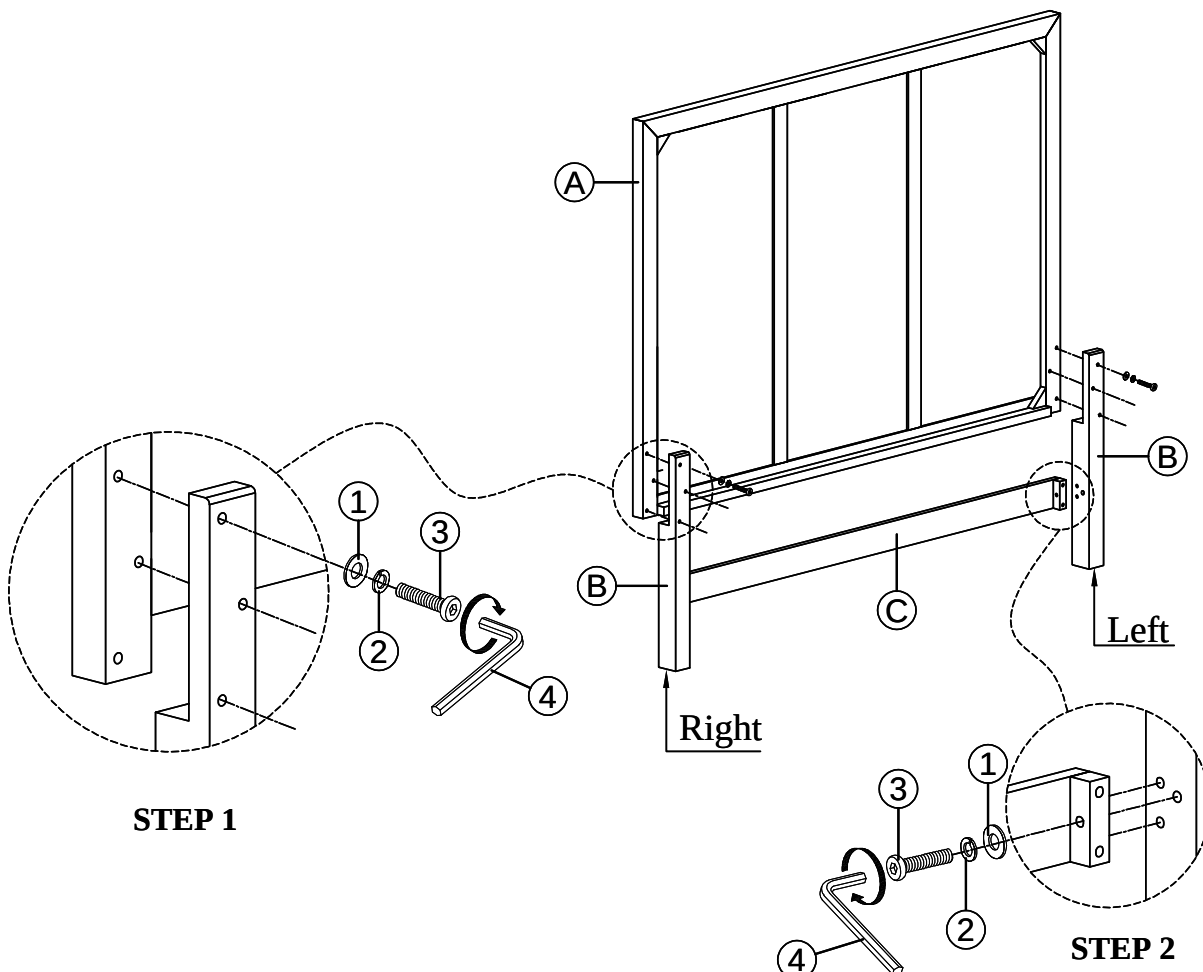

ASSEMBLY INSTRUCTION FOR KING BED

**B-3690-3-KH/B-3690-3-KF1/B-3690-3-QKR
B-3690-8-KH/B-3690-8-KF1/B-3690-8-QKR**

PART LIST FOR FOOTBOARD

No.	Part Description	Code.	Q'ty
D	Footboard		1
E	King Bed Slats	PB-3690-3-KF1SLT PB-3690-8-KF1SLT	4
F	Slat Support Leg with Leveler	PB-3690-3-BDSPL PB-3690-8-BDSPL	8
G	Side Rails		2

HARDWARE LIST FOR FOOTBOARD

No.	Hardware Description	Code.	Q'ty
5	 Wood Screw #8*1"	PB-3690-KBHW	8


Footboard Hardware Packed with Footboard

HARDWARE LIST FOR SIDERAIL

No.	Hardware Description	Code.	Q'ty
6	 Flat washer 5/16"	PB-3690-KBHW	12
7	 Spring washer 5/16"		12
8	 Allen Bolt 5/16"* 1"		12
4	 Allen key 5/32"		1

Siderail Hardware Packed with Siderail

 Only tighten all bolts when all bolts aligned with bolt inserts.

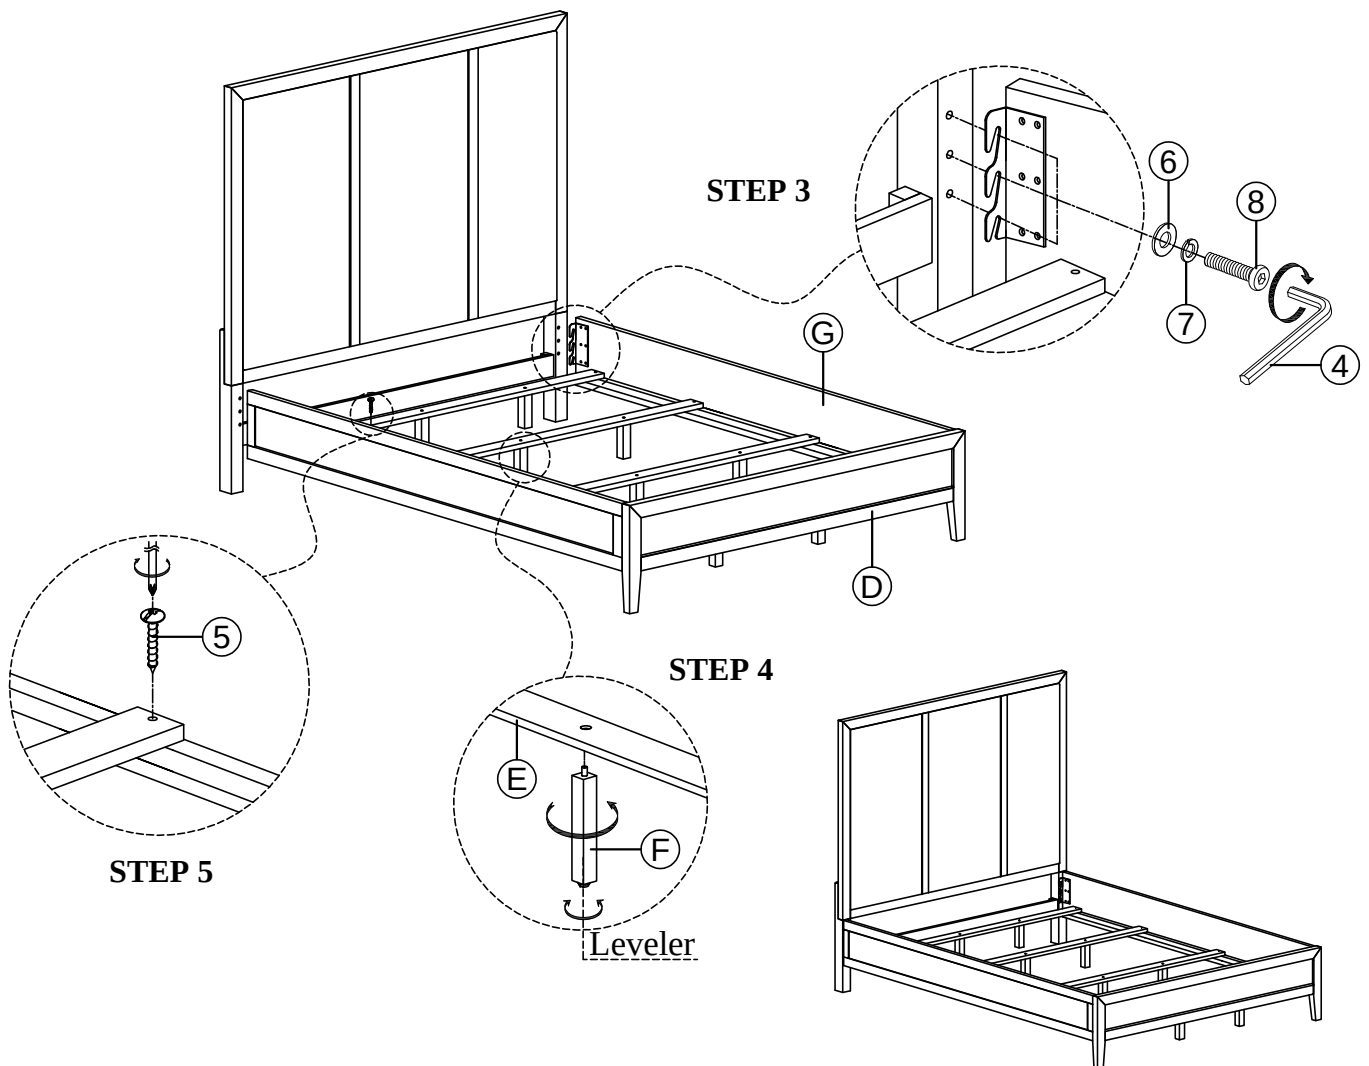

BED IN COMPLETE