ASSEMBLY INSTRUCTIONS

ITEM #: B325-10HB/10SFB/10/12R QUEEN PANEL STORAGE BED

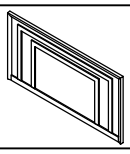

Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Before You Assemble: Please read all instructions carefully before beginning assembly.

It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.


CAUTION: For your safety, this product requires two people to lift.

PARTS LIST:


NO	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1PC
B	LEGS (LEFT & RIGHT)		2PCS
C	STRETCHER		1PC

HARDWARE PACKAGE: B325-10HB-HDWR


NO	DESCRIPTION	SKETCH	SIZE	QTY
1	Allen key		4*59*23mm	1 pcs
2	Bolt		Ø5/16*40mm	10 pcs
3	Spring Washer		Ø5/16	10 pcs
4	Flat Washer		Ø5/16*19mm	10 pcs
5	Wood Dowel		Ø8*30mm	4 pcs

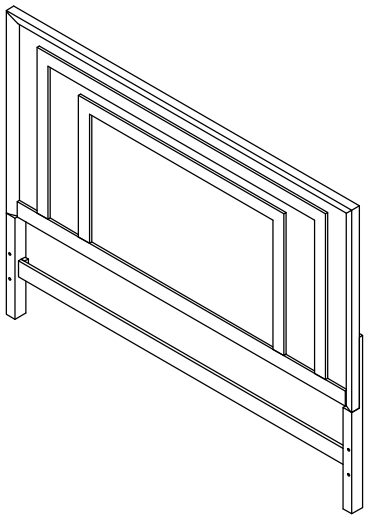

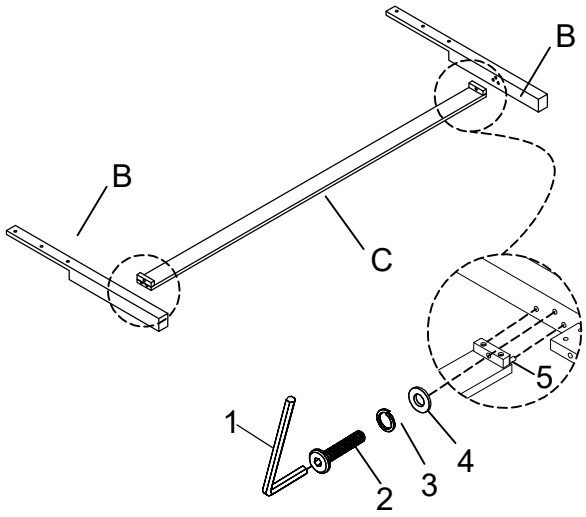STEP 1 Attach stretcher (C) to the legs (B) by using allen key (1),bolt (2), spring washer (3), flat washer (4) and wood dowel (5)



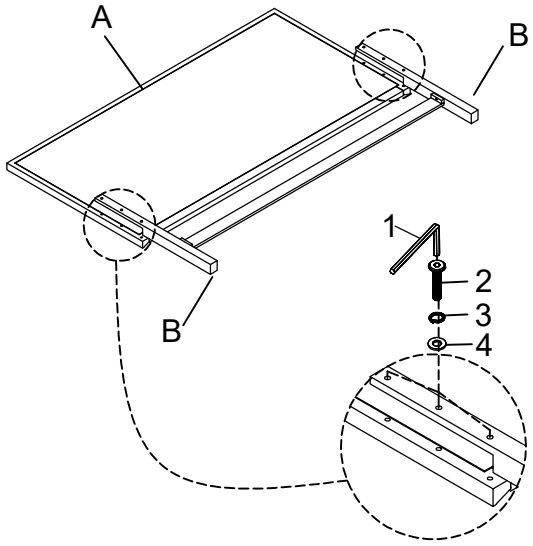STEP 2 Attach the legs (B) to the headboard (A) by using allen key (1), bolt (2), spring washer (3) and flat washer (4)



MADE IN VIETNAM

ASSEMBLY INSTRUCTIONS

ITEM #: B325-10HB/10SFB/10/12R QUEEN PANEL STORAGE BED



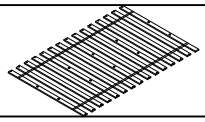
Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Before You Assemble : Please read all instructions carefully before beginning assembly.



It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.

PARTS LIST:

NO	DESCRIPTION	SKETCH	QTY
A	HEADBOARD		1PC
B	FOOTBOARD		1PC
C	SIDE RAILS		2PCS
D	SLAT ROLL		1SET
E	CENTER SUPPORT		5PCS

HARDWARE PACKAGE: B325-10/12R-HDWR

NO	DESCRIPTION	SKETCH	SIZE	QTY
1	Open wrench		Ø12mm	1 pcs
2	Thread bolt		Ø5/16*100mm	8 pcs
3	Curved slotted Washer		Ø5/16*25*16*2mm	8 pcs
4	Double hex nut		Ø5/16*12mm	8 pcs


HARDWARE PACKAGE: B325-10STFB-HDWR

NO	DESCRIPTION	SKETCH	SIZE	QTY
5	Screw		8*25mm	30 pcs


TOOLS REQUIRED (NOT PROVIDED):

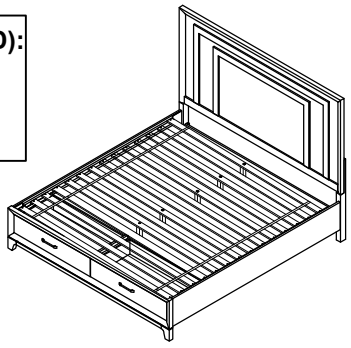PHILLIPS SCREWDRIVER






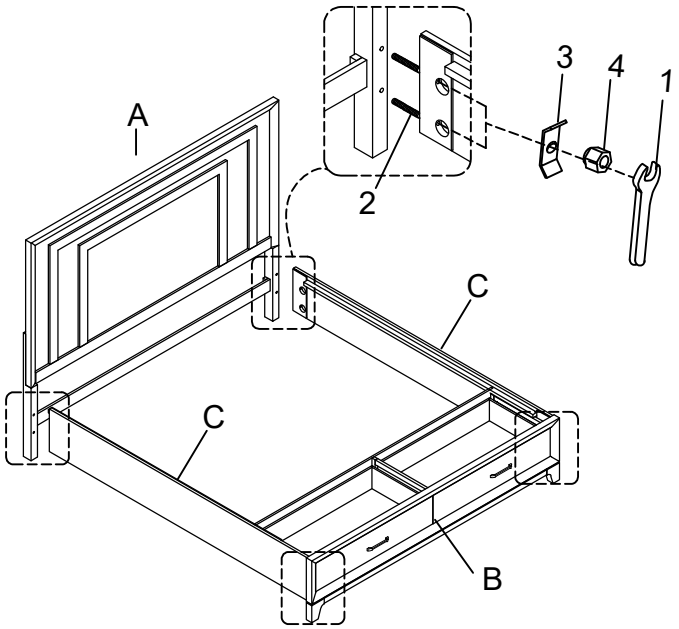STEP 3 Attach the side rails (C) to headboard (A) and the footbooard (B) using Open wrench (1), thread bolt (2), Curved slotted washer (3) and Double hex nut (4)



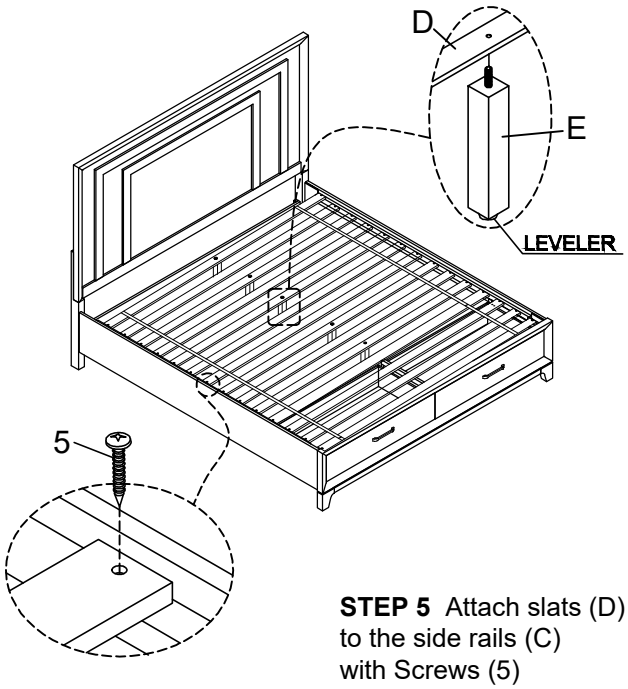STEP 4 Screw in the center supports (E) on slat (D)



STEP 5 Attach slats (D) to the side rails (C) with Screws (5)

MADE IN VIETNAM