


Assembly Instructions

1951-10 Wardrobe


Caution: Please wipe all drawer interiors thoroughly with a smooth rag before use.
there may be some residual dust from the production process

PARTS LIST


No	DESCRIPTION	Q'TY
P1	Wardrobe 	1 pc

HARDWARE LIST

No	DESCRIPTION	Q'TY
H1	 TIPPING RESTRAINT	1 set

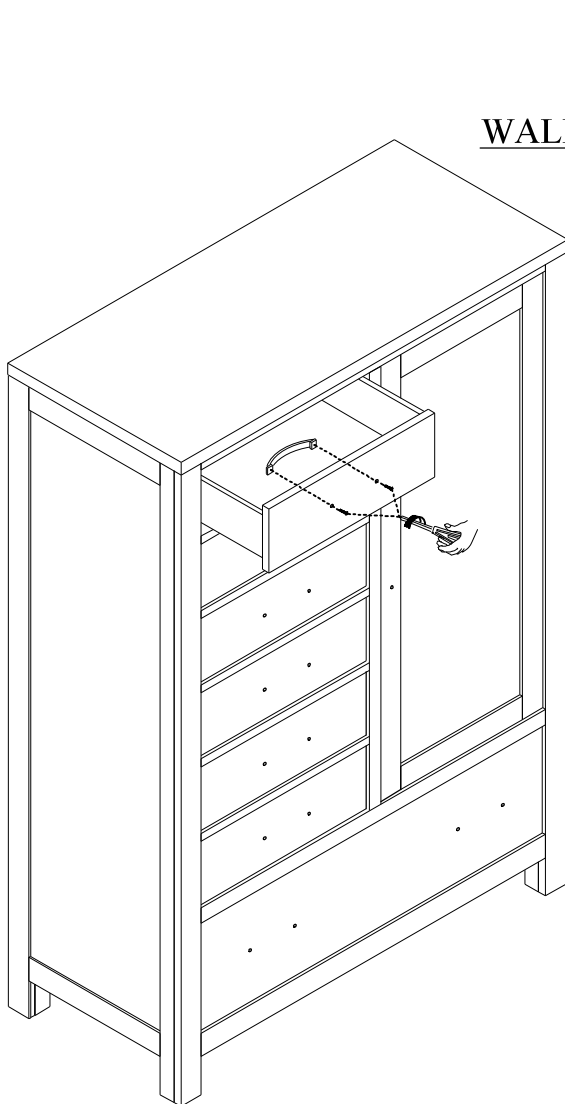

Step 1

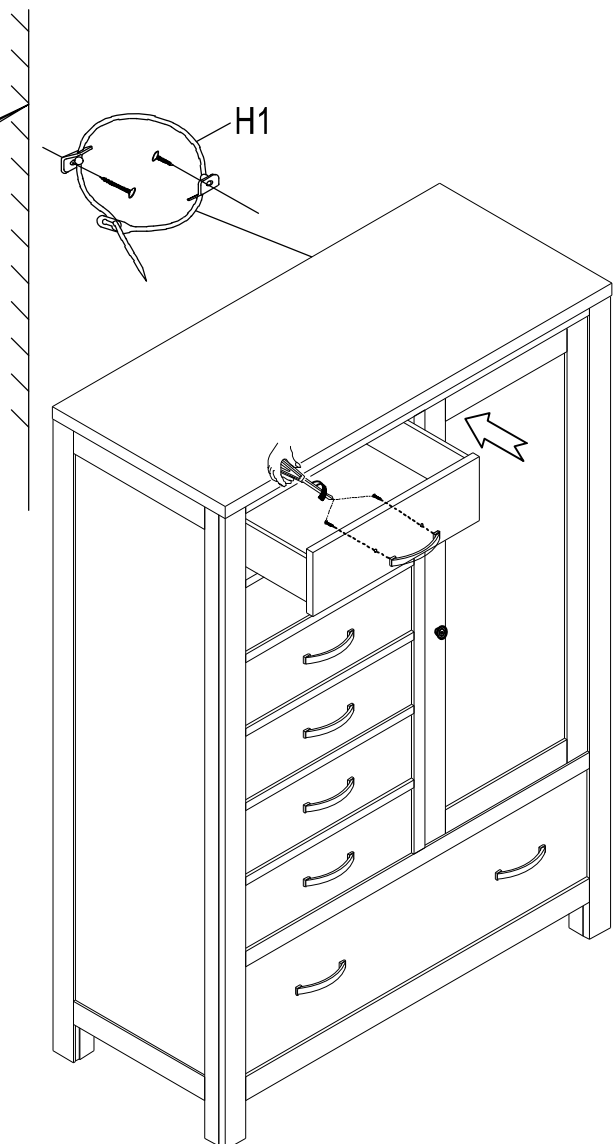

Step 2

NOTE: Anti tipping hardware kit comes with this product. Please refer to the installation instruction in the hardware pack.

Made In Vietnam