


ASSEMBLY INSTRUCTIONS *COASTER FINE FURNITURE*

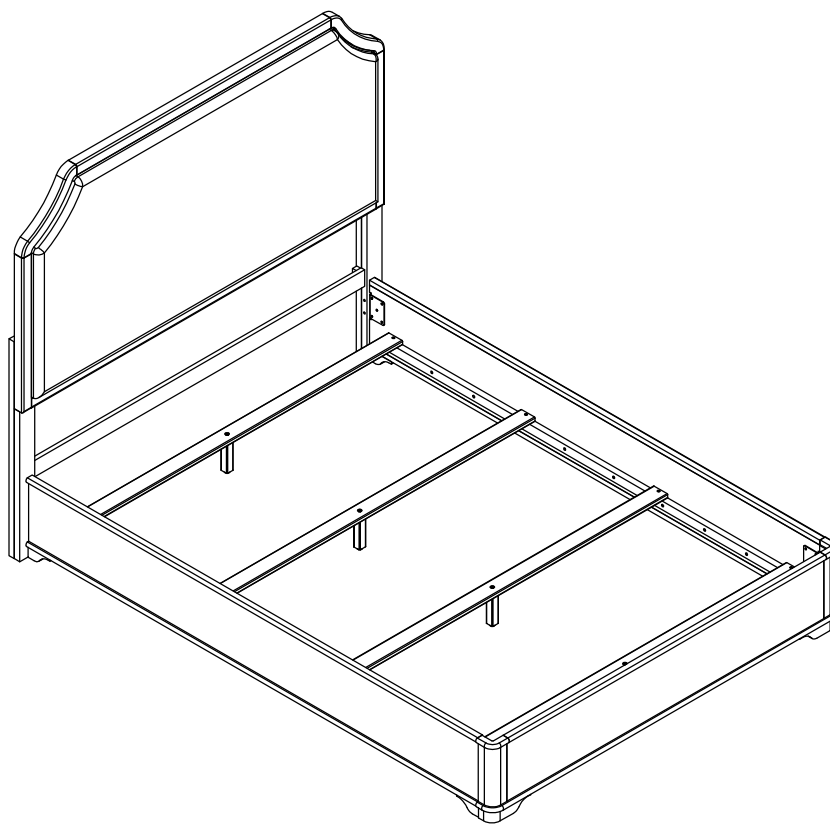

Fine Furniture for every stage of life

205301Q (B1-B3)
Queen Bed

ITEM: 205301Q (B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

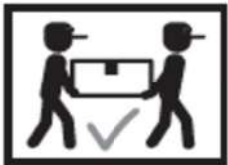


ASSEMBLY TIME


20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

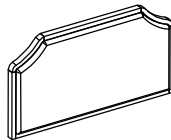A	HEADBOARD PANEL		1PC
B	LEFT HEADBOARD LEG		1PC
C	RIGHT HEADBOARD LEG		1PC
D	HEADBOARD BOTTOM RAIL		1PC

B2 (BOX 2)

E	FOOTBOARD		1PC
F	BED SLAT		4PCS
G	BED SLAT SUPPORT WITH LEVELER		4PCS

B3 (BOX 3)

H	BED RAIL		2PCS
---	----------	--	------

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 205301Q (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 205301Q (B1)

1	LONG BOLT (M8 x 40mm - BLK)		6PCS
2	BIG LOCK WASHER (M8 - BLK)		6PCS
3	BIG FLAT WASHER (M8 x 18mm - BLK)		6PCS
4	SHORT BOLT (M6 x 35mm - BLK)		4PCS
5	SMALL LOCK WASHER (M6 - BLK)		4PCS
6	SMALL FLAT WASHER (M6 x 13mm - BLK)		4PCS
7	PAN HEAD SCREW (M4 x 30mm - BLK)		8PCS
8	SMALL ALLEN WRENCH (M4 x 65mm - BLK)		1PC
9	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **205301Q (B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 1

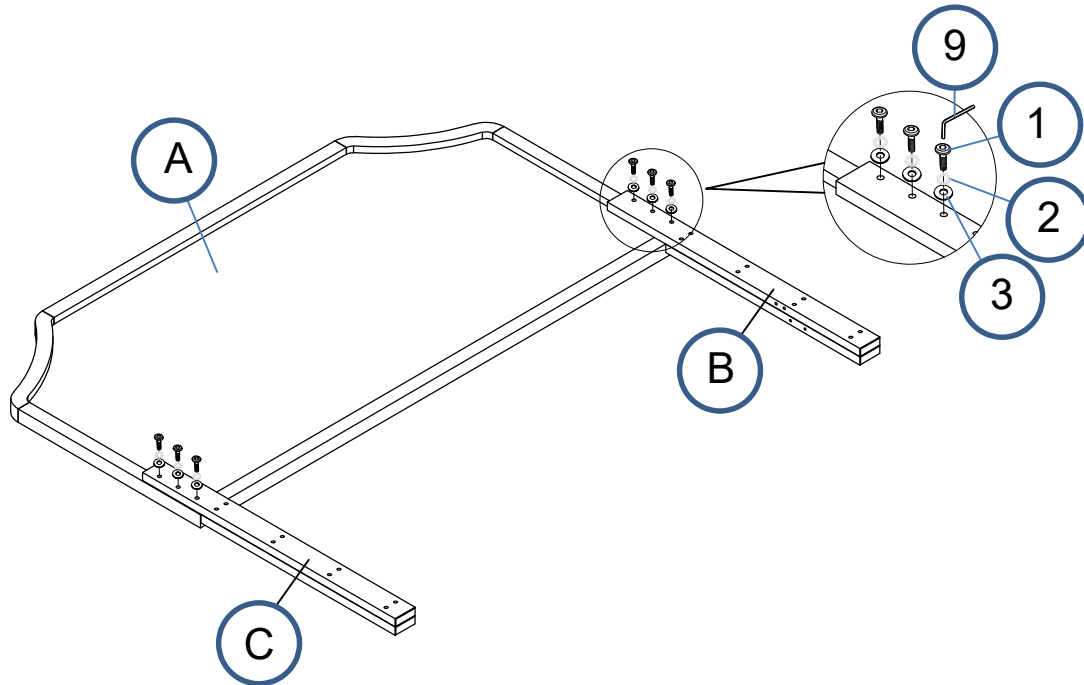

BACK VIEW

STEP 2

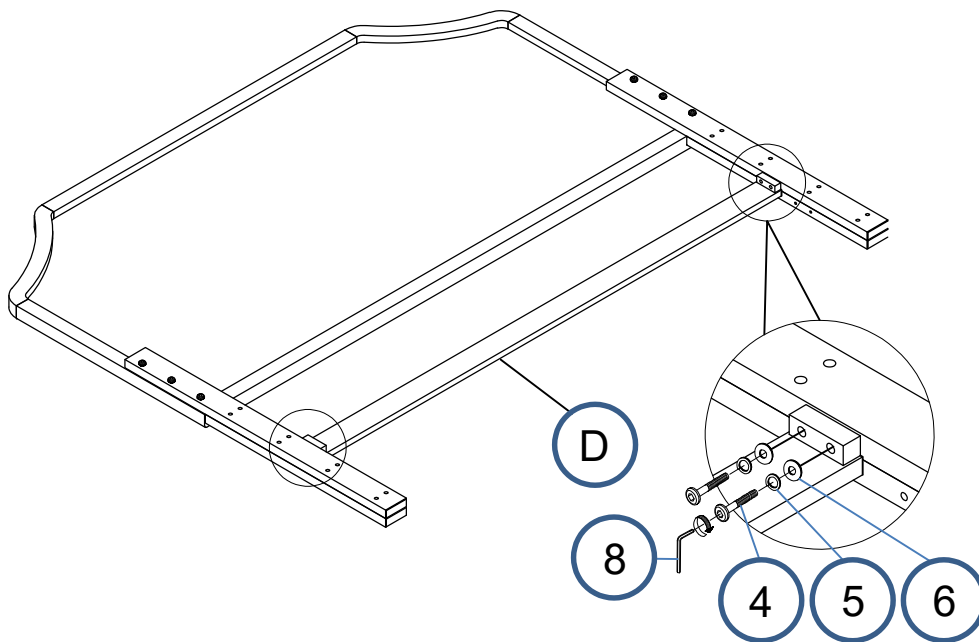


ITEM: **205301Q (B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 3

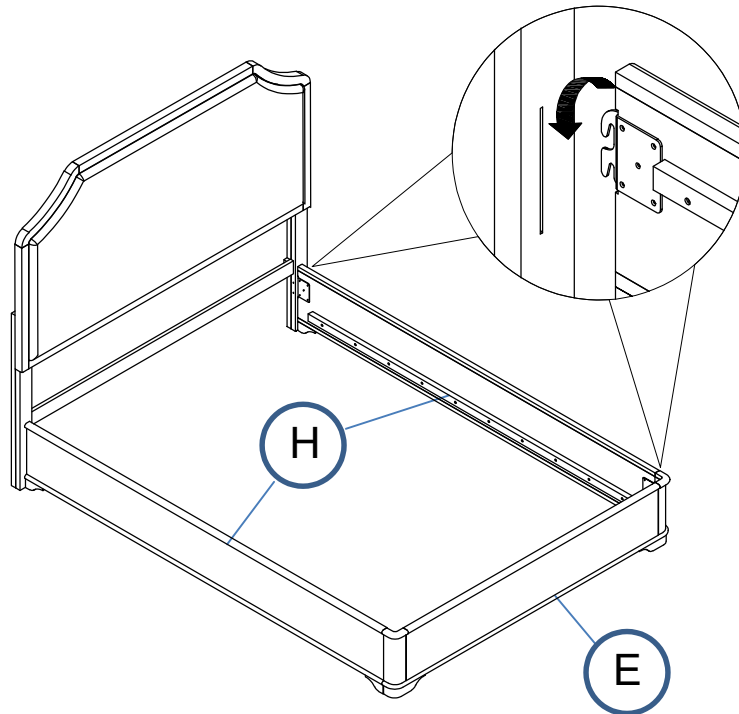

STEP 4

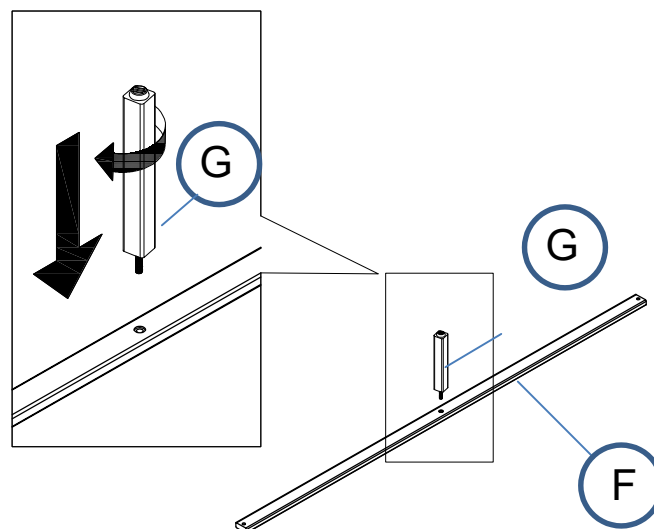


ITEM: **205301Q (B1-B3)**




ASSEMBLY INSTRUCTIONS

STEP 5

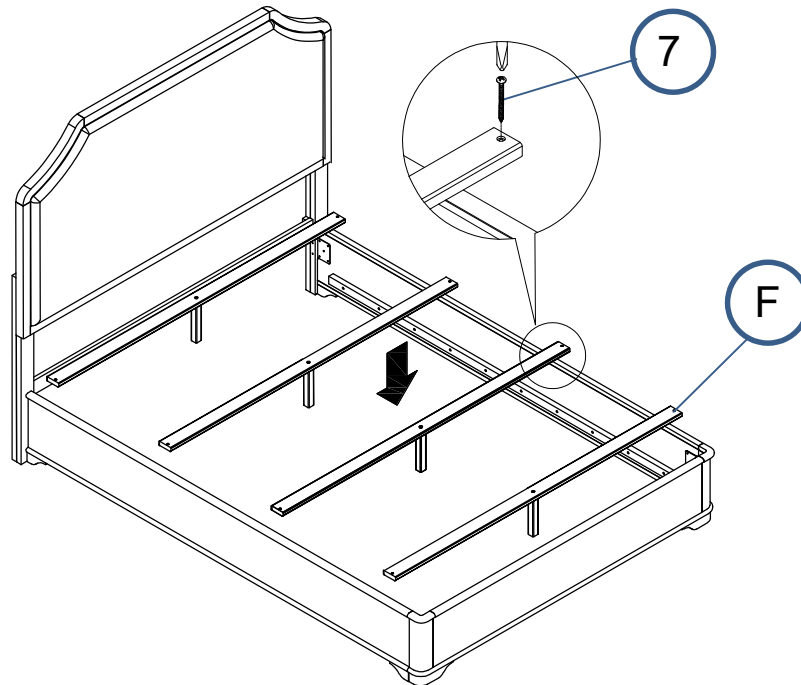

STEP 6 **COMPLETE**

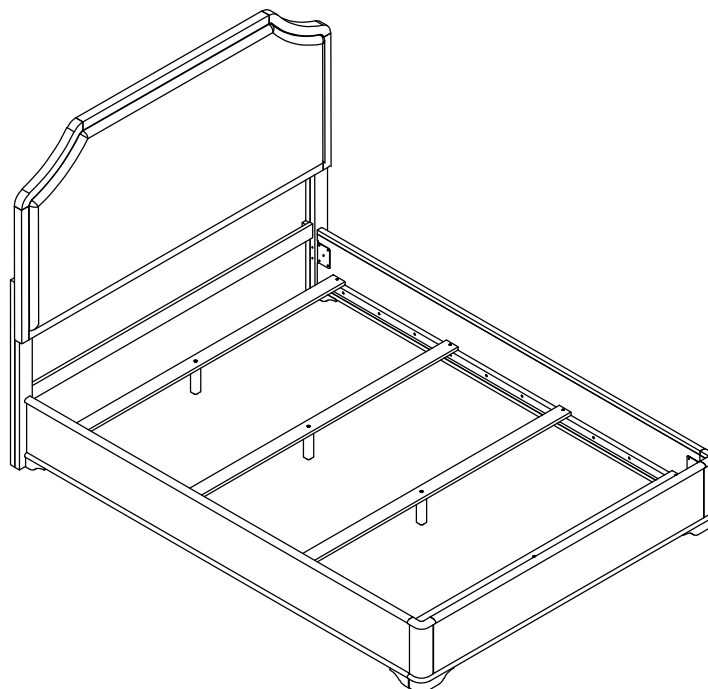



Technical drawing of a bed frame showing dimensions in inches. The drawing includes a side view and a perspective view. Key dimensions are labeled:

- Overall width: 65.25"
- Overall height: 57.50"
- Headboard height: 34.00"
- Headboard width: 60.00"
- Headboard depth: 17.25"
- Footboard width: 60.75"
- Footboard depth: 6.50"
- Footboard height: 12.50"
- Footboard thickness: 1.75"
- Footboard width (inner): 53.75"
- Footboard width (outer): 63.00"
- Footboard height (inner): 5.25"
- Footboard height (outer): 78.00"
- Footboard height (total): 86.00"


COASTERFURNITURE.COM

ITEM: **205302**



Inner Size of Drawer : 19.00"W X 12.50"D X 4.00"H X 0.50"T


Inner Size of Hidden Drawer : 19.00"W X 12.50"D X 1.25"H X 0.50"T

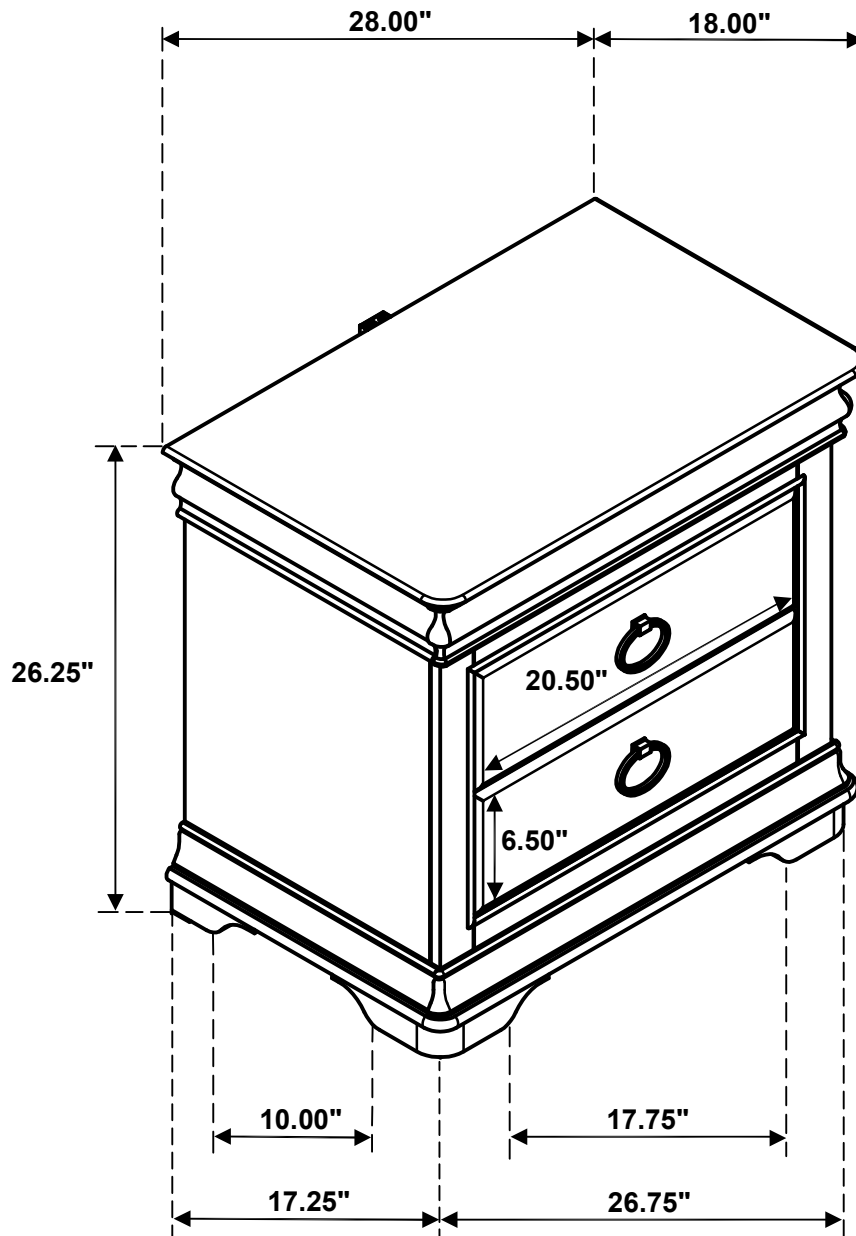

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

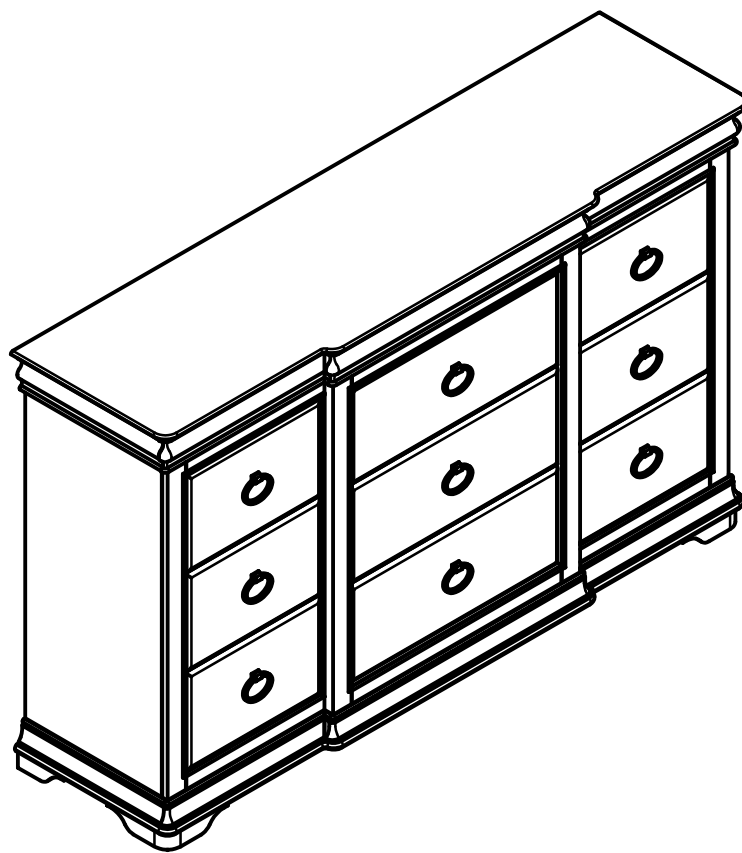

Fine Furniture for every stage of life

205303
Dresser

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.

1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

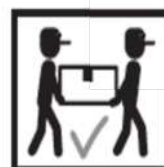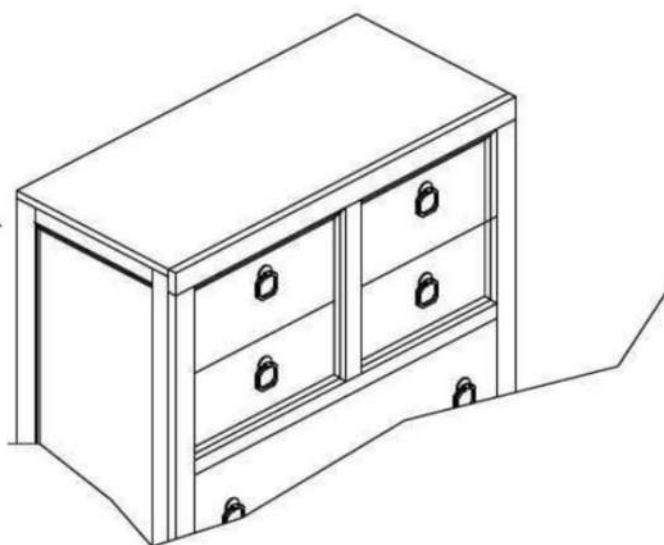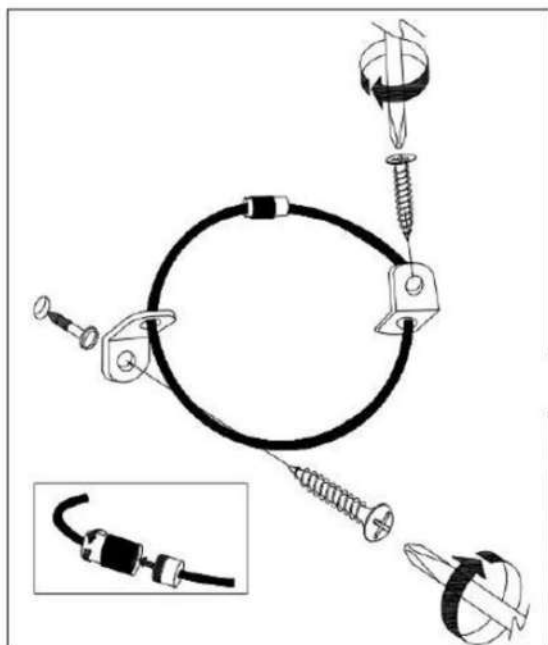


ITEM: **205303**



Inner Size of Drawer A : 13.75"W X 12.50"D X 7.25"H X 0.50"T


Inner Size of Drawer B : 22.25"W X 12.50"D X 7.25"H X 0.50"T

Inner Size of Hidden Drawer : 11.75"W X 12.50"D X 1.25"H X 0.50"T

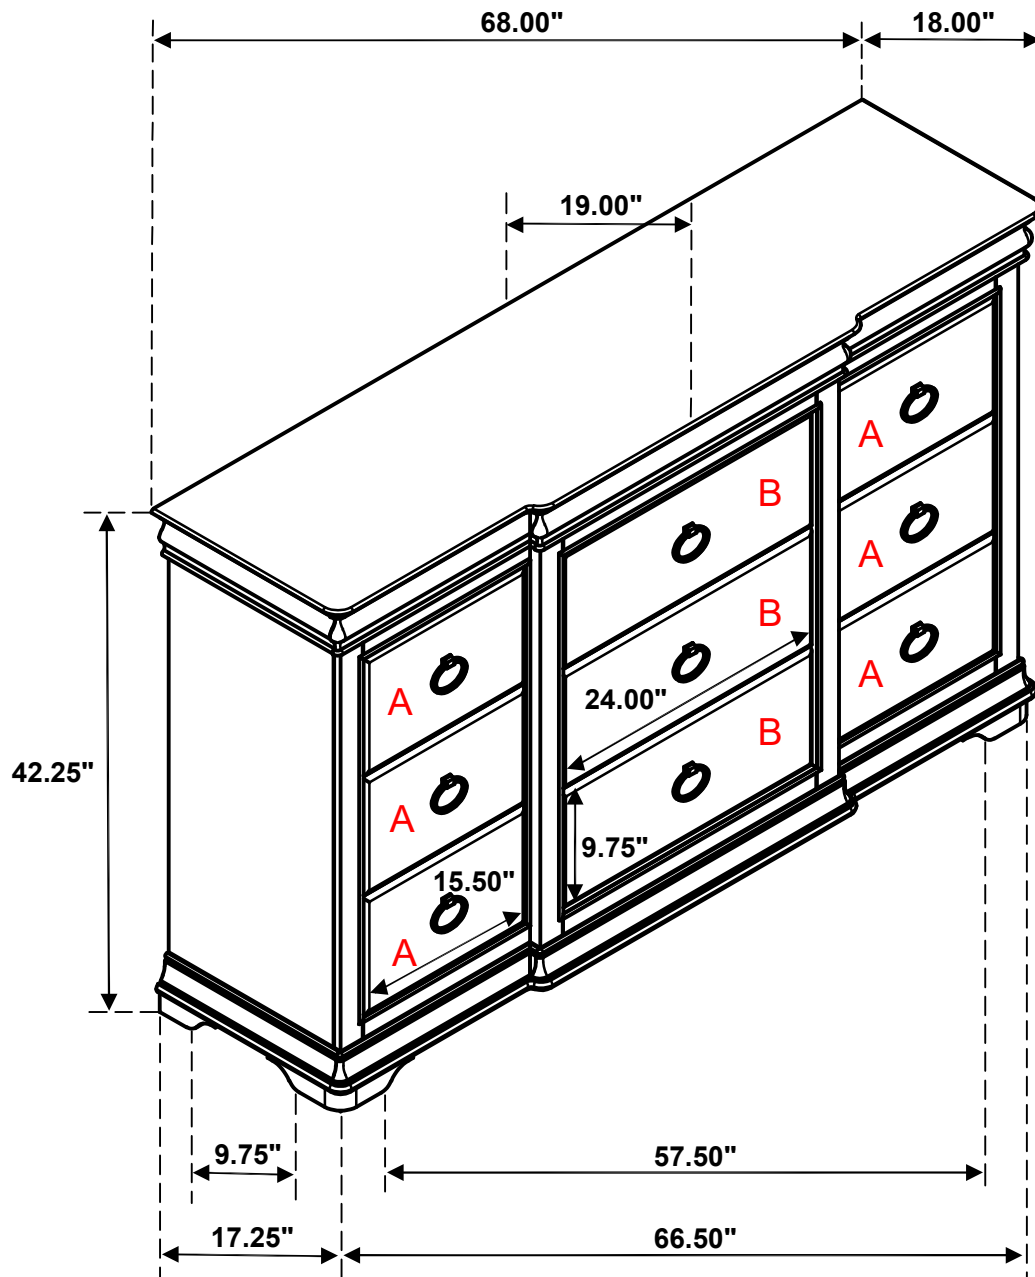

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

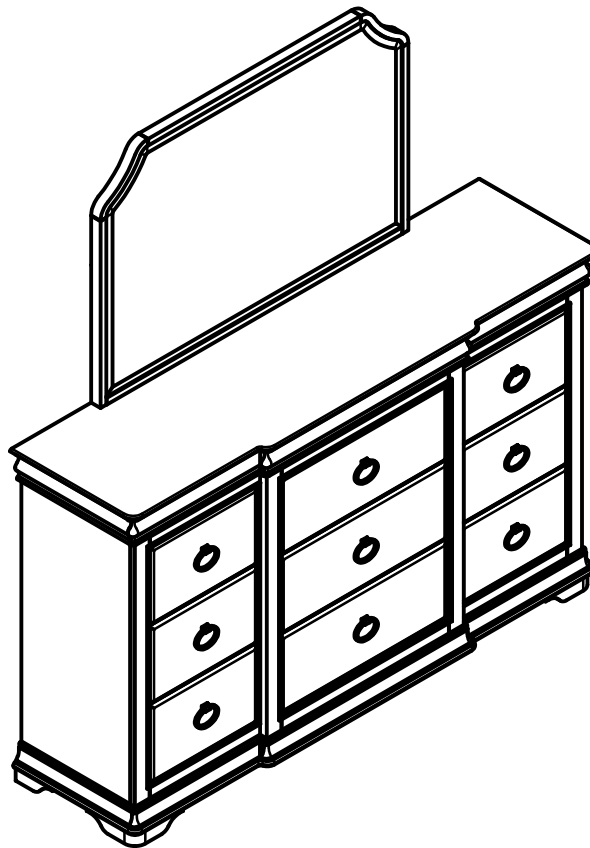

Fine Furniture for every stage of life

205304
Mirror

ITEM: **205304**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR




1PC

B MIRROR SUPPORT
(PACKED WITH MIRROR)



2PCS


C DRESSER
FROM BOX ITEM# 205303

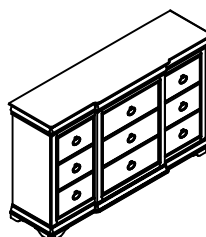

1PC

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 35mm - BLK)



8PCS

2 LOCK WASHER
(M8 - BLK)



8PCS

3 FLAT WASHER
(M8 x 18mm - BLK)



8PCS

4 ALLEN WRENCH
(M4 x 65mm - BLK)




1PC


ITEM: **205304**

ASSEMBLY INSTRUCTIONS


STEP 1

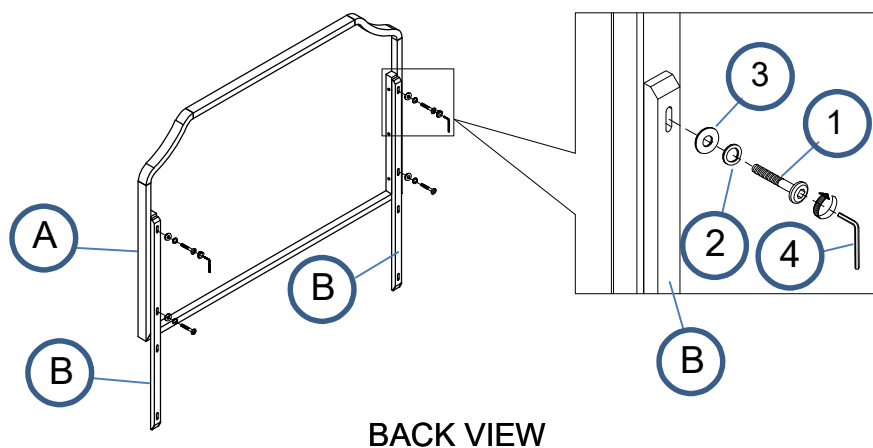


STEP 2

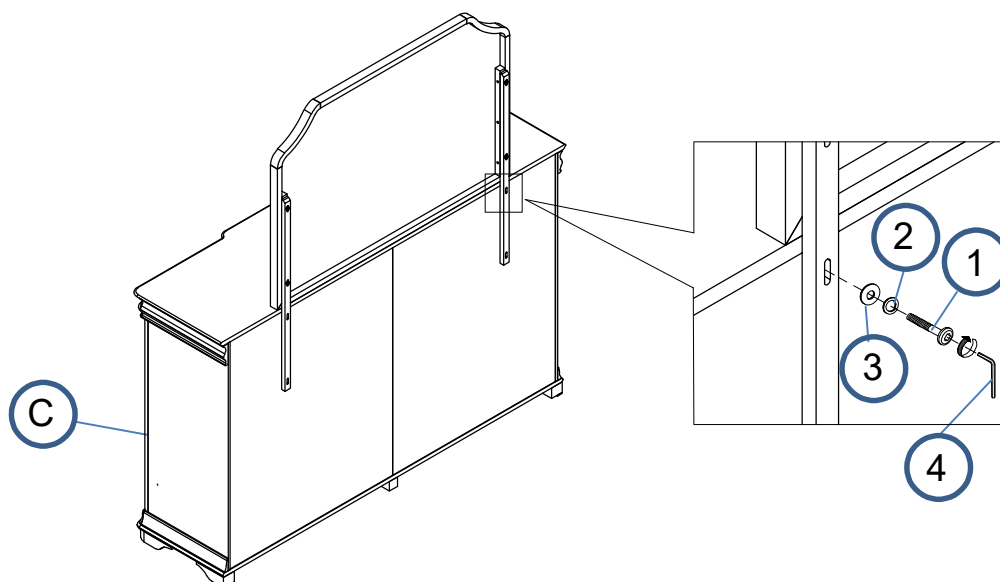

STEP 3 COMPLETE

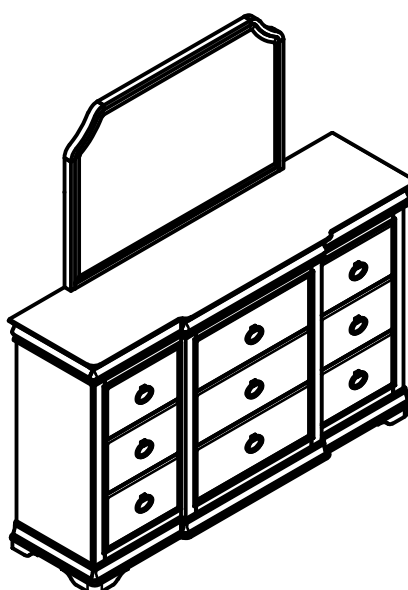


ITEM: **205304**

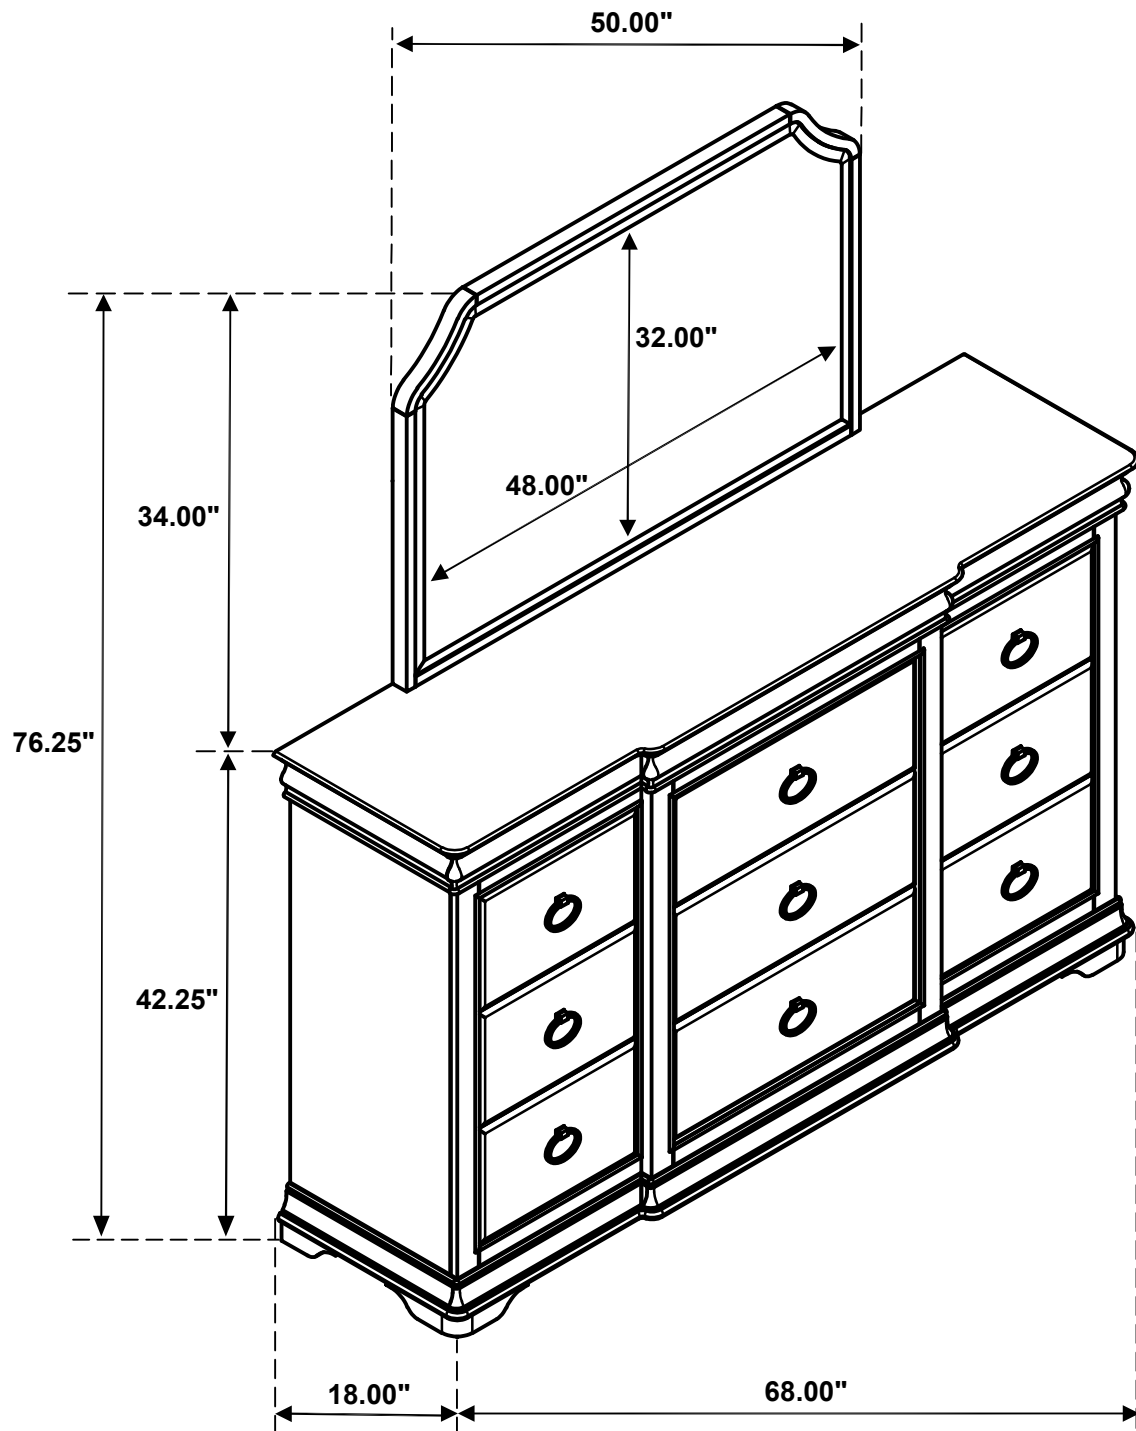

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

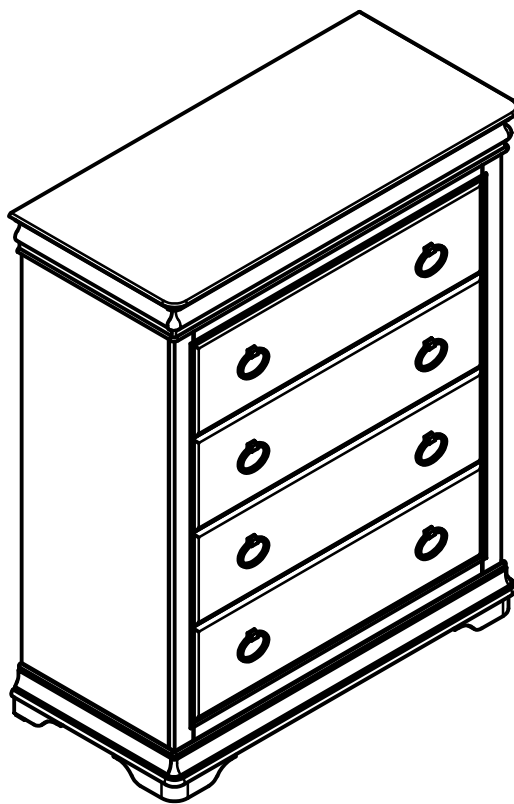

Fine Furniture for every stage of life

205305
Chest

ANTI-TIPPING INSTALLATION INSTRUCTIONS

FURNITURE TIPPING RESTRAINT

WARNING

Injury may result from tipping furniture.




This restraint may protect against tipping furniture.

Do not allow children to climb on furniture.

This restraint is not a substitute for proper adult supervision.

Failure to detach this restraint before moving the furniture may result in injury and damage.


1. Attach one of the mounting brackets securely to the back edge of the unit, using the short screw.
2. Determine where the unit is to be placed, and mark the location on the wall for the other mounting bracket. The bracket on the wall needs to be approximately 2" below the bracket mounted to the edge of the unit.
3. Drill a hole in the wall. Insert the plastic wall anchor into the hole and if necessary, use a small block of wood and hammer to tap it in so that it's flush with the wall.
4. Attach the bracket over the plastic wall anchor using the long screw.
5. Place the unit against the wall, both brackets need to be facing each other.
6. Lace an end of the restraint strap through the hole in each bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight.
7. Ensure that the restraint strap is securely laced and locked.

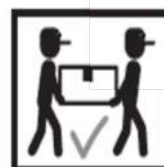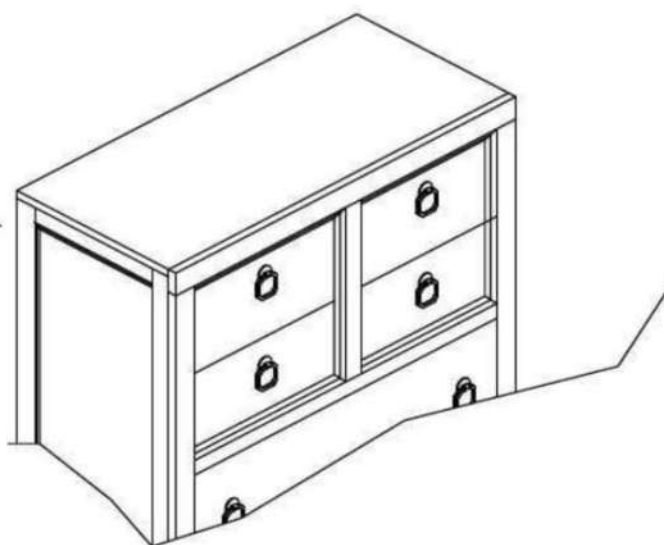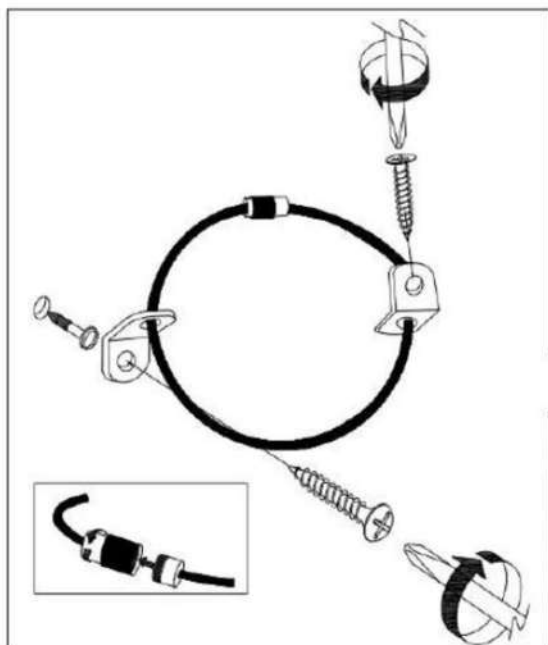

ITEM: **205305**



Inner Size of Drawer : 31.00"W X 12.50"D X 6.25"H X 0.50"T

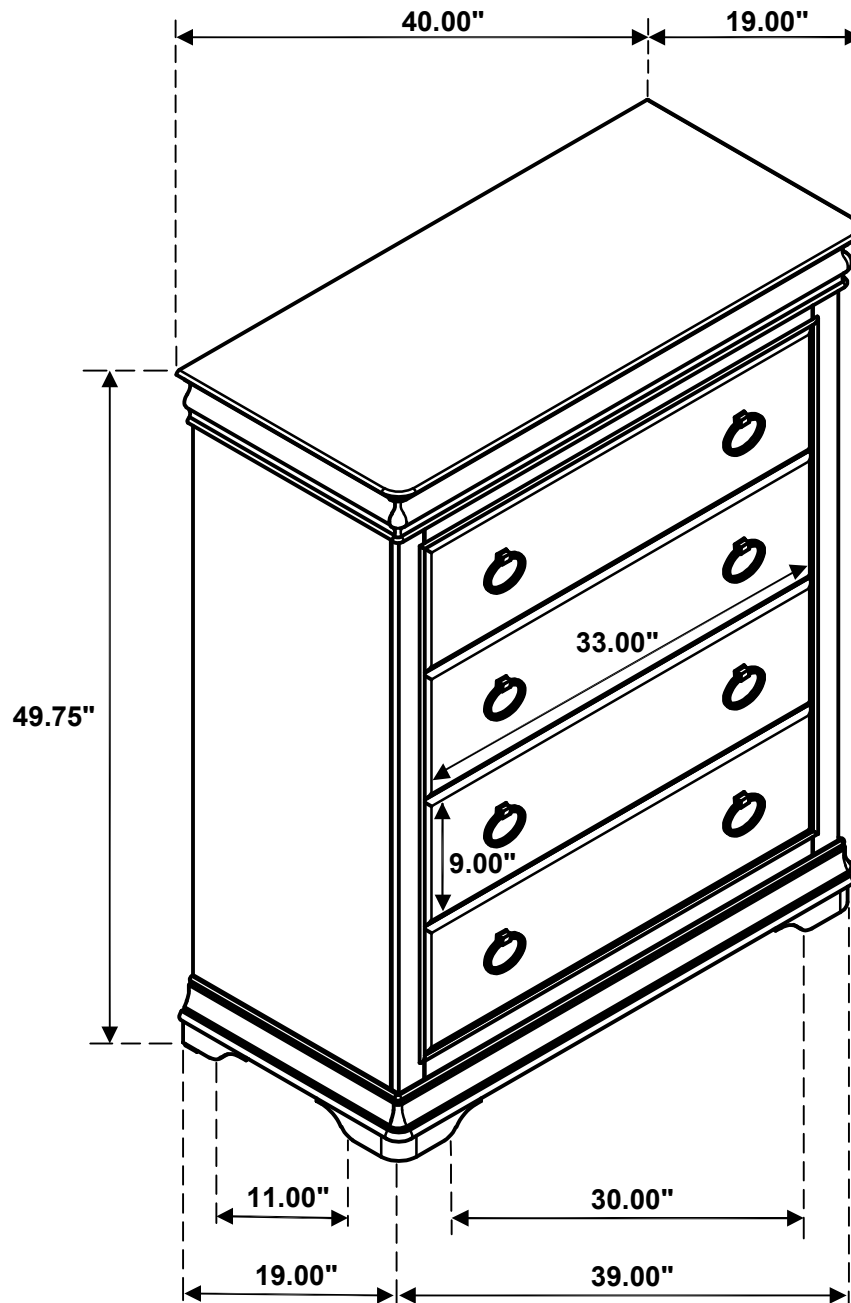

Note : Dimension tolerance $\pm 5\%$