



1160015

Darwin KD PU
Bamboo Office
Chair

Assembly Instructions

Hardware identification



A M 6*18MM x 04




B M5 x 01

Part identification



① x 1PC



② x 1PC



③ x 1PC



④ x 1PC




⑤ x 5PCS




⑥ x 1PC

1

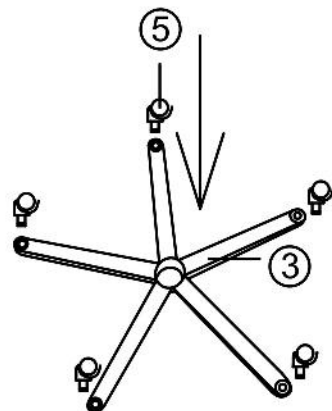


2


Warning!
please remove the
plastic cap during
assembly!

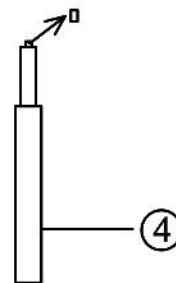


3

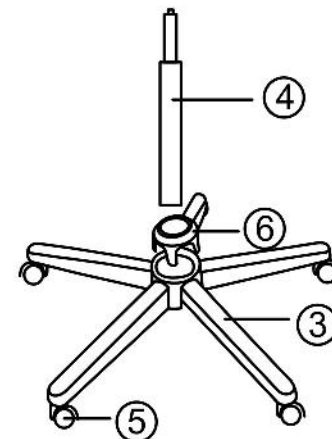

4

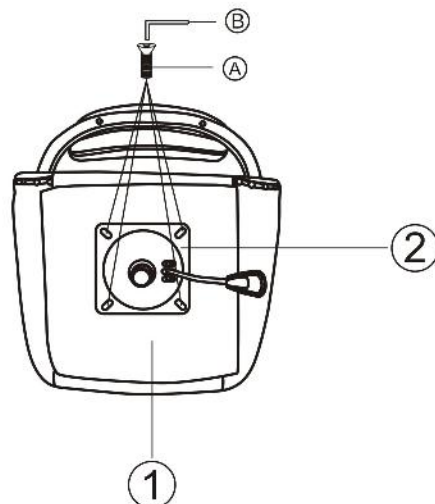

5

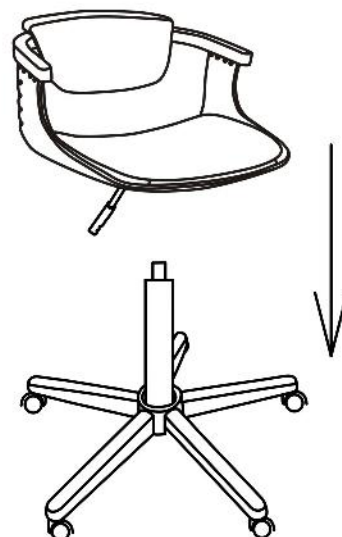

6

