CARACOLE CLASSIC

ASSEMBLY INSTRUCTIONS


PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

- 1) Place the product on soft ground;
- 2) Place 4 Pcs of clear bumpers (A) into the metal top frame, then put the glass top (1) in ;
- 3) Place Mirror (2) into the metal shelf frame, And the installation is completed;

*** NOTE KEEP THIS SHEET ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

	CLA-021-401 PRINCE CHARMING						
Part List							
Hardware List			Part Number	QTY			
1	(Glass Top	CLA-021-401-029	1			
2	•	Mirror	CLA-021-401-072	1			
3	•	Adjustable Floor Glide	CLA-021-401-075	4			

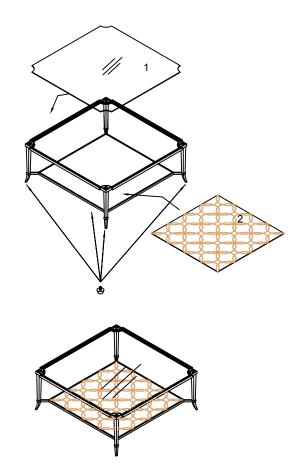

RTA Hardware							
	QTY						
A	0	Clear Bumper		8			

Created on: 2022-02-24 Page 1 of 1