

Fine Furniture for every stage of life

225061F (B1&B2) Full Bed

REVISION 0: 11/23/2024

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

Α	HEADBOARD PANEL	1PC	E	FOOTBOARD SUPPORT BAR	1PC
В	FOOTBOARD PANEL	1PC	F	BED SLAT	4PCS
С	LEFT HEADBOARD LEG	1PC	G	BED SLAT SUPPORT WITH LEVELER	4PCS
D	RIGHT HEADBOARD LEG	1PC			

B2 (BOX 2)

<u>B2</u>	(BOX 2)		•		
Н	LEFT BED RAIL	1PC	J	FOOTBOARD LEG	2PCS
I	RIGHT BED RAIL	1PC			
НВ	225061F(B1) FROM BOX 1 HEADBOARD COMPLETE	1PC	FB	225061F(B1) FROM BOX 1 FOOTBOARD PANEL	1PC

NOTE:

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 225061F (B1)

1	SMALL ALLEN WRENCH (M4 x 65mm - BLK)	1PC	4	LOCK WASHER (1/4" - BLK)	6PCS
2	BIG ALLEN WRENCH (M5 x 65mm - BLK)	1PC	5	FLAT WASHER (1/4"ID x 13mm - BLK)	6PCS
3	SHORT BOLT (M6 x 35mm - BLK)	6PCS			

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 225061F (B2)

6	SMALL ALLEN WRENC (M4 x 65mm - BLK)	CH /	1PC	10	LOCK WASHER (1/4" - BLK)		6PCS
7	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC	11	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
8	LONG BOLT (M6 x 80mm - BLK)		2PCS	12	SHORT FLAT HEAD SCREW (M4 x 32mm - RBW)	()	8PCS
9	MEDIUM BOLT (M6 x 50mm - BLK)		4PCS	13	LONG FLAT HEAD SCREW (M4 x 50mm - RBW)	+ ************************************	4PCS

NOTE:




ASSEMBLY INSTRUCTIONS

STEP 1


Note: Please take note of the marking sticker

(L&R) on the headboard legs.

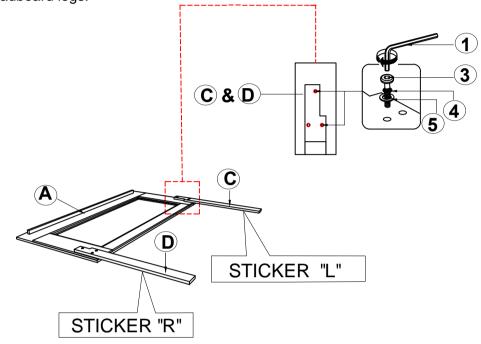

BACK VIEW


STEP 2

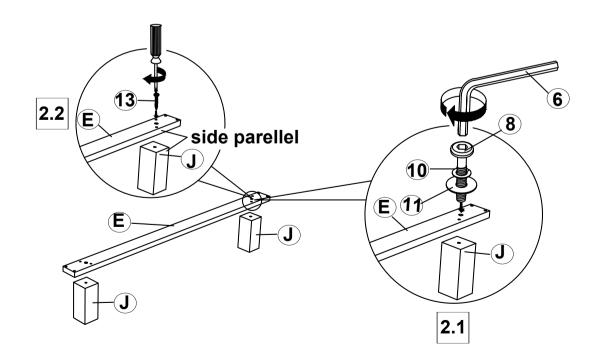


PAGE 4 OF 6

COASTER

ASSEMBLY INSTRUCTIONS STEP 3

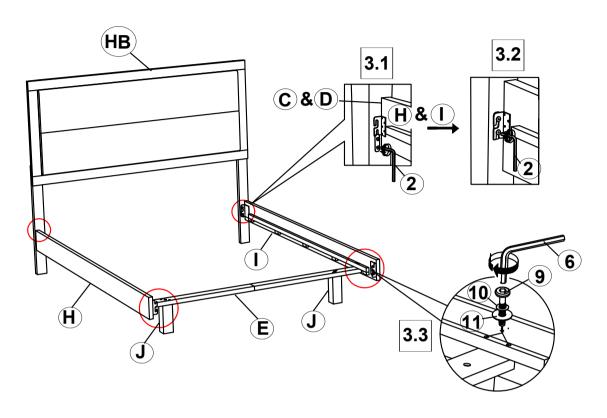

STEP 4

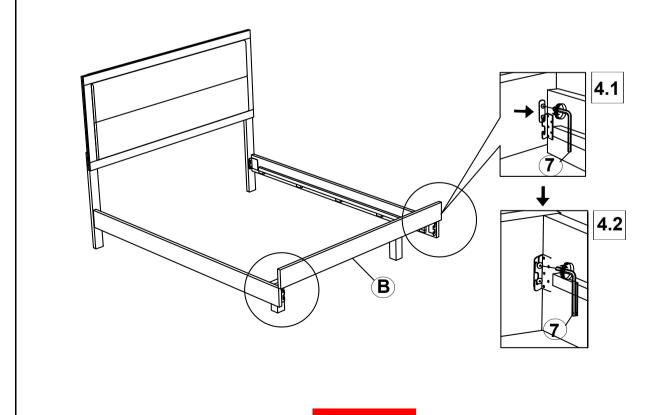


PAGE 5 OF 6




ASSEMBLY INSTRUCTIONS

STEP 5

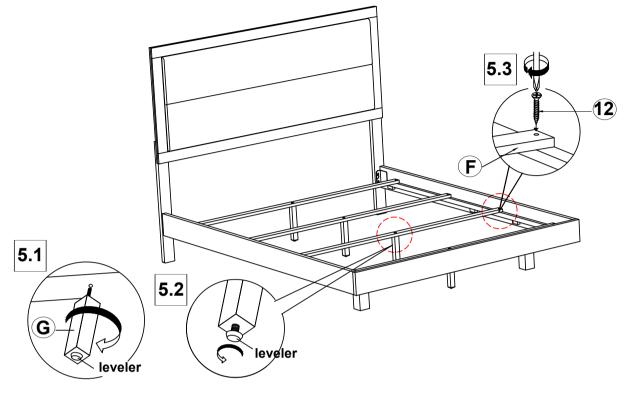

STEP 6 COMPLETE

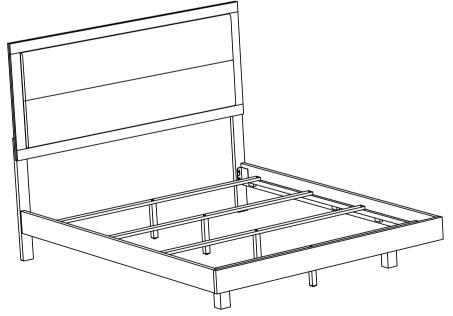


ķ

ITEM:**225061F (В1&В2)**



Inner Size: 55.00"W X 76.00"D

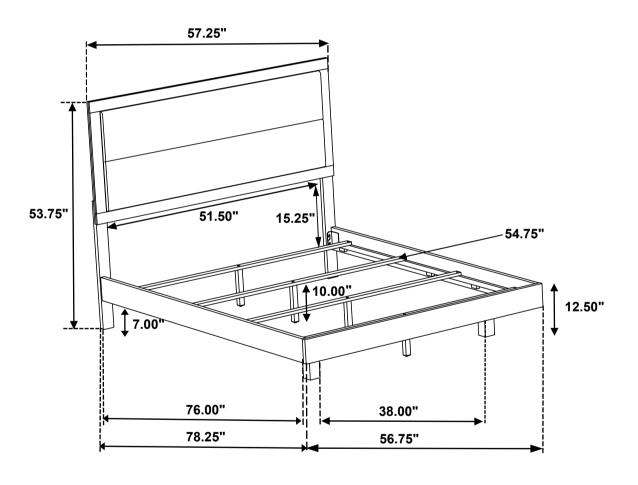

Note: Dimension tolerance ± 5%





Fine Furniture for every stage of life

225062 *Nightstand*

REVISION 0: 11/23/2024

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

1PC

B LEG WITH LABEL "R"

2PCS

HARDWARE IDENTIFICATION

1	BOLT (M6 x 35mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	4PCS
4	WOOD DOWEL (8 x 20mm)	4PCS
5	ALLEN WRENCH (M4 x 60mm - BLK)	1PC


NOTE:


ASSEMBLY INSTRUCTIONS

STEP 1




STEP 2

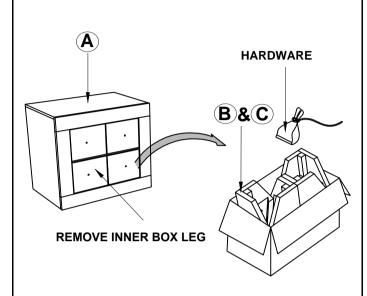

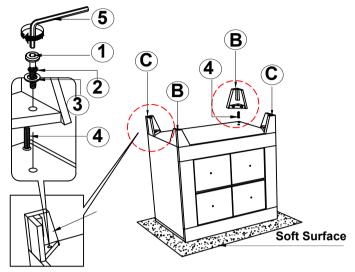

Bottom View

STEP 3

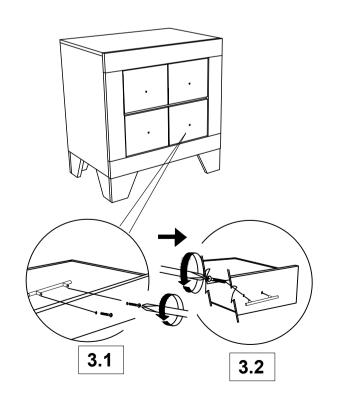


STEP 4 COMPLETE







Inner Size of Drawer: 12.75"W x 11.25"D x 4.25"H x 0.25"T

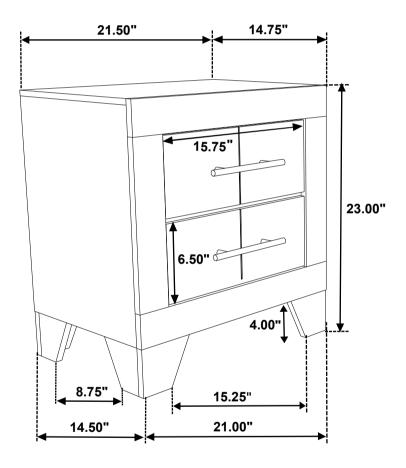

Note: Dimension tolerance ± 5%





Fine Furniture for every stage of life

225063 Dresser

REVISION 0: 11/23/2024

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

Α	DRESSER	1PC
В	LEG WITH LABEL "R"	2PCS
С	LEG WITH LABEL "L"	2PCS
D	CENTER SUPPORT LEG WITH LEVELER	1PC

HARDWARE IDENTIFICATION


1	BOLT (M6 x 35mm - BLK)	4PCS
2	LOCK WASHER (1/4" - BLK)	4PCS
3	FLAT WASHER (1/4"ID x 19mm - BLK)	4PCS
4	WOOD DOWEL (8 x 20mm)	4PCS
5	ALLEN WRENCH (M4 x 60mm - BLK)	1PC

NOTE:


ASSEMBLY INSTRUCTIONS

COASTER'

STEP 1

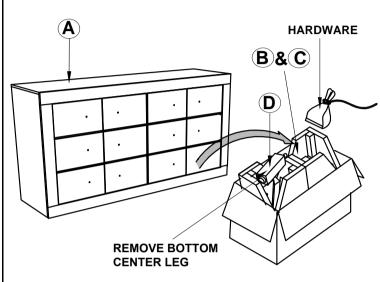


STEP 2

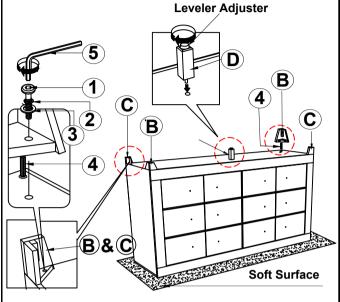

Bottom View

STEP 3

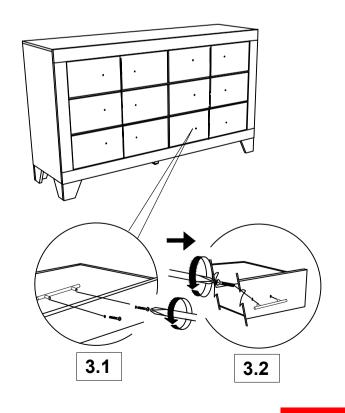

STEP 4 COMPLETE






COASTERFURNITURE.COM

PAGE 3 OF 3



Inner Size of Drawer : 23.25"W x 11.25"D x 5.25"H x 0.25"T

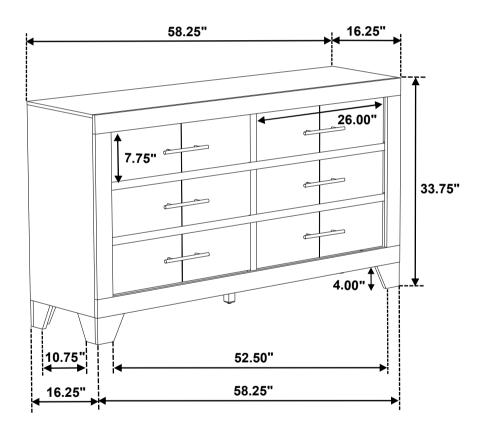

Note: Dimension tolerance ± 5%





Fine Furniture for every stage of life

225064 *Mirror*

REVISION 0: 11/23/2024

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.





10 MINUTES

PARTS IDENTIFICATION

A MIRROR 1PC

B DRESSER FROM
BOX ITEM #225063

1PC

C MIRROR SUPPORT (PACK WITH MIRROR) 2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW

(M4 x 32mm - RBW)


10PCS

NOTE:


ASSEMBLY INSTRUCTIONS

STEP 1



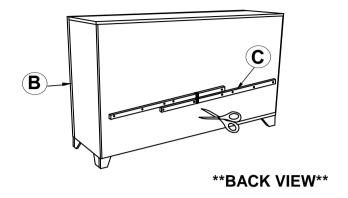

STEP 2

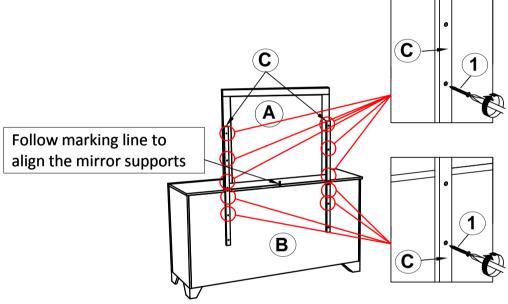


STEP 3 COMPLETE





PAGE 3 OF 3



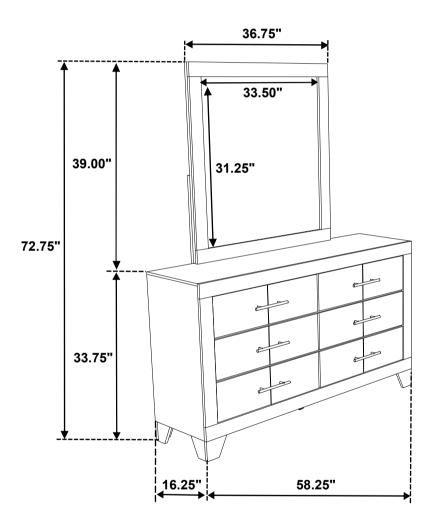

Note: Dimension tolerance ± 5%