Assembly Instruction

BEDROOM express

BE5108-22H+22F+22R 6/6 Sleigh Headboard + Footboard + Rails
BE5108-23H+23F+C23R 6/0 Sleigh Headboard + Footboard + Rails


WARNING: To avoid alignment issue, please don't tighten the screws unless all leg are adjusted at the same level.

HARDWARE LIST			
NO.	HARDWARE DESC		QTY' / QTÉ
A	Allen bolt (1/4 x55mm)		6 PCS
B	Spring washer (Ø1/4")		6 PCS
C	Washer (Ø1/4"x16mm)		6 PCS
D	L Wrench 1/4"		1 PC
E	Screw (#4 x 30mm)		10 PC
F	Dowel (Ø8 x 30mm)		4 PC
TOOL REQUIRED (NOT PROVIDED): PHILLIPS SCREWDRIVER			

PART LIST			
NO.	PART DESC		QTY
1	HEADBOARD		1
2	FOOTBOARD		1
3	SIDE RAIL		2
4	HEADBOARD LEFT LEG		1
5	HEADBOARD RIGHT LEG		1
6	HEADBOARD BOTTOM RAIL		1
7	SLAT		5
8	SLAT SUPPORT LEG		10

***Caution: Please read all instructions carefully before starting the assembly process. These parts are
cumbersome and heavy. Therefore, two people are recommended in order to prevent personal injury
and ensure the parts are not damaged during the assembly.

STEP 1

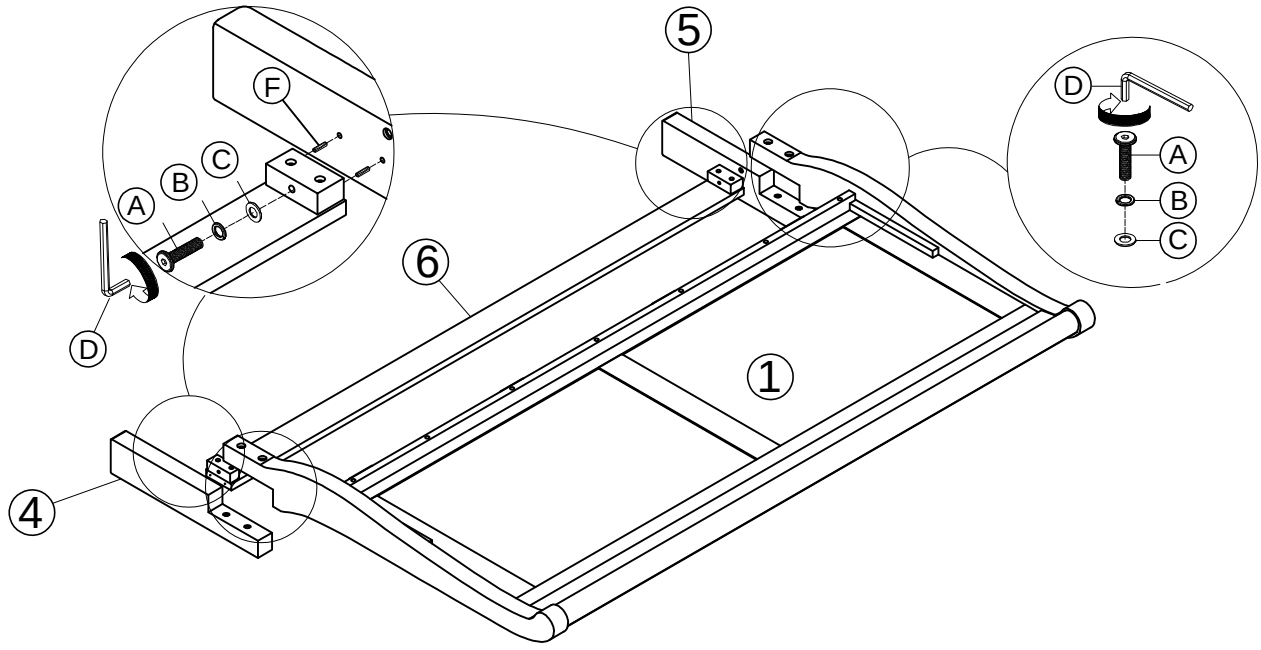

NOTE:
ASSEMBLE UNIT ON A SOFT SURFACE.
DO NOT TIGHTEN BOLTS UNTIL THE UNIT IS COMPLETELY ASSEMBLED.


PDF created with pdfFactory Pro trial version www.pdffactory.com

Assembly Instruction


BEDROOM
express

BE5108-22H+22F+22R 6/6 Sleigh Headboard + Footboard + Rails
BE5108-23H+23F+C23R 6/0 Sleigh Headboard + Footboard + Rails

STEP 2

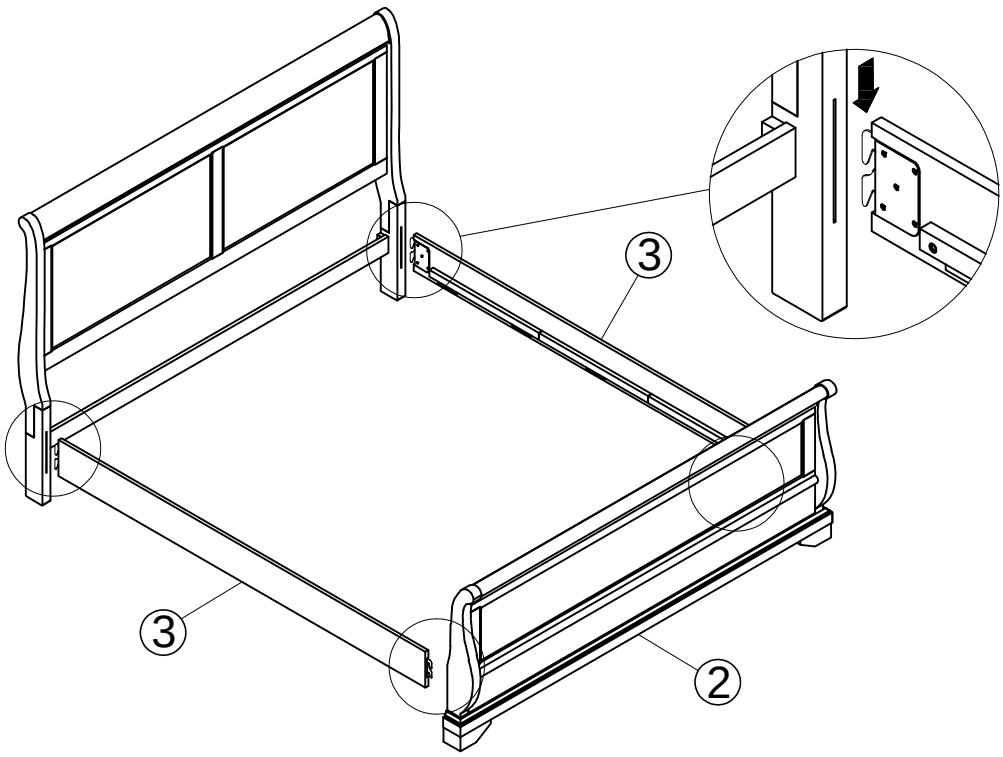

STEP 3

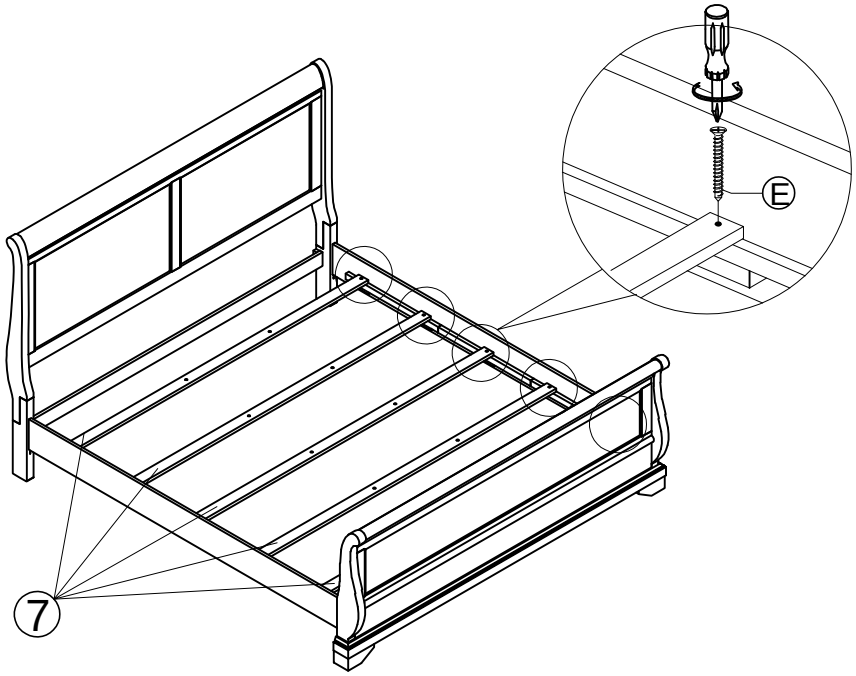


PDF created with pdfFactory Pro trial version www.pdffactory.com

Assembly Instruction

BEDROOM
express

BE5108-22H+22F+22R 6/6 Sleigh Headboard + Footboard + Rails
BE5108-23H+23F+C23R 6/0 Sleigh Headboard + Footboard + Rails

STEP 4

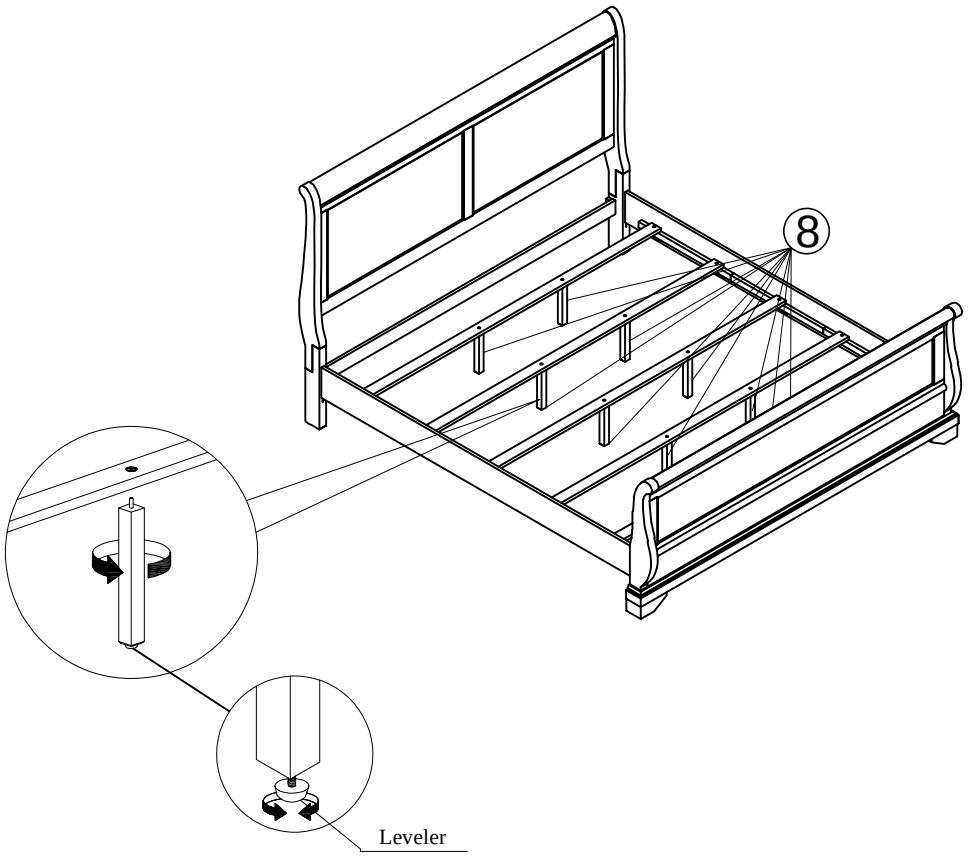

ASSEMBLY COMPLETED

PDF created with pdfFactory Pro trial version www.pdffactory.com