

## ASSEMBLY INSTRUCTION


Step 1:

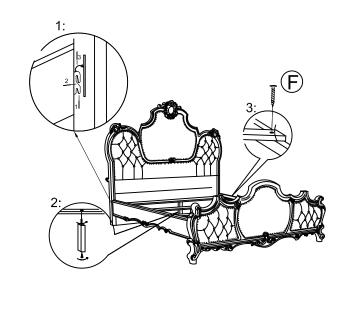


Step 2:

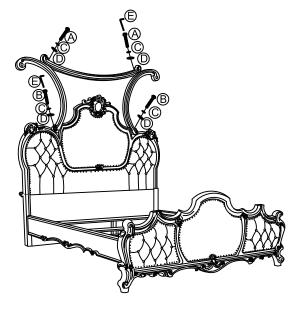


Step 3:

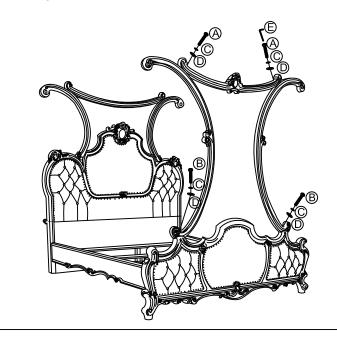

Step 4:

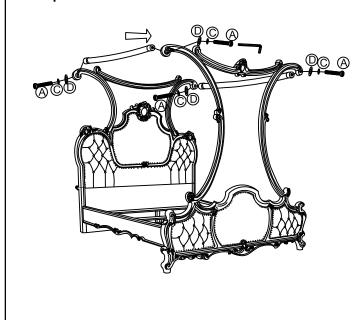

Step 5:

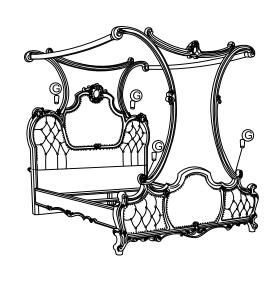

Finish:



Hardware List:

No.:	Description	Drawing	Size	Q' ty
Α	Short Bolt	(Cummum)	Ø5/16" X2-1/2"	8
В	Long Bolt		Ø5/16" X3-1/2"	4
С	Lock Washer	<b>©</b>	Ø5/16" X12mm	12
D	Flat Washer	0	Ø5/16" X22mm	12
Е	Wrench		Ø5mmX60mml	1
F	wood screw	(;111111z>	Ø8 X 1-1/2"	10
G	bung			4
			•	