




Fort Worth, Texas 76140

ASSEMBLY INSTRUCTIONS

790 LOW LOFT BED LOUVER

REVERSIBLE OPTIONS

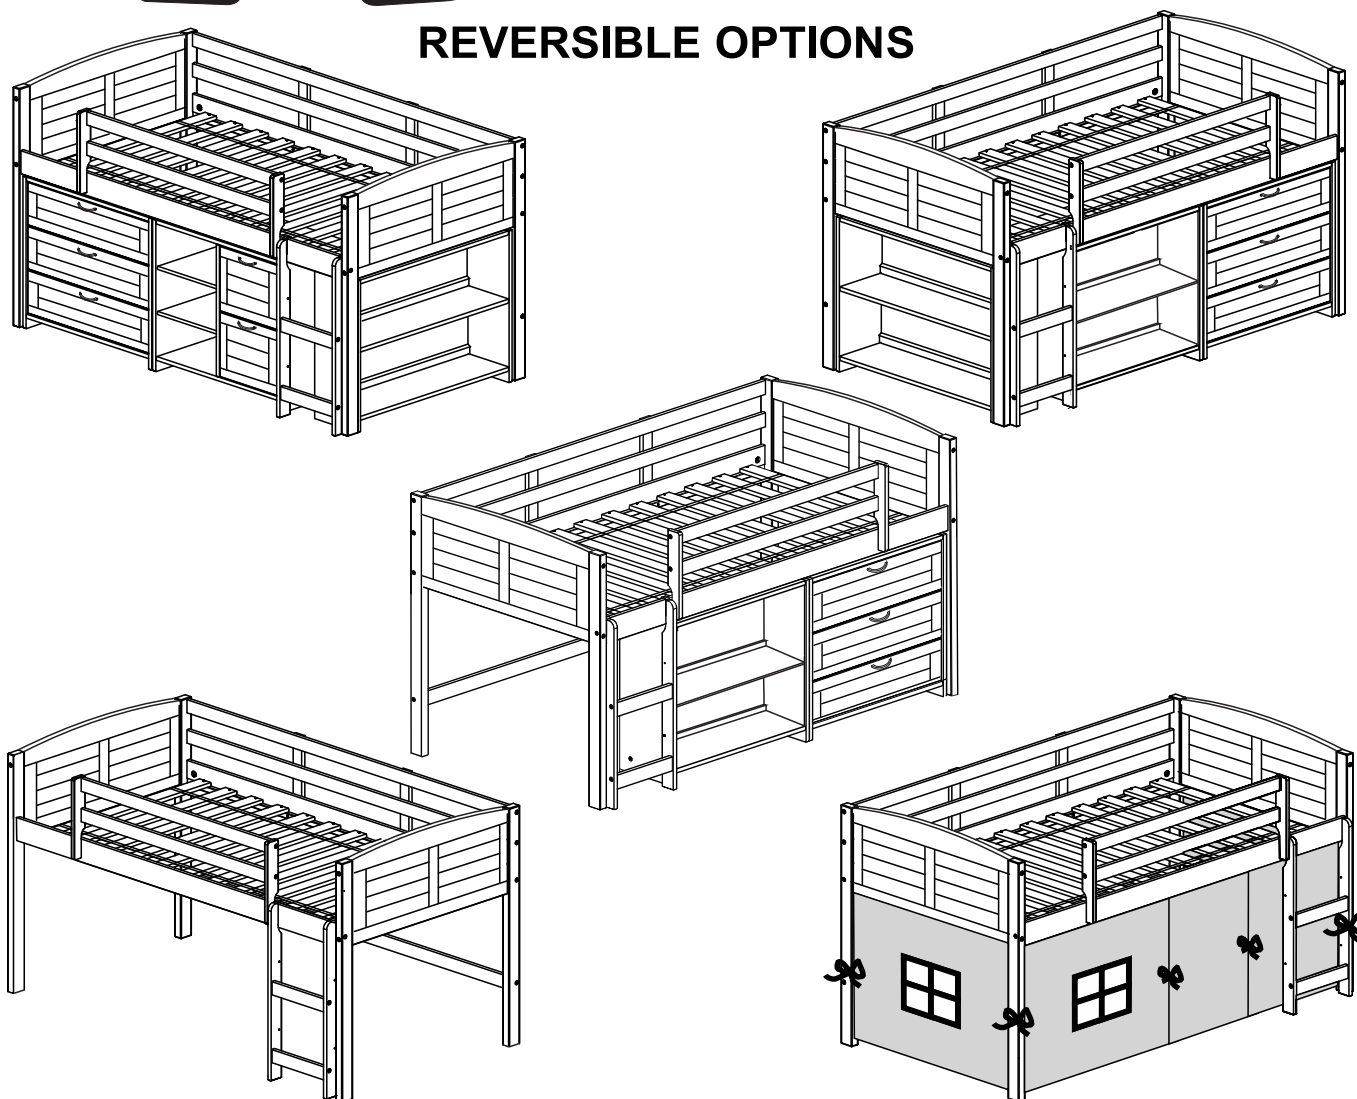

OPTIONAL SETS (THE CASES ARE SOLD SEPARATE)

3 DRAWERS CHEST LOUVER

2 DRAWERS CHEST LOUVER

SMALL BOOKCASE

HEADBOARD BOOKCASE

TENT KIT FABRIC



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"




* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

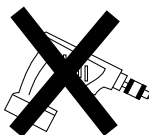

Tools Required



(Not included)




(Not included)









IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY



Part List - 790 LOW LOFT BED LOUVER

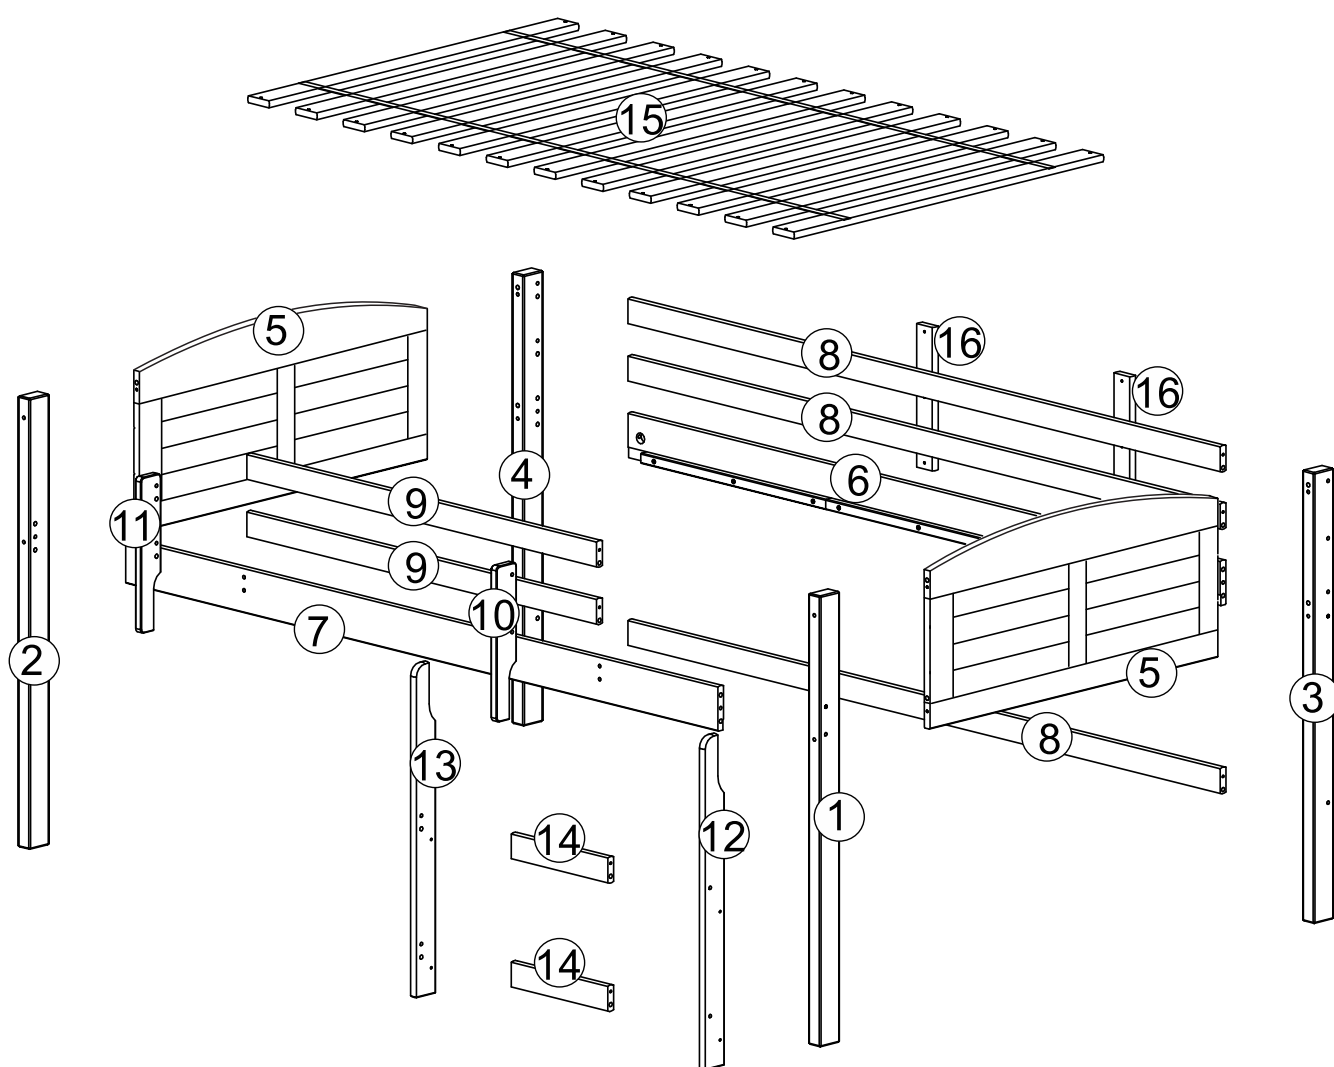

Identifying the Hardware-Identify the hardware using the illustrations below.



A  Qty 08	B  Qty 08	C  Qty 06
D  Qty 08	E  Qty 26	F  Qty 12
G  Qty 32	H  Qty 02	I  Qty 06
J  Qty 02	K  Qty 02	L  Qty 01

01

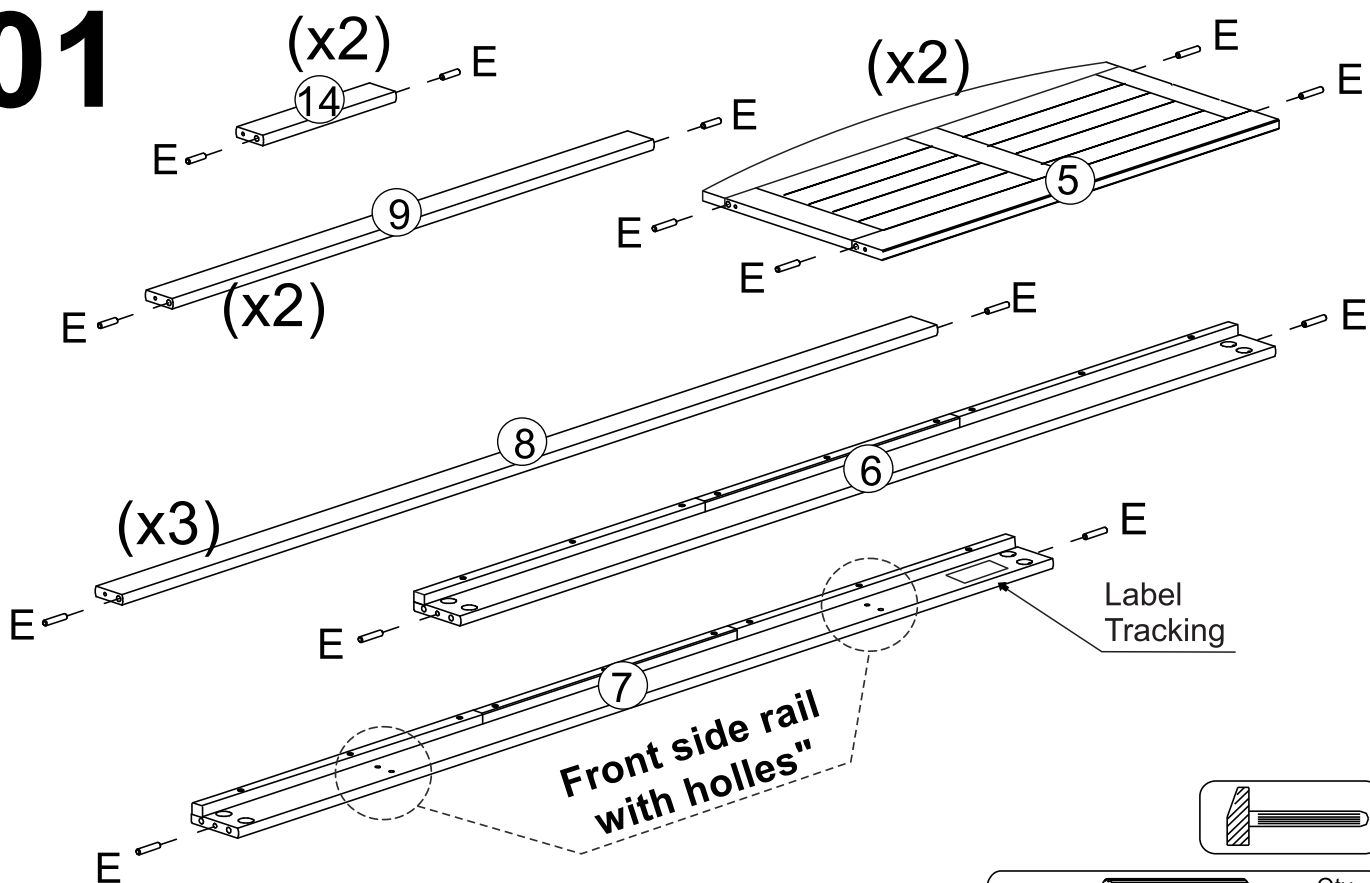


02

**SCHUTTER
OUTSIDE ASSEMBLED**

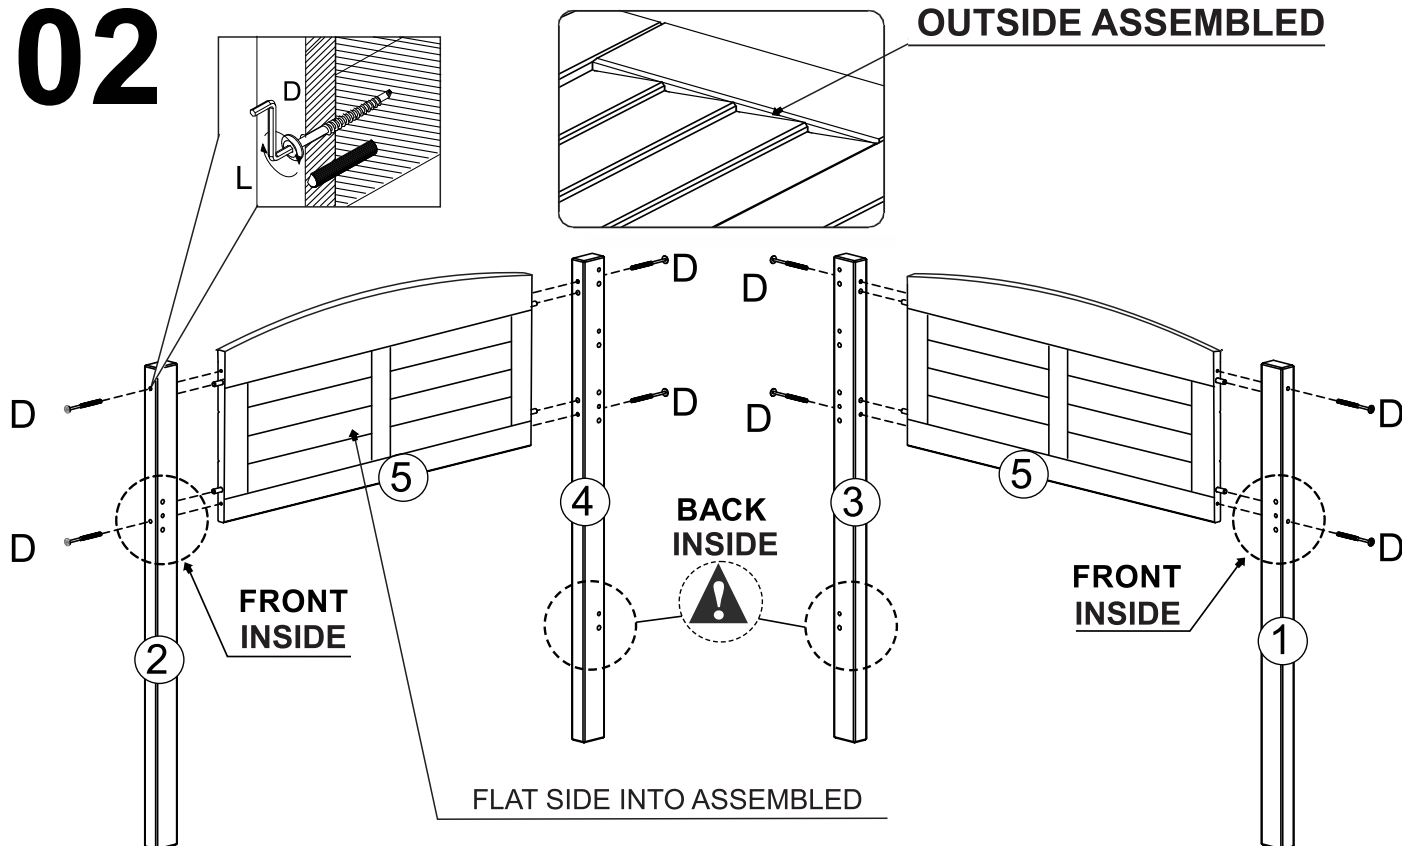

03

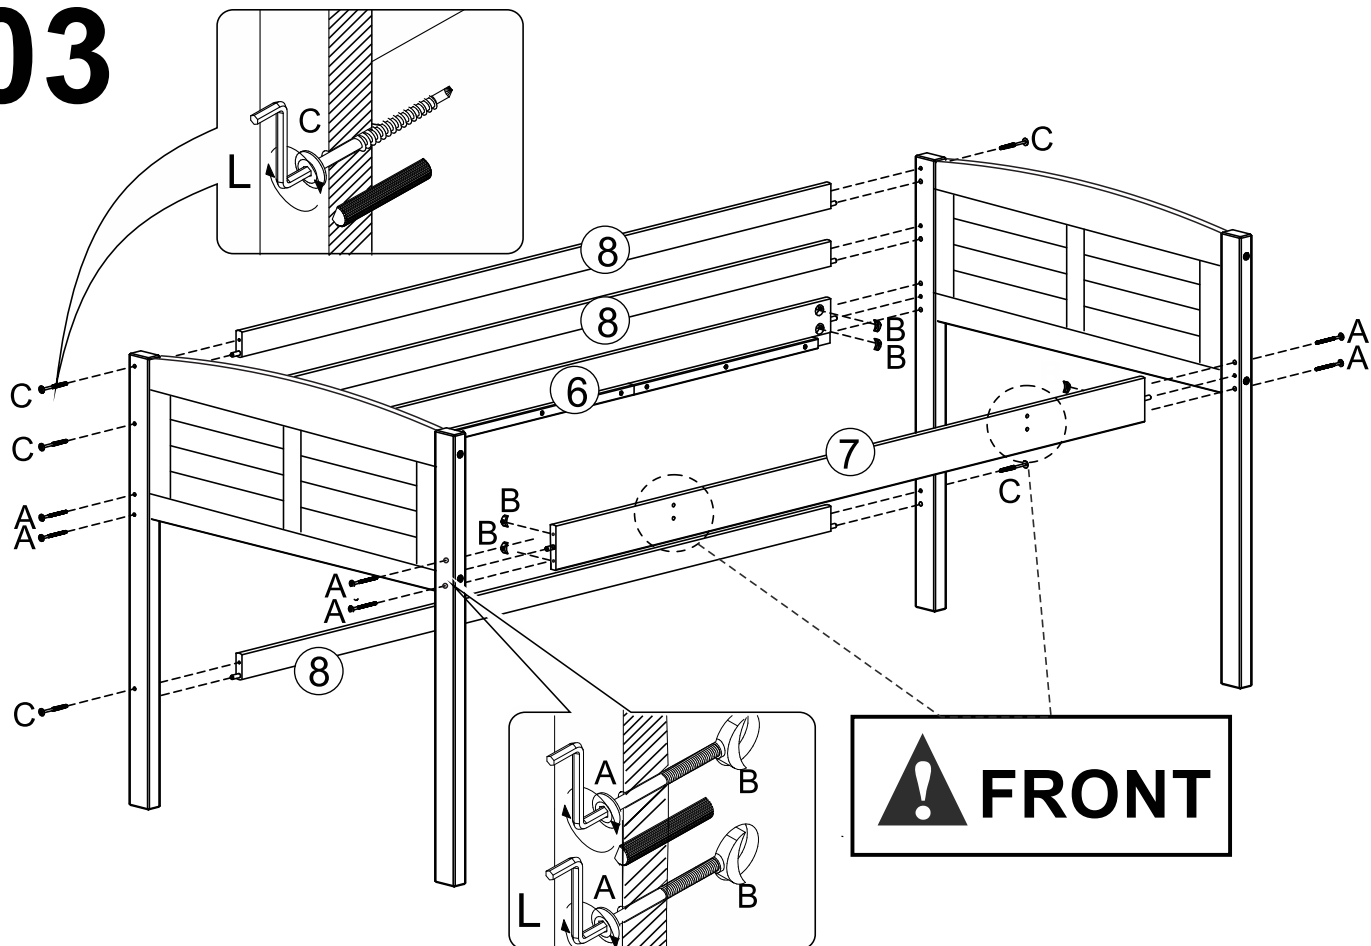


A  Qty **08**
1/4 x 90 Screw

B  1/4" Half Moon Qty **08**

C  Qty **06**
7,0 x 80 Screw

L  Qty **01**
Hex Screwdriver


04

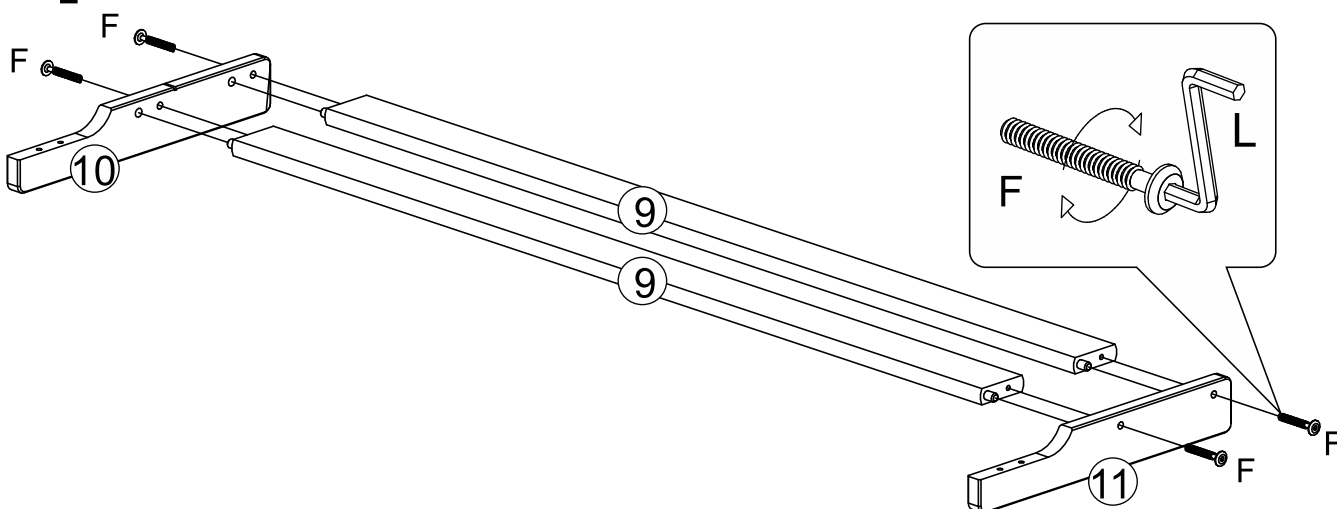

F  Qty **04**
7,0 x 50 Screw

L  Qty **01**
Hex Screwdriver






05

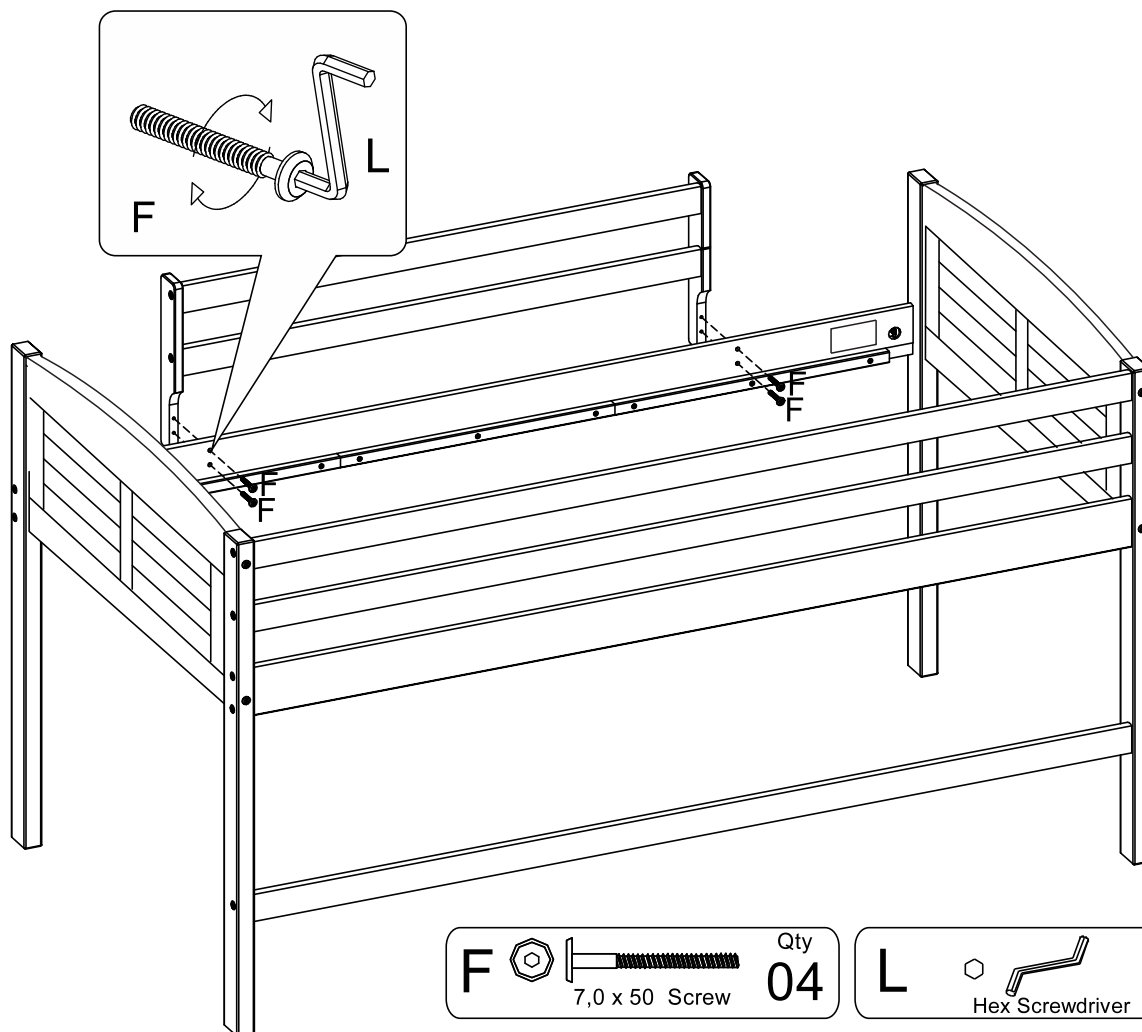

F  7,0 x 50 Screw Qty **04**


L  Hex Screwdriver Qty **01**

06 LADDER

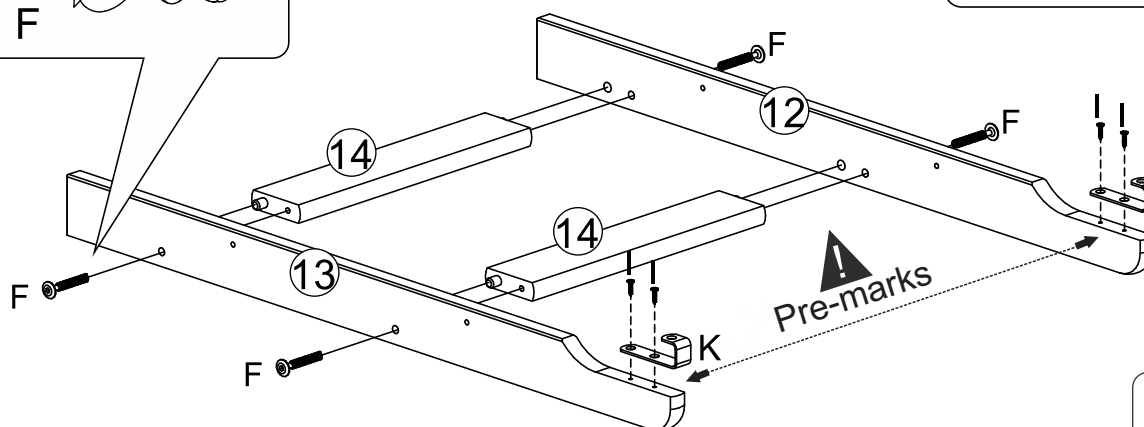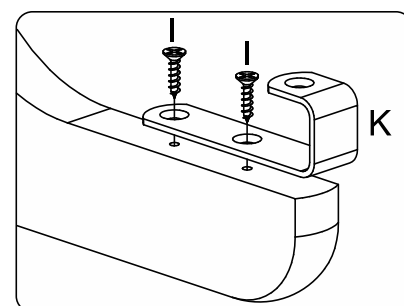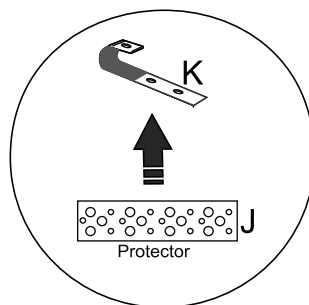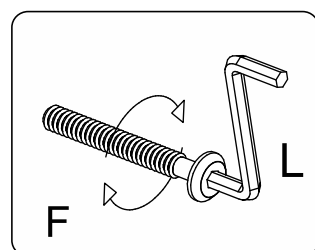

F  7,0 x 50 Screw Qty **04**


I  3,5 x 16 Screw Qty **04**

J  Protector Qty **02**


K  Hook Ladder Qty **02**


L  Hex Screwdriver Qty **01**

07

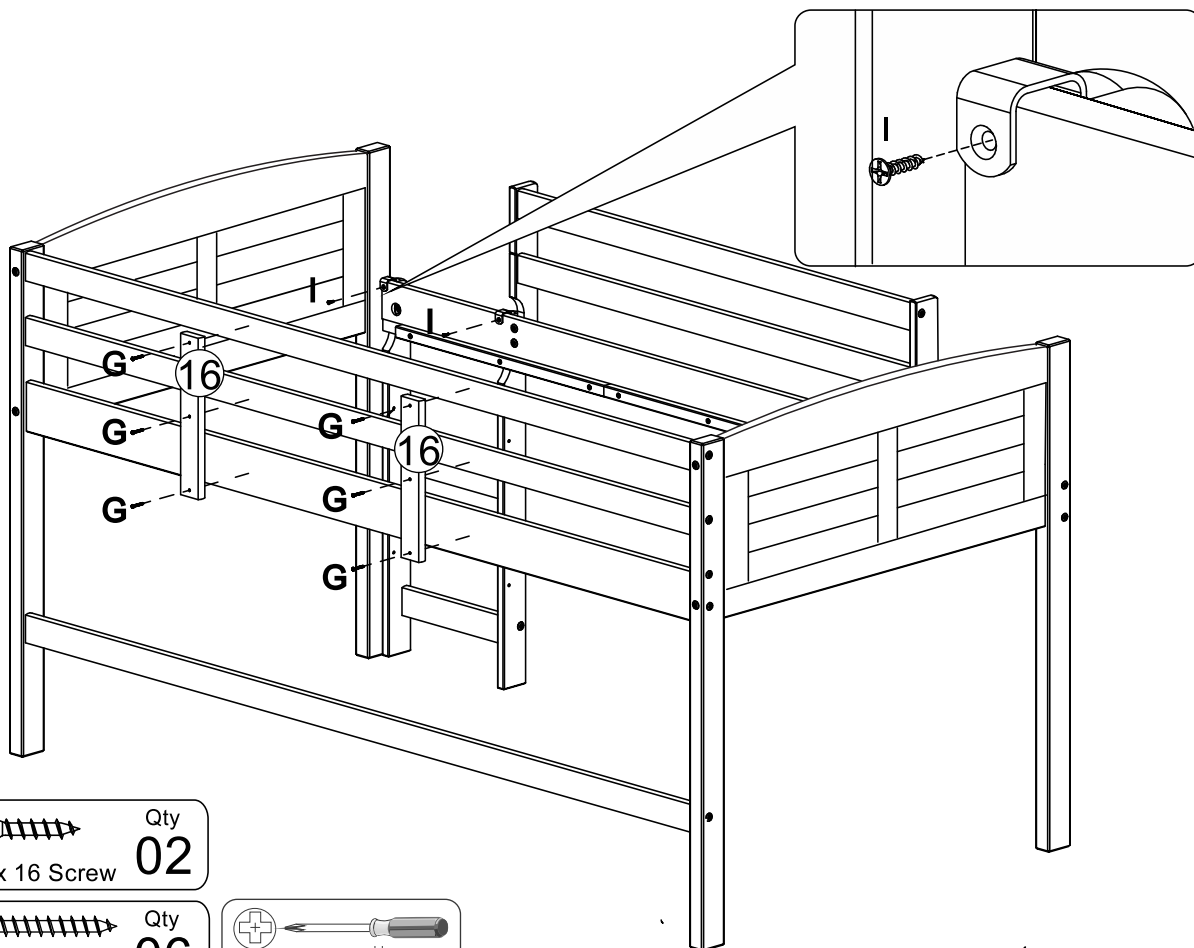


I  Qty **02**
3,5 x 16 Screw


G  Qty **06**
4,0 x 30 Screw




08

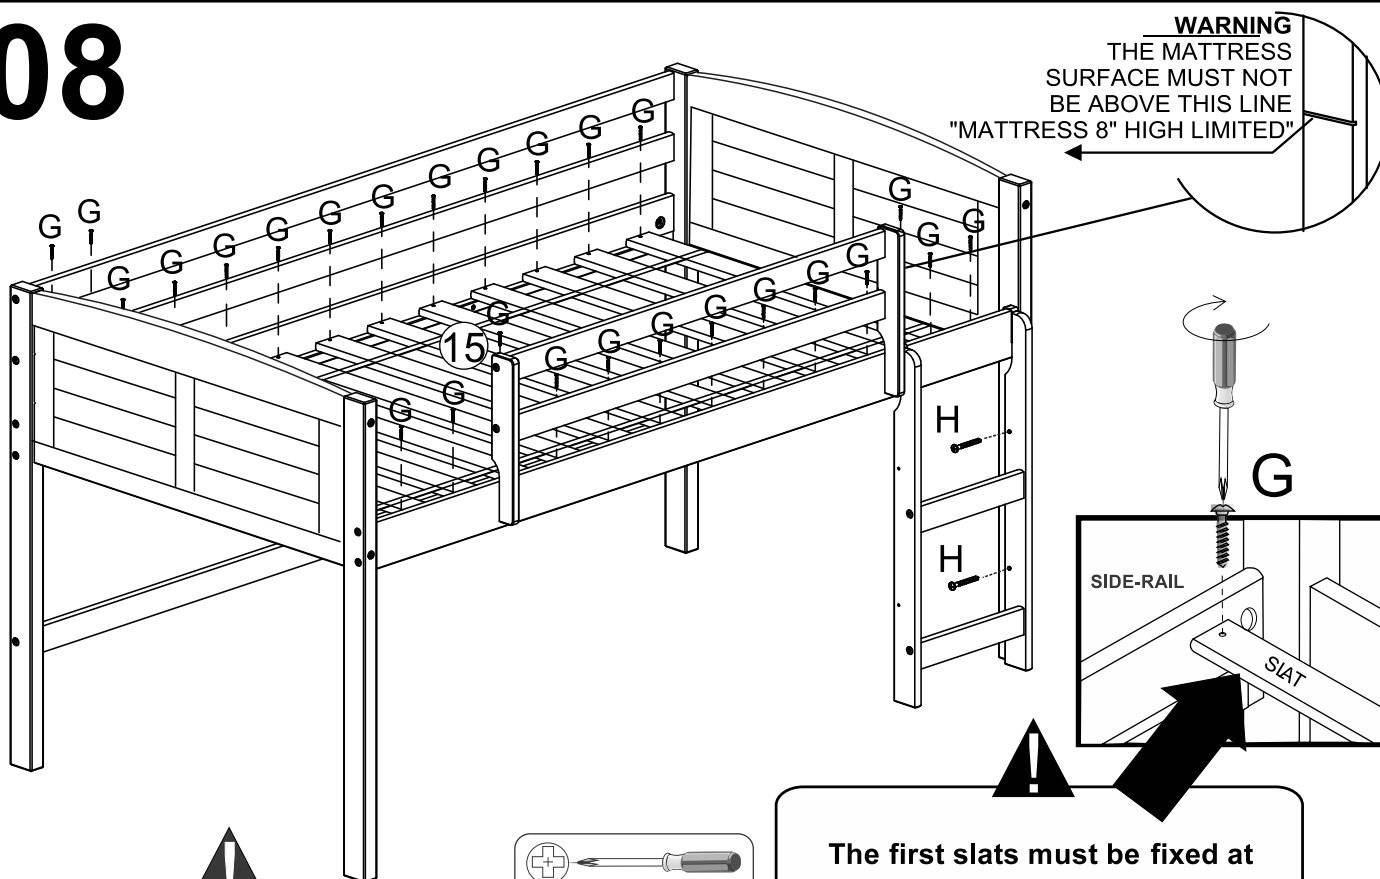


WARNING
THE MATTRESS
SURFACE MUST NOT
BE ABOVE THIS LINE
"MATTRESS 8" HIGH LIMITED"

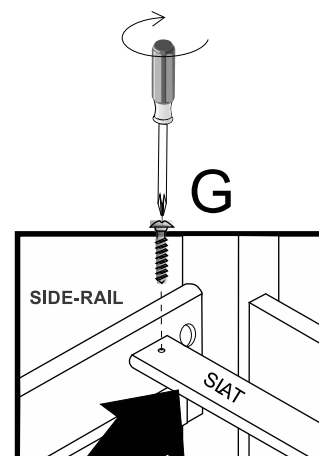



! "INSTALL SLAT KIT WITH SPACER TAPE ON TOP (FACING UP)"




The first slats must be fixed at 3" from each headboard end.

H  Qty **02**
4,0 x 40 Screw

G  Qty **26**
4,0 x 30 Screw

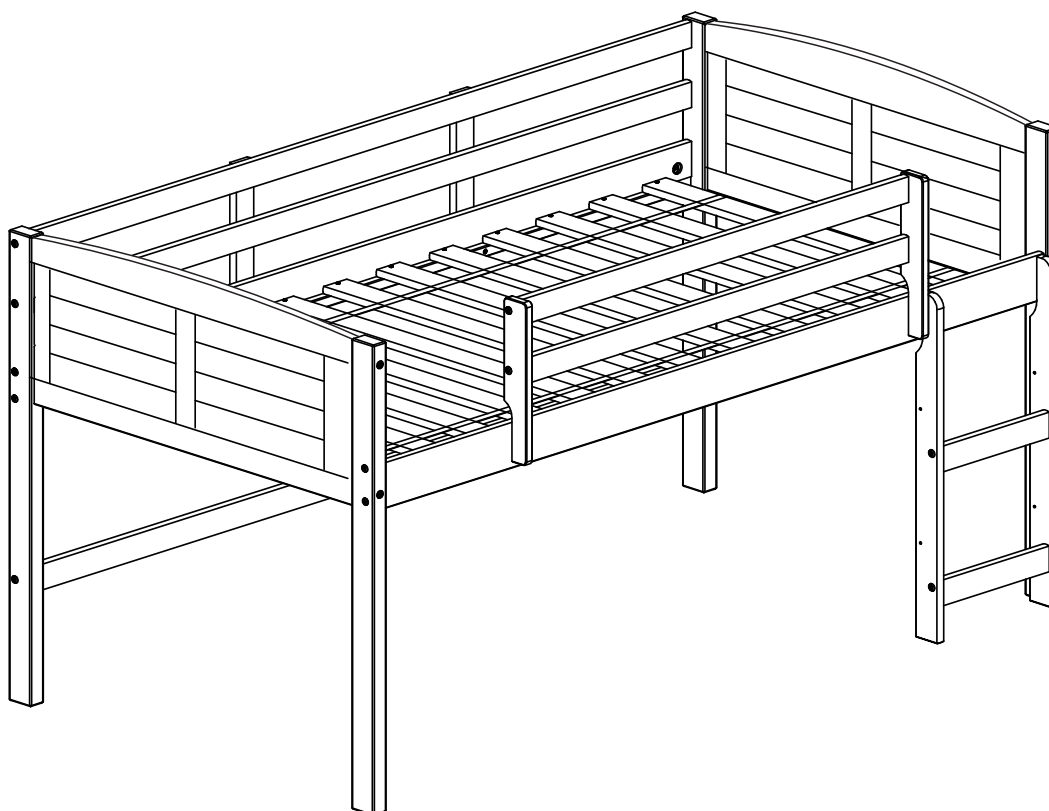


BED ONLY

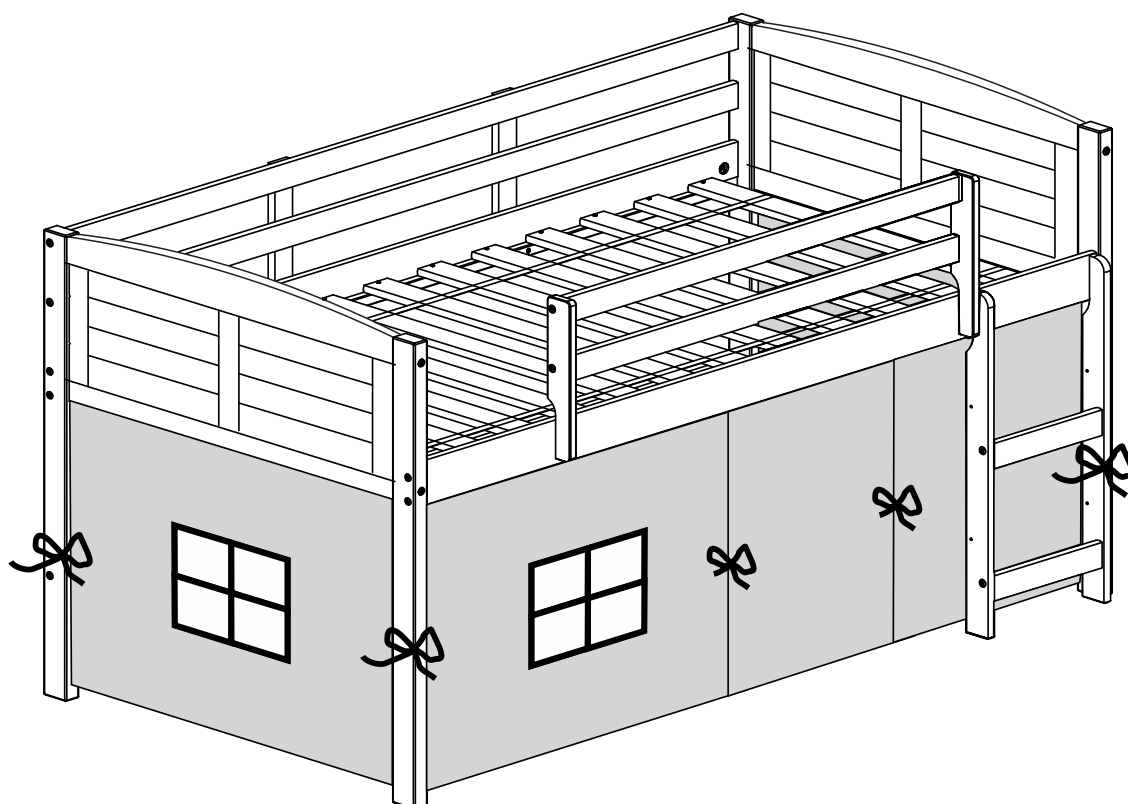


TENT SET FABRIC

OPTION COMPONENTS

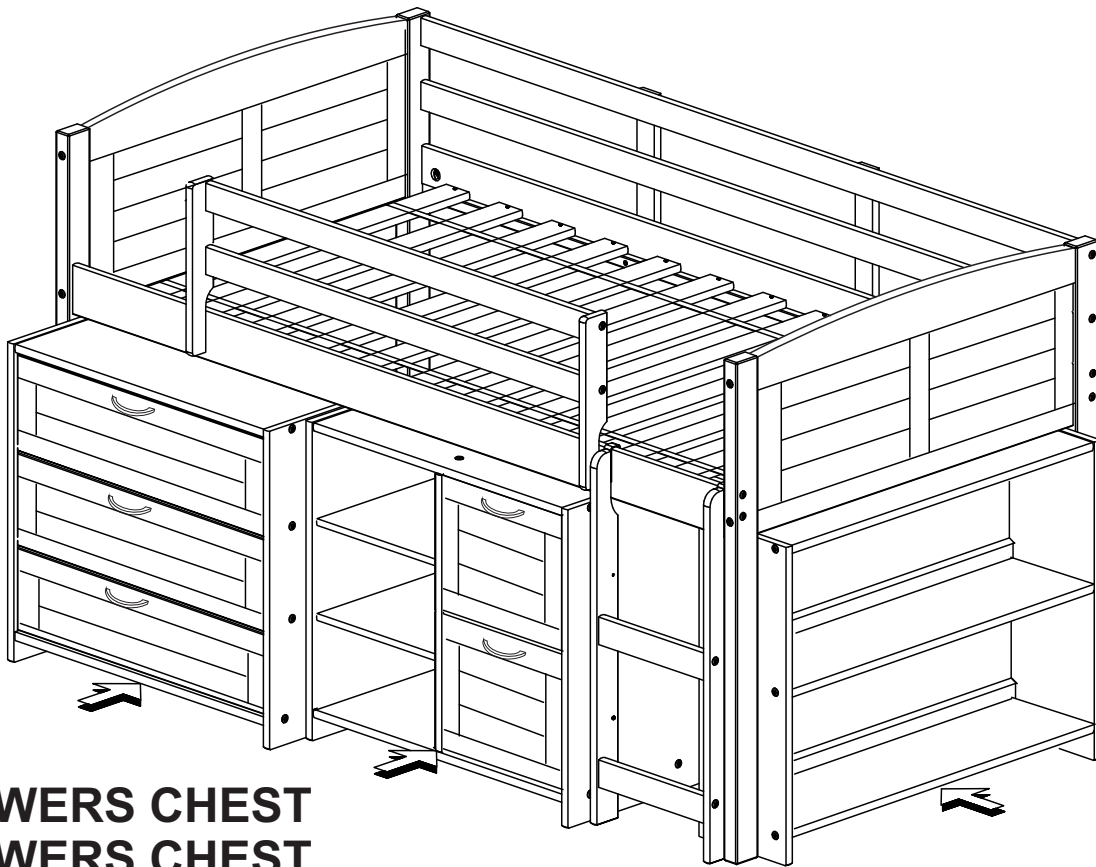


**3 DRAWERS CHEST
2 DRAWERS CHEST
HEADBOARD BOOKCASE**

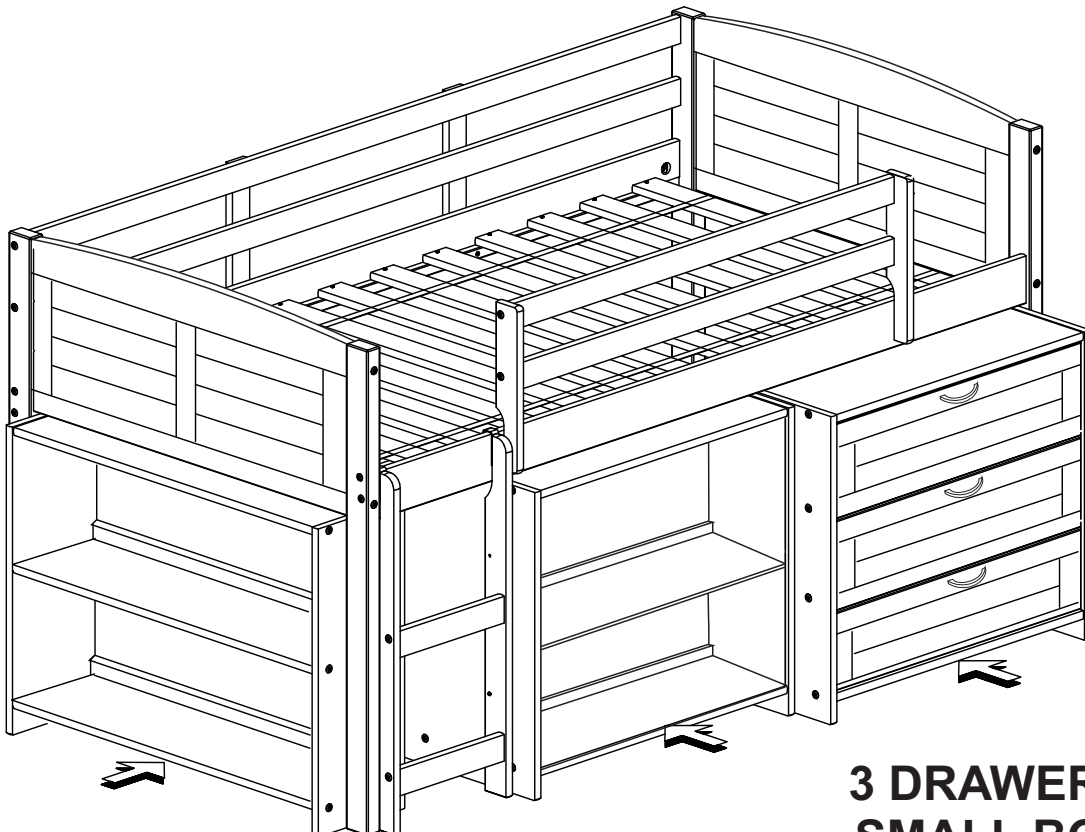


**3 DRAWERS CHEST
SMALL BOOKCASE
HEADBOARD BOOKCASE**

OPTION COMPONENTS

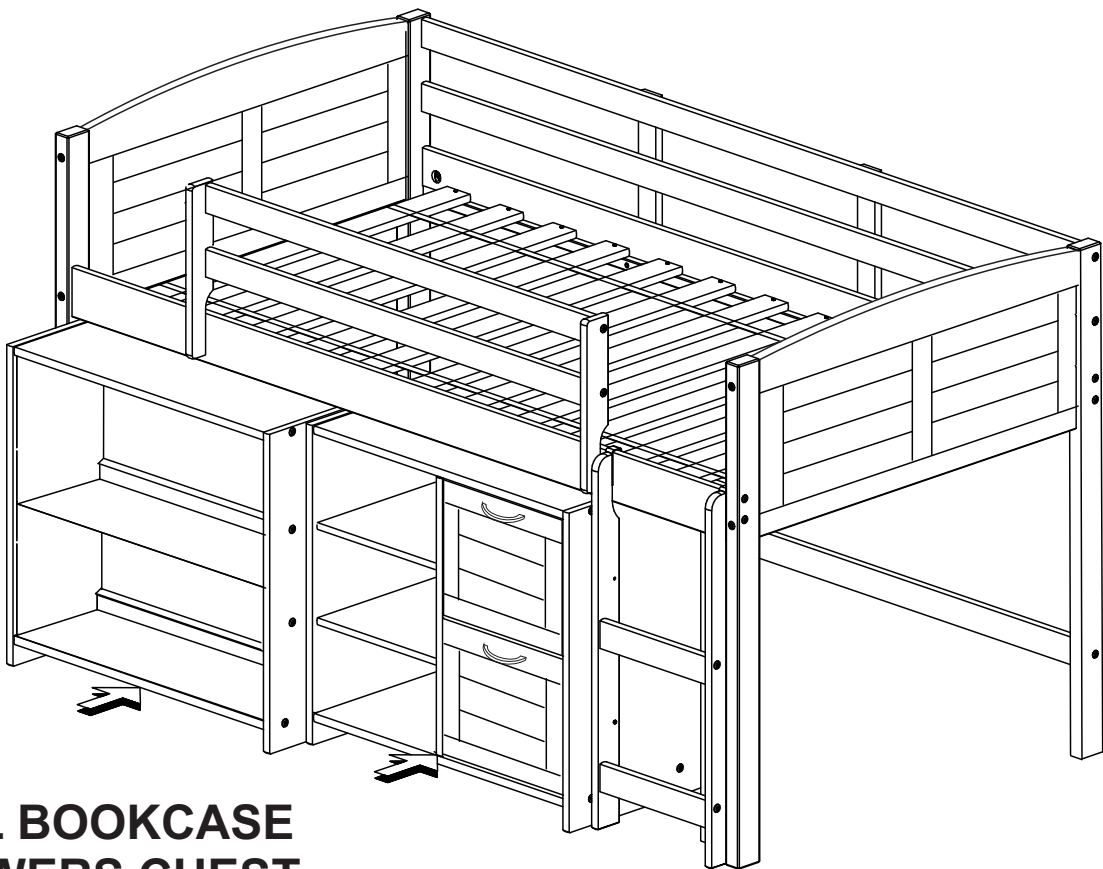

**SMALL BOOKCASE
2 DRAWERS CHEST**

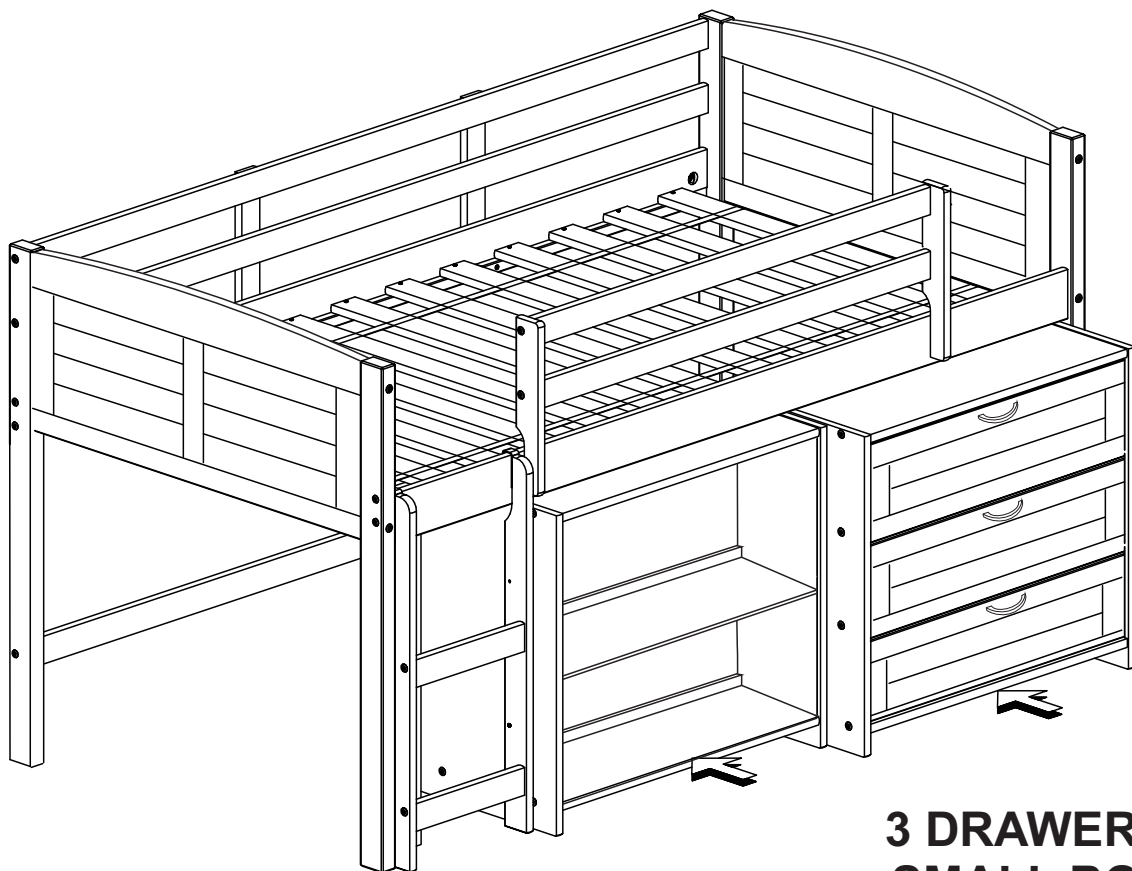

**3 DRAWERS CHEST
SMALL BOOKCASE**