

## Nantucket Collection

(089 Love Seat, 090 Sofa,  
091 Chair)



## ASSEMBLY INSTRUCTIONS


# 1

**PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.**

Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.


**Tools Required:** 4mm Allen Wrench (included); #2 Phillips Head Screwdriver;  
#3 Phillips Head Screwdriver; (Recommended: Rubber Mallet; High Powered Drill)

### Back Assembly

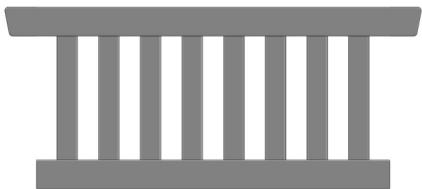


x 1

### Seat Assembly

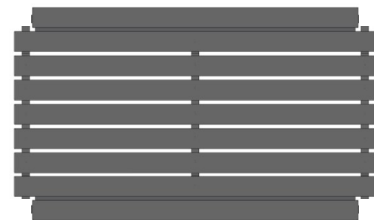


x 1

### Front Legs

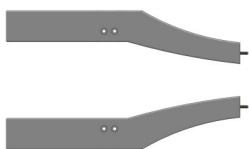

x 1ea

### Rear Legs

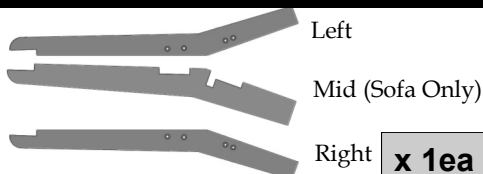

x 1ea

### Arms



x 1ea

### Bungs

5/8"



x 22


3/8"



x 3

### 80mm Hex Lag

Actual Size




Part Code: 316-1/4-10-80HL

x 22

### 4mm Allen Wrench

Actual Size

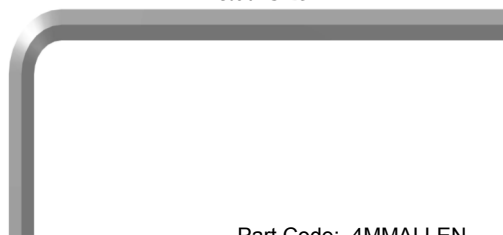


Part Code: 4MMALLEN

x 1

### 2 1/2" Pan Head Screw

Actual Size



Part Code: 18/8-14X2-1/2PPMS

x 2

### 1-3/4" Phillips Head Screw


Actual Size



Part Code: 316-8X1-3/4PFDS


x 9

WARRANTY QUESTIONS OR COMMENTS PLEASE CALL TOLL FREE AT 1-800-809-3114

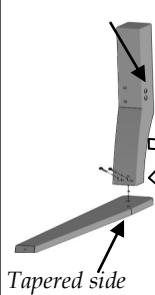**2****ATTACH FRONT LEGS TO ARMS***Counter-bores*


Insert left side Front Leg into threaded inserts in Left Arm as shown. Turn clock-wise until snug. Continue turning until legs are into aligned position. Secure with (2) 1-3/4" Phillips Head Screws.

**Repeat process for Right Side.**

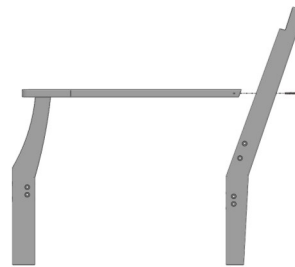**3****ATTACH REAR LEGS TO ARMS**


Align counter-bored hole in Rear Left Leg with Pilot hole in Left Arm. Attach using (1) 80mm Hex Lag. Plug holes with (1) 5/8" Bung using rubber mallet.

**Repeat process for Right side.**

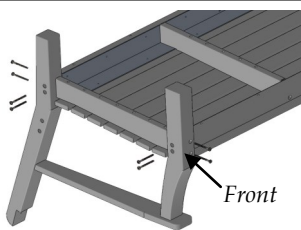**4****ATTACH SIDE ASSEMBLIES TO SEAT**

Lay seat upside down on a bench with side hanging over. Align Counter-bored holes in legs with pilot holes in aprons. Front of seat will be marked with an "F" on the bottom of the apron. Attach using (8) 80mm Hex Lags. Plug holes with 5/8" Bungs using rubber mallet.

**Repeat Process for other side.**

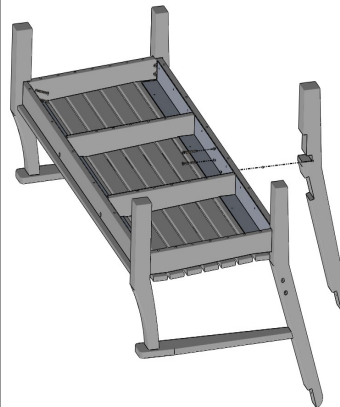**5****ATTACH MID REAR LEG (090 ONLY)**

If you are assembling a Sofa (090), Align Mid Rear Leg with Rear Apron and Last Slat and Secure using (2) 2-1/2" Pan Head Screws thru holes in Rear Apron using a #3 Phillips Head Screwdriver.

**6****ATTACH BACK**

Turn Assembly upright. Attach Back Assembly to Rear Legs using (4) 80mm Hex Lags thru counter-bored holes in Rear Legs into pilot holes in lower back. Plug holes with (4) 5/8" Bungs. Secure upper back using (2) 1 3/4" Phillips Head Screws (3 for 090). Plug holes with 3/8" Bungs using rubber mallet.

**7****ATTACH BACK (090 ONLY)**

Attach Back to Mid Leg using (2) 1-3/4" Phillips Head Screws.