
MOE'S

home collection

ASSEMBLY INSTRUCTIONS.

YORK 3 DRAWER NIGHTSTAND


VE-1126-21

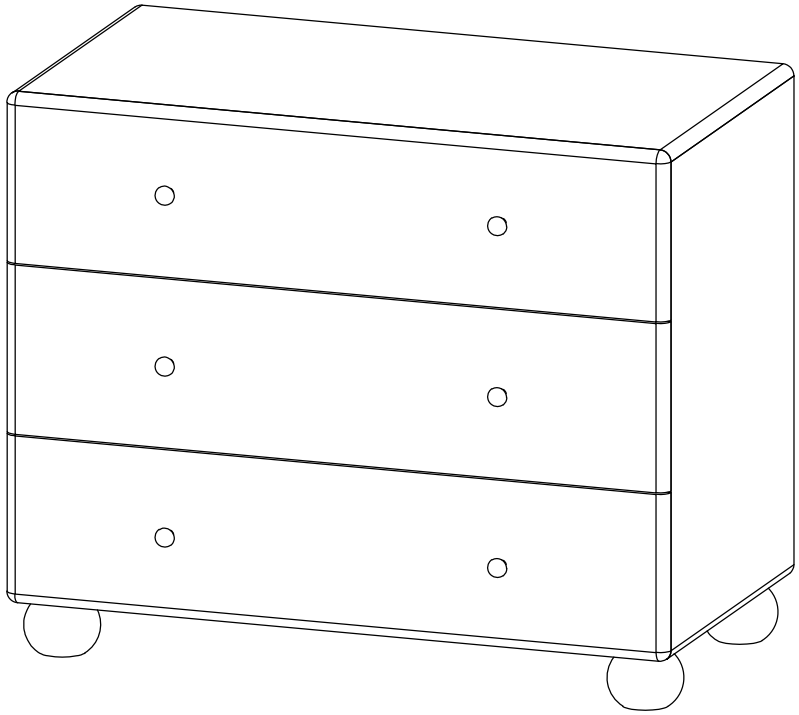

THANK YOU FOR YOUR PURCHASE!

PART AND HARDWARE.

PART LIST

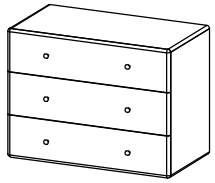NO.	DESCRIPTION	IMAGE	Q'TY
P1	CARCASE		1
P2	WOODEN LEG		4

HARDWARE


NO.	DESCRIPTION	IMAGE	Q'TY
H1	ALLEN KEY 4MM		1

NOTES.


Thank you purchasing this quality product ! Be Sure to Check all Packing material carefully for Small part that may have come loose inside the carton during shipping

CAUTION: The iteam is heavy, assembly Should be performed by two people.


STEP 1.

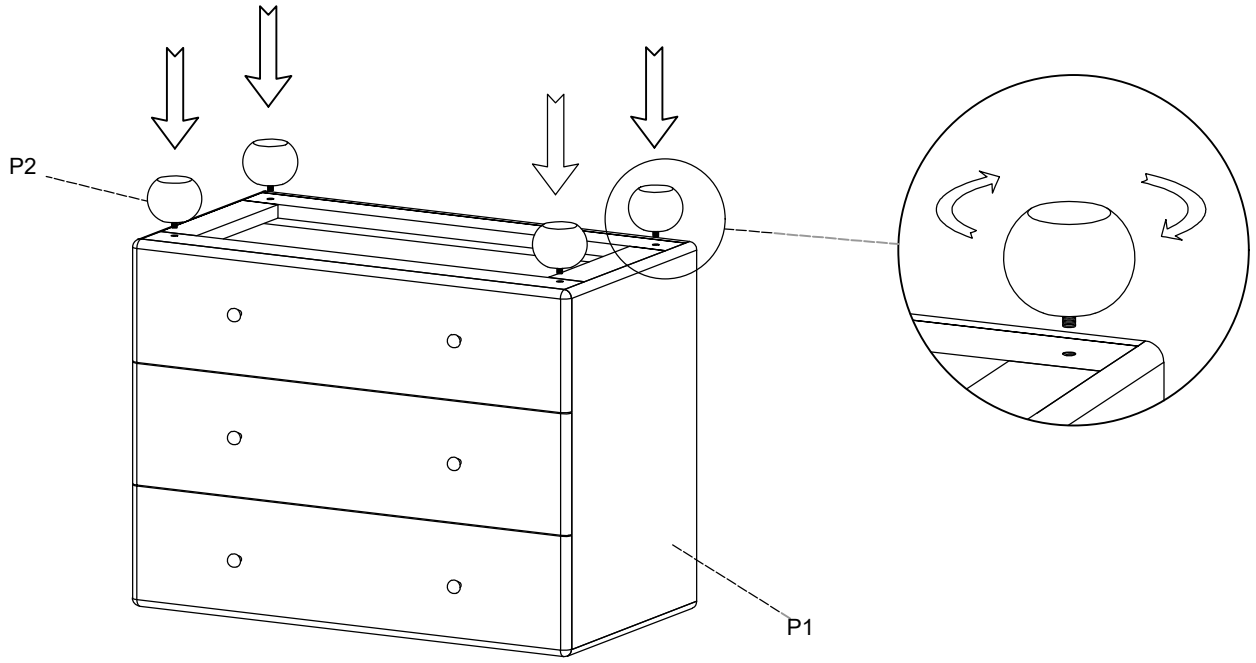


STEP 2. Pull the ribbion to open the drawer.

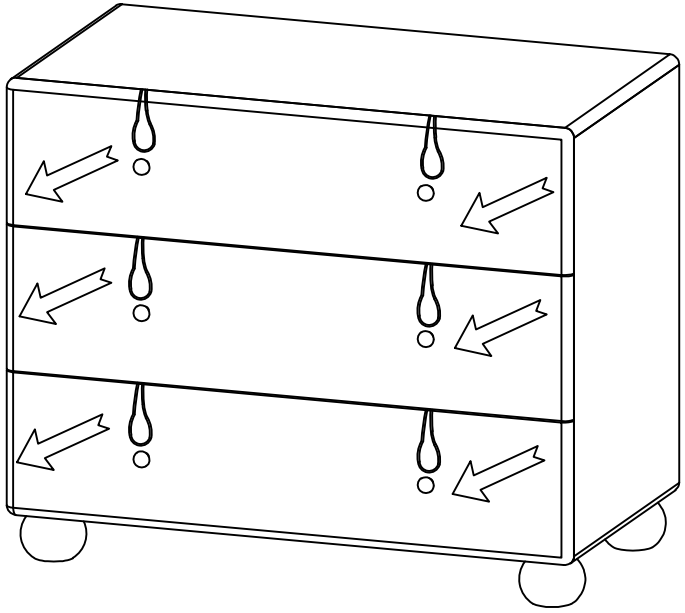

STEP 3. Remove the ribbon before installing knobs on drawer front.

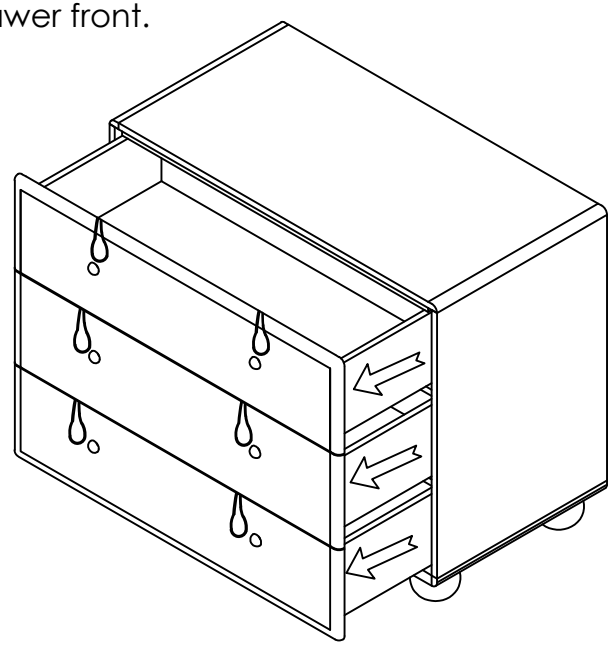

STEP 4.

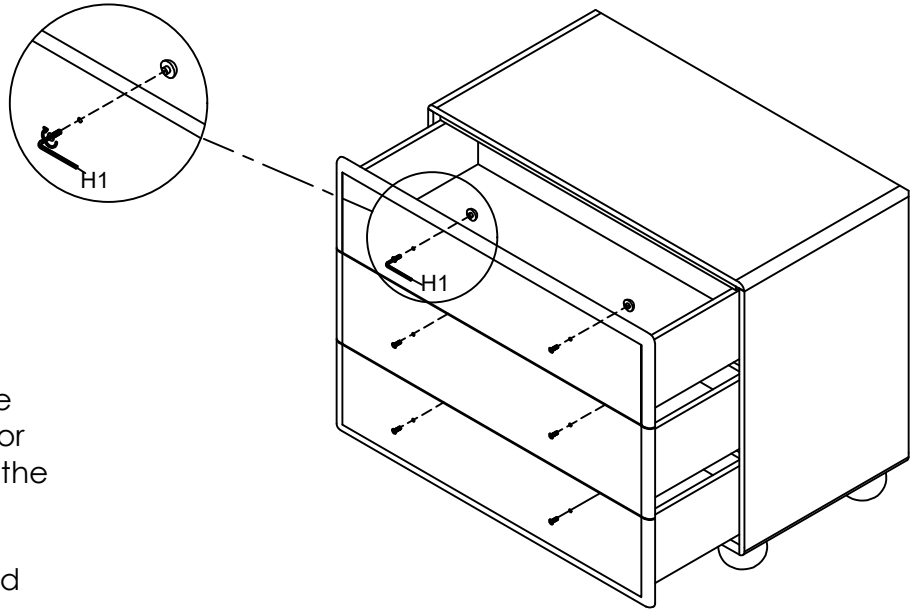


NOTES.


Thank you purchasing this quality product ! Be Sure to Check all Packing material carefully for Small part that may have come loose inside the carton during shipping

CAUTION: The iteam is heavy, assembly Should be performed by two people.

STEP 5.

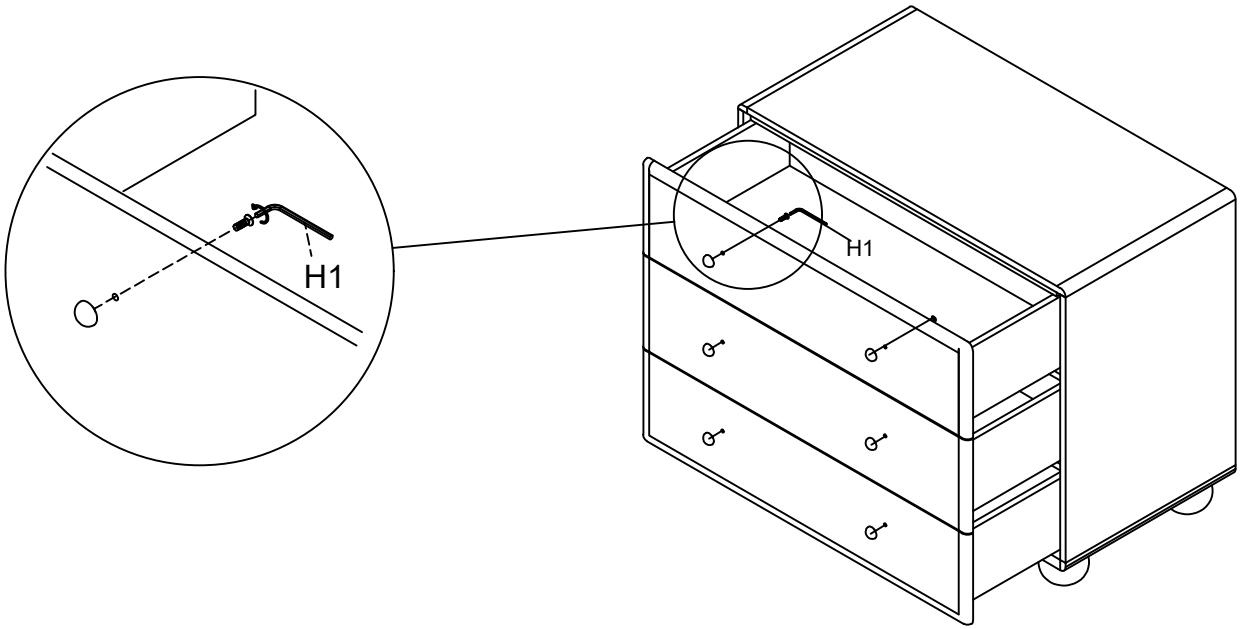

STEP 6.

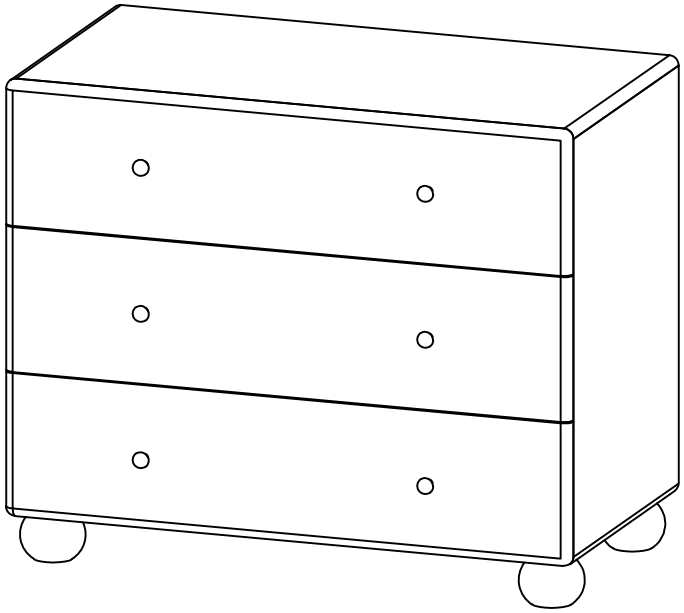

NOTES.

Thank you purchasing this quality product ! Be Sure to Check all Packing material carefully for Small part that may have come loose inside the carton during shipping

CAUTION: The iteam is heavy, assembly Should be performed by two people.