




STEP 3: Fix the Bed Slat Support (F) with adjuster, Center Rail (E) to Bed Slat (D). Attach the Assembled Bed Slat to Side Rail (M) Loosen and Tighten Adjuster for the Stability of Bed. Laterly, Tighten the Bed Slat (F) with JCBC Screw (11).

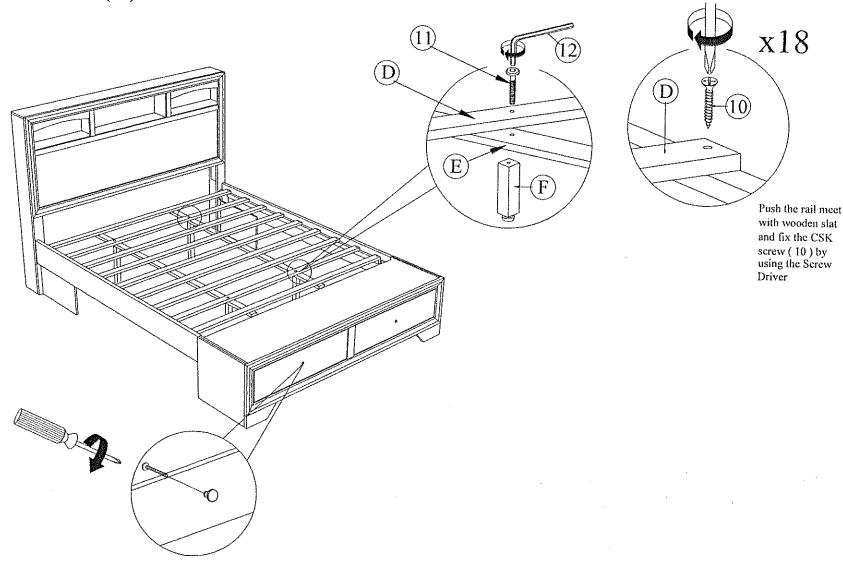


STEP 4: Install the Handle in front of footboard drawer. Tighten the Handle Screw using Screw Driver. (Not Included)

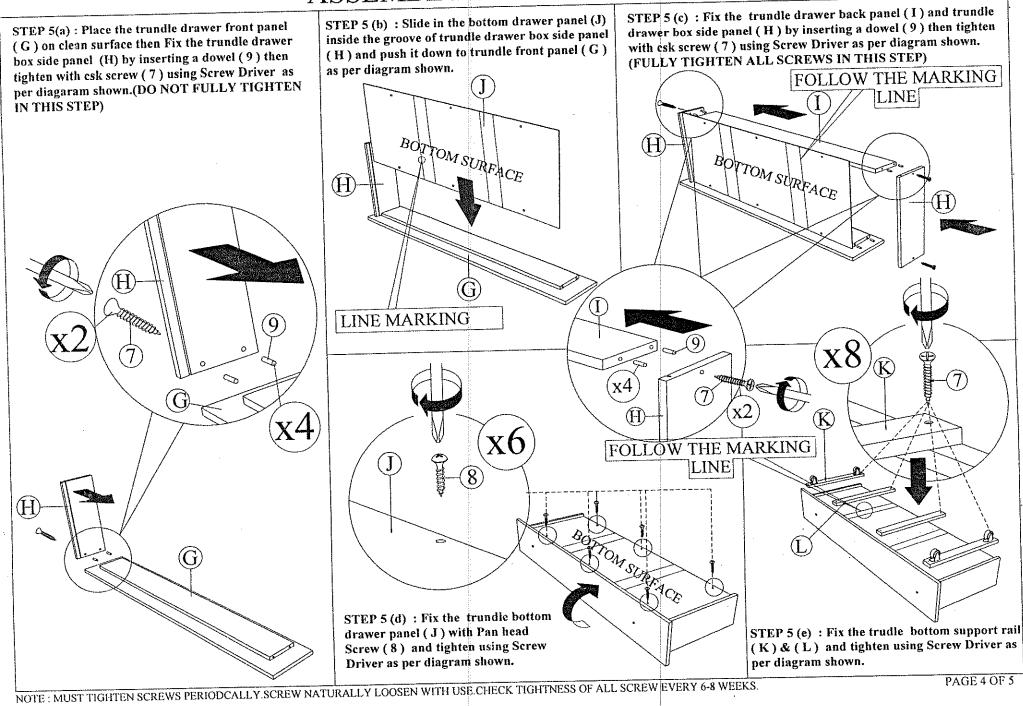

STEP 6: Install the Handle drawer (5) in front of Trundle drawer (G). Tighten the Handle Screw (6) using Screw Driver. (Not Included)

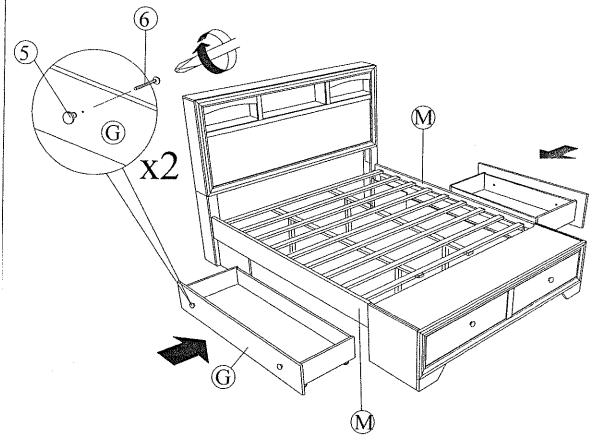

STEP 7: Push The complete assembled Trundle drawer into side rail (\mathbf{M}) as per diagram shown.

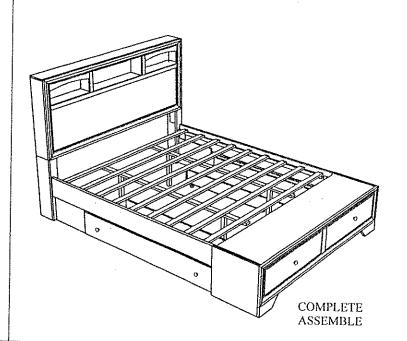

IOTE: MUST TIGHTEN SCREWS PERIODCALLY.SCREW NATURALLY LOOSEN WITH USE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 5 OF 5