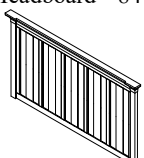










Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.



Hardware and Parts packed with the Headboard

Panel Headboard - 84180  (H-A) 1 pc.	Left Leg  (H-B) 1 pc.	Right Leg  (H-C) 1 pc.	Stretcher  (H-D) 1 pc.
Ø5/16" x 18 x 1-1/2" Allen Head Bolt  (H-E) 10 pcs.	Ø5/16" x 19 x 2mm Flat Washer  (H-F) 10 pcs.	Ø5/16" x 12 x 3mm Spring Washer  (H-G) 10 pcs.	5mm Allen Key  (H-H) 1 pc.


Hardware and Parts packed with the Footboard

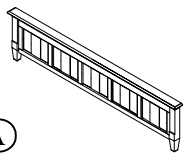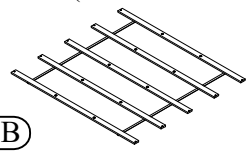Panel Footboard - 84181  (F-A) 1 pc.	Wood Slat (62-3/4" x 2-3/4" x 11/16")  (F-B) 1 set.	Support Leg (8-1/16" x 1-1/2" x 1-1/2")  (F-C) 10 pcs.	#8 x 1" Wood Screw  (F-D) 10 pcs.
--	---	---	---


Hardware and Parts packed with the Side Rails

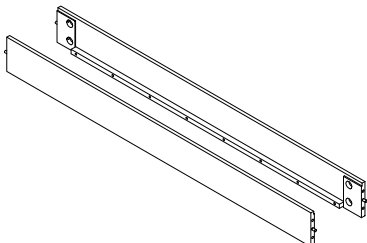SideRails - 84172  R-A 2 pcs.	M5/16" x 18 x 4-1/2 " All-Thread Bolt  R-B 8 pcs.	Ø5/16" x12mm Hex Nut  R-C 8 pcs.	
	M5/16" Spring Washer  R-D 8 pcs.	Curved Washer L32 x 13 x 8mm  R-E 8 pcs.	12mm Open Wrench  R-F 1 pc.


84180 - 6/0-6/6 Panel Headboard
 84181 - 6/0-6/6 Panel Footboard
 84172 - 5/0-6/6 Panel Side Rails

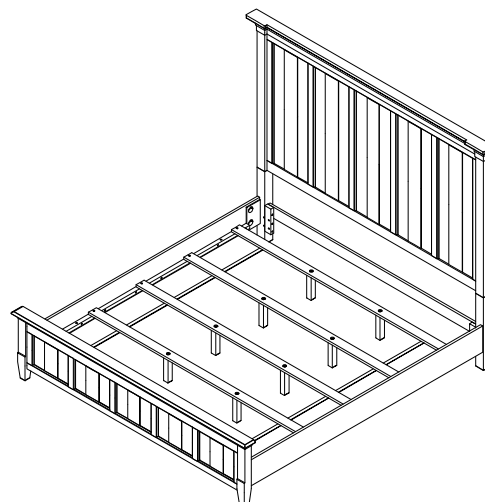


Step 1

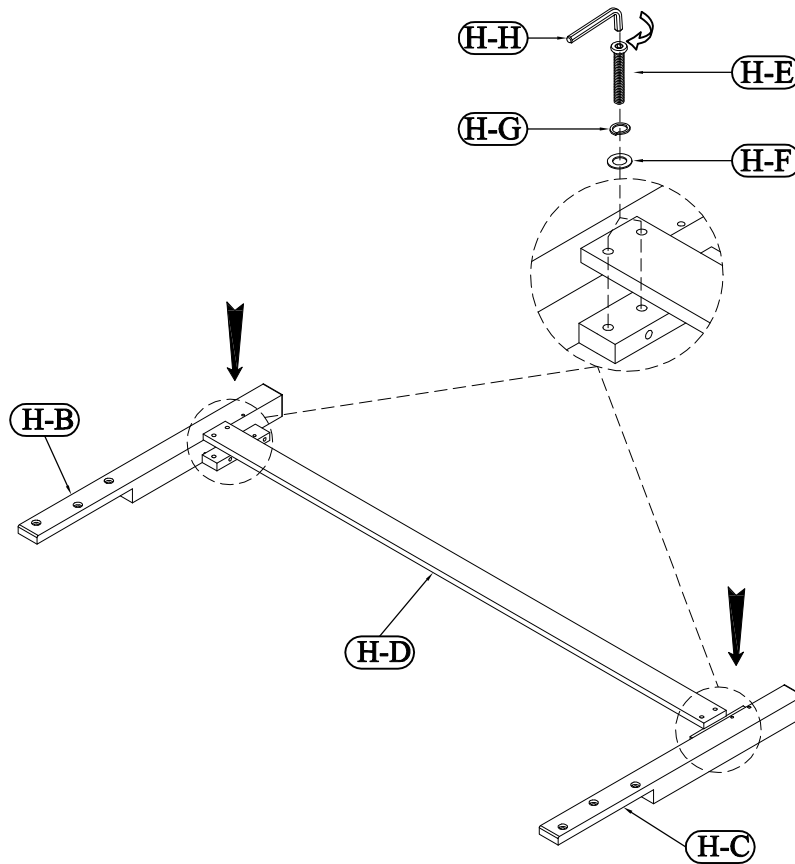


Step 2

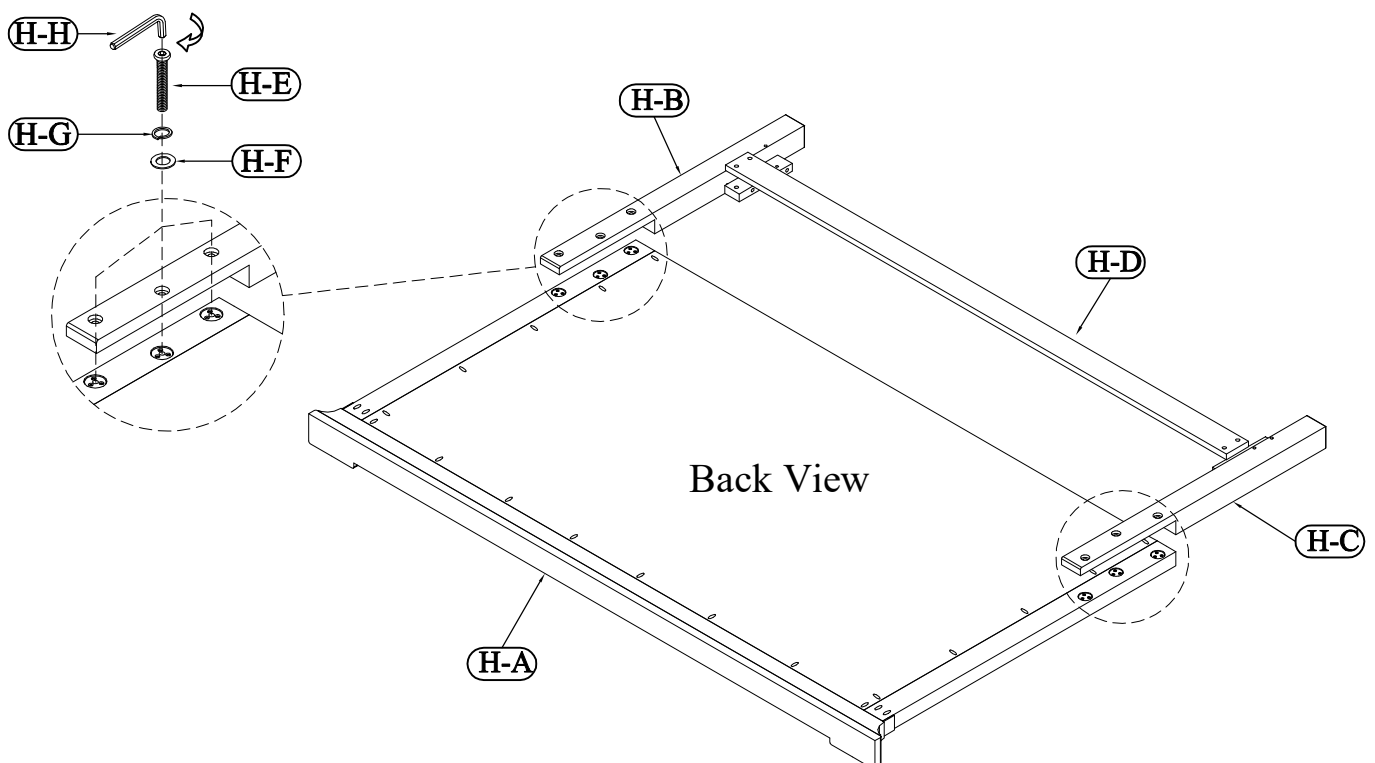


Step 3

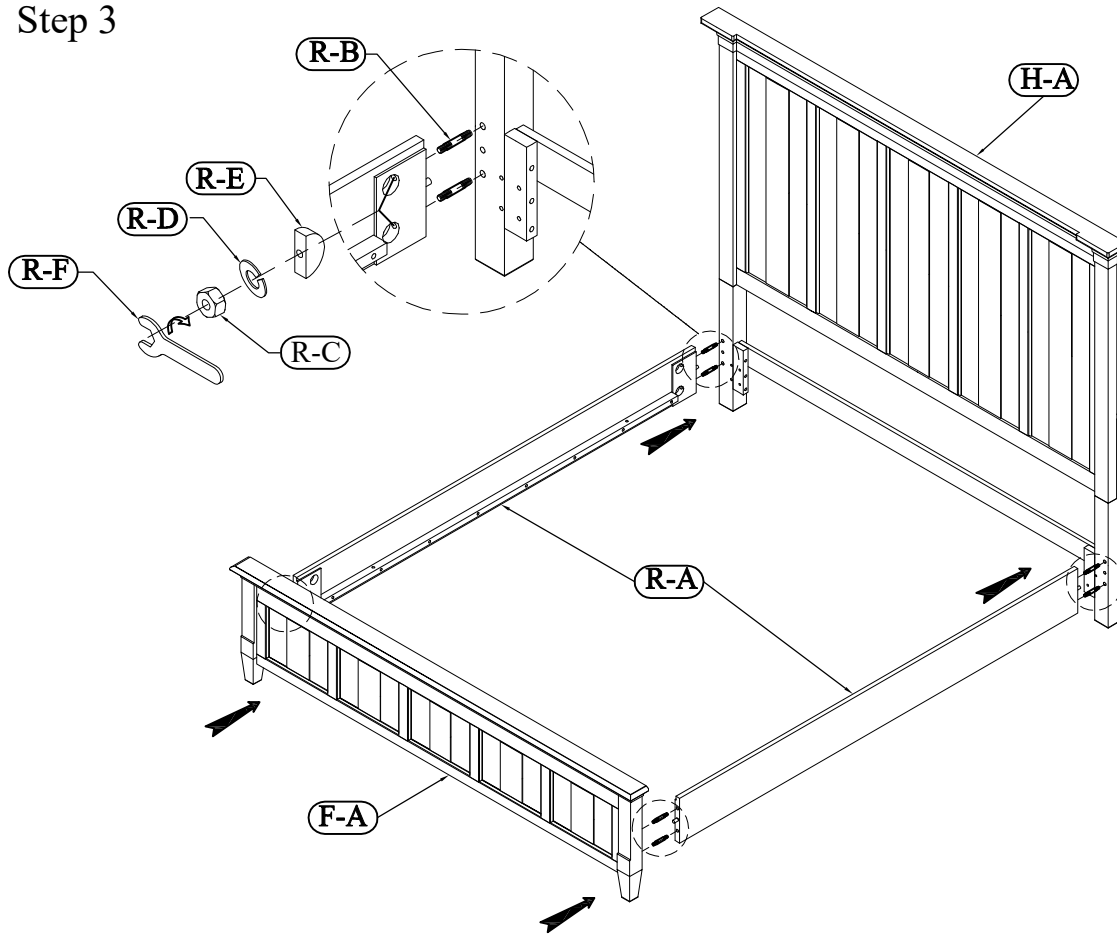


Step 4

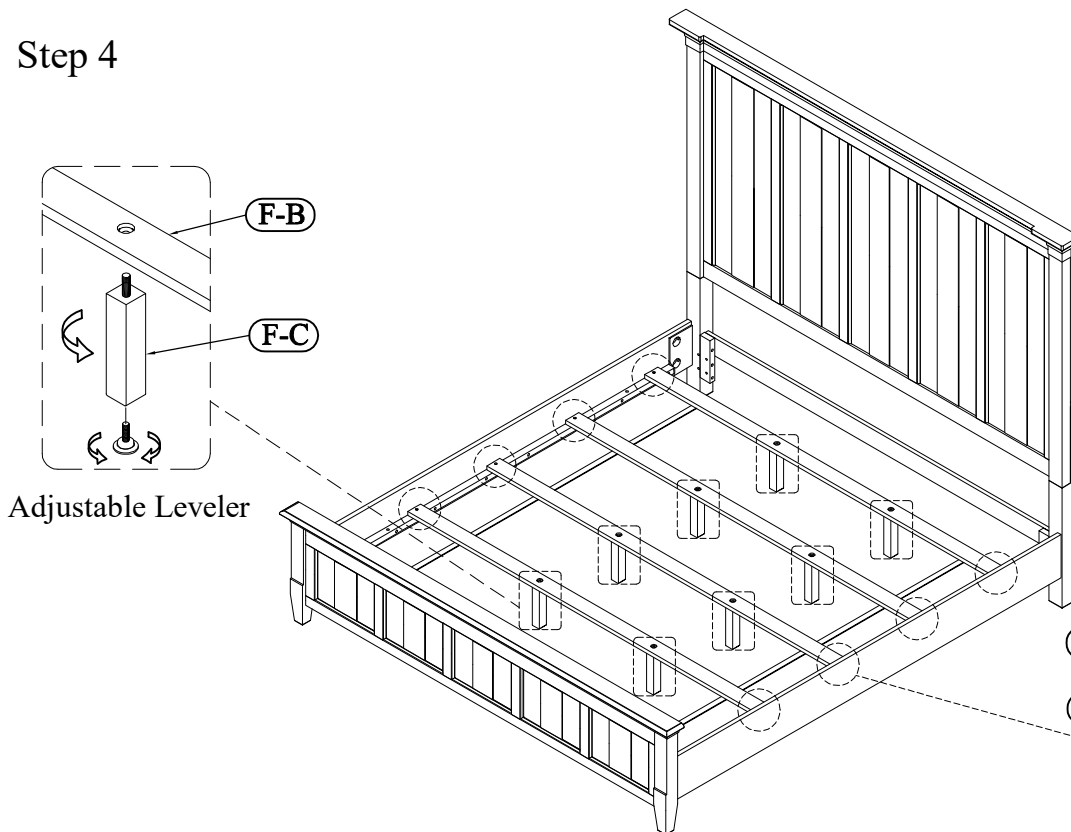

Step 5

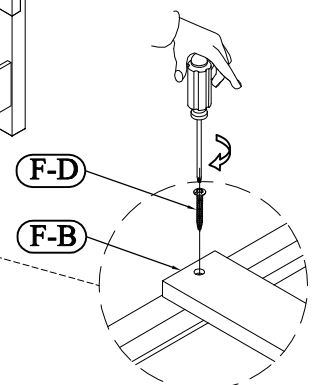

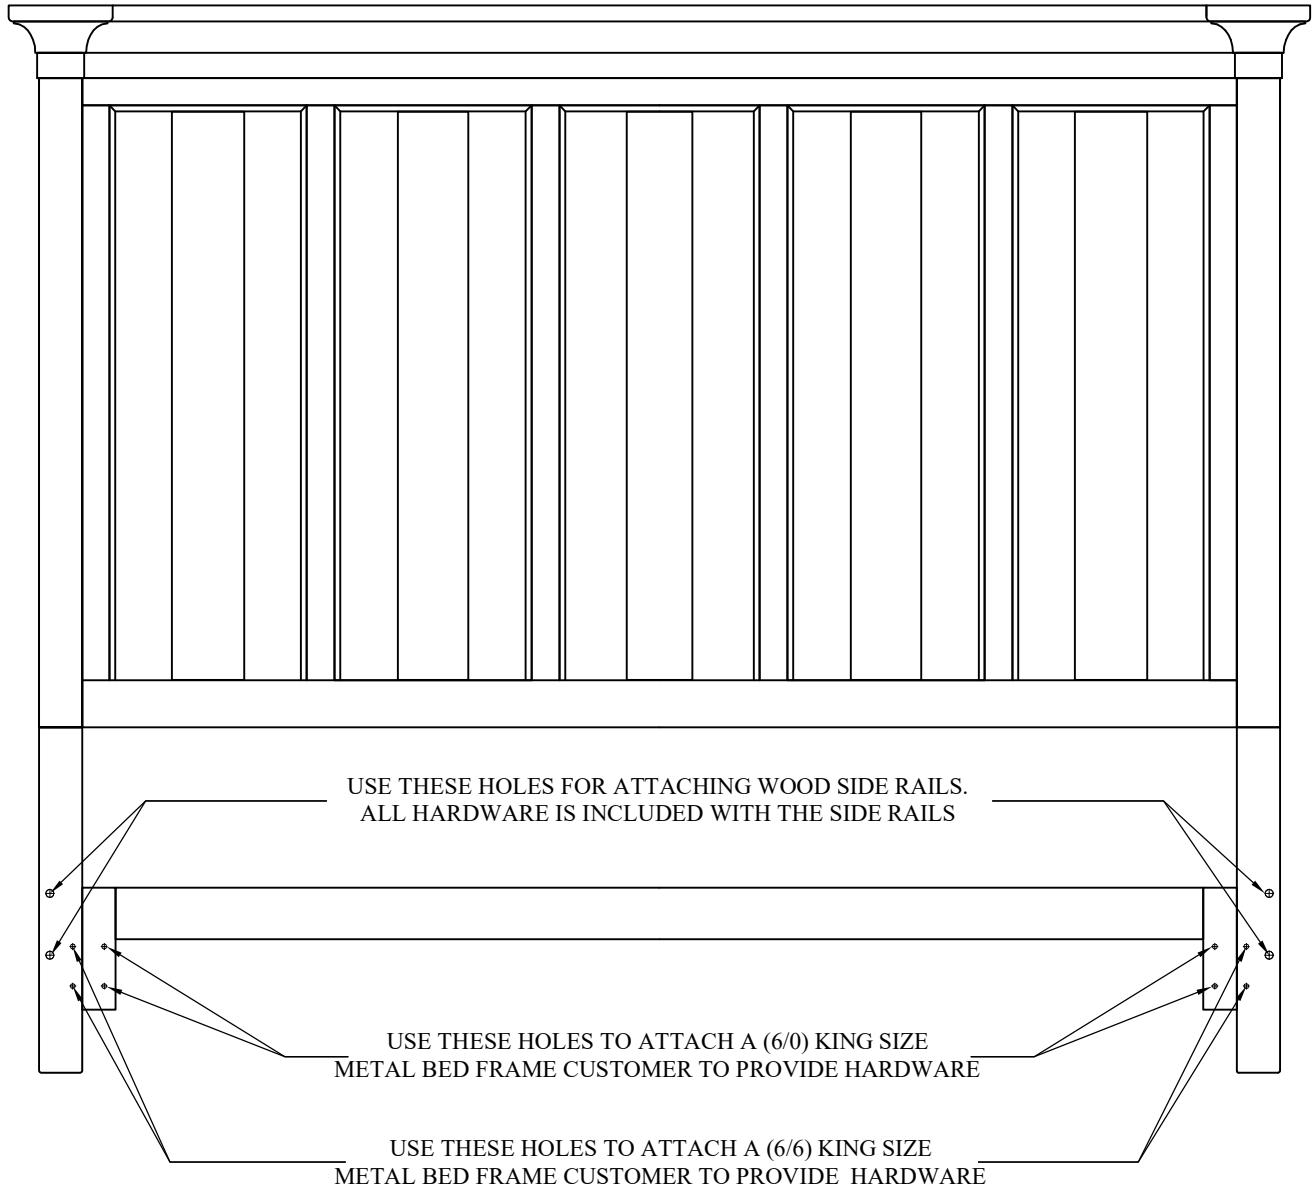

The headboard may be used alone with a Eastern King or California King size metal bed frame.