













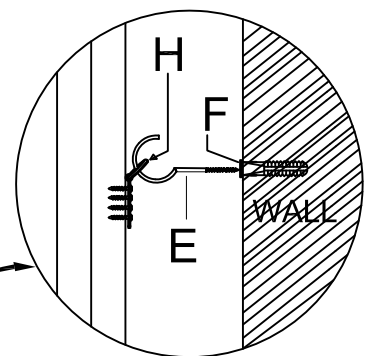
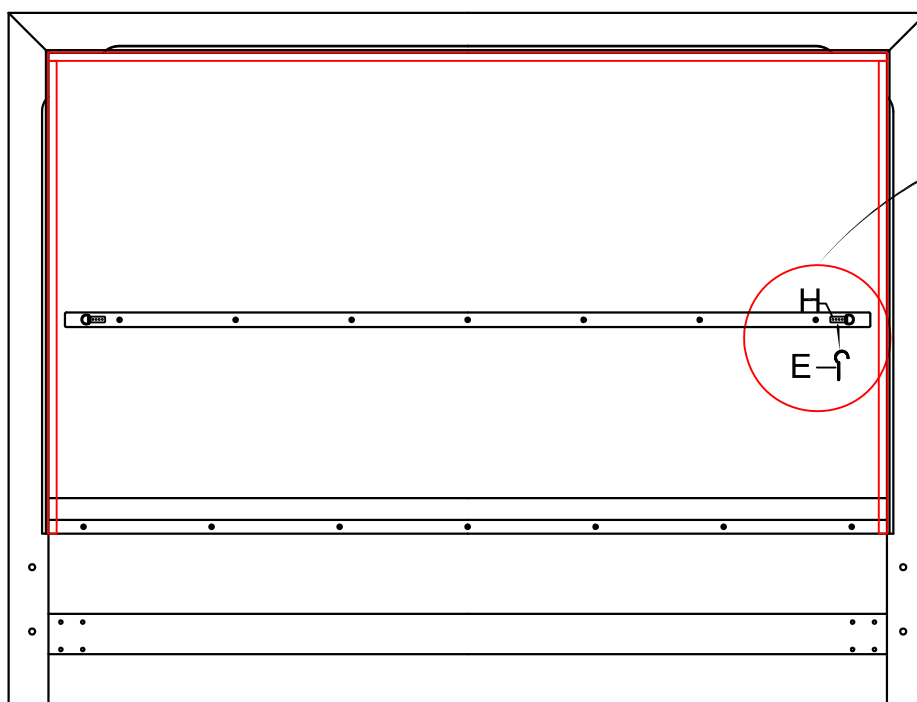
ASSEMBLY INSTRUCTION

ITEM: 6123-90967-89 6/0-6/6 Upholstered Headboard
 6123-90968-89 6/0-6/6 Upholstered Footboard
 6123-90951-89 5/0 Upholstered Headboard
 6123-90952-89 5/0 Upholstered Footboard
 6123-90953-89 5/0-6/6 Upholstered Rails
 6123-90963-89 6/0 Upholstered Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK					PARTS LIST			
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY	NO.	DRAWING	DESCRIPTION	Q'TY
A		Threaded Rod	3/8*100mm	8 PCS	1		Headboard	1 PC
B		Curved Washer	3/8"	8 PCS	2		Footboard	1 PC
C		Nut	3/8"	8 PCS	3		Rail	2 PCS
D		Open Wrench	3/8"	1 PC	4		Slat	4 PCS (For 5/0 Bed) 5 PCS (For 6/6 & 6/0 Beds)
E		Hook	4*53mm	2 PCS	5		Support Leg	4 PCS (For 5/0 Bed) 5 PCS (For 6/6 & 6/0 Beds)
F		Plastic Anchor	Ø 9*30mm	2 PCS				
G		Screw	1 1/4"	16 PCS (For 5/0 Bed) 20 PCS (For 6/6 & 6/0 Beds)				




When using headboard only, hang the metal ring (H) onto the hook (E).

ASSEMBLY INSTRUCTION

ITEM: 6123-90967-89 6/0-6/6 Upholstered Headboard
6123-90968-89 6/0-6/6 Upholstered Footboard
6123-90951-89 5/0 Upholstered Headboard
6123-90952-89 5/0 Upholstered Footboard
6123-90953-89 5/0-6/6 Upholstered Rails
6123-90963-89 6/0 Upholstered Rails

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.
Read all instruction and study the drawing carefully before starting the assembly process.

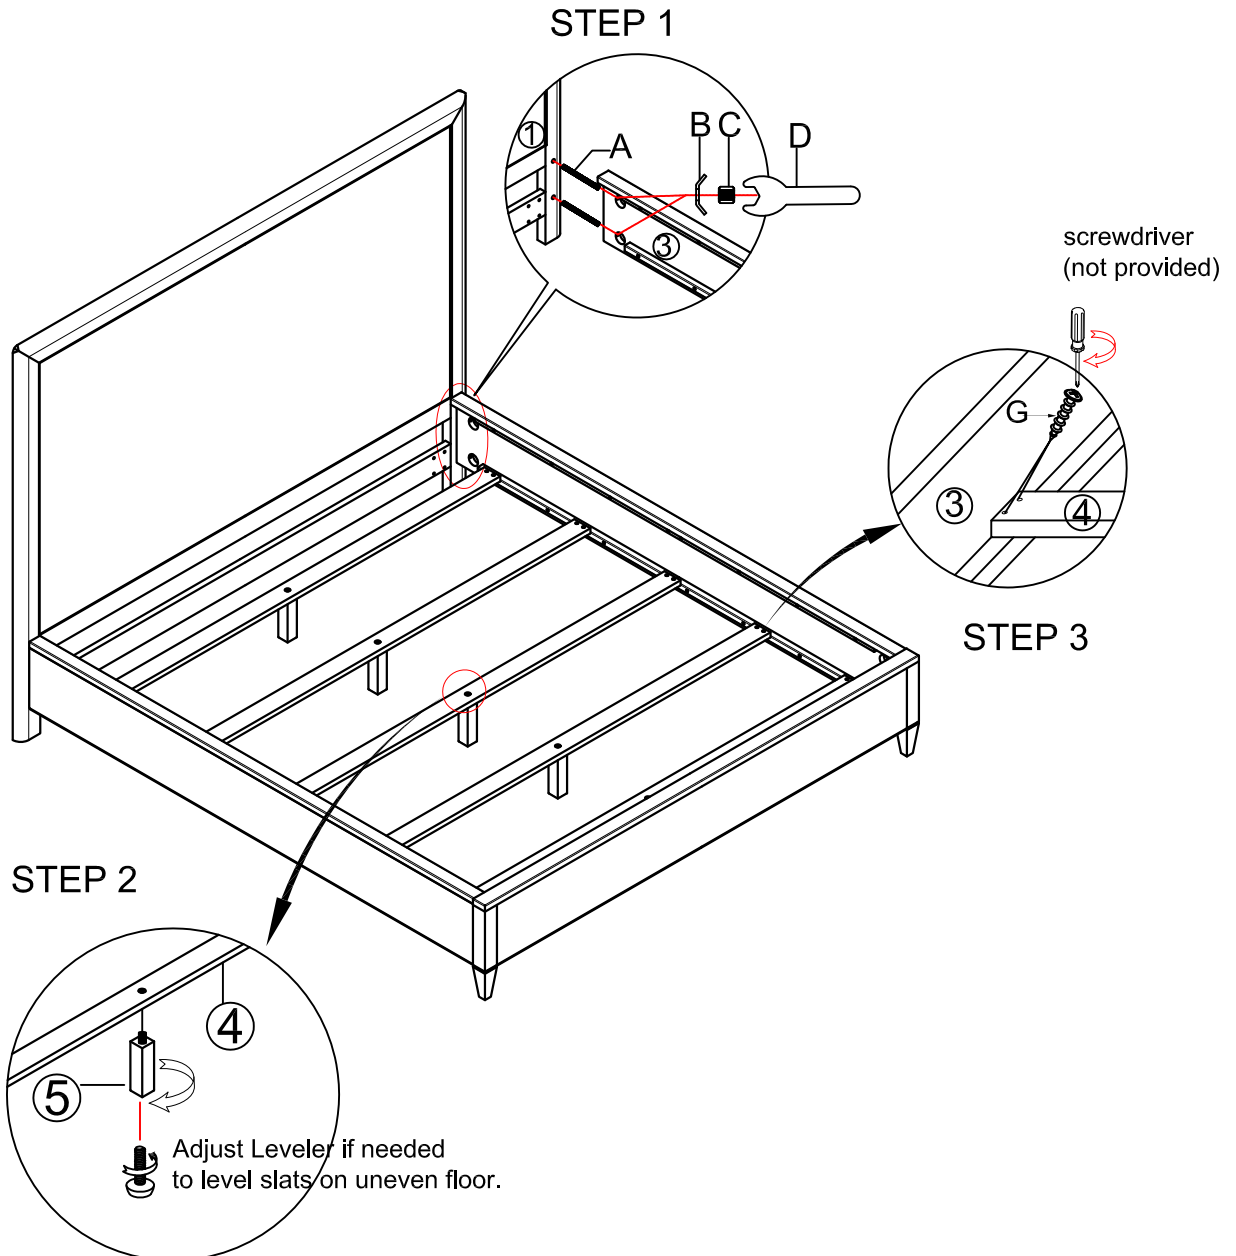

Step 1: Attach Rails (3) to Headboard (1) and Footboard (2) by using Threaded Rods (A), Curved Washers (B) and Nuts (C), tighten them with Open Wrench (D) .

Step 2: Attach support legs (5) to slats (4).

Step 3: Attach slats (4) to the rails (3) and tighten them by using Phillips head screwdriver.