
## ASSEMBLY INSTRUCTIONS

Model: ELLA White / Black Narrow Tall MR/W LED ELLA White / Black Small DRW W/Speaker

**Description : Narrow Tall Mirror With Led** 


Small Drawer With Speaker

PART LIST : NARROW TALL MIRROR					HARDWARE LIST					
No	Description	Diagram	Quantity	PACKED IN TALL MIRROR						
		6		No	Description	Diagram	Size	Quantity		
A	Tall Mirror		1 pc	1	Flat Head Chipboard Screw	<del></del>	M4 x 32mm	2 pcs		
				2	Wall Plug		6mm x 31mm	2 pcs		
				3	Pan Head Chipboard Screw	~aaaaac()}	M3.5 x 20mm	4 pcs		
PART LIST : SMALL DRAWER										
No	Description	Diagram	Quantity	4	Hook			2 pcs		
	Drawer Box		1 pc			,				
В				5	Adaptor Led			1 pc		
				6	Adaptor Speaker			1 pc		
	L					. —				

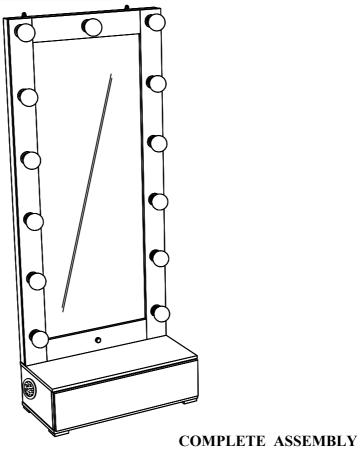


1 OF 3

STEP 1: Attach Hook(4) at Back tall mirror (A) and secure with pan head chipboard screw(3), Then tighten with screw driver(not included) as shown.

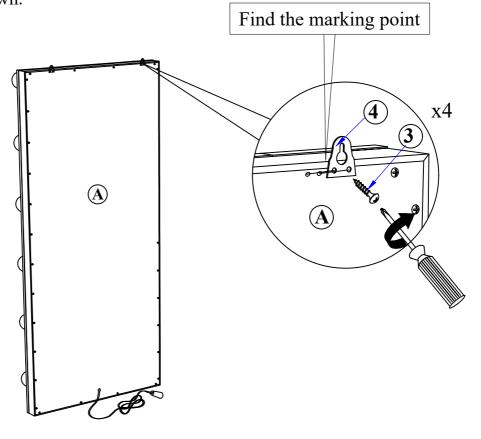



STEP 2: Align Tall mirror drawer box (B) touch the wall and Place the Tall Mirror (A) on top of Tall Mirror drawer Box(B).

WARNING!: Need two Peoples to place the Tall Mirror.

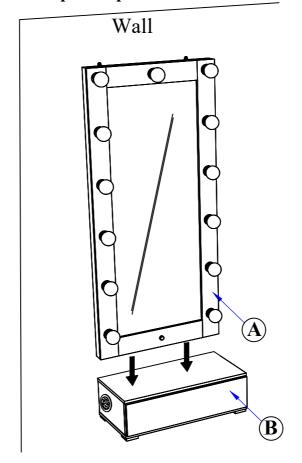

STEP 3: Please align and touch tall mirror(A) at the wall. Please marking and drill hole for Insert Wall plug(2) to the wall. Then secure Tall Mirror (A)with flat head chipboard screw(1) and tighten with screw driver(not included )as shown.

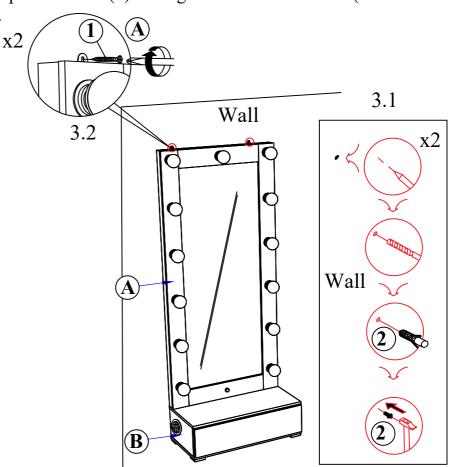

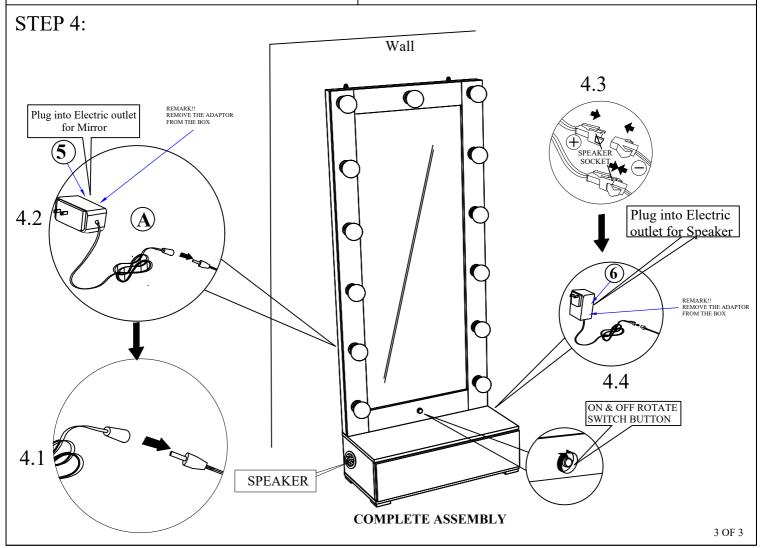

## ASSEMBLY INSTRUCTIONS

Model : Ella White / Black VT W/LED Ella White / Black Vanity TG

Ella White / Black Vanity Side W/Speaker

Ella White / Black STR VS Ella White / Black MR W/LED Description : Vanity Top With Led Vanity Top Glass


Vanity Side (Pedestal x2 pcs, Speaker)

Storage Stool Mirror With Led


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

tha	t may have come loose insid	e the carton during	g shipme	ent						
PART LIST : VANITY CENTER DESK BOX					HARDWARE LIST					
No	Description	Diagram	Quantity	PACKED IN VANITY CENTER DESK						
				No	Description	Diagram	Size	Quantity		
A	Vanity Center		1 pc	1	JCBC Screw		M6 x 30mm	2 pcs		
PART LIST: VANITY TEMPERED TOP GLASS				2	Spring Washer	0	1/4"	2 pcs		
No	Description	Diagram	Quantity							
В	Tempered Glass Top		1 pc	3	Flat Washer		1/4"IDx19mmOD	2 pcs		
DAI	 RT LIST : VANITY DRAWE	D DOV		4	Wood Dowel	0	8 x 20mm	2 pcs		
	1	I	0	-	D. H. LOLL I					
No	Description	Diagram	Quantity	5	Pan Head Chipboard Screw	O-202020	M4 x 25mm	11 pcs		
С	Vanity 3 Drawer Left		1 pc	6	Allen Key		M4 x 65mm	1 pc		
				7	Adaptor Speaker			1 pc		
D	Vanity 3 Drawer Right		1 pc	8	Adaptor Led			1 pcs		
	Bottom Back Panel		1 pc	9	Door Bubble Transparent		D7mmx1.5mm	6 pcs		
L	Bottom Back I and		1 pc	HARDWARE LIST						
D 4 7	NELIGE MANUEL GEORI	CTOD A CE		-	KED INSIDE MIRROR					
	RT LIST : VANITY STOOL	I	<u> </u>	No	Description	Diagram	Size	Quantity		
No	Description	Diagram	Quantity	10	Flat Head Chipboard Screw	<del>()</del>	M4 x 32mm	8 pcs		
F	Stool Storage		1 pc	11	Adaptor mirror			1 pc		
PAI	RT LIST : VANITY MIRRO	R BOX			<u> </u>		<u> </u>			
No	Description	Diagram	Quantity		F	000	)			
G	Mirror	0000	1 pc							
Н	Mirror Support		2 pcs							
COMPLETE VANITY ASSEMBLY										

**STEP 1**: Remove all protection at Vanity 3 Drawer (C & D). THE HARDWARE IS LOCATED IN THE PACKING ITEM.

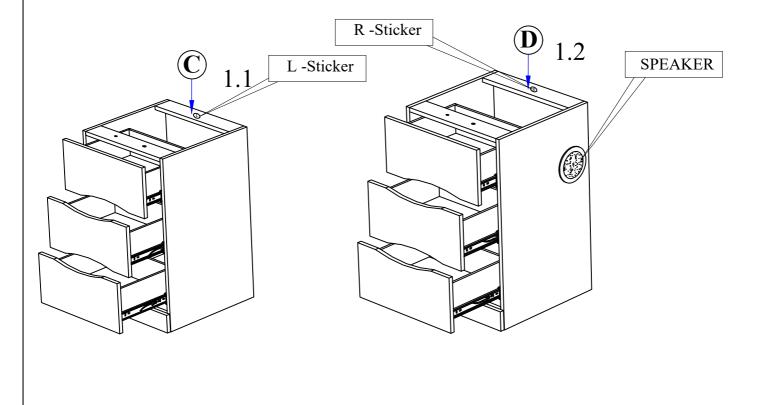

**STEP 2**: Attach Bottom Back panel(E) between vanity 3 drawer (C & D) and secure with flat head chipboard screw(5), Then tighten with screw driver(not included) as shown.

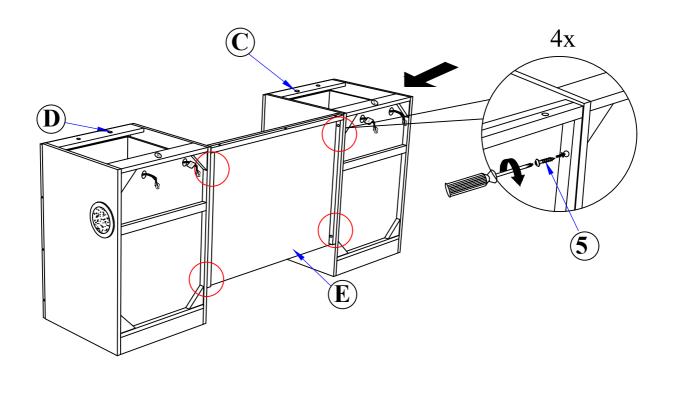

STEP 3: Insert Wood Dowel(4) at Vanity 3 Drawer (C & D) and Attach Vanity Center(A) as shown.


REMARK: Location Hardware

3.1

LED STICKER


BACK VIEW

**STEP 4**: Attach Bottom Back panel(E) between vanity 3 drawer (C & D) and secure with flat head chipboard screw(5), Then tighten with screw driver(not included) as shown.

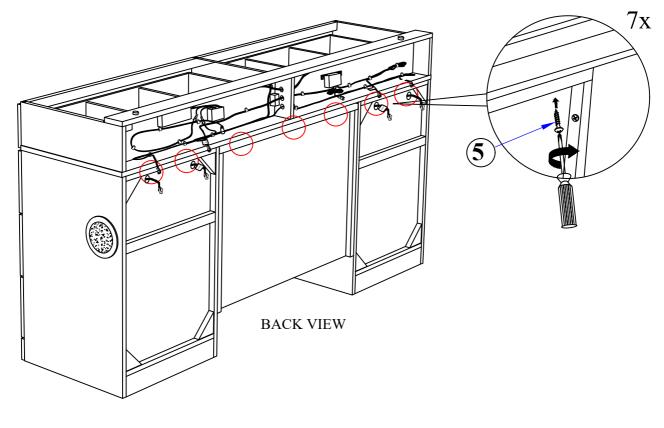


3 OF 6

**STEP 5**: Assemble Vanity Center(A) to Venity 3 drawer (C & D)accordingly secure with JCBC (1), Spring washer(2),Flat washer(3). then Tighten with Allen Key (6) as shown.

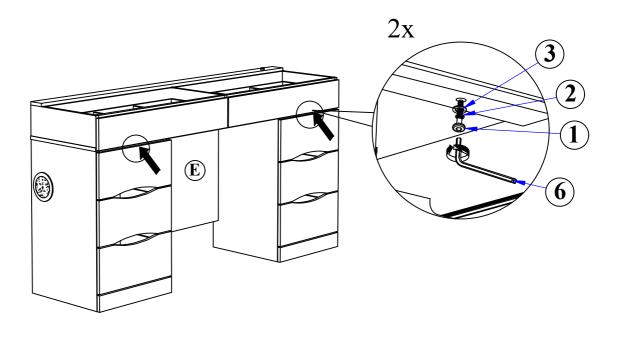


STEP 6: Paste Door Bubble Sticker(9) on top of Vanity center (A) as shown. Put the Top Glass (B) gently on the Door Bubble (9) and align top glass(B) parallel as shown.

## WARNING! : Need two Peoples to place the top glass.

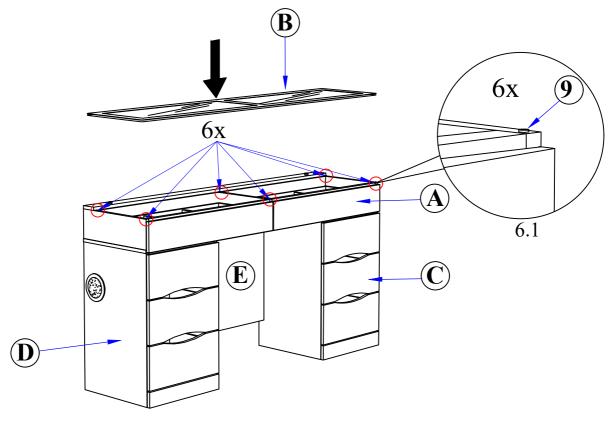

4 OF 6

**STEP 7**: Attach Mirror Support (H) to Mirror (G) as shown and tighten with CSK Screw (10).

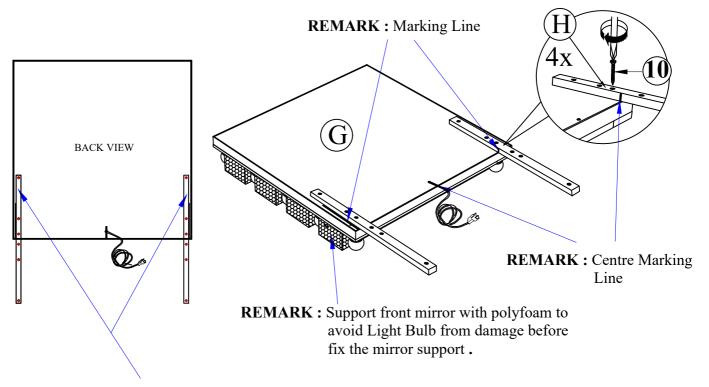

**REMARK:** Follow the mirror back marking line for tighten the mirror support.

STEP 8: Tighten the CSK Screw (10) as shown.

Marking Line

Direction Must Line to Line

