




ASSEMBLY INSTRUCTIONS

Model :Emma-Black/Grey-DR
Emma-Natural/White-DR

Description : Dresser




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, that may have come loose inside the carton during shipment

PART LIST : DRESSER


No	Description	Diagram	Quantity
A	Dresser		1 pc
B	Leg		4 pcs
C	Center Leg		1 pc

HARDWARE LIST


PACKED IN INNER CARTON LEG

No	Description	Diagram	Size	Quantity
1	Pan Head Screw		M3.5 x 16mm	16 pcs
2	Flat Head Chipboard Screw		M4 x 32mm	2 pcs
3	Wood Dowel		6mmx30mm	2 pcs



STEP 1 : Locate the Legs (B) from the bottom drawer of the Dresser (A).

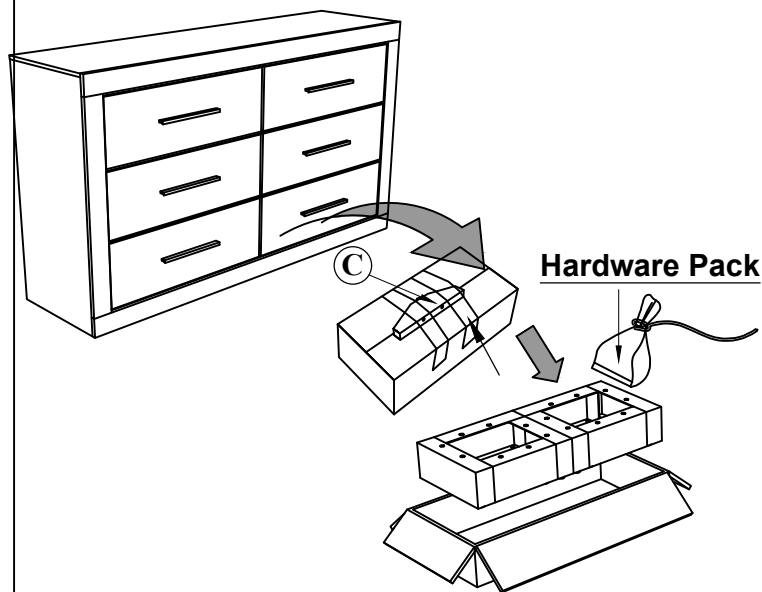

STEP 2 : Place the Dresser (A) upside down on a flat and clean surface. Assemble the Leg (B) by using using a screwdriver with Pan head chipboard screw (1) as shown.

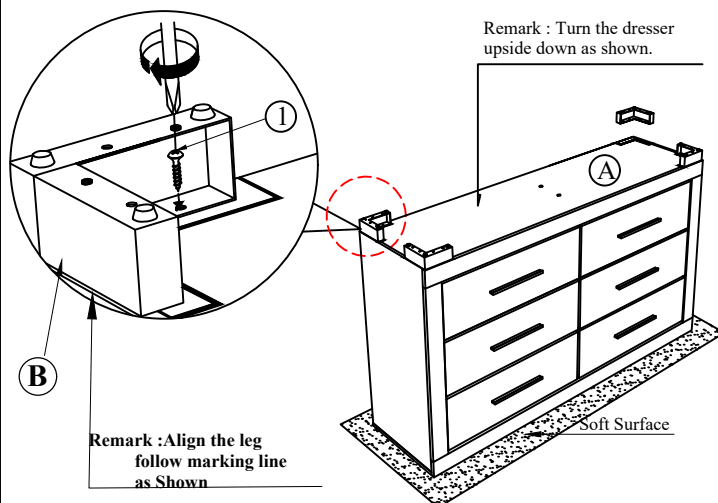

STEP 3 : Insert wood dowel (3) into the Dresser bottom panel (A) as shown. Attach the Center Leg (C) and using the screwdriver with flat head chipboard screw (2) as shown.

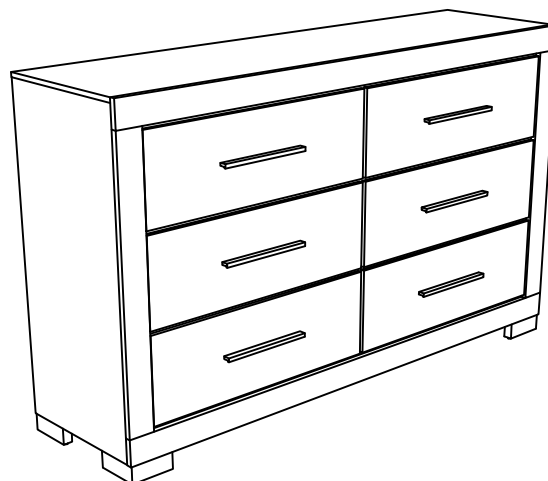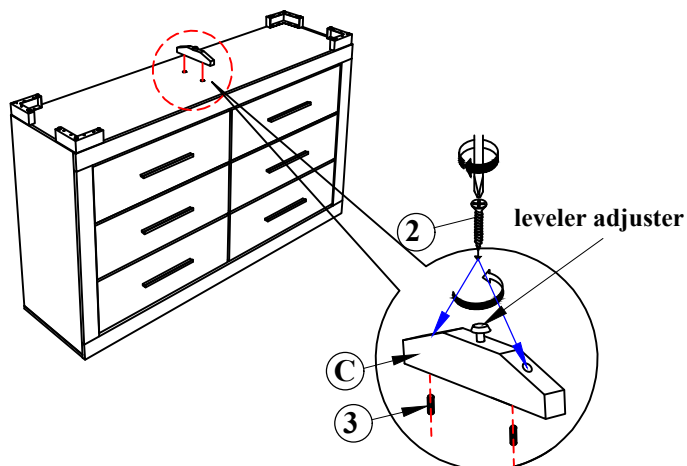

COMPLETE VANITY ASSEMBLY

1 OF 1

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.