




ITEM NO: ICB-492-KD Queen Framed Panel HB
 ICB-402L Queen Side Rails
 ICB-403 Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

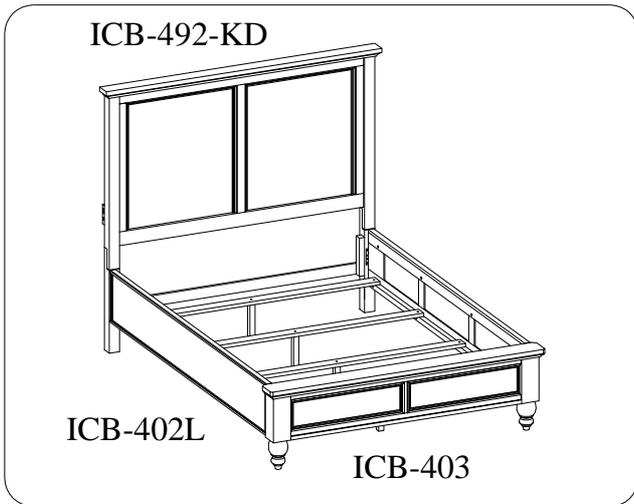

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: ICB-492-KD			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*1-3/4"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16"		8 PCS
D	Allen Wrench 5mm		1 PC

COMPONENTS LIST: ICB-492-KD			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

HARDWARE LIST: ICB-402L			
No.	Description	Sketch	Quantity
E	Wood Screw #8*1-1/4"		8 PCS
F	Allen Wrench 4mm		1 PC

COMPONENTS LIST: ICB-402L			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS



COMPONENTS LIST: ICB-403			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Bun Foot		2 PCS
3	Support legs with leveler		4 PCS

FOR INDOOR USE ONLY




ITEM NO: ICB-492-KD Queen Framed Panel HB
 ICB-402L Queen Side Rails
 ICB-403 Queen Low Profile FB

STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

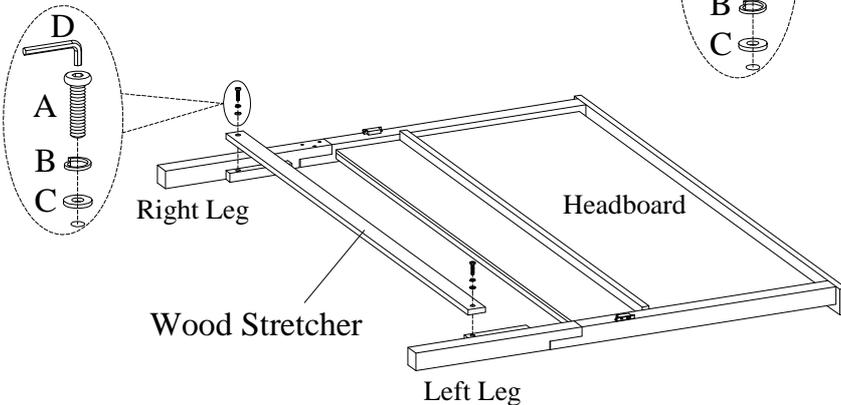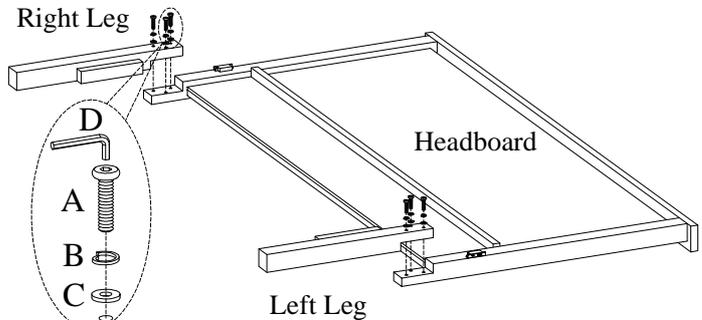


STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).

STEP 3: Lay footboard back down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

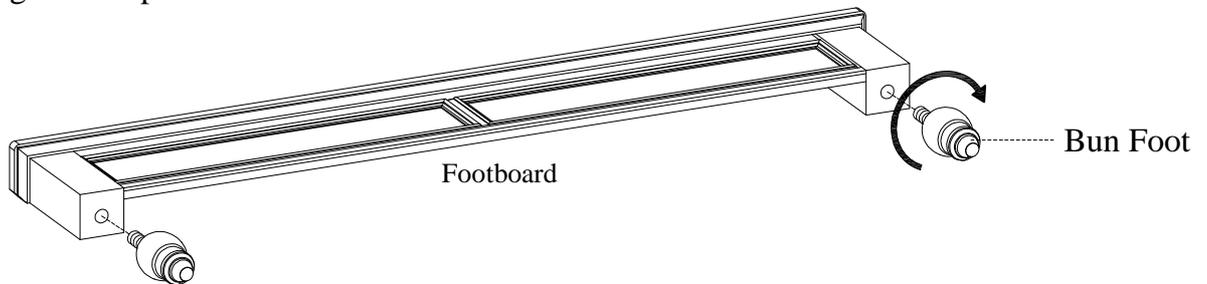


STEP 4: The slat bearers have been attached in position b. The slat bearers can be moved into position a depending on the mattress/platform configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

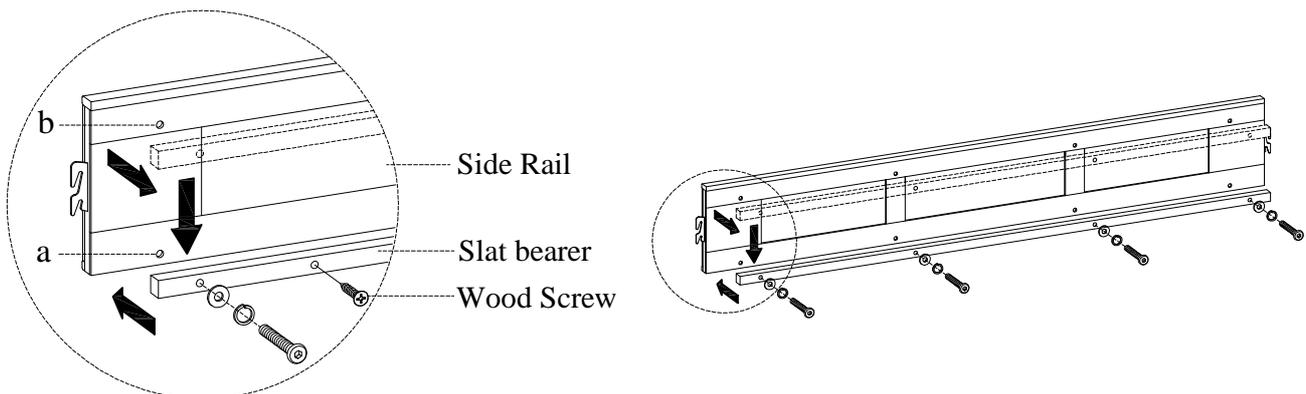





ITEM NO: ICB-492-KD Queen Framed Panel HB
 ICB-402L Queen Side Rails
 ICB-403 Queen Low Profile FB

STEP 5: Hook the side rails to the headboard and footboard.

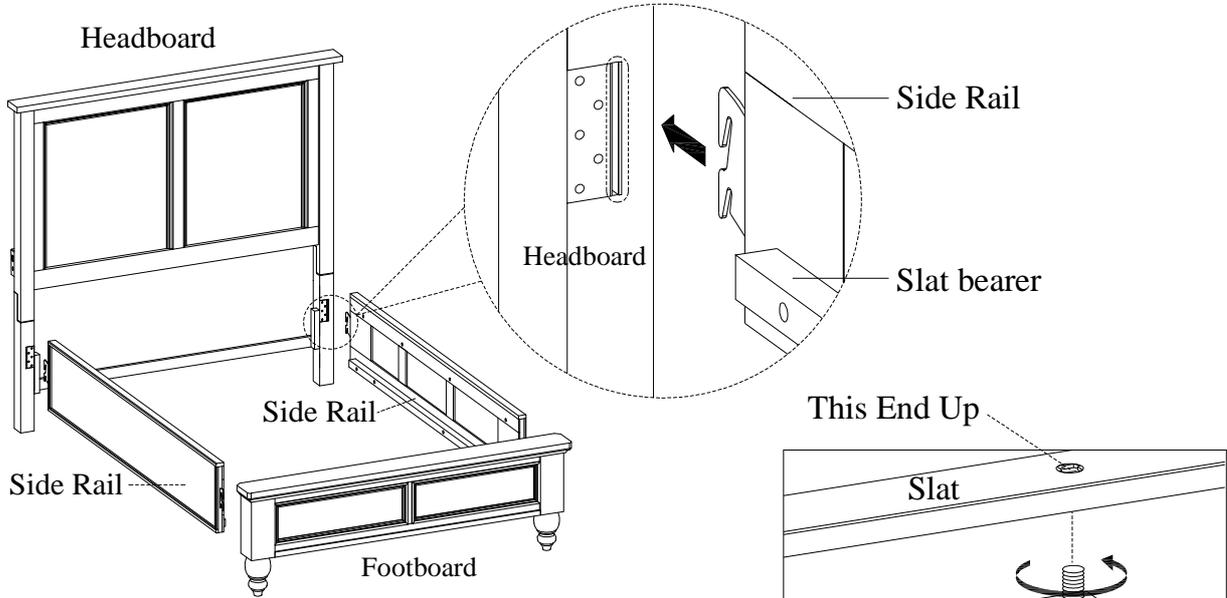


STEP 6: Attach the support legs with leveler to the slats.
 Adjust the levelers on bottom of support legs when necessary.

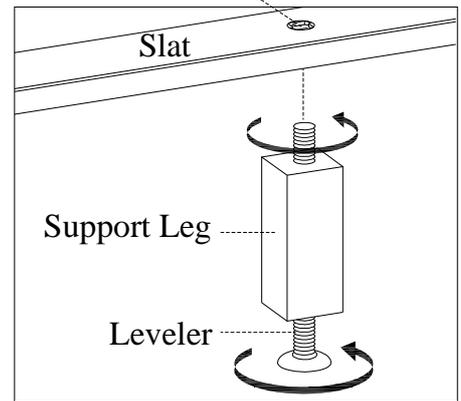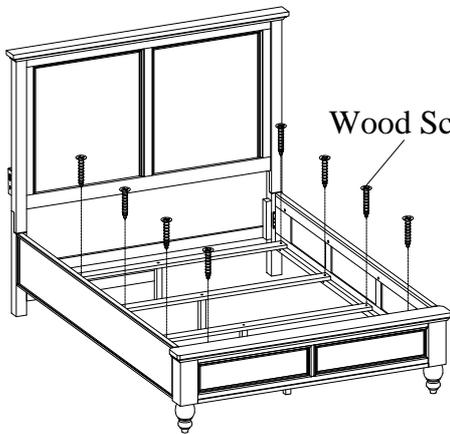

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (E).

FUNCTIONALITY INSTRUCTION

Powered USB Ports (1 Type A+1 Type C) for Charging on both sides

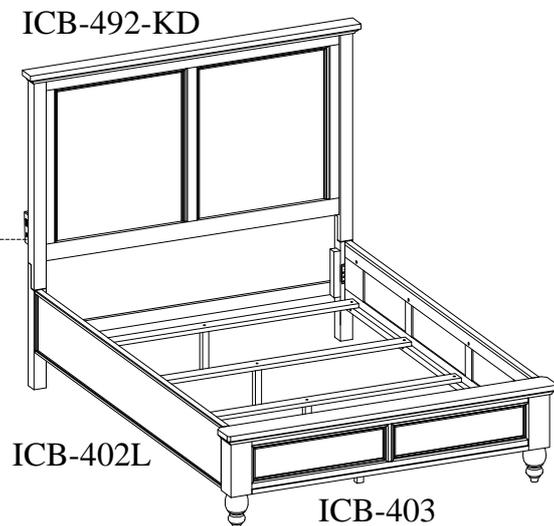




ITEM NO: ICB-495-KD King Framed Panel HB
 ICB-406L King Side Rails
 ICB-410L Cal King Side Rails
 ICB-407 King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

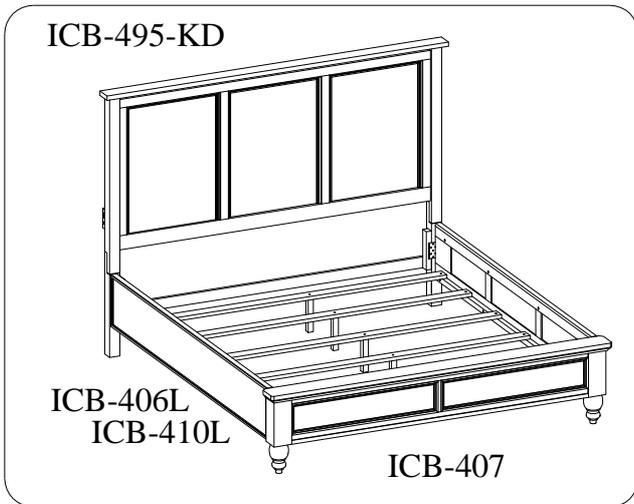

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: ICB-495-KD			
No.	Description	Sketch	Quantity
A	Bolt Ø5/16"*1-3/4"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16"		8 PCS
D	Allen Wrench 5mm		1 PC

COMPONENTS LIST: ICB-495-KD			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

HARDWARE LIST: ICB-406L/410L			
No.	Description	Sketch	Quantity
E	Wood Screw #8*1-1/4"		10 PCS
F	Allen Wrench 4mm		1 PC

COMPONENTS LIST: ICB-406L/410L			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Magnetic Plate(Only for -410L)		4 PCS



COMPONENTS LIST: ICB-407			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Bun Foot		2 PCS
3	Support legs with leveler		5 PCS

FOR INDOOR USE ONLY




ITEM NO: ICB-495-KD King Framed Panel HB
 ICB-406L King Side Rails
 ICB-410L Cal King Side Rails
 ICB-407 King Low Profile FB

STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C).

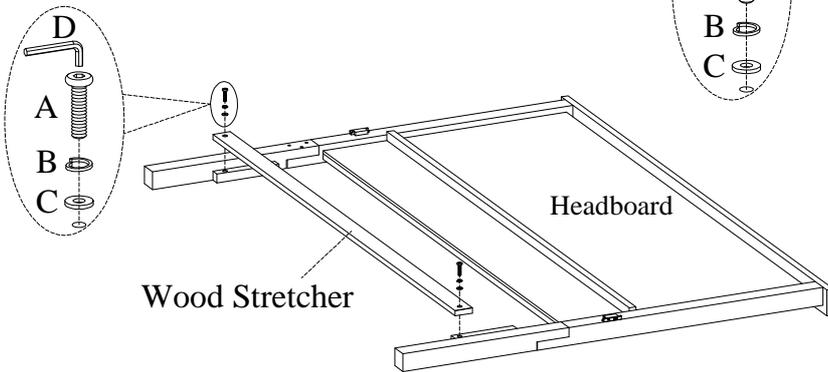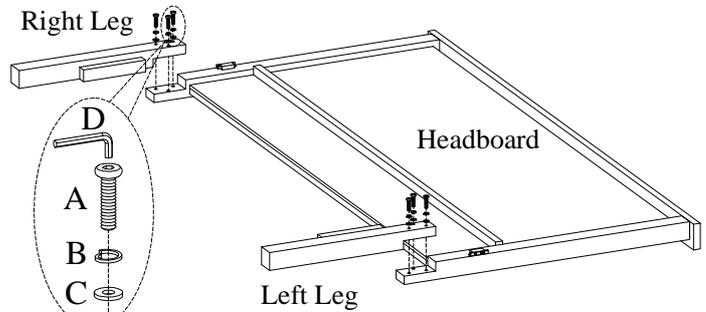


STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C).

STEP 3: Lay footboard back down on a padded, clean surface. Attach bun feet to footboard. Turn footboard right side up.

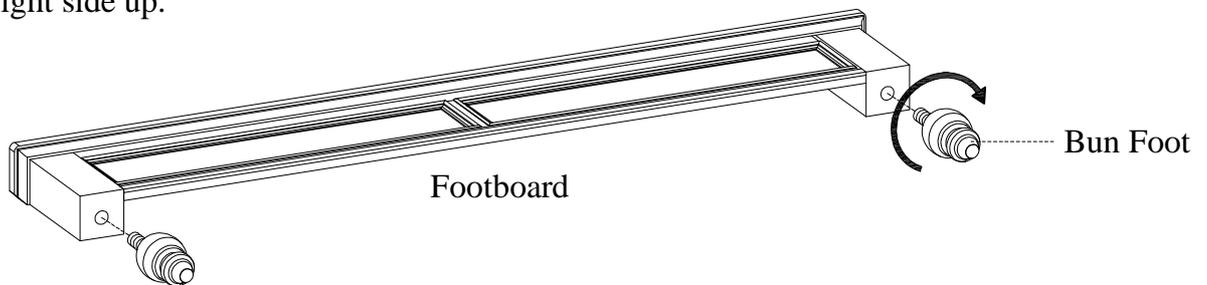


STEP 4: The slat bearers have been attached in position b. The slat bearers can be moved into position a depending on the mattress/platform configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

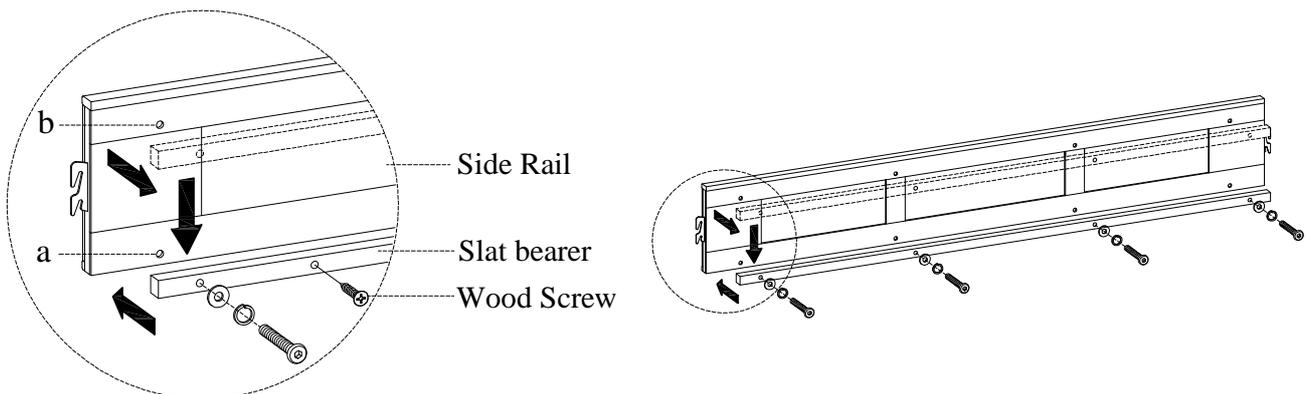




ITEM NO: ICB-495-KD King Framed Panel HB
 ICB-406L King Side Rails
 ICB-410L Cal King Side Rails
 ICB-407 King Low Profile FB


STEP 5: Hook the side rails to the headboard and footboard.

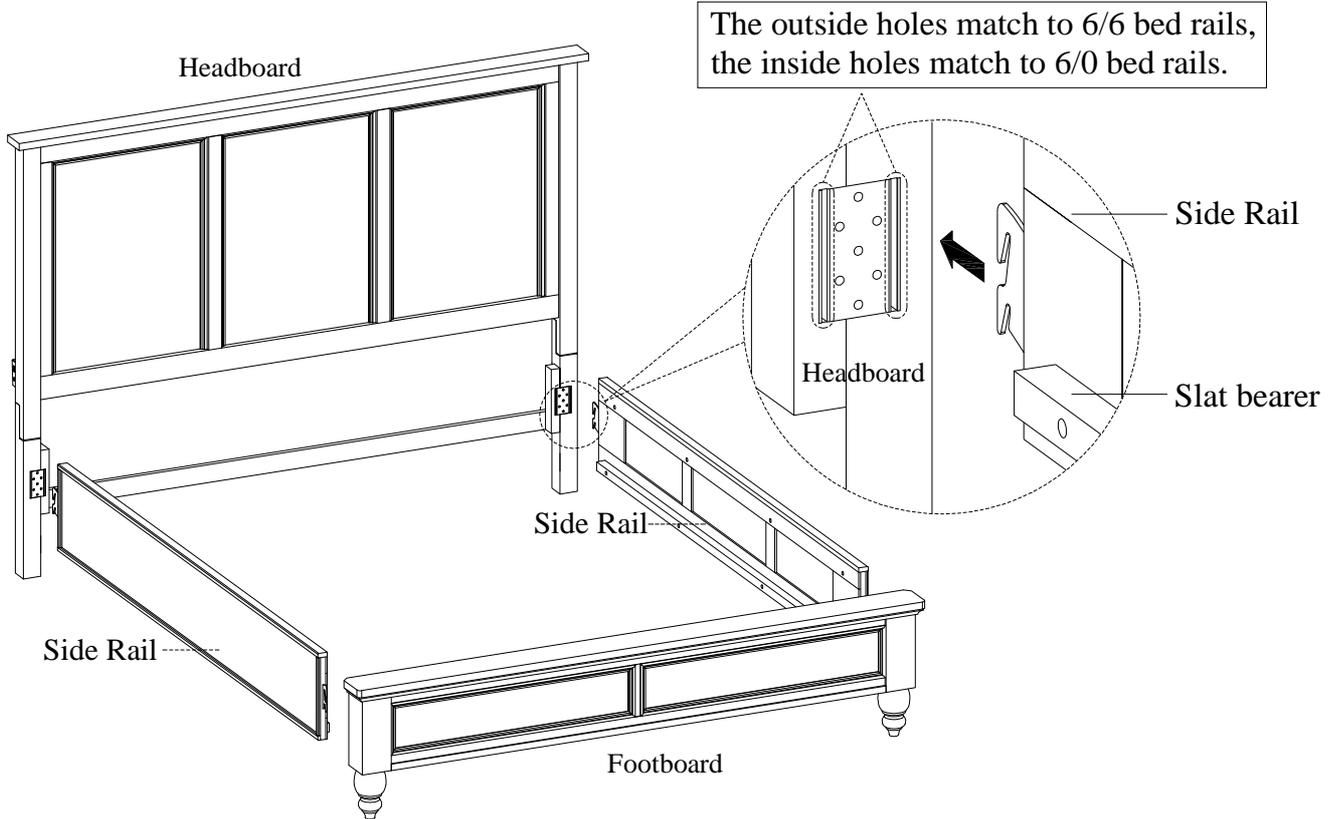

STEP 6: For Cal King bed, use magnetic plate to cover the exposed hooks on headboard and footboard. For regular King bed, skip this step.

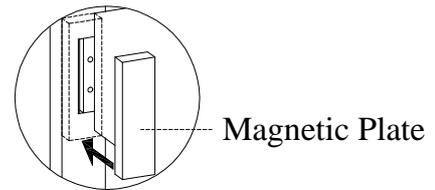


STEP 7: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

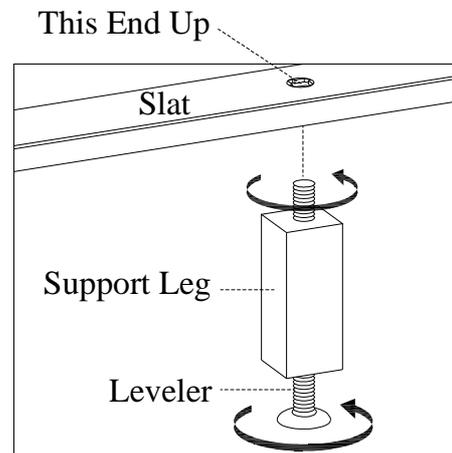



ITEM NO: ICB-495-KD King Framed Panel HB
 ICB-406L King Side Rails
 ICB-410L Cal King Side Rails
 ICB-407 King Low Profile FB


STEP 8: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (E).

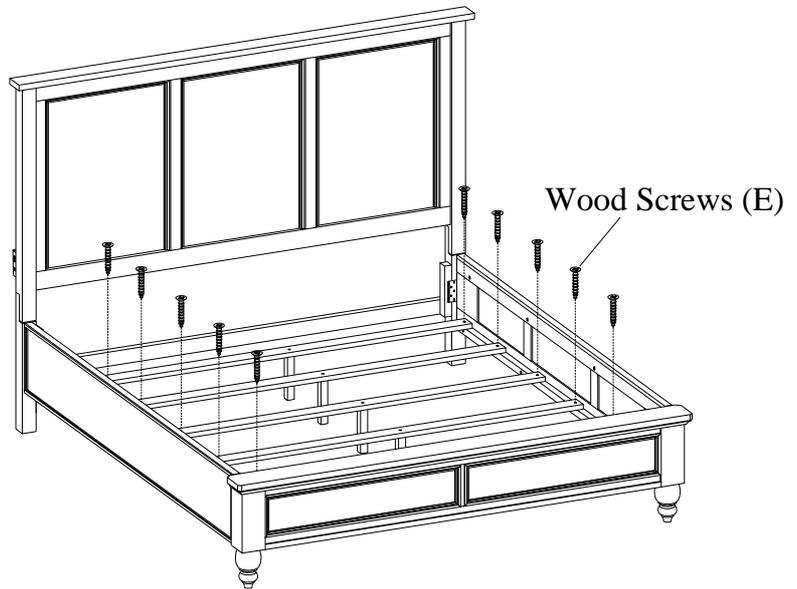

FUNCTIONALITY INSTRUCTION

ICB-495-KD

Powered USB Ports (1 Type A+1 Type C) for Charging on both sides

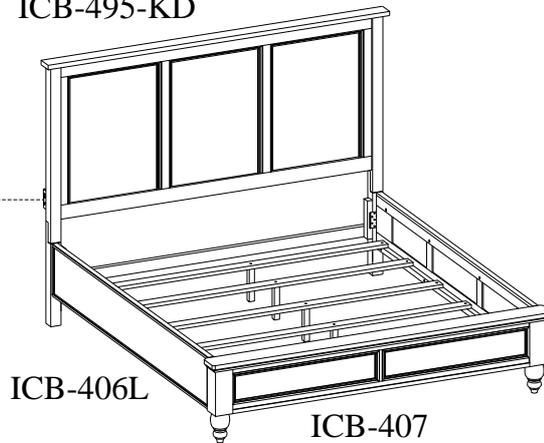

ICB-495-KD

Powered USB Ports (1 Type A+1 Type C) for Charging on both sides

