



ITEM NO: I3153-422 Queen Upholstered HB
I3153-403 Queen FB w/ Decking
I3153-446 Queen/King Rails


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I3153-422

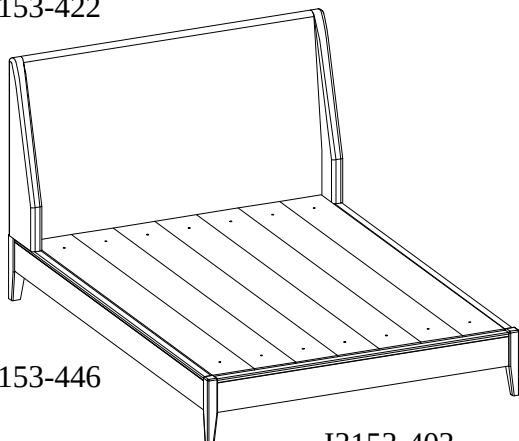

I3153-446

I3153-403

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I3153-422

No.	Description	Sketch	Quantity
A	Bolt Ø1/4" x 1-1/2"		5 PCS
B	Lock Washer Ø1/4"		5 PCS
C	Flat Washer Ø1/4" x 3/4"		5 PCS
D	Allen Wrench 1/4"		1 PC
E	L Metal		2 PCS
F	Bolt Ø1/4" x 5/8"		4 PCS

HARDWARE LIST: I3153-446

No.	Description	Sketch	Quantity
G	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
H	Half Moon Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 13mm		1 PC
K	Bolt Ø1/4" x 1-1/2"		10 PCS
L	Lock Washer Ø1/4"		10 PCS
M	Flat Washer Ø1/4" x 3/4"		10 PCS
N	Allen Wrench 1/4"		1 PC

HARDWARE LIST: I3153-403

No.	Description	Sketch	Quantity
O	Wood Screw #4 x 1"		26 PCS

COMPONENTS LIST: I3153-422

No.	Description	Sketch	Quantity
1	Headboard Top		1 PC
2	Headboard Base		1 PC

COMPONENTS LIST: I3153-446

No.	Description	Sketch	Quantity
1	Bed Rail		2 PCS
2	Support Leg (for center rail)		3 PCS
3	Center Rail		1 PC

COMPONENTS LIST: I3153-403

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Slat		6 PCS
3	Decking		7 PCS


FOR INDOOR USE ONLY



ITEM NO: I3153-422 Queen Upholstered HB
I3153-403 Queen FB w/ Decking
I3153-446 Queen/King Rails


STEP 1: Lay the headboard top face down on a soft surface. Attach the headboard base to headboard top by using 5 bolts (A), lock washers (B) and flat washers (C) with an allen wrench (D).

STEP 2: Attach the L metals (E) to headboard top with 2 bolts (F). Completely tighten all bolts.

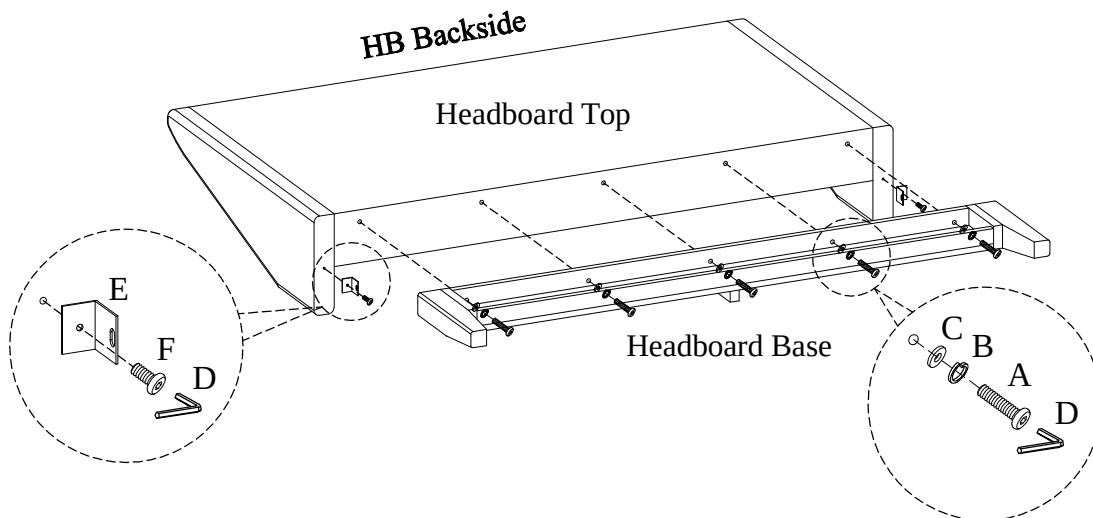

STEP 3: Screw the bolts (G) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (H) and hex nuts (I). Do not completely tighten bolts.


STEP 4: Attach the bolts (F) to L metals (E). Use the Hex wrench (J) and Allen Wrench (D) provided to tighten all the nuts and bolts.

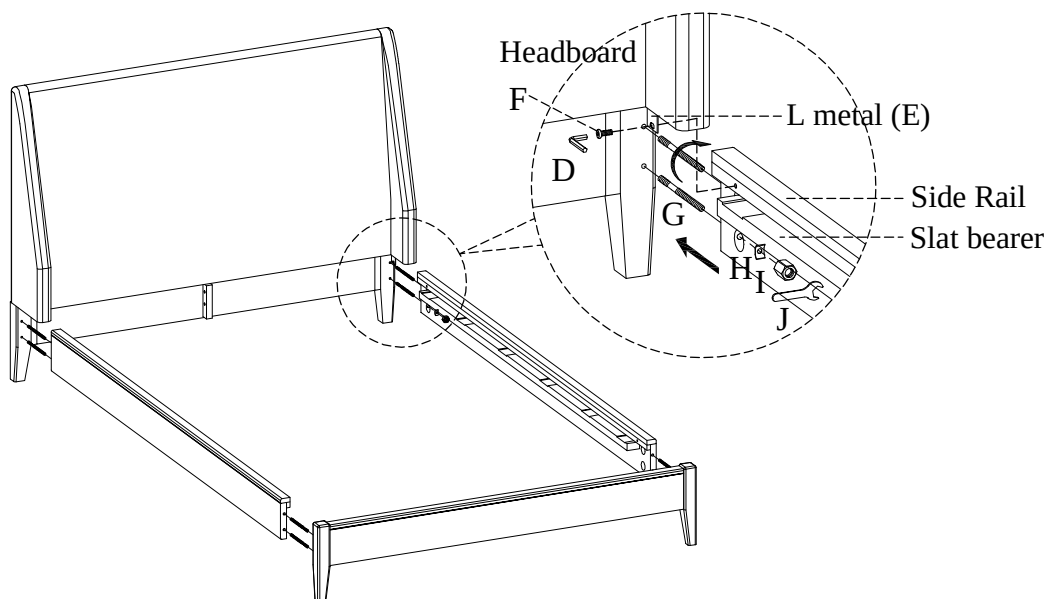




ITEM NO: I3153-422 Queen Upholstered HB
I3153-403 Queen FB w/ Decking
I3153-446 Queen/King Rails


STEP 5: Attach center rail to the footboard and headboard using 4 bolts (K), lock washers (L) and flat washers (M).

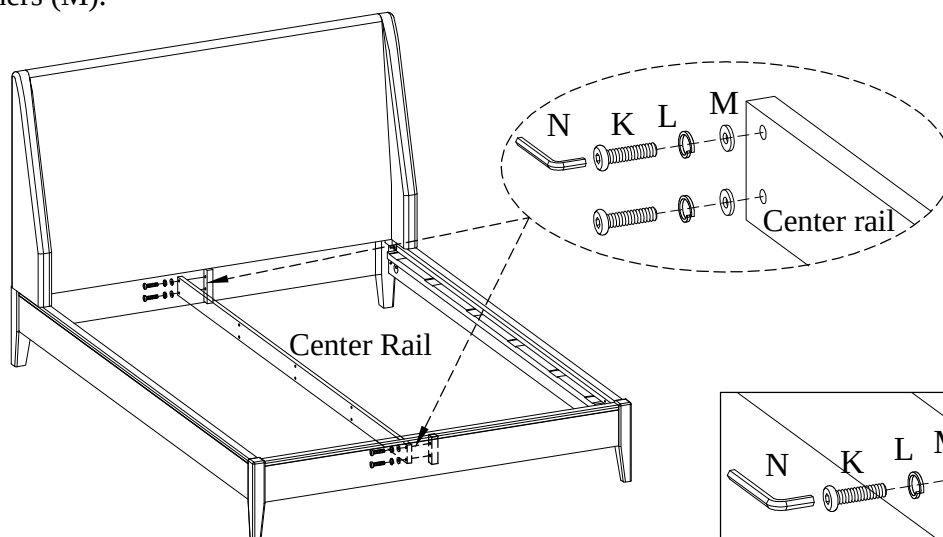

STEP 6: Attach 3 support legs (for center rail) to the center rail using 6 bolts (K), lock washers (L) and flat washers (M). Use the Allen Wrench (N) to tighten all of the bolts.

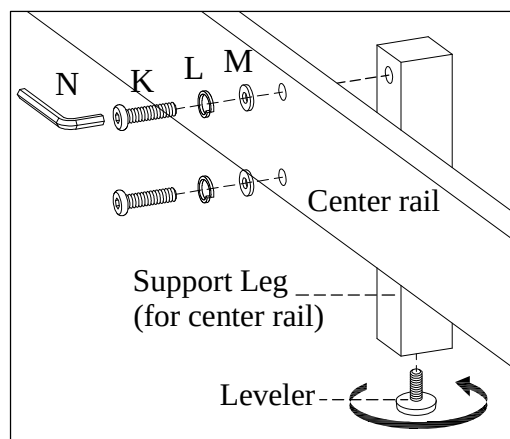


STEP 7: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (O).

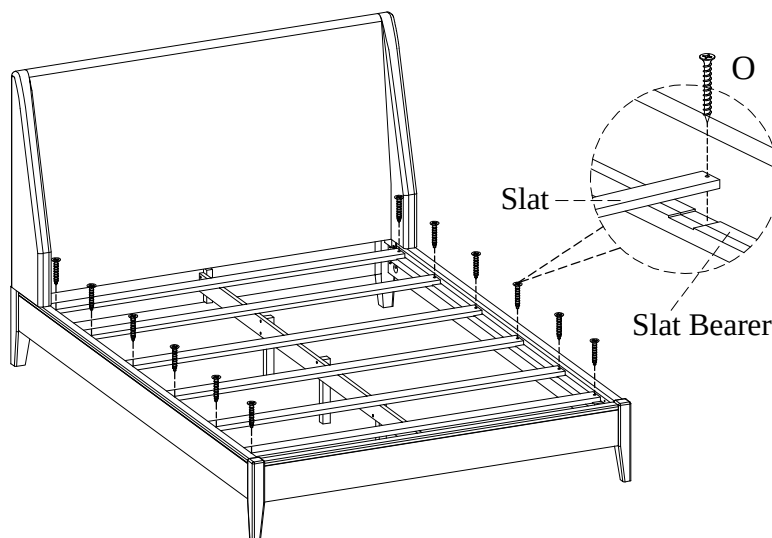




ITEM NO: I3153-422 Queen Upholstered HB
I3153-403 Queen FB w/ Decking
I3153-446 Queen/King Rails

STEP 8: Put the decking over the slats, secure decking to the slats with wood screws (O) through the pre-drilled holes in the decking as shown below.

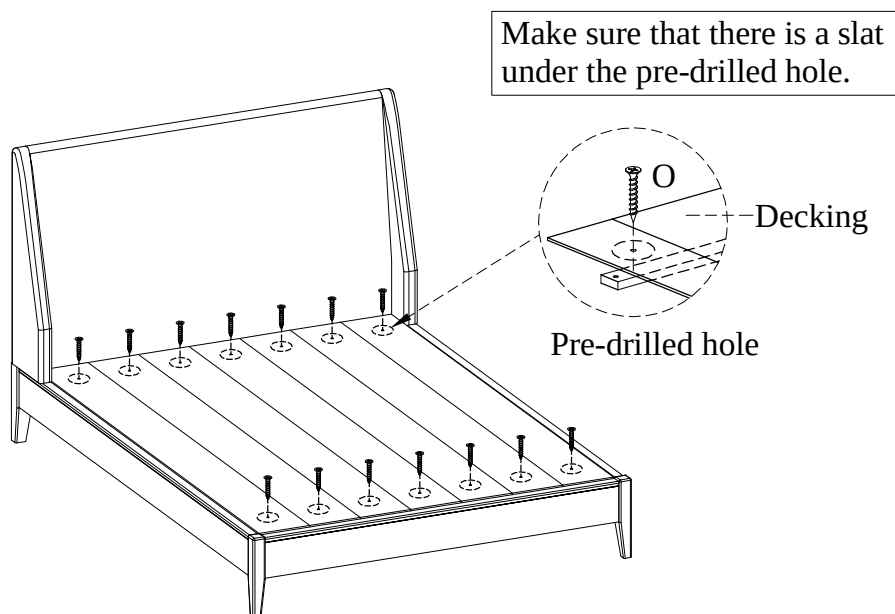

FUNCTIONALITY INSTRUCTION

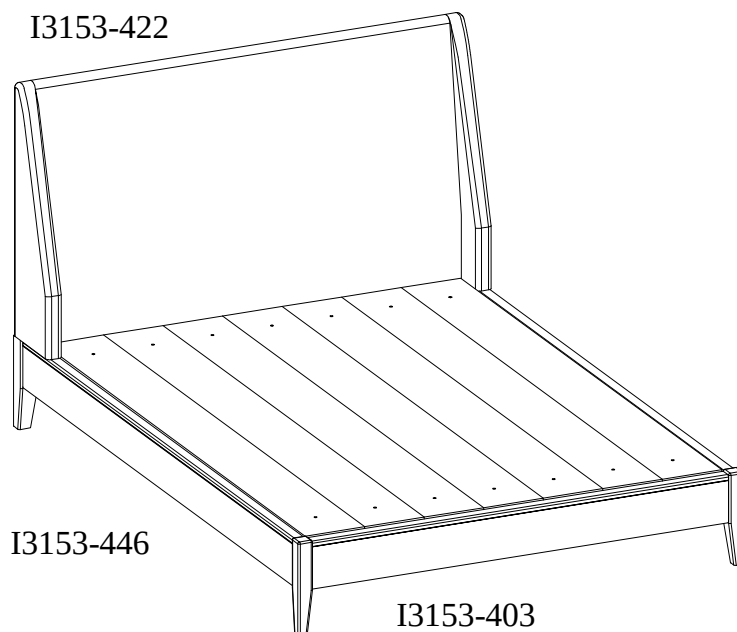



ITEM NO: I3153-425 King Upholstered HB
I3153-407 King FB w/ Decking
I3153-446 Queen/King Rails


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I3153-425

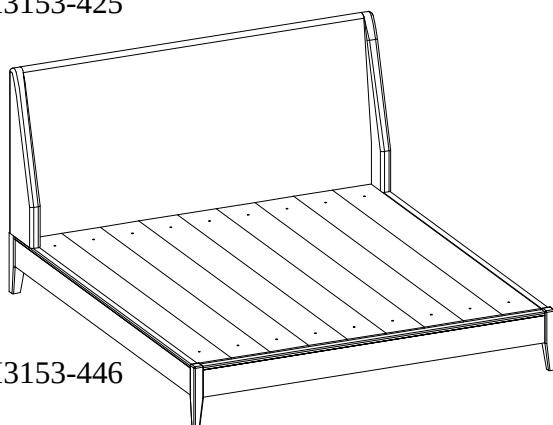

I3153-446

I3153-407

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I3153-425

No.	Description	Sketch	Quantity
A	Bolt Ø1/4" x 1-1/2"		5 PCS
B	Lock Washer Ø1/4"		5 PCS
C	Flat Washer Ø1/4" x 3/4"		5 PCS
D	Allen Wrench 1/4"		1 PC
E	L Metal		2 PCS
F	Bolt Ø1/4" x 5/8"		4 PCS

HARDWARE LIST: I3153-446

No.	Description	Sketch	Quantity
G	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
H	Half Moon Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 13mm		1 PC
K	Bolt Ø1/4" x 1-1/2"		10 PCS
L	Lock Washer Ø1/4"		10 PCS
M	Flat Washer Ø1/4" x 3/4"		10 PCS
N	Allen Wrench 1/4"		1 PC

HARDWARE LIST: I3153-407

No.	Description	Sketch	Quantity
O	Wood Screw #4 x 1"		30 PCS

COMPONENTS LIST: I3153-425

No.	Description	Sketch	Quantity
1	Headboard Top		1 PC
2	Headboard Base		1 PC

COMPONENTS LIST: I3153-446

No.	Description	Sketch	Quantity
1	Bed Rail		2 PCS
2	Support Leg (for center rail)		3 PCS
3	Center Rail		1 PC

COMPONENTS LIST: I3153-407

No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Slat		6 PCS
3	Decking		9 PCS


FOR INDOOR USE ONLY



ITEM NO: I3153-425 King Upholstered HB
I3153-407 King FB w/ Decking
I3153-446 Queen/King Rails


STEP 1: Lay the headboard top face down on a soft surface. Attach the headboard base to headboard top by using 5 bolts (A), lock washers (B) and flat washers (C) with an allen wrench (D).

STEP 2: Attach the L metals (E) to headboard top with 2 bolts (F). Completely tighten all bolts.

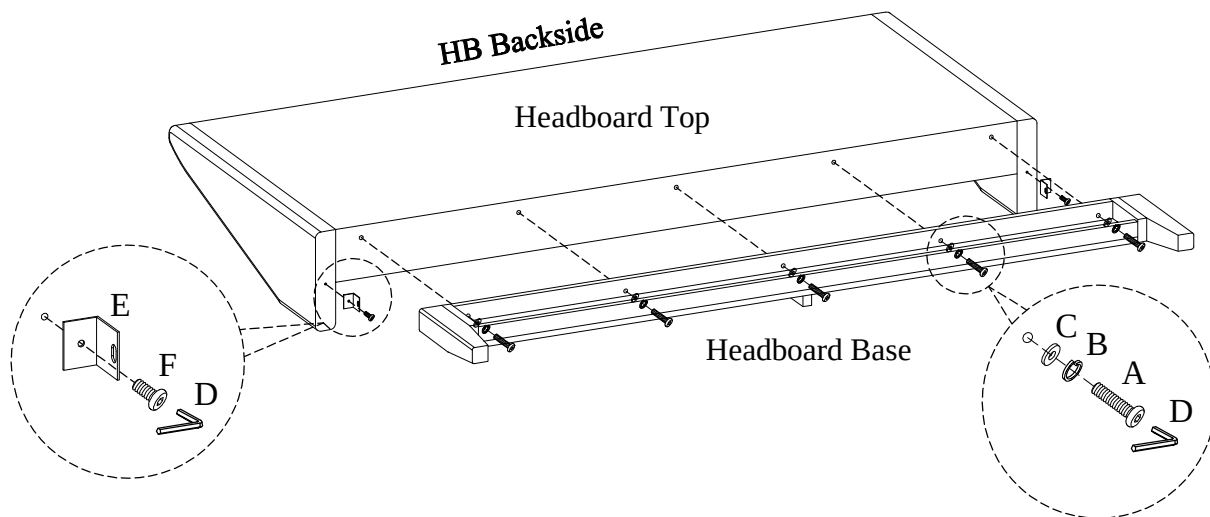

STEP 3: Screw the bolts (G) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon washers (H) and hex nuts (I). Do not completely tighten bolts.


STEP 4: Attach the bolts (F) to L metals (E). Use the Hex wrench (J) and Allen Wrench (D) provided to tighten all the nuts and bolts.

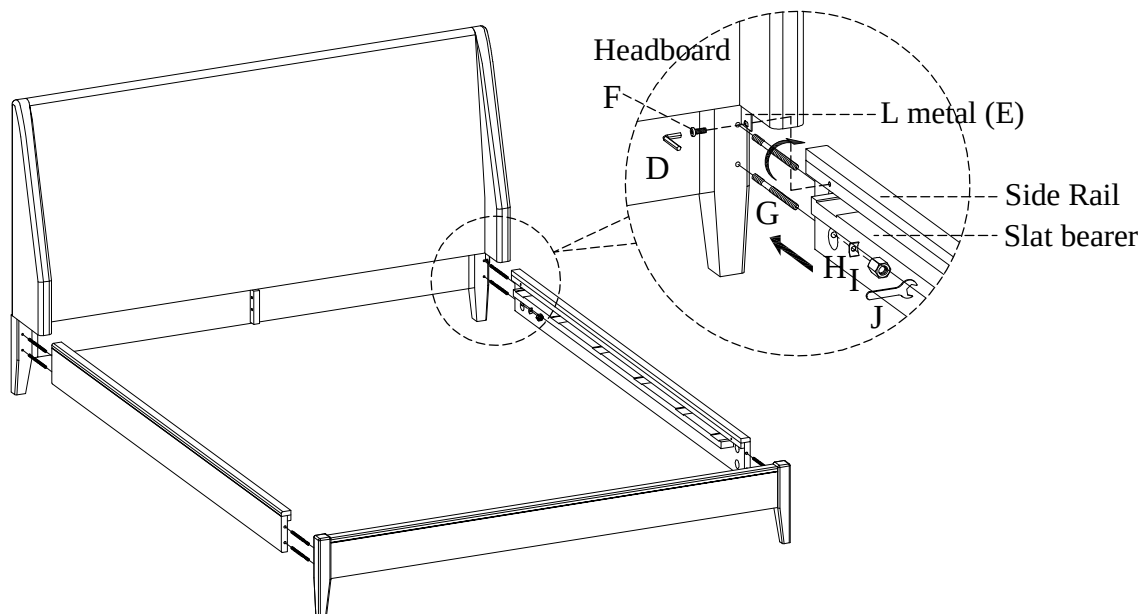




ITEM NO: I3153-425 King Upholstered HB
I3153-407 King FB w/ Decking
I3153-446 Queen/King Rails


STEP 5: Attach center rail to the footboard and headboard using 4 bolts (K), lock washers (L) and flat washers (M).

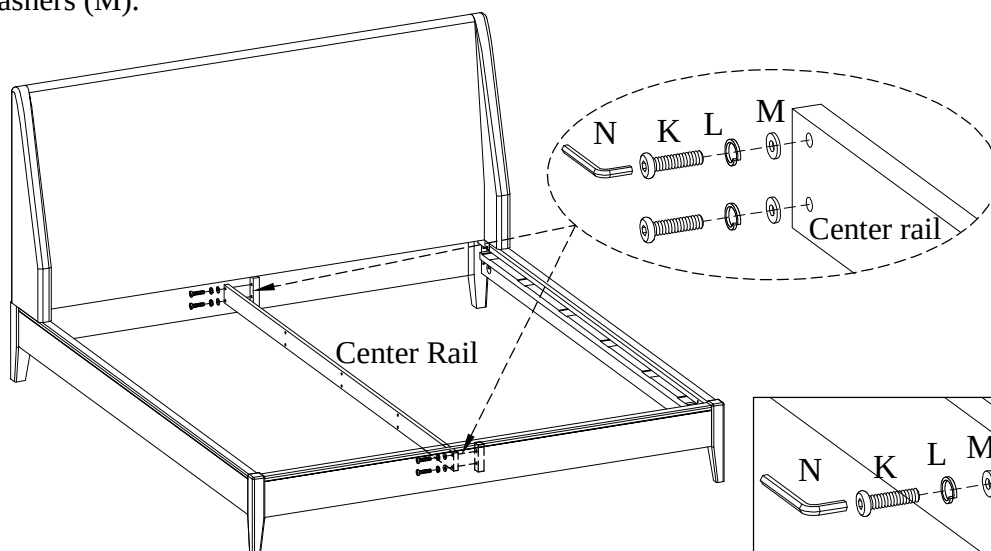


STEP 6: Attach 3 support legs (for center rail) to the center rail using 6 bolts (K), lock washers (L) and flat washers (M). Use the Allen Wrench (N) to tighten all of the bolts.

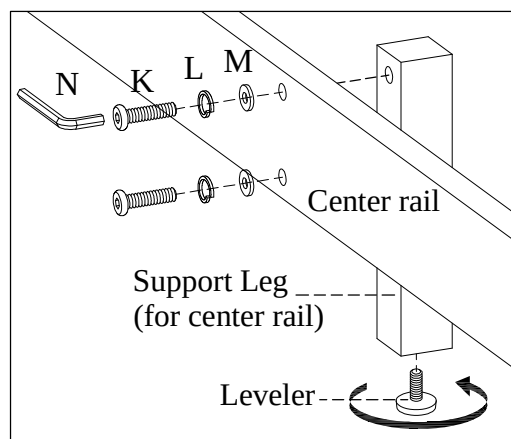


STEP 7: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (O).

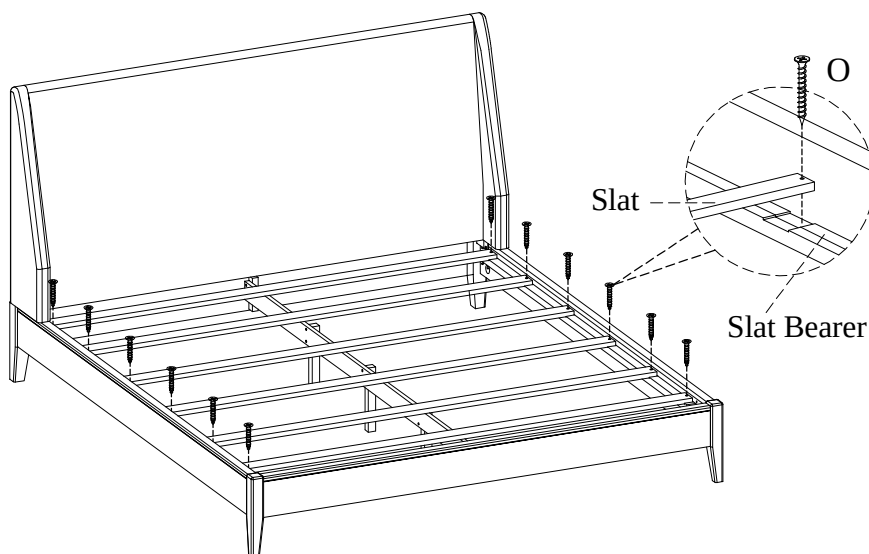



ITEM NO: I3153-425 King Upholstered HB
I3153-407 King FB w/ Decking
I3153-446 Queen/King Rails

STEP 8: Put the decking over the slats, secure decking to the slats with wood screws (O) through the pre-drilled holes in the decking as shown below.

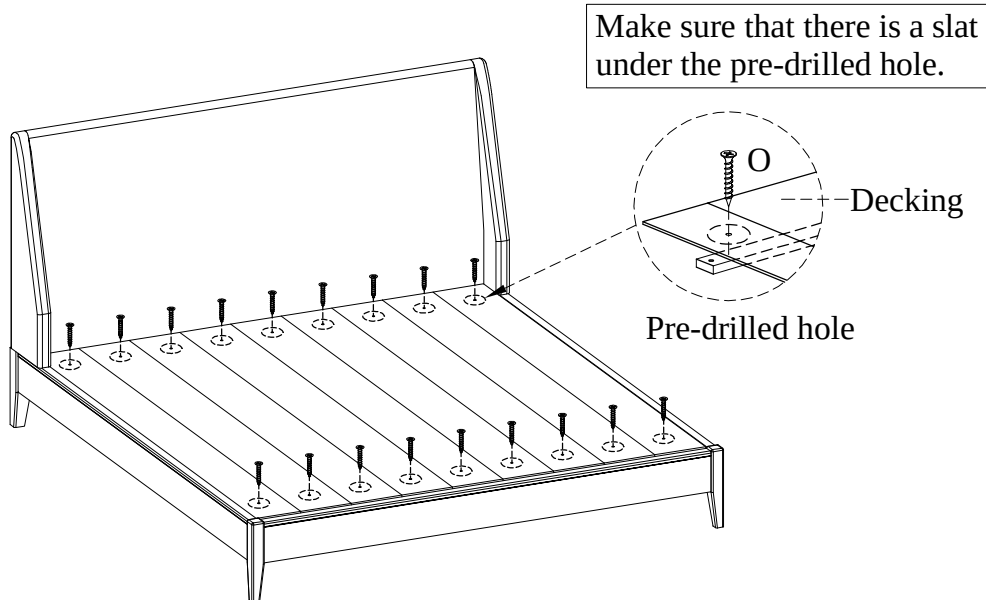

FUNCTIONALITY INSTRUCTION

