

# M113-019-081 REMIX BED BENCH CARACOLE MODERN

1 of 1

## ASSEMBLY INSTRUCTIONS


PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!

For this is a set-up construction, So no extra assembly needed

\*\*\* NOTE KEEP THIS SHEET!!! \*\*\*

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

| M113-019-081           |                   |     |
|------------------------|-------------------|-----|
| REMIX BED BENCH        |                   |     |
| Part Description       | Part No.          | QTY |
| Adjustable Floor Glide | M111-019-811-4003 | 4   |

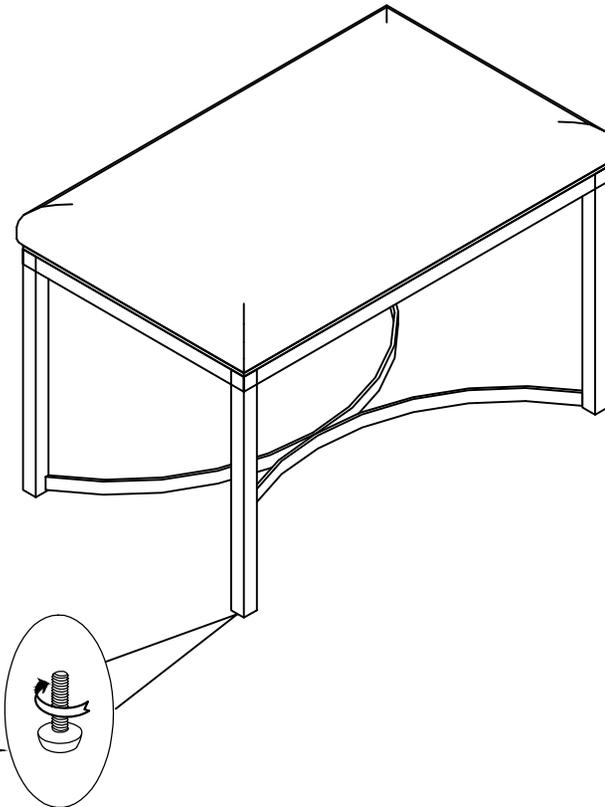

Adjustable Floor Glide