WINNERS

ONLY INC.

ASSEMBLY INSTRUCTIONS

ITEM NO: C1-RT102S--D

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .

"Hardware is attached underneath the seat bottom"

Components List:

| _ | | | | | | |
|----|--------------------------|--------|-----|--|--|--|
| NO | DESCRIPTION | SKETCH | QTY | | | |
| A | Back Frame | | 1pc | | | |
| В | Cushion Seat | | 1pc | | | |
| С | Seat Frame | | 1pc | | | |
| D | Front Leg (Left) | | 1pc | | | |
| Е | Front Leg (Right) | 00 | 1pc | | | |
| F | Side Stretcher (Left) | | 1pc | | | |
| G | Side Stretcher (Right) | | 1pc | | | |



| Halawaic List. | | | | | | | |
|----------------|---------------|-------------|-------------------|-------|--|--|--|
| NO | DESCRIPTION | SIZE | SKETCH | QTY | | | |
| 1 | Wrench | 12x75 mm | 2 | 1pc | | | |
| 2 | Allen Key | 58x23x4 mm | | 1pc | | | |
| 3 | Short Bolt | 1/4" x38 mm | 0 | 3pcs | | | |
| 4 | Long Bolt | 1/4" x85 mm | 0 | 4pcs | | | |
| 5 | Hex-Nut | 5/16" | (| 4pcs | | | |
| 6 | Spring Washer | 5/16" x Ø12 | | 11pcs | | | |
| 7 | Flat Washer | 5/16" x Ø19 | 0 | 11pcs | | | |
| 8 | Wood Screw | Ø8 x 50 mm | <i>∞mmmmm</i> _(} | 4pcs | | | |

Reminders

- 1. Use only the hardware supplied.
- 2. Once the chair is finished, level and tighten all the bolts.
- 3. Do not over-tighten bolts.
- 4. This item may require periodic tightening.

NOTE:


- 1. Hardware pack is located underneath the Cushion Seat (B).
- 2. Two or more people are needed for assembly. Please keep all hardware parts out of the reach of children.

<u>Step1</u>: Attach the Seat Frame (C) with Cushion Seat (B) to Back Frame (A) by using Flat Washer (7), Spring Washer (6) and Bolt (3&4).

Step2: Attach Side Stretcher (F&G) to Back Frame (A) using Wood Screws (8) through pre-drilled holes of Side Stretcher (F&G) and Back Frame (A). Attach the assembled Front Leg (D&E) to Seat Frame (C) by using Flat Washers (7), Spring Washers (6) and Hex-Nut (5). Attach Front Legs (D&E) to the Side Stretcher (F&G) using Wood Screws (8) through pre-drilled holes on the Side Stretcher (F&G).

Assembly is now complete

Thank you for choosing this product.

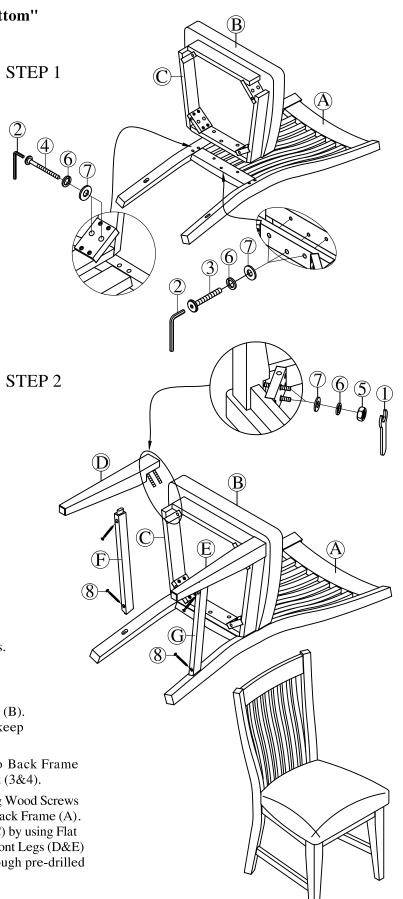

MADE IN VIETNAM