


# ESSEX METAL HEADBOARD OR FOOTBOARD


Model # 105173-126951 (2346-370) Twin Size  
Model # 105173-126952 (2346-470) Full Size  
Model # 105173-126953 (2346-570) Queen Size  
Model # 105173-126954 (2346-670) King Size

Date: 07-12-2018  
Page 2 of 2

**STEP 1 - For purchase of Headboard only**  
Begin assembly by first attaching each Leg Extension (H) to each Post on Duo Panel (G) by firmly sliding into place. See Figure 1.

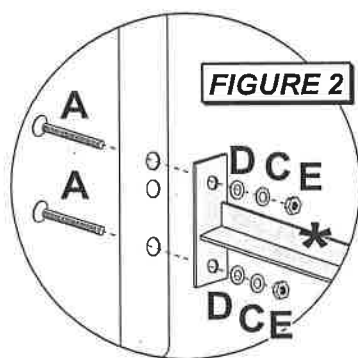


**FIGURE 2**

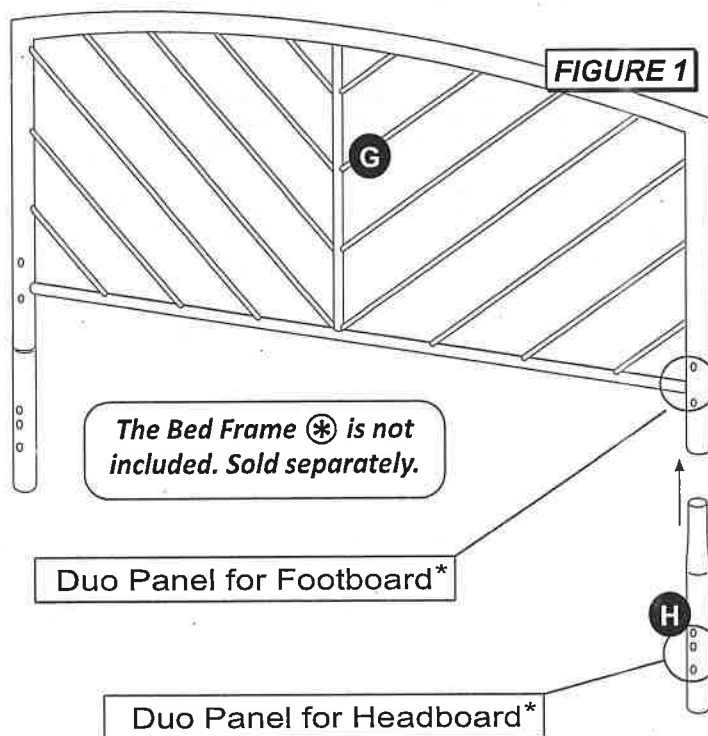

**FIGURE 1**

**STEP 2 - For purchase of Headboard only**

Attach Bed Frame (\*Not Included) to each Leg Extension (H), using 2 Long Allen Bolts (A) from the back side, 2 Metal Washers (D), 2 Spring Washers (C) & 2 Hex Nuts (E) per each side. Tighten all bolts only using Allen Wrench (F) provided. See Figure 2. The Assembly is now complete.

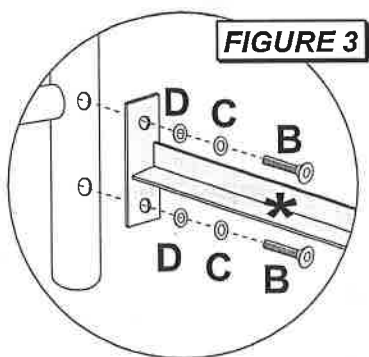

**FIGURE 3**

**STEP 3 - For purchase of Footboard only**

Attach Bed Frame (\*Not Included) to each post on Duo Panel (G), using 2 Short Allen Bolts (B), 2 Spring Washers (C) & 2 Metal Washers (D) per each side. Tighten all bolts only using Allen Wrench (F) provided. See Figure 3. The Assembly is now complete.