

Captain's Bed Assembly Instructions

Contents:

- (A) 1 headboard
- (B) 1 footboard
- (C) 2 bed rails (75" or 80" long)
- (D) 9 slats (twin 40-1/4", full 55-1/4", queen 61-1/4", king 79-1/2" long)
- (E) 8 connector bolts (100mm long)
- (F) 8 cross dowels
- (G) 18 wood screws
- (H) 1 Allen key
- (I) 1 centre rail (king size only)

Tools required:

- Slotted screwdriver
- #2 Robertson or Phillips screwdriver

(E) connector bolt (F) cross dowel (G) wood screw (H) Allen key



Please read all instructions before beginning

1. Assemble bed using 2 bed rails (C), 1 headboard (A), 1 footboard (B), 8 connector bolts (E), with 8 cross dowels (F). Refer to Figure 1 for correct position of bed rail, bed end and hardware. Support rails must be on the inside of the bed.
2. King bed only: slide centre rail (I) into the slots in the headboard and footboard. If a trundle bed is being added, move the centre rail brackets off-centred as required.
3. If a 3 drawer unit is being installed it should be placed on the support rails before the bolts are fully tightened. Position the drawer unit on the support rail shown on the headboard & on the matching rail on the footboard.
4. Slide 9 slats (D) into bed rail grooves. Position so that the spaces between slats are equal. Secure each slat with two 1-1/2" long wood screws (G) using predrilled holes at each end of a slat, refer to Figure 2.

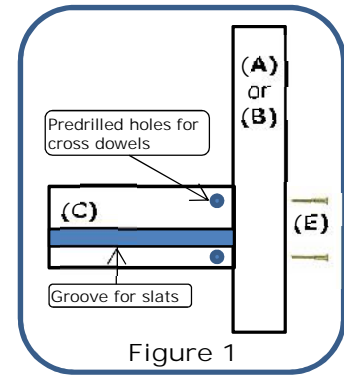
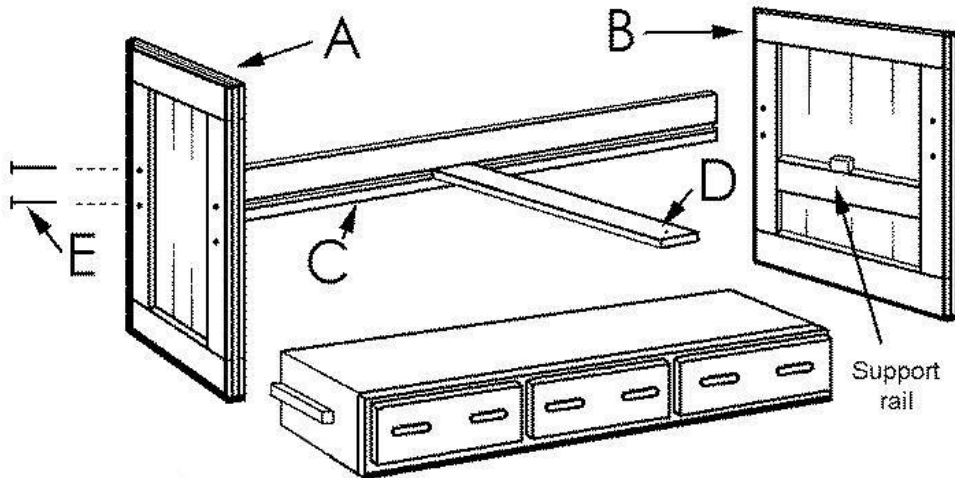


Figure 1



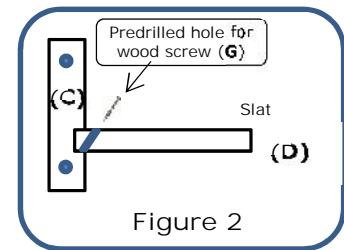


Figure 2

Adding an optional 3 drawer unit

- 1) Attach mounting blocks (J) to both end panels (if necessary).
- 2) Position the drawer unit on the drawer unit support rail shown in the picture above & on the matching rail on the footboard.
- 3) Screw lock block (K) to the footboard.
- 4) Screw the mounting block (J) to the headboard rail.

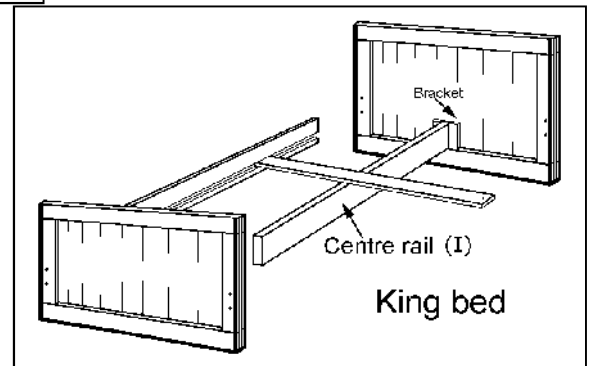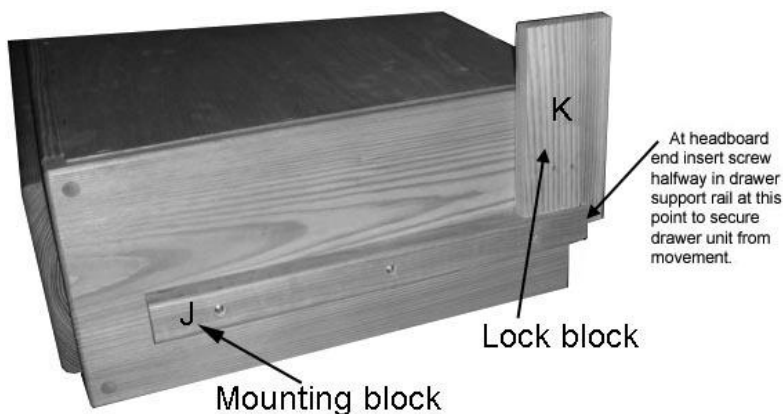

King bed