


# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

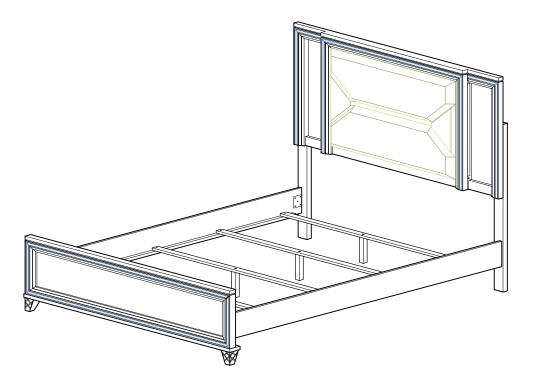

Fine Furniture for every stage of life

224961Q (B1-B3) Queen Bed

REVISION 0:06/25/2024

PAGE 1 OF 6 COASTERFURNITURE.COM

# ITEM: 224961Q (B1-B3)

#### **ASSEMBLY INSTRUCTIONS**




#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

30 MINUTES

## **PARTS IDENTIFICATION**

## **B1 ( BOX 1)**

A HEADBOARD PANEL



1PC

C RIGHT HEADBOARD LEG



1PC

**B LEFT HEADBOARD LEG** 



ADAPTER



1PC

## **B2 (BOX 2)**

E FOOTBOARD PANEL



1PC

G BED SLAT



4PCS

F FOOTBOARD FOOT



2PCS

H BED SLAT SUPPORT



4PCS

## **B3 (BOX 3)**

| BED RAIL



2PCS

HB 224961Q(B1) FROM BOX 1 HEADBOARD COMPLETE



1PC

FB 224961Q(B2) FROM BOX 2 FOOTBOARD COMPLETE



1PC

# ITEM: 224961Q (B1-B3)

#### **ASSEMBLY INSTRUCTIONS**



#### **ASSEMBLY TIPS:**

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



#### **WARNING!**

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

#### Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224961Q (B1)


1	BOLT (M6 x 40mm - RBW)	6PCS
2	LOCK WASHER (M6 x 12mm - RBW)	6PCS
3	FLAT WASHER (M6 x 13mm - RBW)	6PCS
4	ALLEN WRENCH (M4 x 60mm - BLK)	1PC


## Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 224961Q (B2)

5	BOLT (M6 x 35mm - RBW)		4PCS
6	LOCK WASHER (M6 x 12mm - RBW)		4PCS
7	FLAT HEAD SCREW (M3.5 x 32mm - RBW)	<b>Ø</b> IIIIIIII	8PCS
8	ADJUSTABLE LEVELER (M6 x 39mm)		4PCS
9	ALLEN WRENCH (M4 x 60mm - BLK)		1PC

#### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

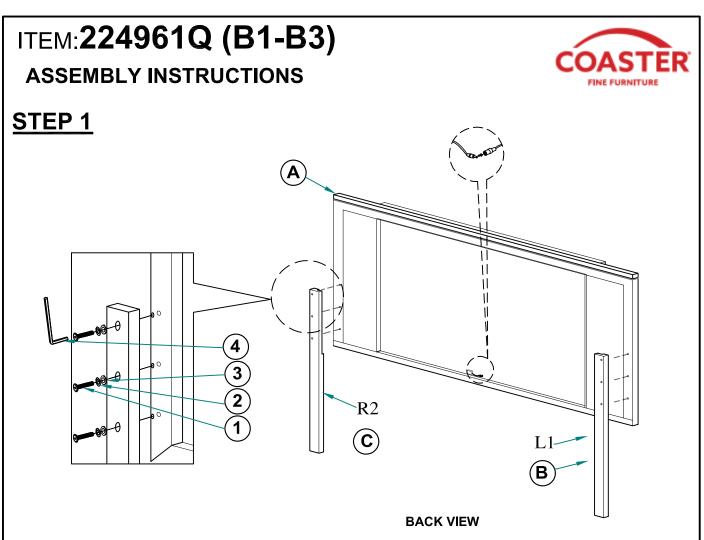

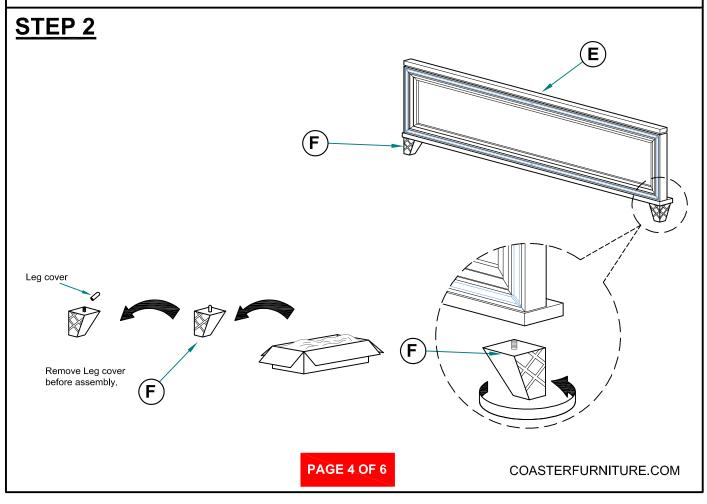


# ITEM: 224961Q (B1-B3)


## **ASSEMBLY INSTRUCTIONS**



## STEP 3

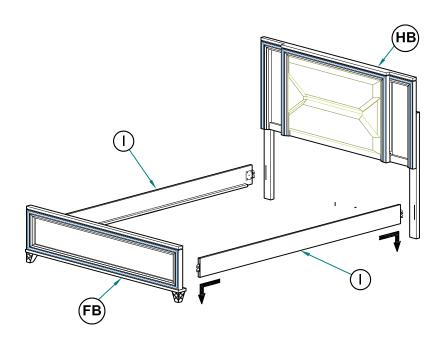

# STEP 4

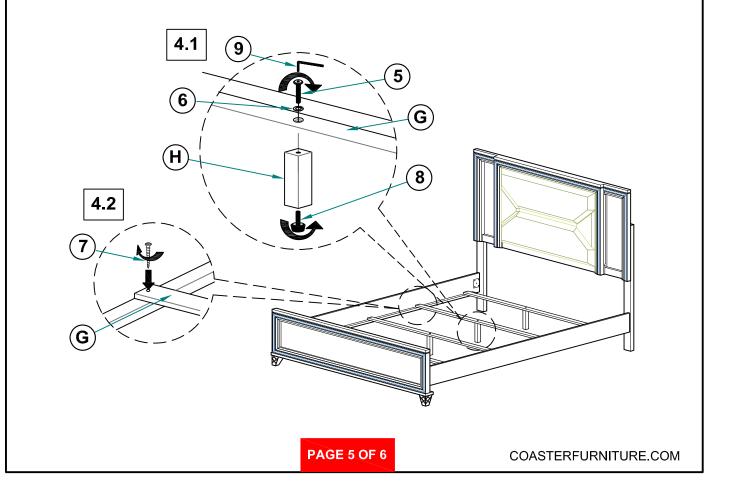


# ITEM:224961Q (B1-B3)

## **ASSEMBLY INSTRUCTIONS**



# STEP 5 COMPLETE

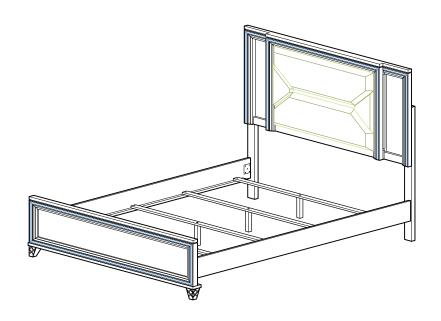




# ITEM:224961Q (B1-B3)



Inner Size: 60.75"W x 80.25"D

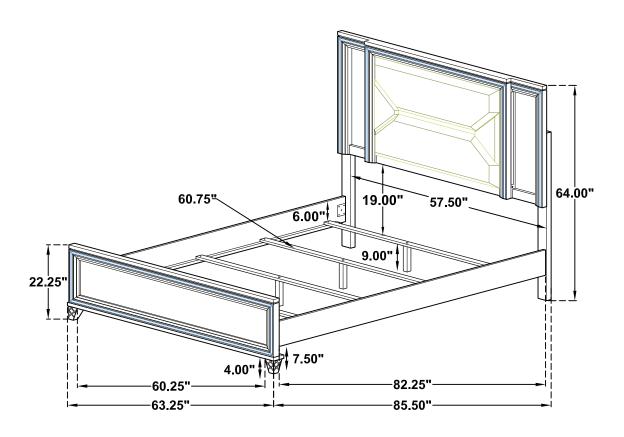

Note: Dimension tolerance ±5%

COASTERFURNITURE.COM