









ASSEMBLY INSTRUCTIONS

B677-515 ANDOVER 3/3 T HEADBOARD, FOOTBOARD & SLATS
B677-535 ANDOVER 3/ 3-4 /6 T/F SIDE RAILS




Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.

PARTS LIST			
ITEM	DRAWING	DESCRIPTION	QTY
A		HEADBOARD	1 PC
B		FOOTBOARD	1 PC
C		LEFT SIDE FACING (LSF) HEADBOARD LEG	1 PC
D		RIGHT SIDE FACING (RSF) HEADBOARD LEG	1 PC
E		SIDE RAIL	2 PCS
F		SLAT SUPPORT	4 PCS
G		WOODEN SLAT	4 PCS

HARDWARE LIST			
ITEM	DRAWING	DESCRIPTION	QTY
1		JCBB (M8) 8 x 1 3/8"	4 PCS
2		Spring Washer M8 x 5/8"	4 PCS
3		Flat Washer M8 x 5/8" x 1/8"	4 PCS
4		ALLEN KEY M5 5 x 1 3/8" x 2 1/2"	1 PC
5		C.S.K SCREW (M4) 4 x 1 1/4"	8 PCS


STEP 1

Assemble the LSF Headboard Leg (C) and RSF Headboard Leg (D) to the Headboard (A) by using Allen Key (4) with hardware 1,2 and 3.

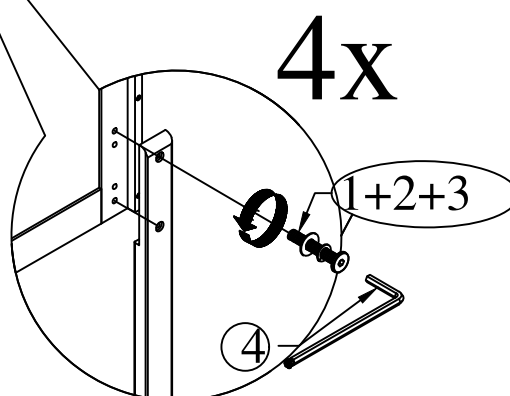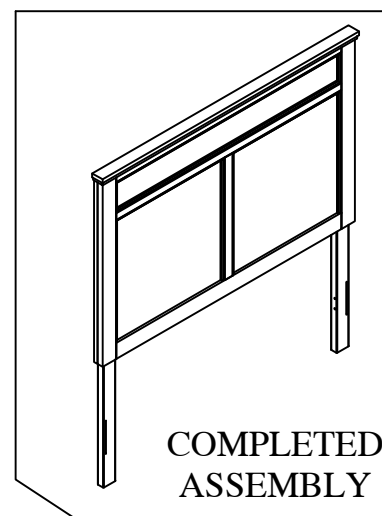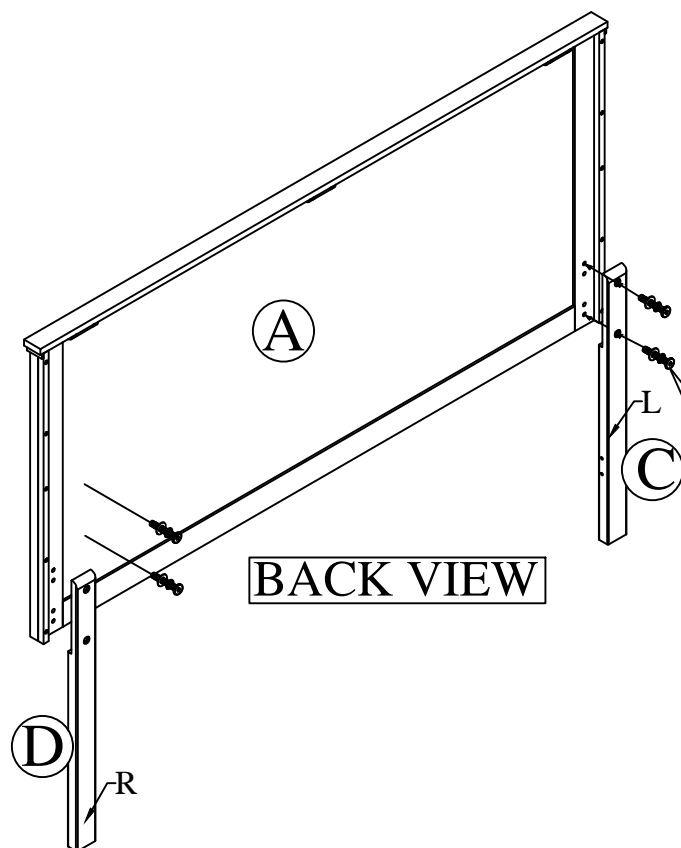


STEP 2

Hook the Rails (E) into the LSF and RSF Headboard Legs (C & D) and the Footboard (C).

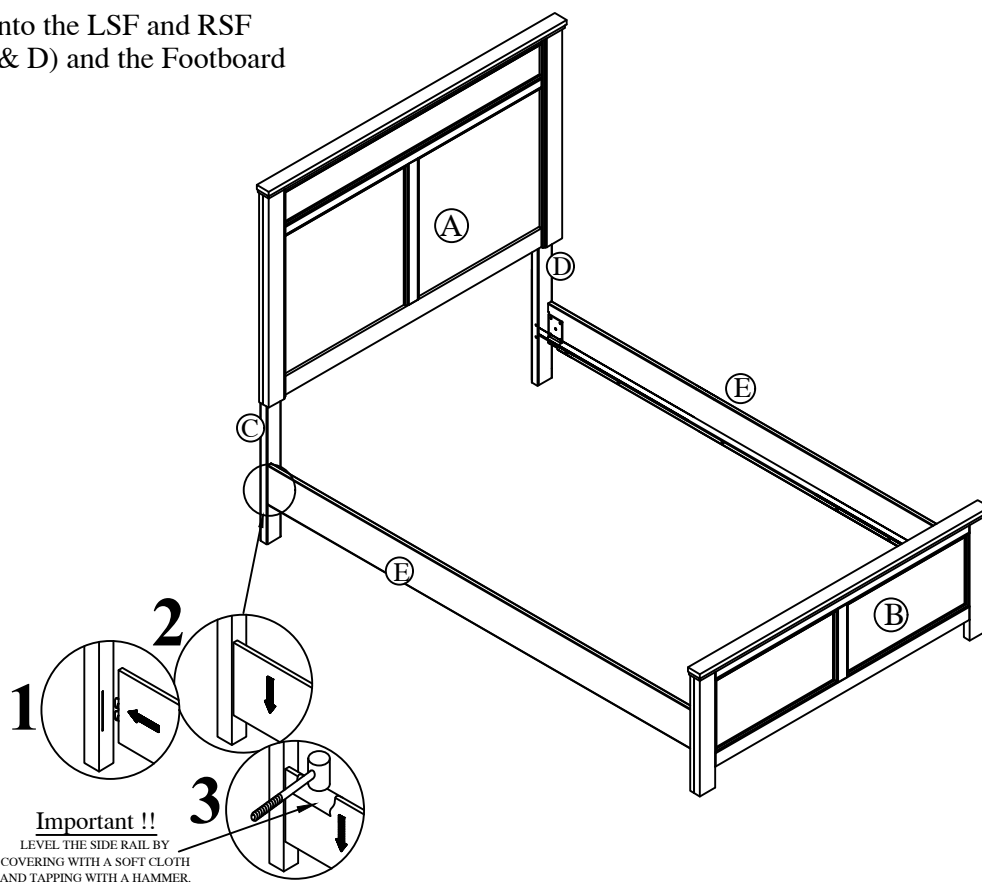

STEP 3

Assemble the Support legs (F) to the Slats (G).

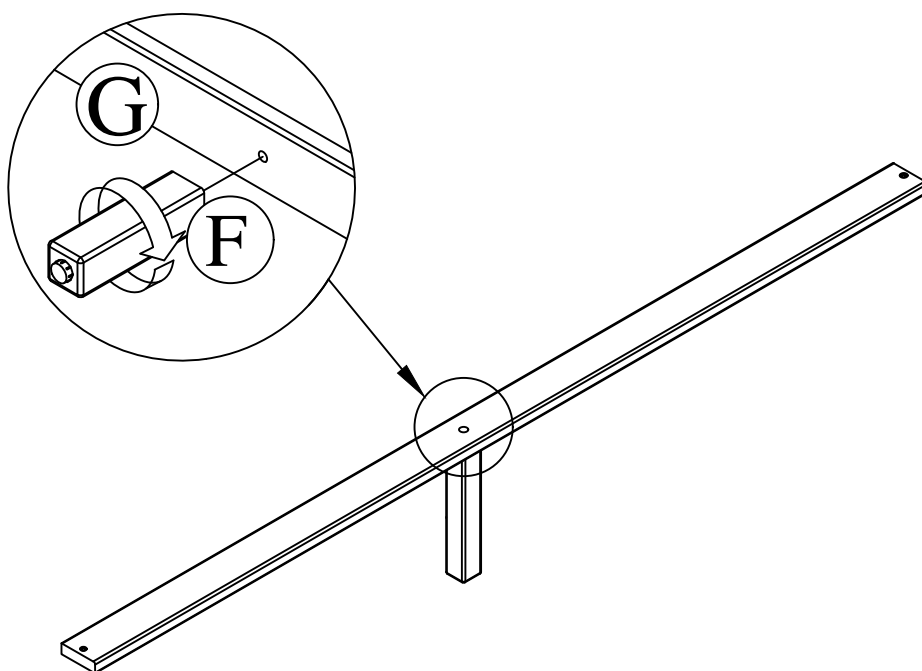




New
Classic
FURNITURE

ASSEMBLY INSTRUCTIONS


B677-515 ANDOVER 3/3 T HEADBOARD, FOOTBOARD & SLATS
B677-535 ANDOVER 3/ 3-4 /6 T/F SIDE RAILS

STEP 4

Assemble the Slats (G) to the Rails (E) by using a screwdriver with hardware 5.
Adjust the Lever on Support Legs (F) to lever the bed.

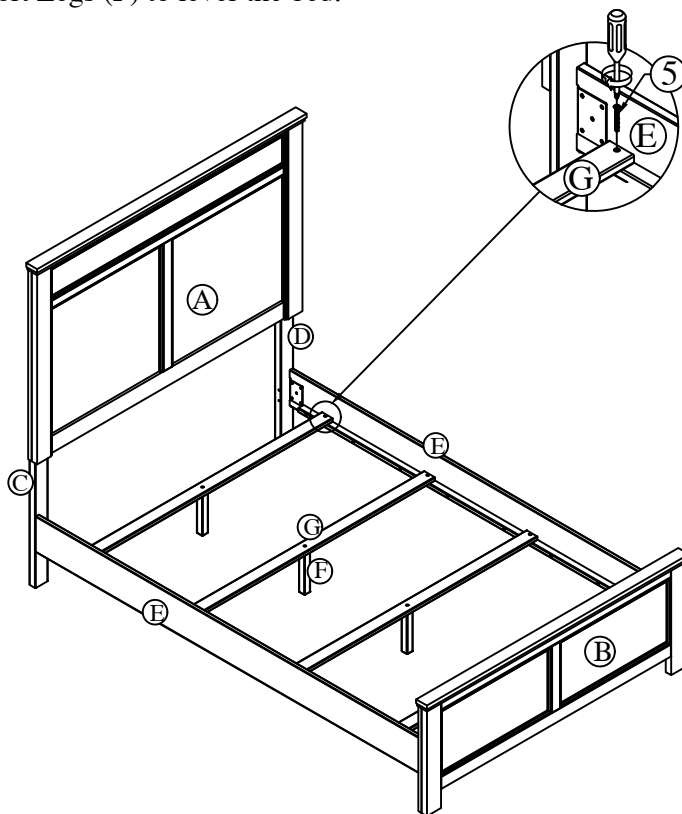

COMPLETE

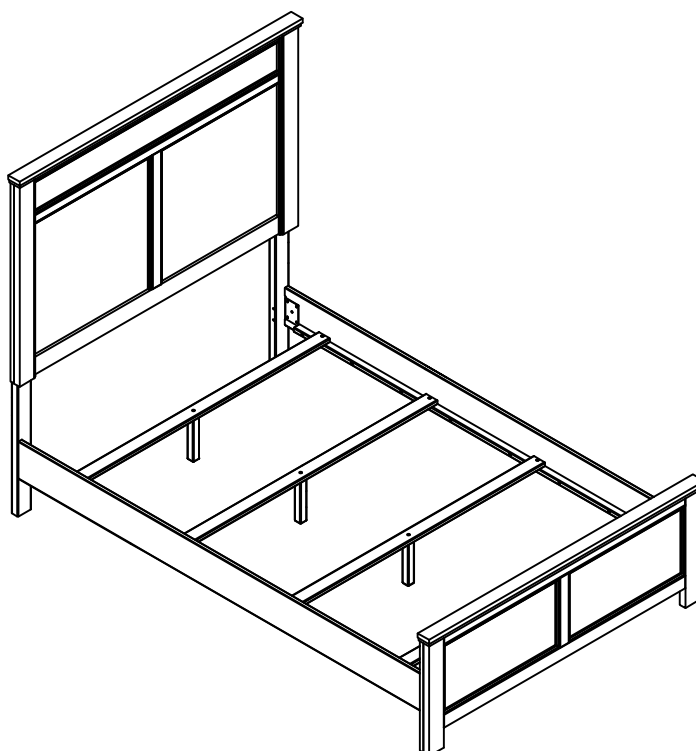

NOTE: MUST TIGHTEN SCREW PERIODICALLY. WITH USE SCREWS WILL BECOME LOOSE CHECK TIGHT OF ALL SREWS EVERY 6-8 WEEKS.