
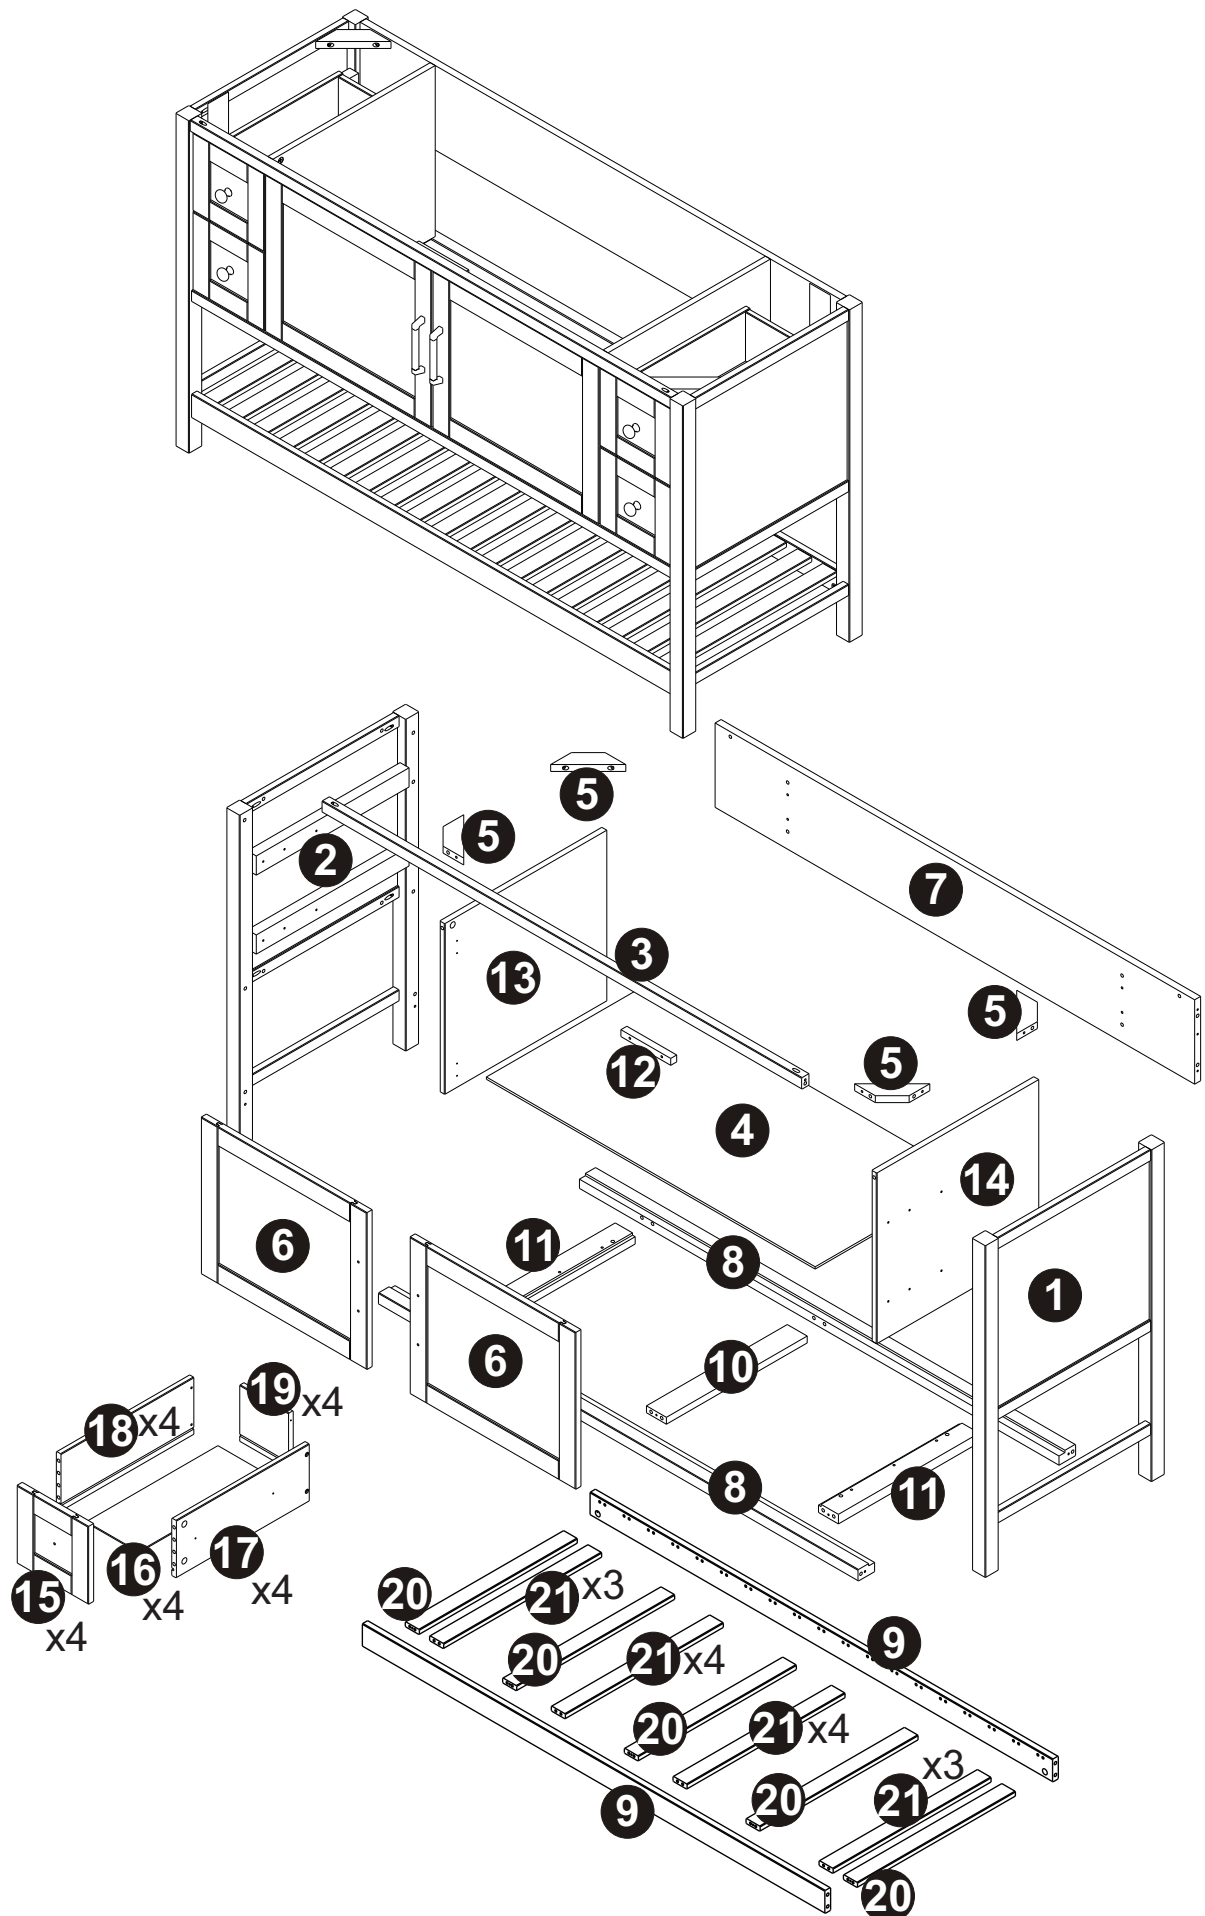
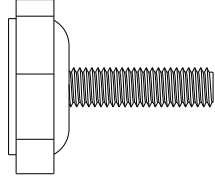










ASSEMBLY INSTRUCTIONS

BENNET 60" VANITY



A	 Ø8x30mm	58	J		22
B	 Ø6x10mm	24	K	 27x23mm	04
C	 Ø3,5x30mm	44	L	 Ø4x12mm	04
D	 Ø4x25mm	04	M		04
E	 Ø3,5x14mm	32	N		04
F	 Ø3,5x14mm	02	O		02
G	 Ø4x45mm	10	P		08
H		02	Q	 Ø4x25mm	10
I		22	R	 Ø6x30mm	76

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "www.boltonfurniture.com".













Tools Required




Hammer

* These tools are not supplied by the manufacturer

01

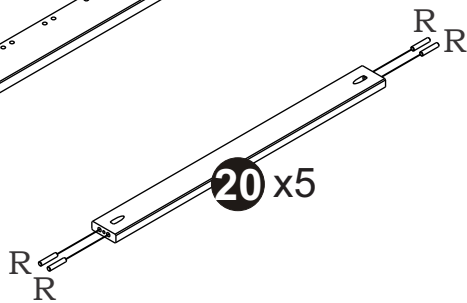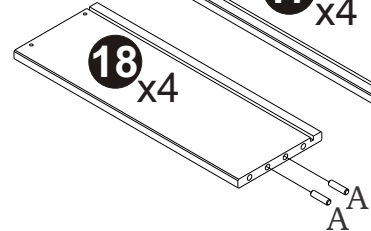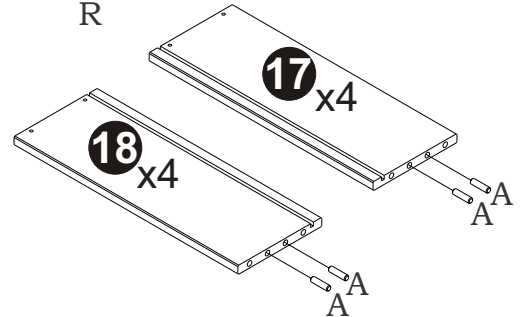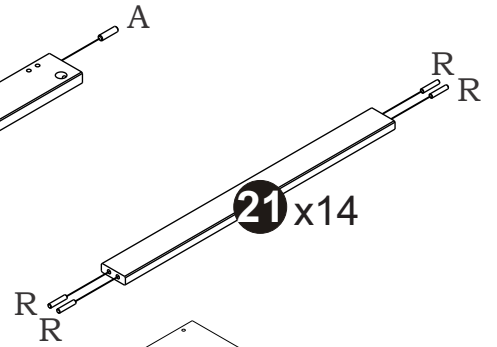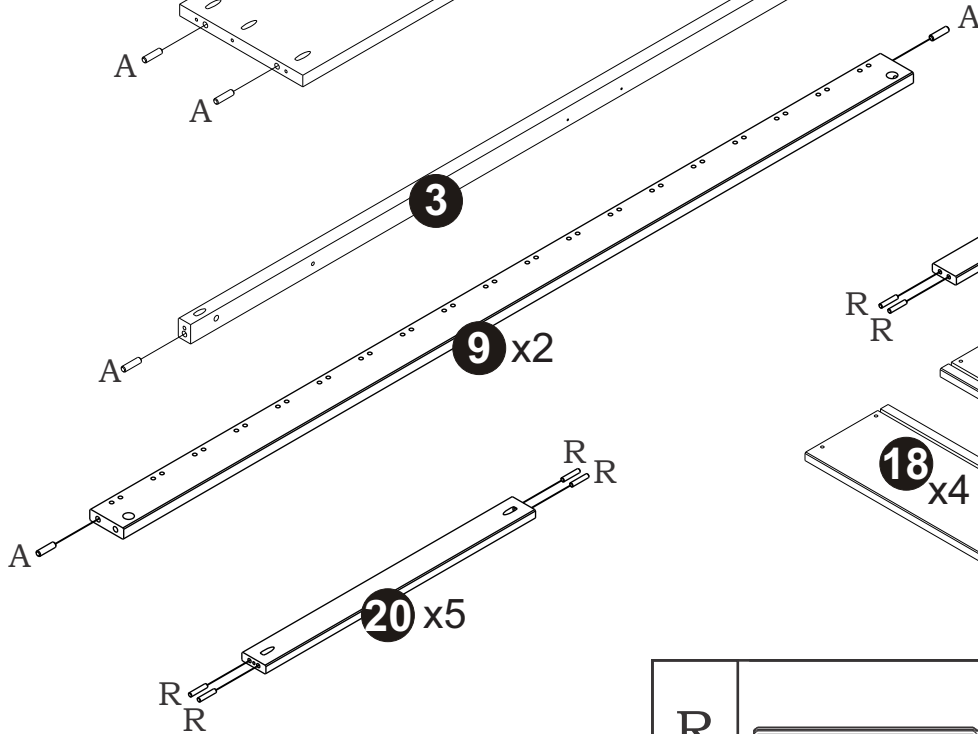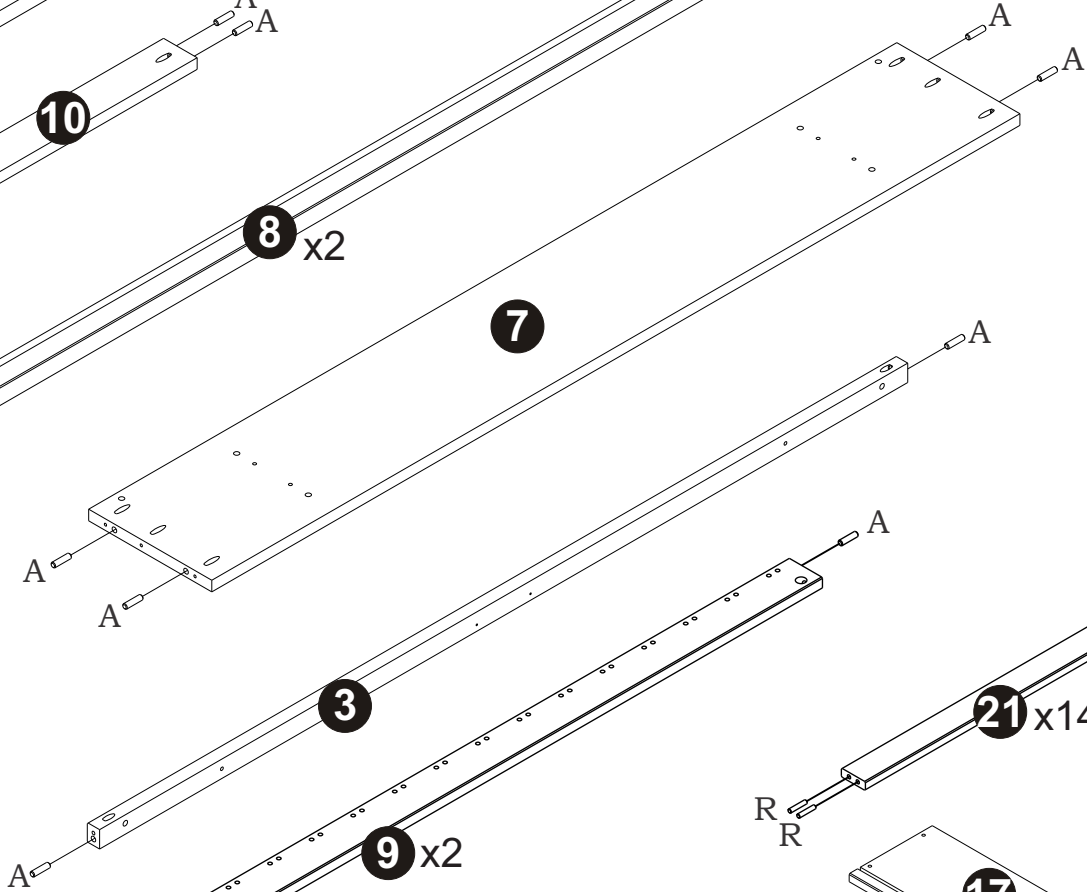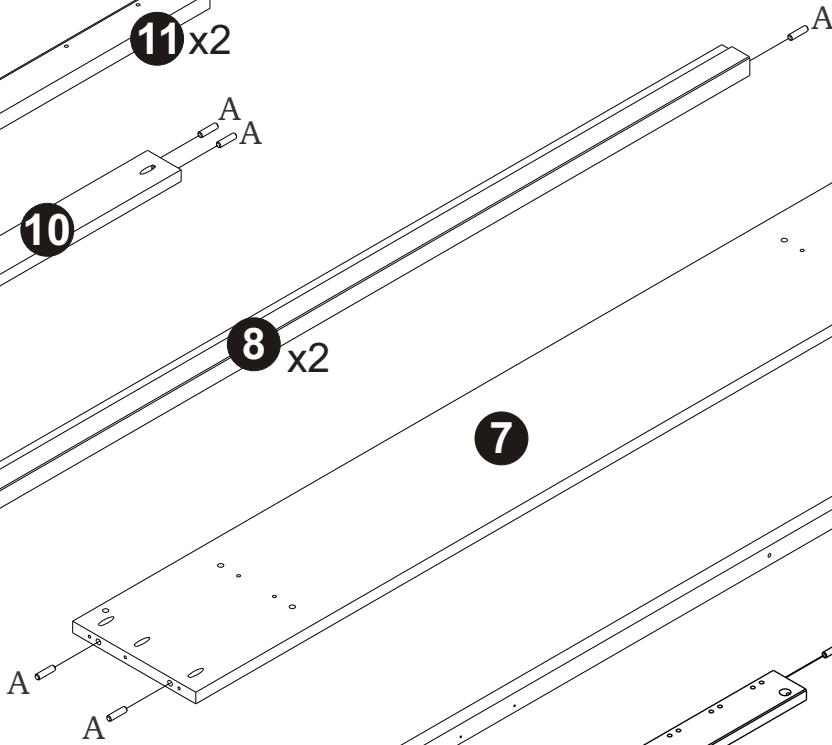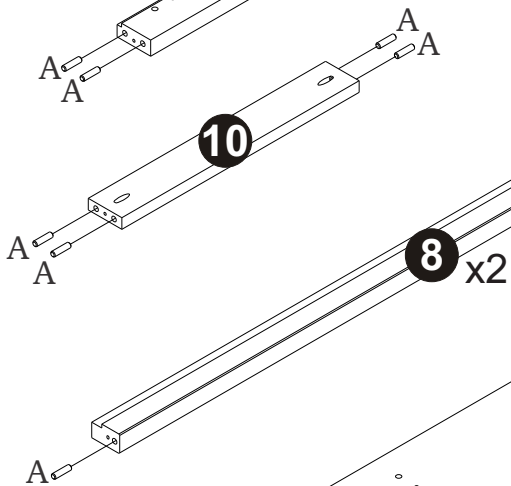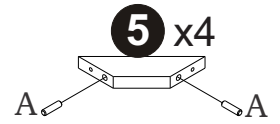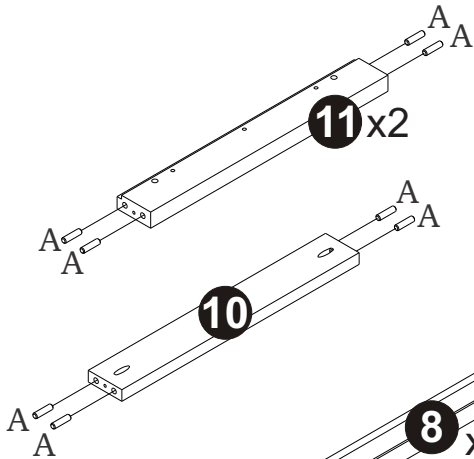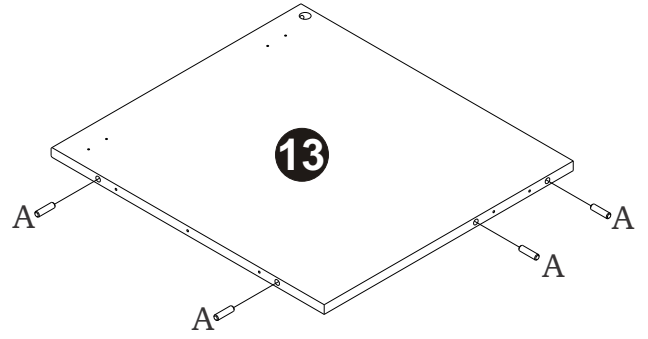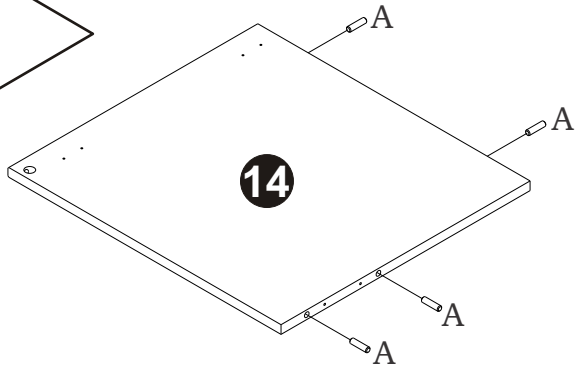


R		76
A		58


Ø6x30mm

Ø8x30mm

02

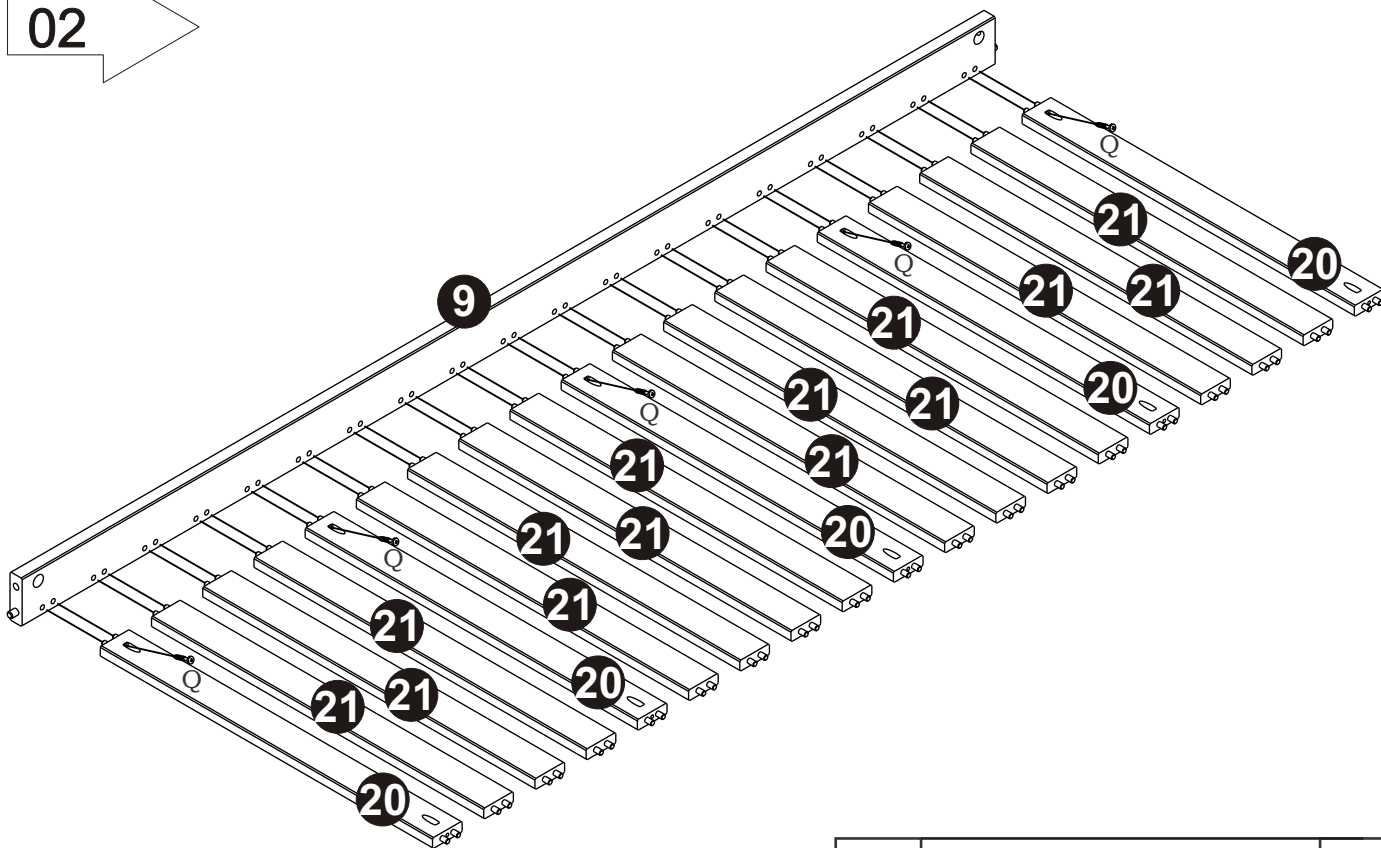


Q




Ø4x25mm

05

03

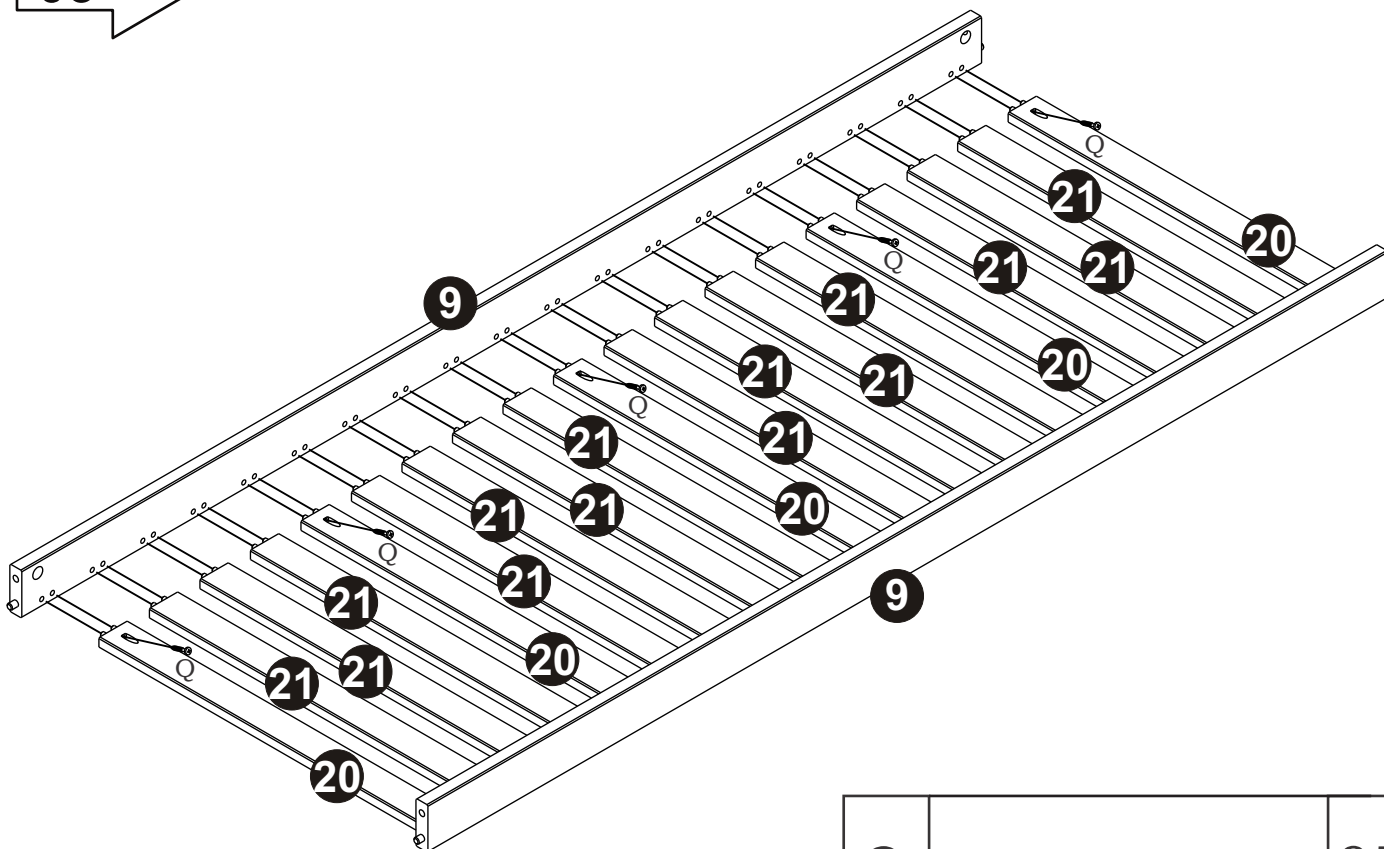


Q



Ø4x25mm


05

04

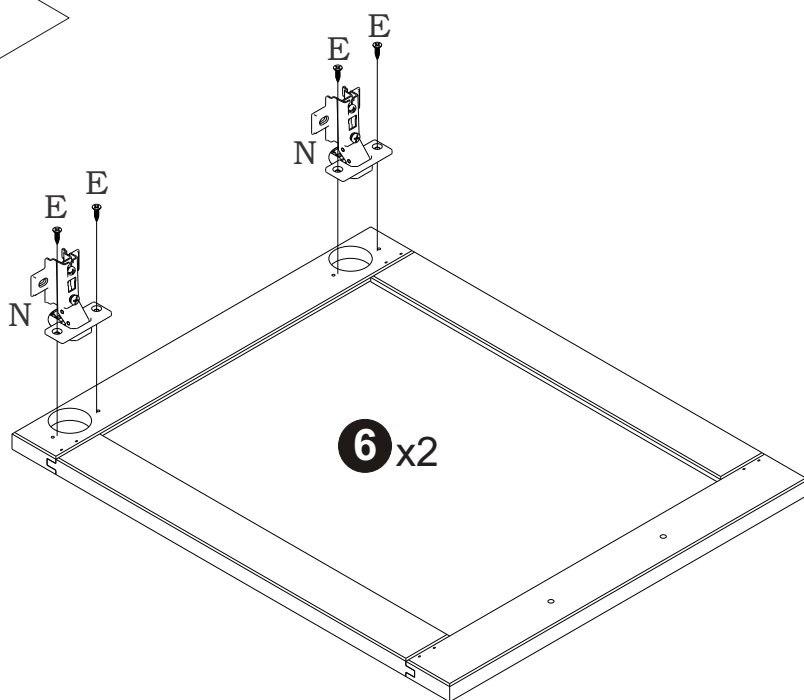


E	Ø3,5x14mm	08
N		04



05

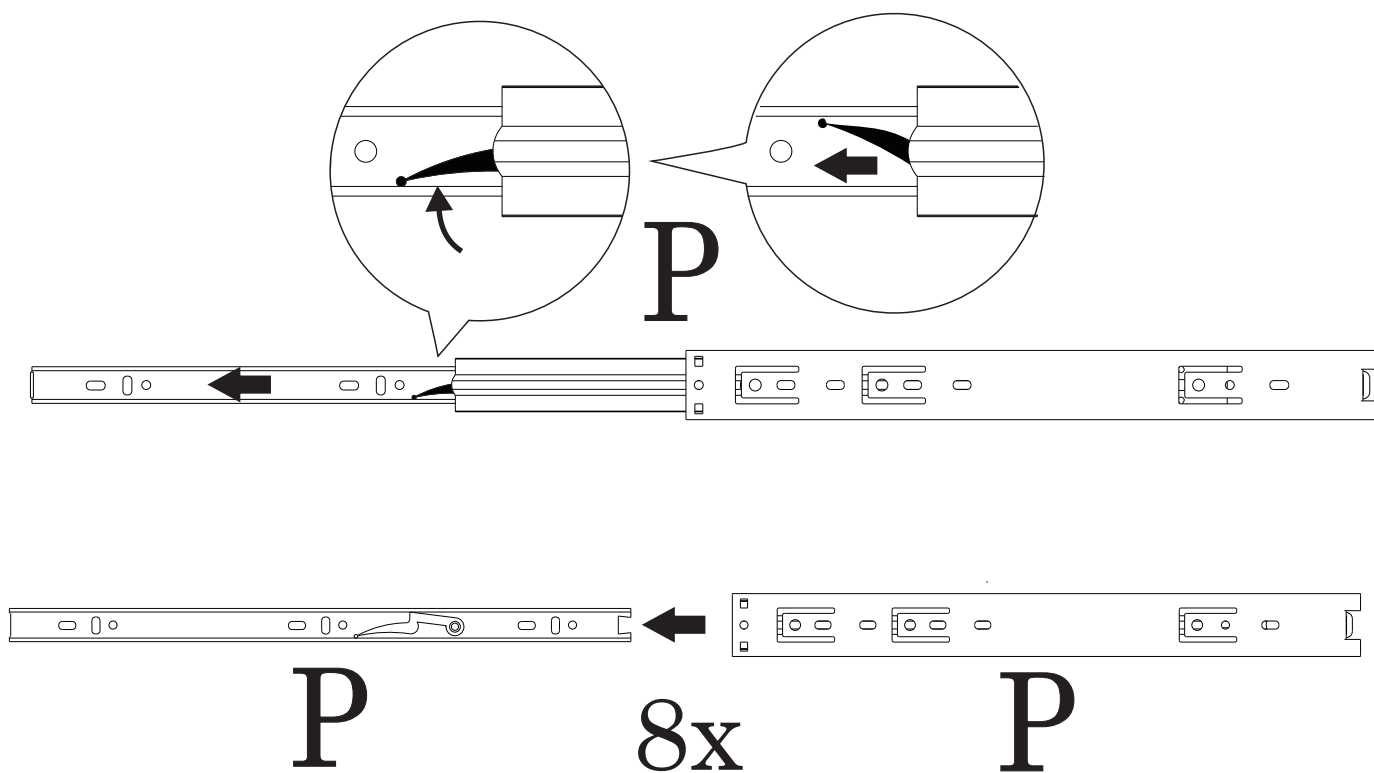



06

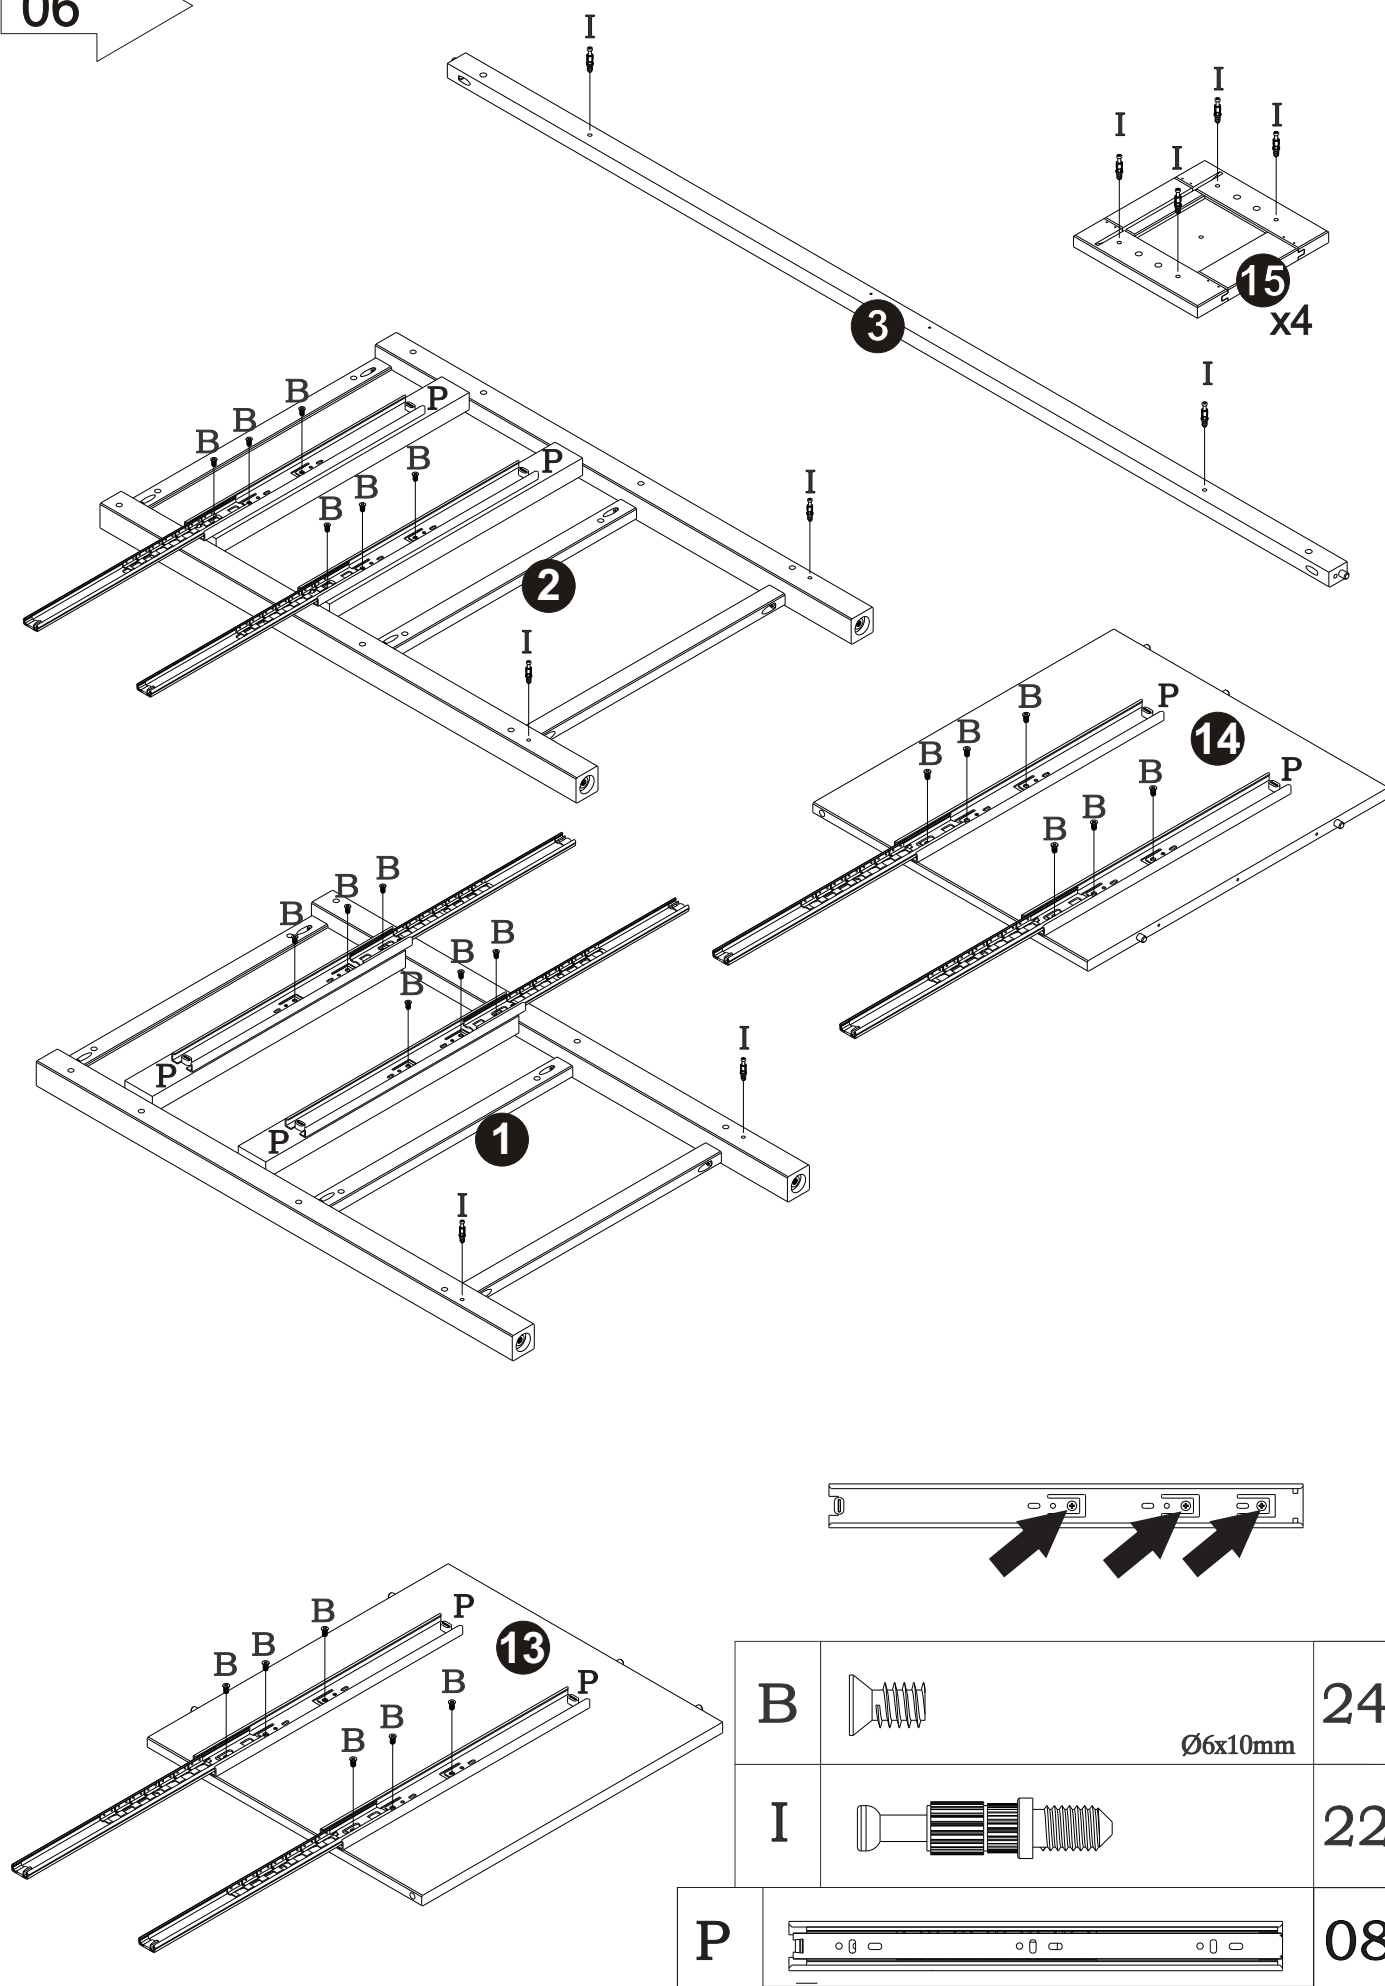


07

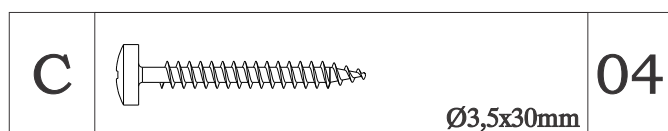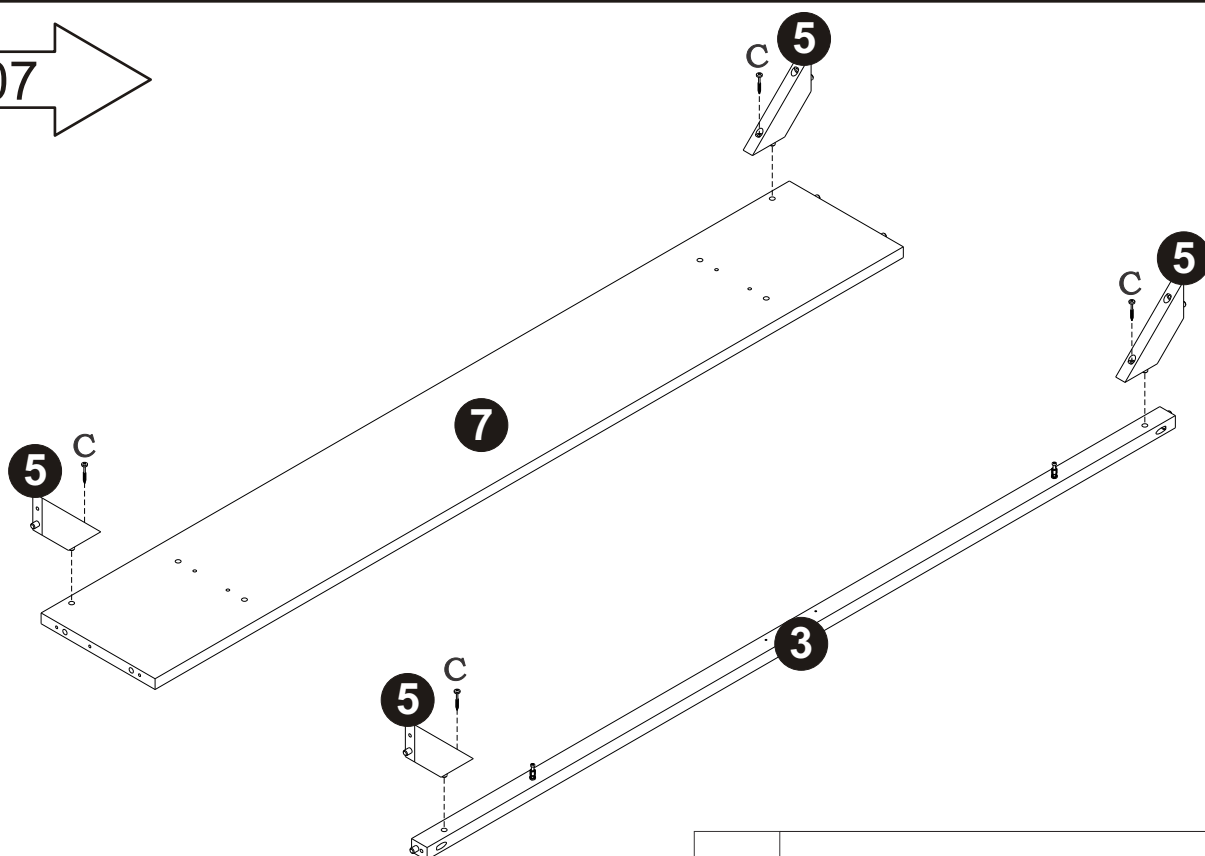


08

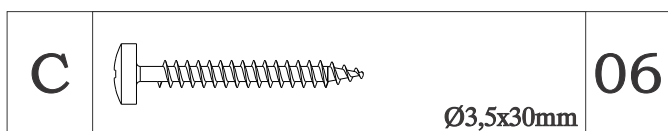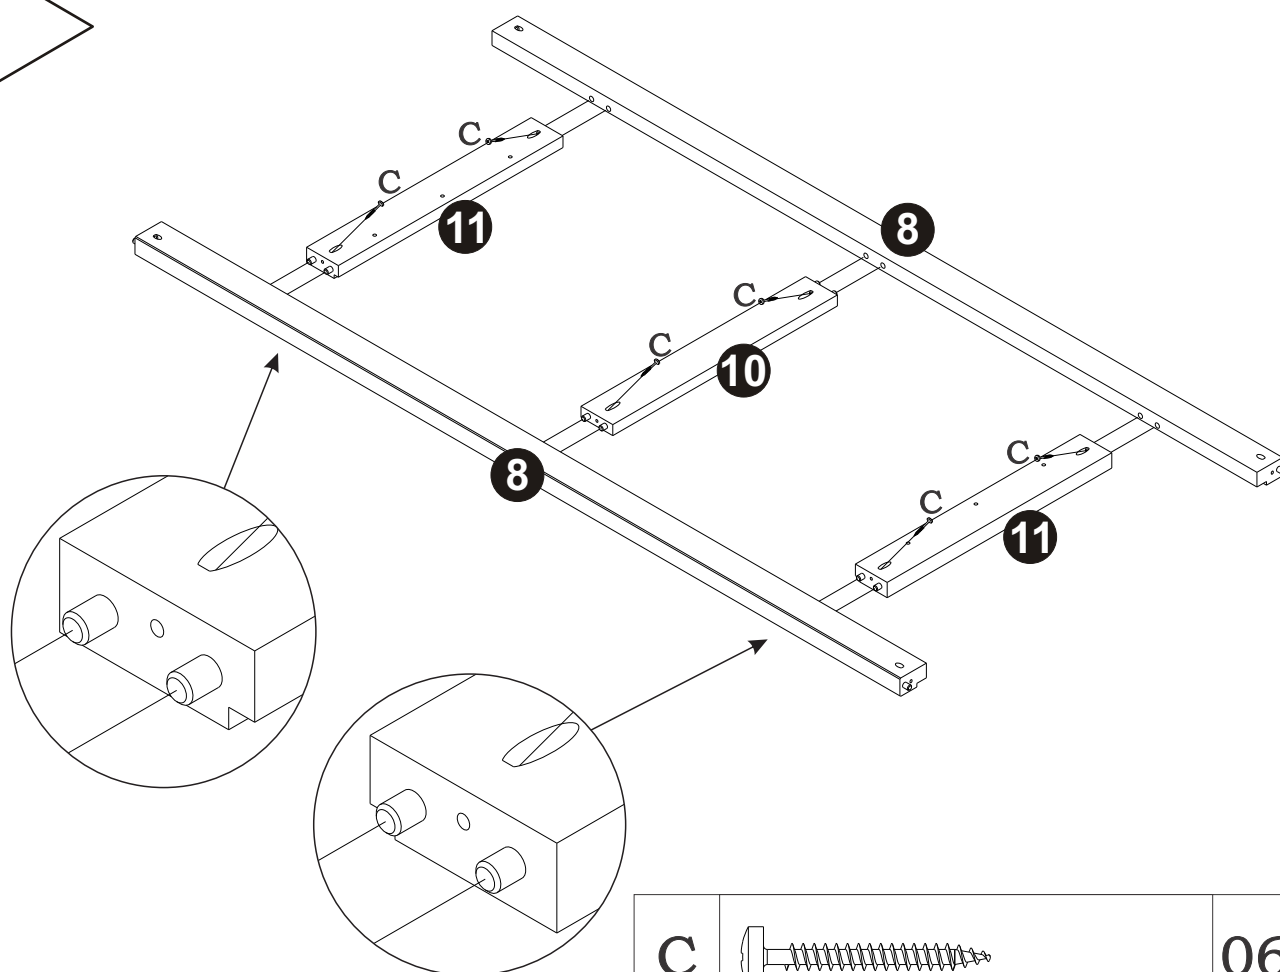



09

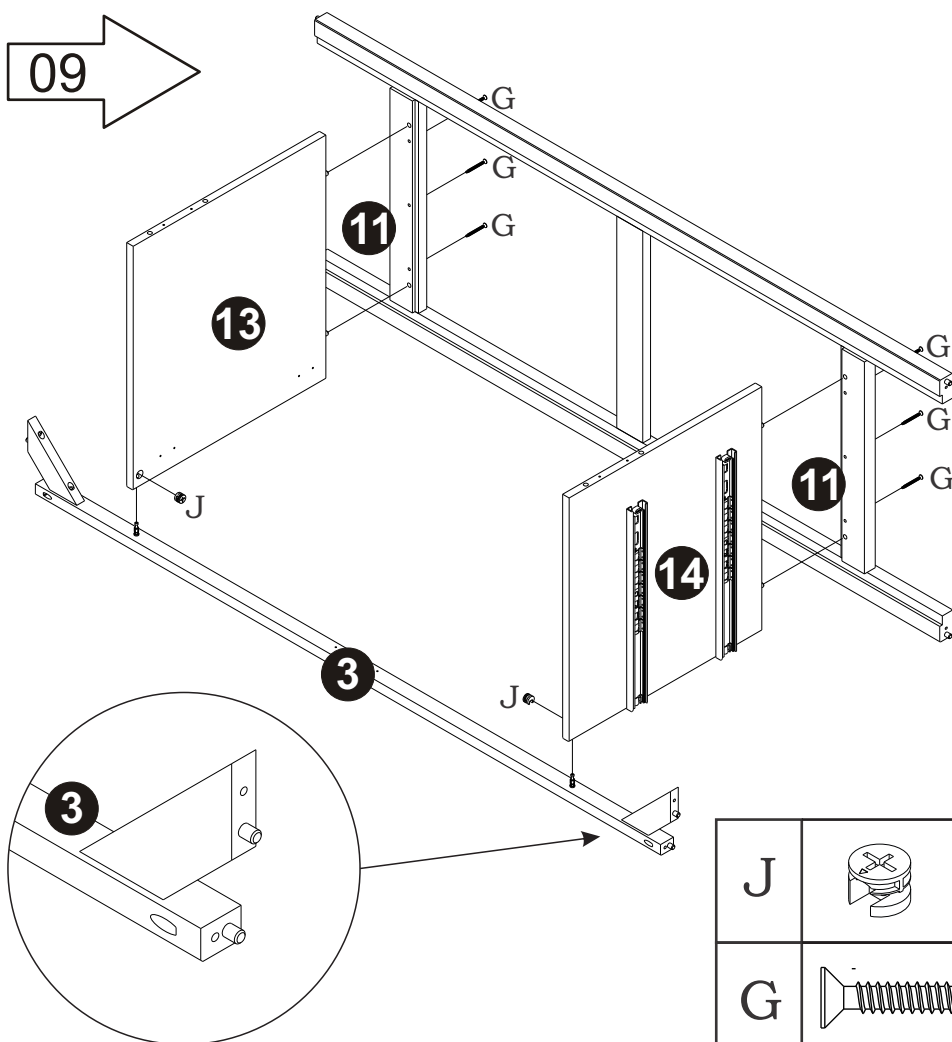


J		02
G	 Ø4x45mm	06


10

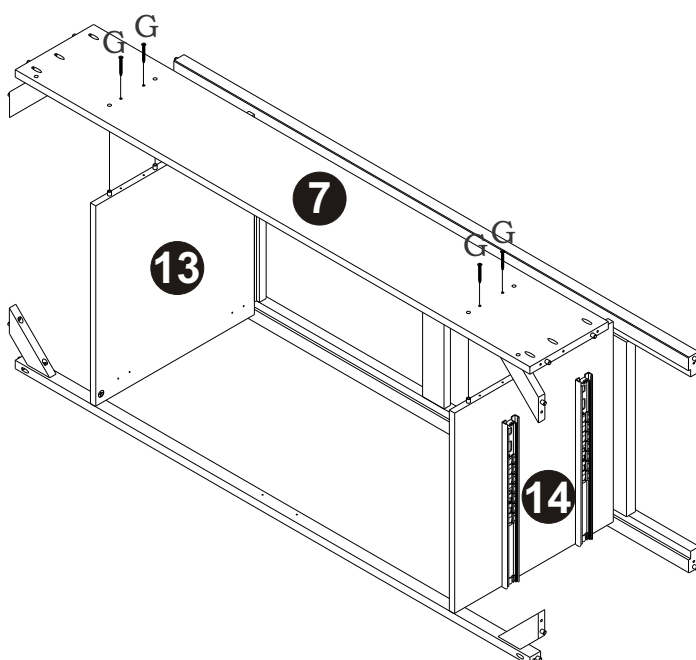

G	 Ø4x45mm	04
---	---	----

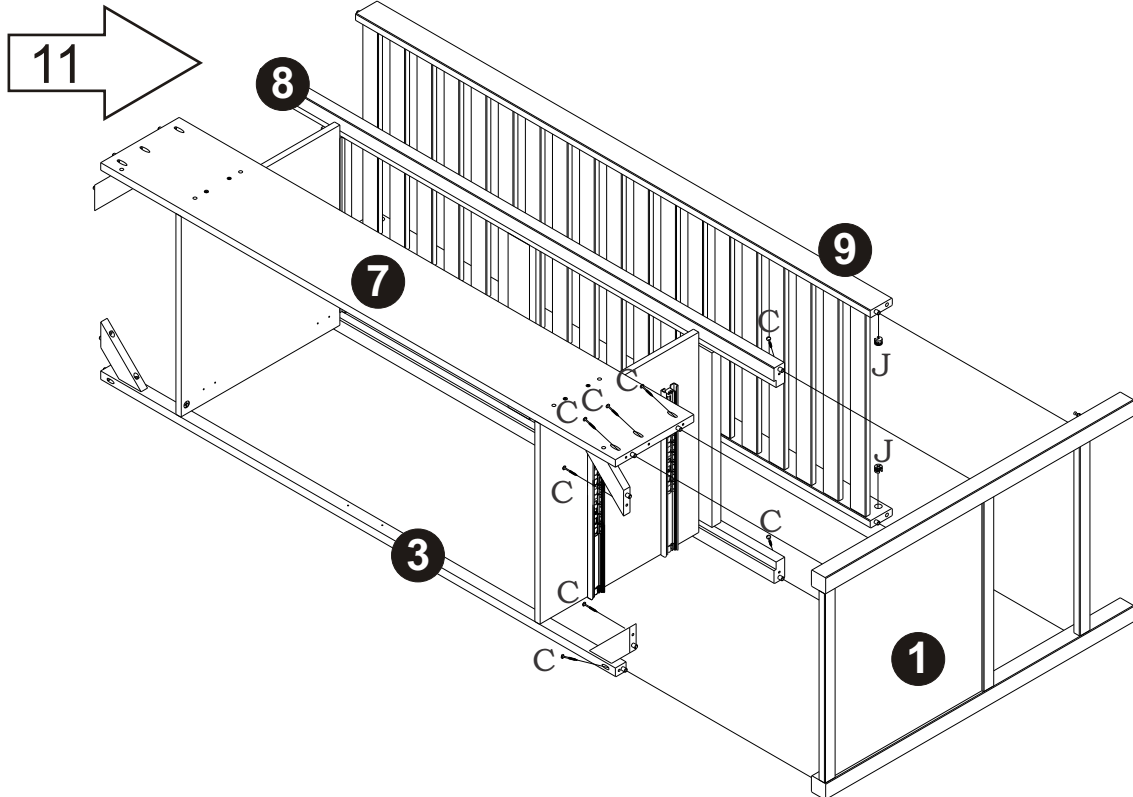


J		02
C	 Ø3,5x30mm	08

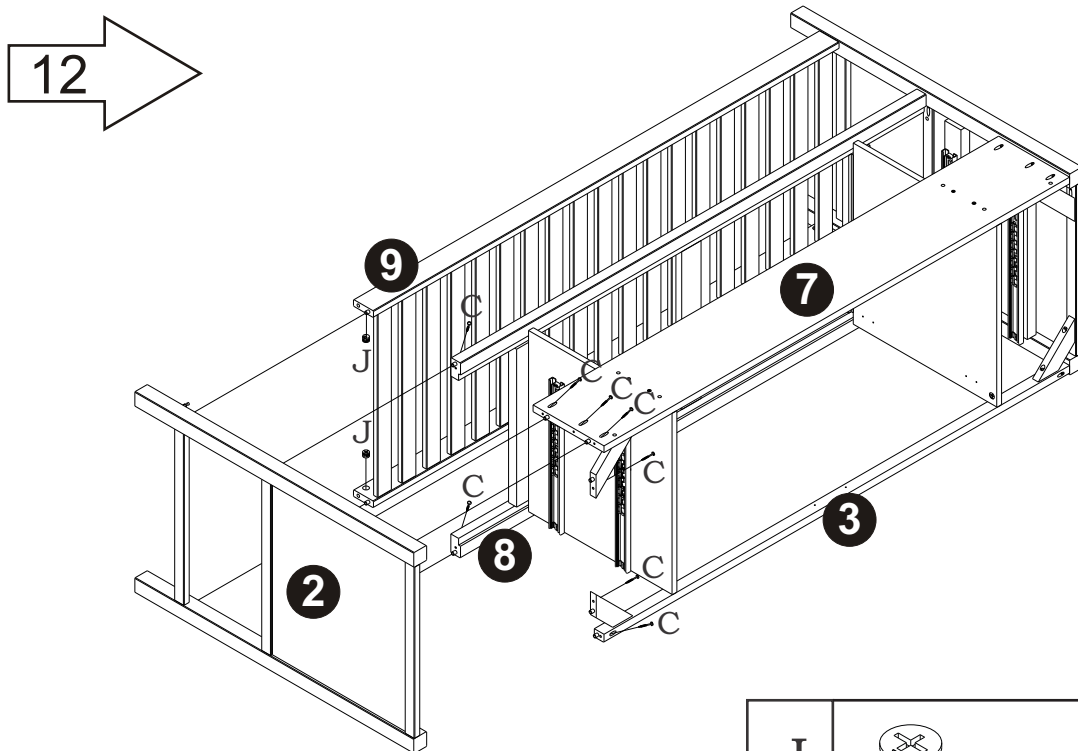


J		02
C	 Ø3,5x30mm	08

13

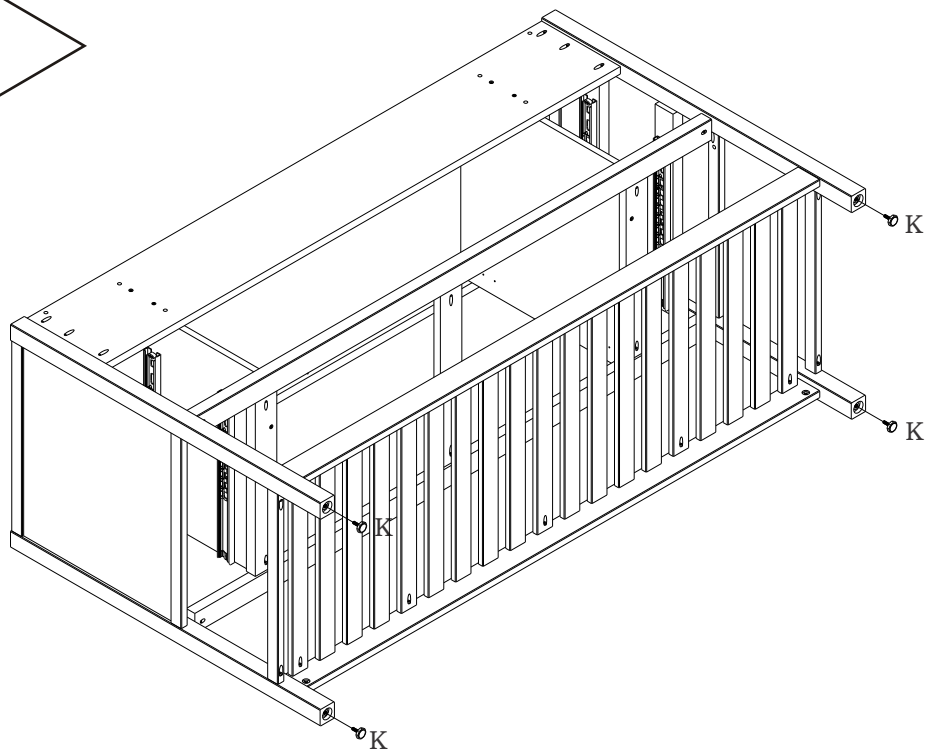


K

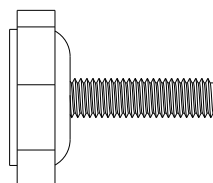

04

27x23mm

14

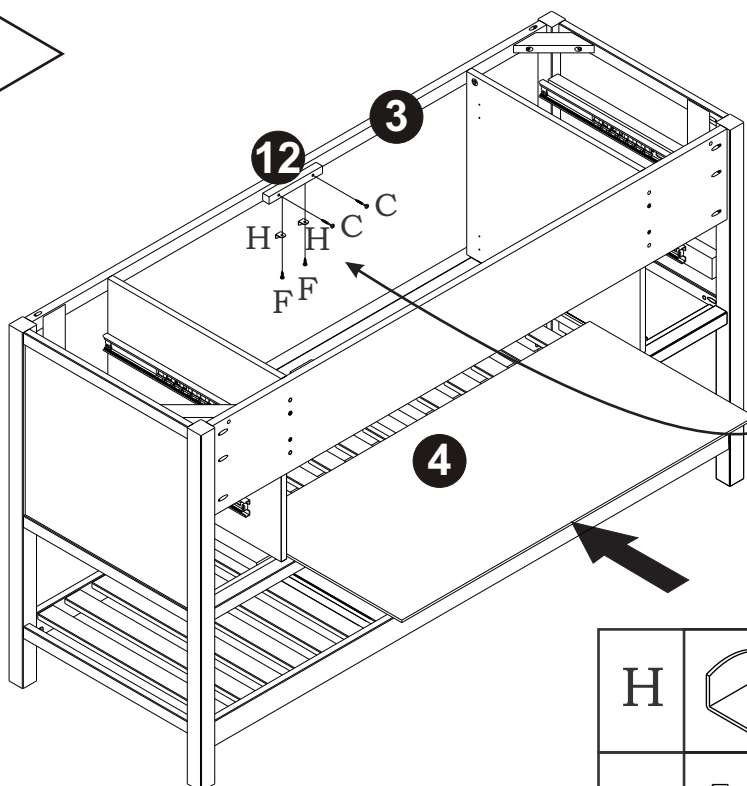


H



02


C



Ø3,5x30mm

02



F






Ø3,5x14mm

02



15



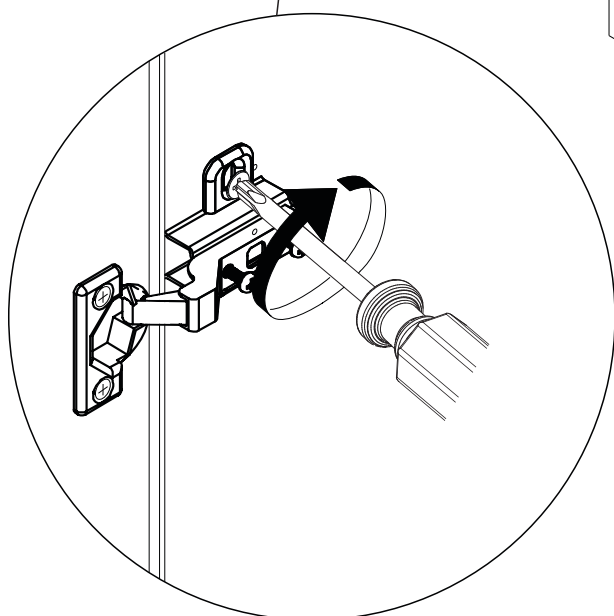
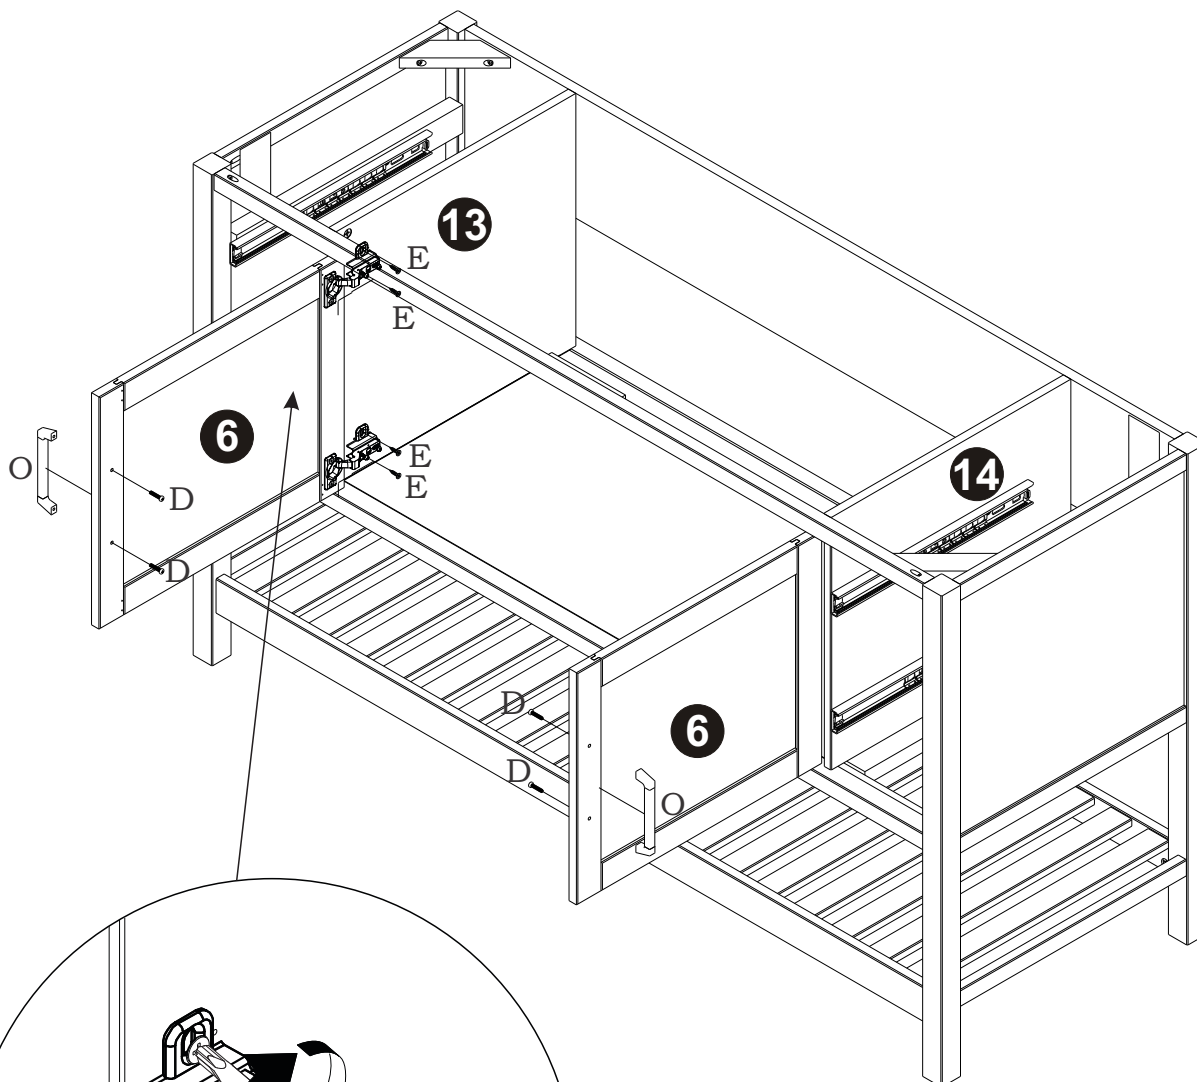



D	 Ø4x25mm	04
E	 Ø3,5x14mm	08
O		02

16

4x

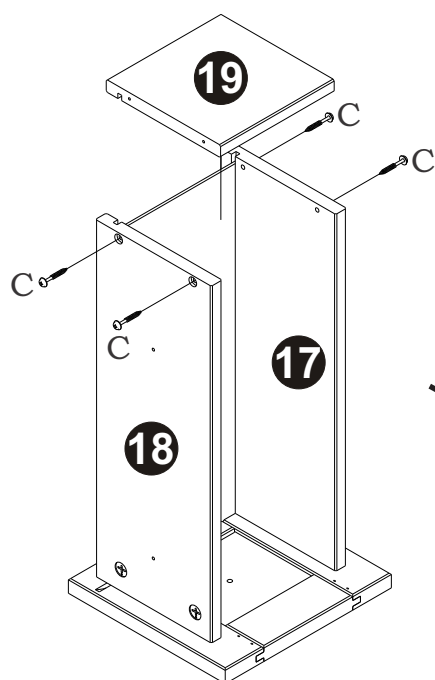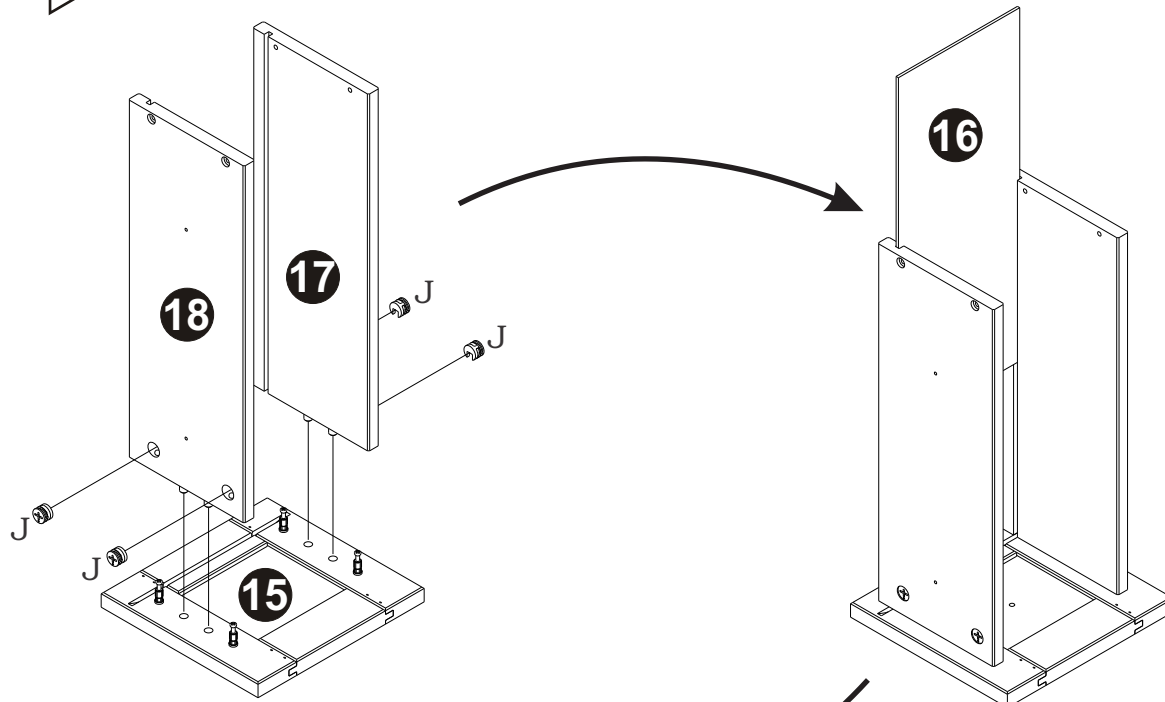

J		16
E	 Ø3,5x14mm	16
M		04
C	 Ø3,5x30mm	16
P		08
L	 Ø4x12mm	04

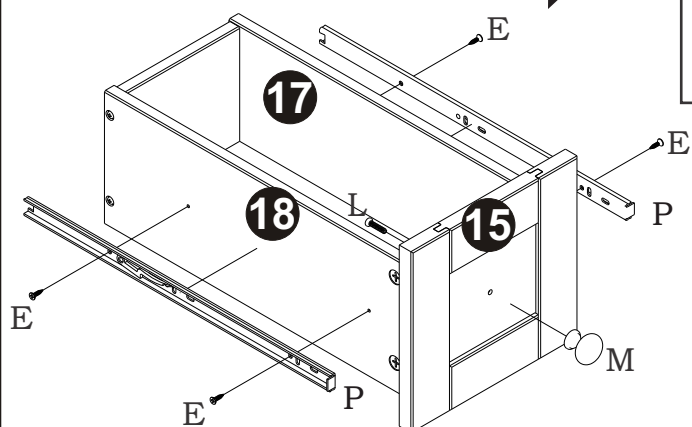

17

