

# CLA-417-121 THE POST IS CLEAR

## CARACOLE CLASSIC

















### ASSEMBLY INSTRUCTIONS


**PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!**

Please see the detailed Assembly instructions on page 2 and page 3.

\*\*\* NOTE KEEP THIS SHEET \*\*\*


In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

CLA-417-121 H/F				
The Post Is Clear				
Part List				
Hardware List			Part Number	QTY
A		Headboard without Acrylic Posts	CLA-417-121-0246	1
B		Short Post for Headboard	CLA-417-121-0363	2
C		Footboard without Acrylic Posts	CLA-417-121-0362	1
D		Long Post for Footboard	CLA-417-121-0364	2
E Option 1		Alternative Option 1: Side Rail for King & Queen Bed	CLA-417-121-068	2
E Option 2		Alternative Option 2: Side Rail for Cal King Bed	CLA-417-121-068CK	2
F		Slat	CLA-417-121-067	4
G		Support Leg	CLA-417-121-0382	4
H		Screw for Post	CLA-417-121-0183S	14
I	 <small>The washer here is Ø16</small>	Screw Kit for HB & SR, FB & SR	CLA-417-121-0411	8
J		Spanner	CLA-417-121-0410	1
K		Inner Hexagon Spanner	CLA-417-121-0412	1
L		Inner Hexagon Screw for Slats	CLA-417-121-0183L	12
M	 <small>The washer here is Ø12MM</small>	Washer Ø12mm for Inner Hexagon Screw	CLA-417-121-0409	12
N		Adjustable Floor Glide for Slat	CLA-417-121-075S	4
Q		Adjustable Floor Glide for Slat	CLA--417-121-075L	4

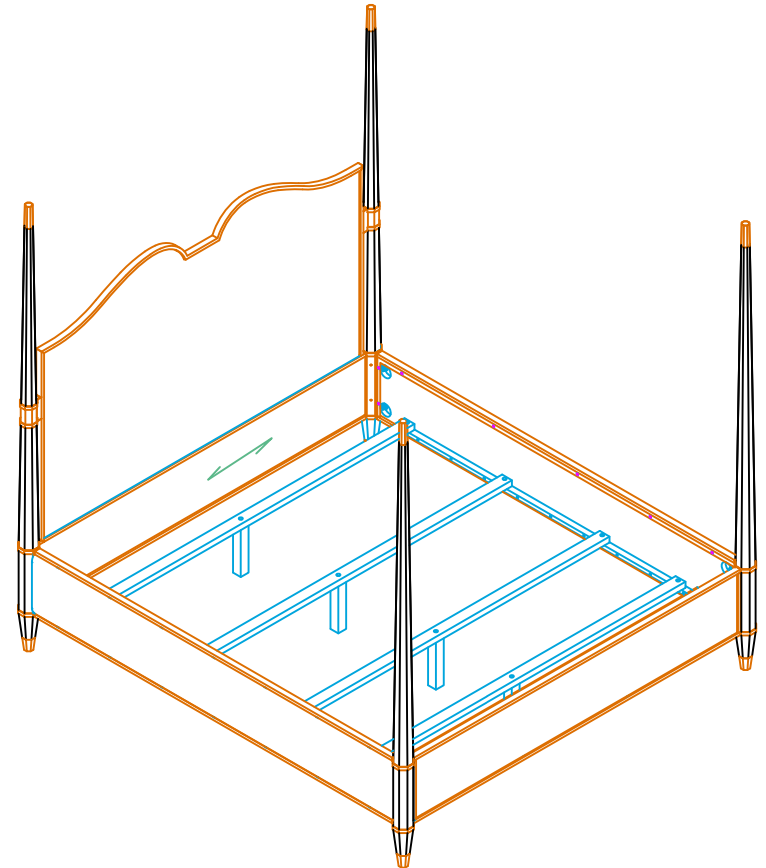


## CLA-417-121

### Step 1

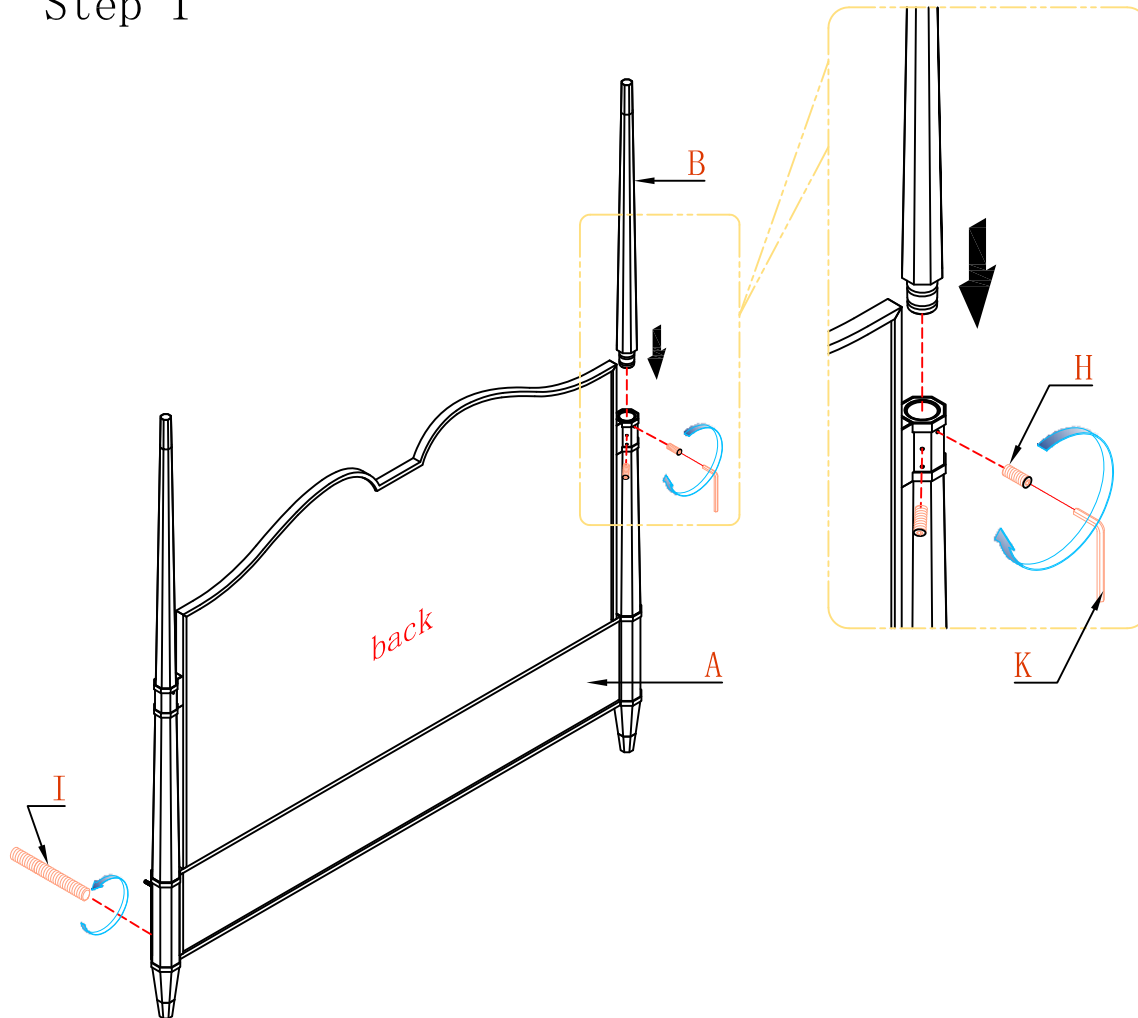

### Step 2

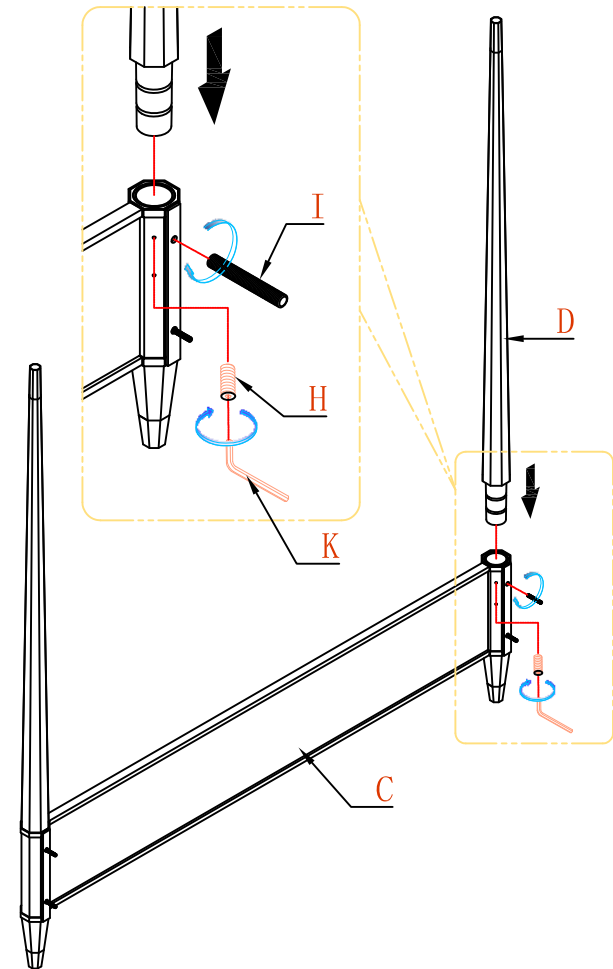


1. Put the acrylic post B into the opening of the metal post on the headboard A. Fix the acrylic posts with the screw H for posts and the spanner K. Pick the screw from the screw kit I, put it into the screw hole on the leg the headboard and tighten it.

2. Put the acrylic post D into the opening of the metal post on the footboard C. Fix the acrylic posts with the screw H for posts and the spanner K. Pick the screw from the screw kit I, put it into the screw hole on the leg the footboard and tighten it.

## CLA-417-121

### Step 3

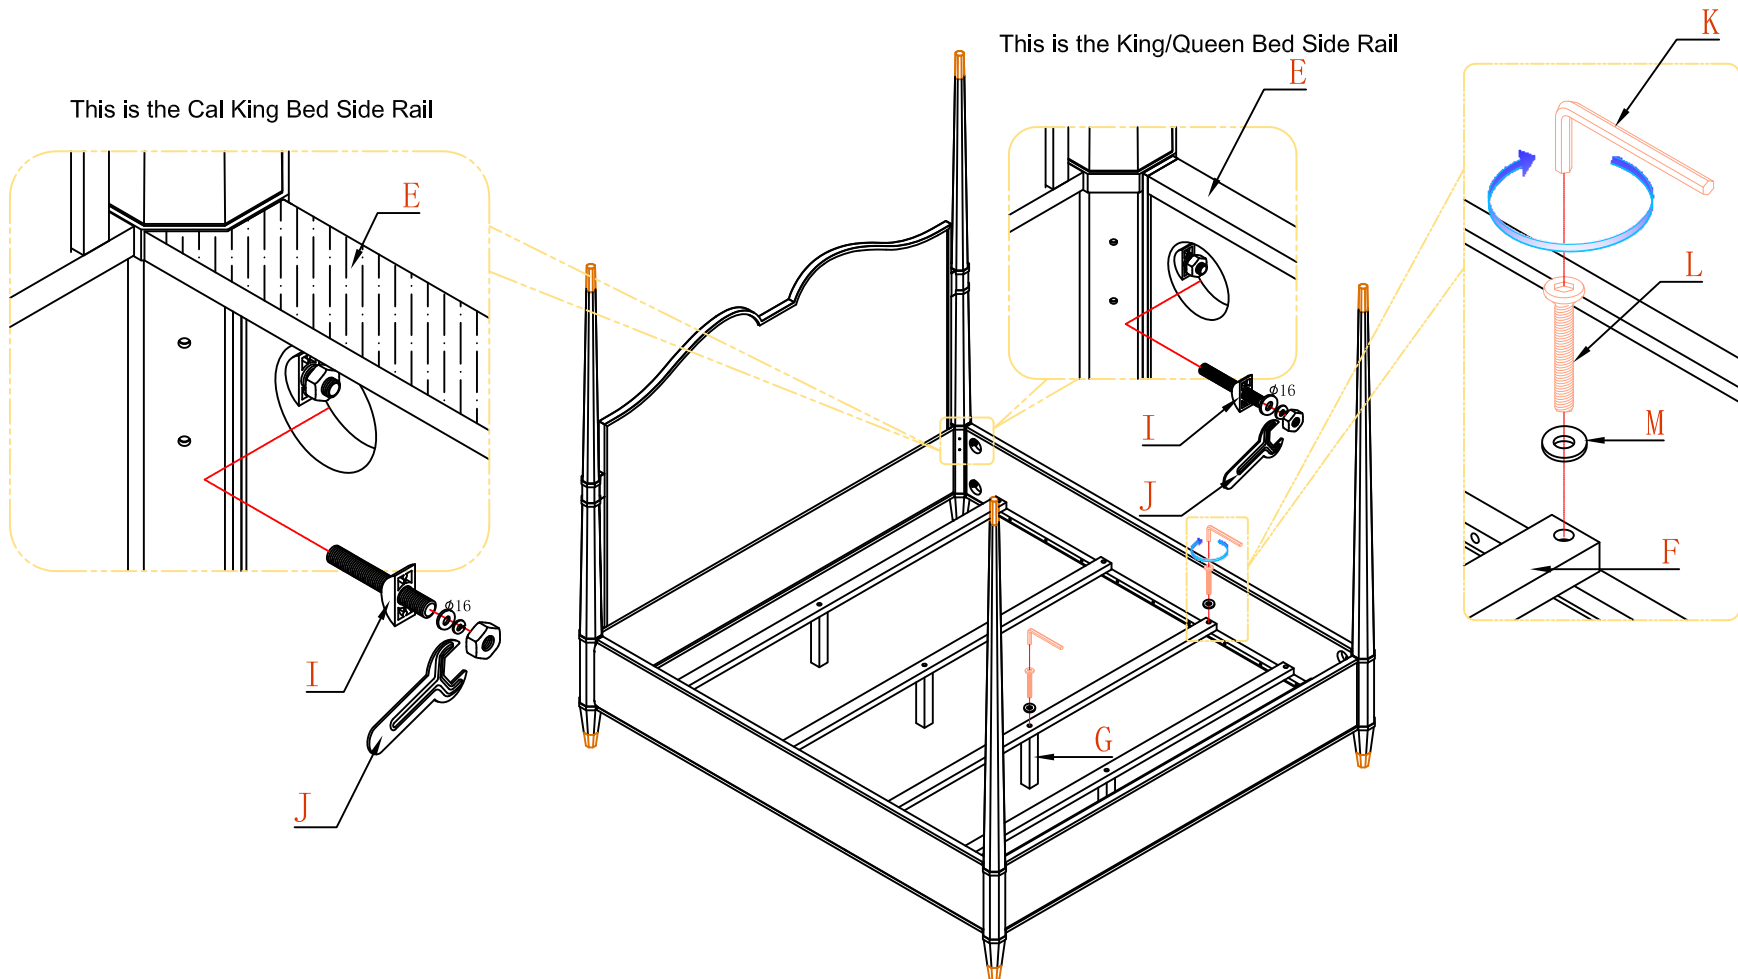

3. Connect the headboard and the footboard with the screw I. Then secure screw with the other RTA hardware from the kit I. Use the spanner J for tightening. Put the support leg G under the middle of the slat like what was shown. Secure the support leg G with the screw L, the washer M, and the spanner K. Put the slats F on the bed like what was shown. Secure the slats F with the screw L, the washer M, and the spanner K.