
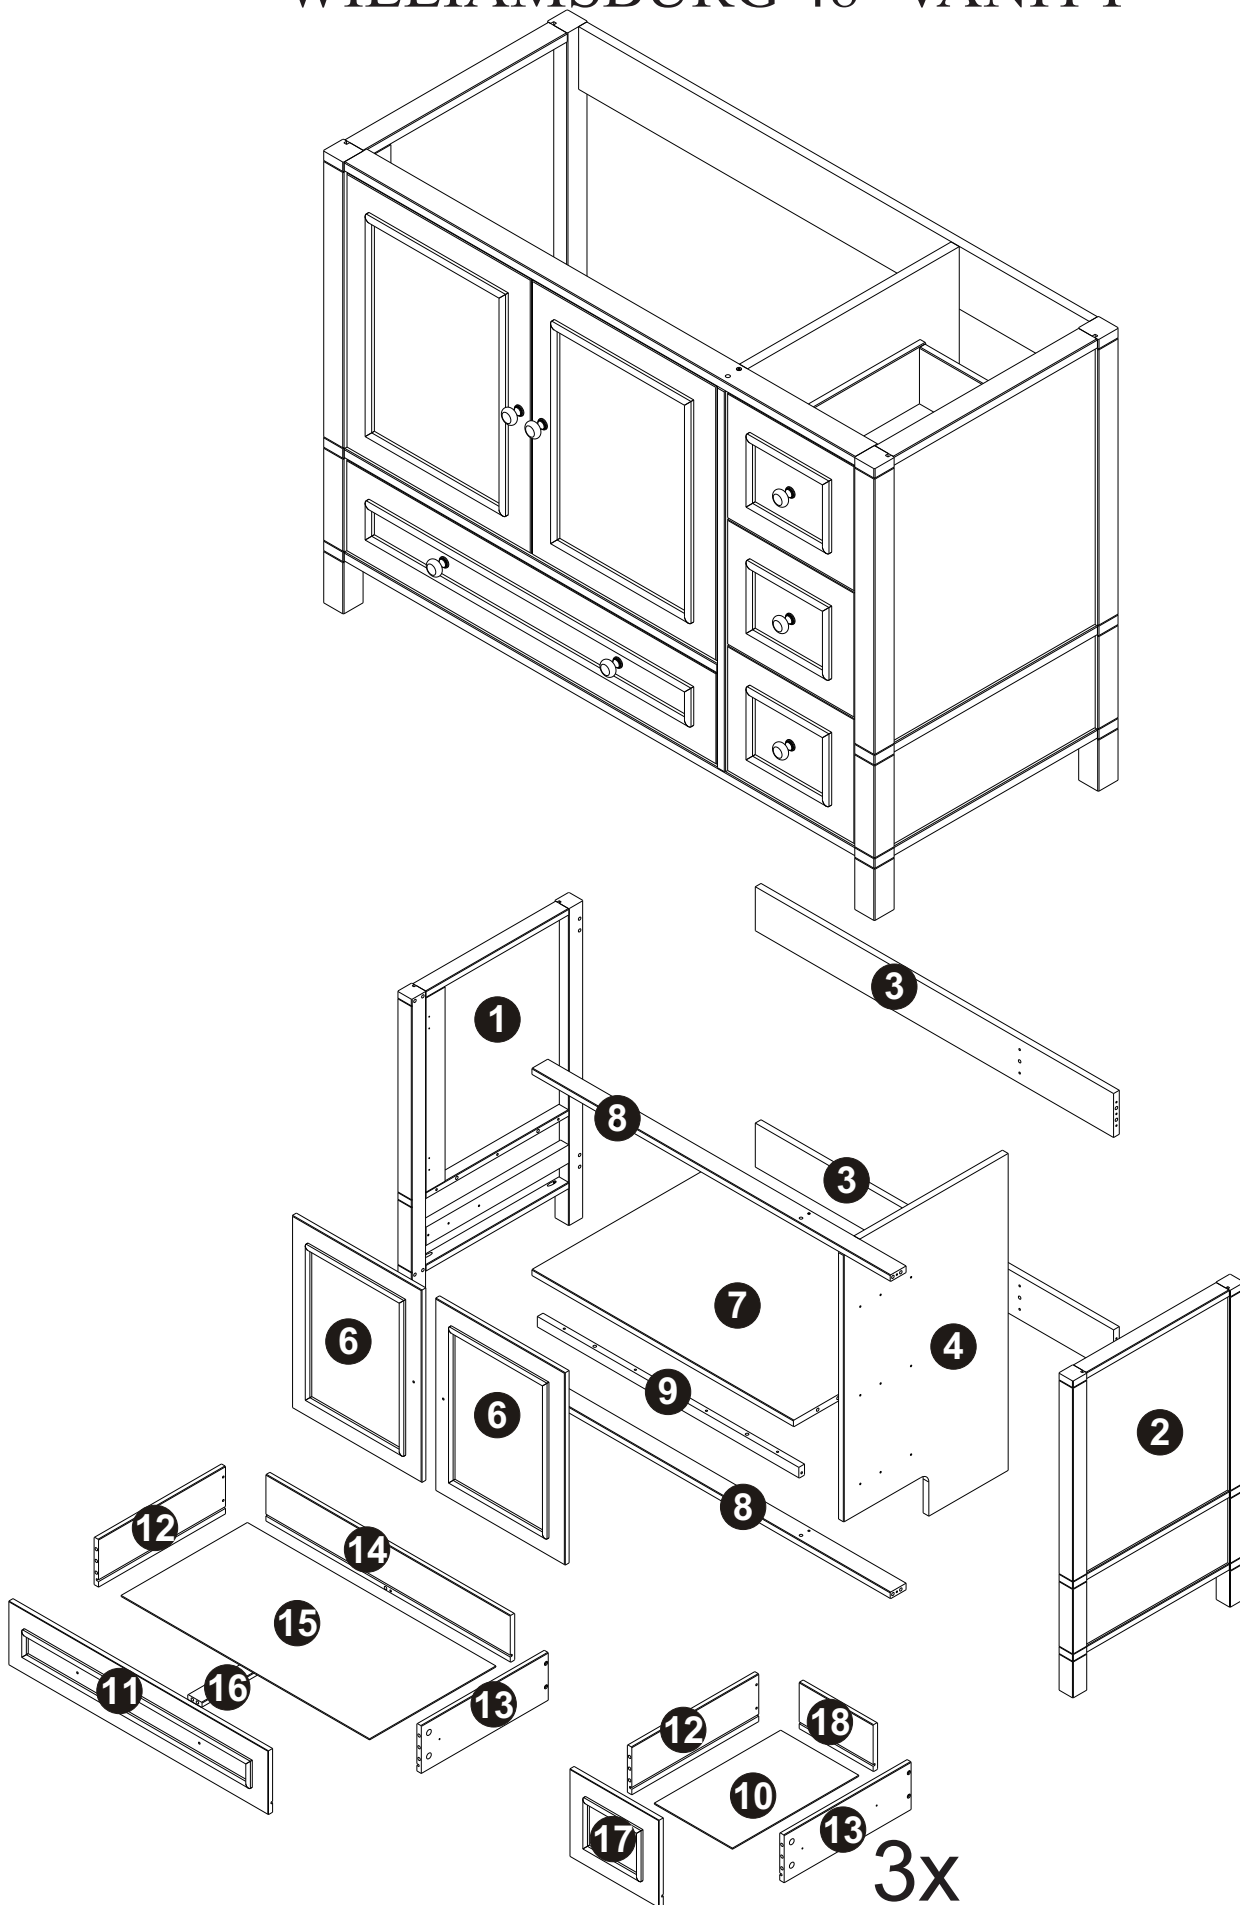










ASSEMBLY INSTRUCTIONS

WILLIAMSBURG 48" VANITY



A	 Ø8x30mm	36
B	 Ø6x10mm	24
C	 Ø3,5x30mm	37
D	 Ø4x30mm	07
E	 Ø3,5x14mm	32
F	 Ø3,5x14mm	02
G	 Ø4,0x40mm	06
H		24
I		02
J		22
K		04
L		07
M	 27x23mm	04
N		08

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at “www.boltonfurniture.com”.









Tools Required




Hammer


* These tools are not supplied by the manufacturer

01

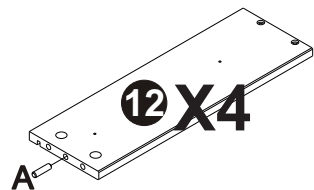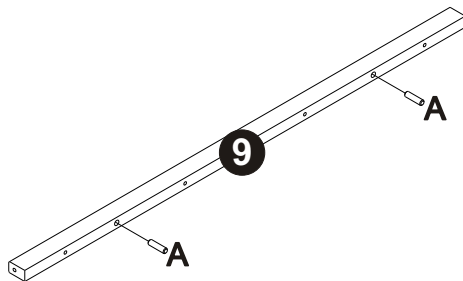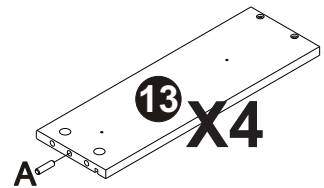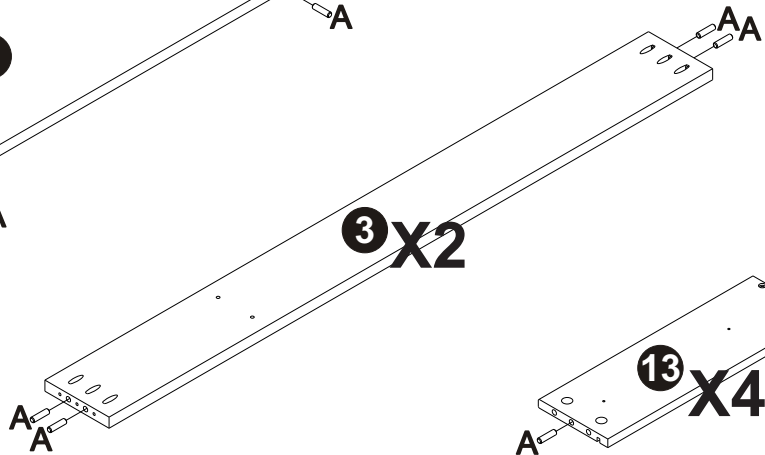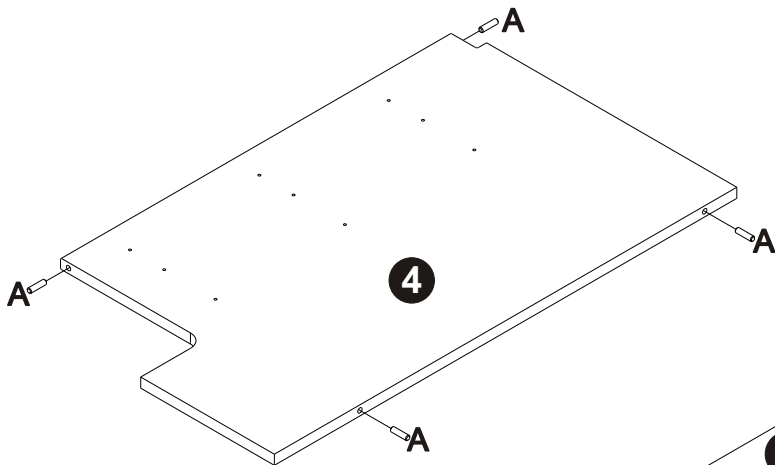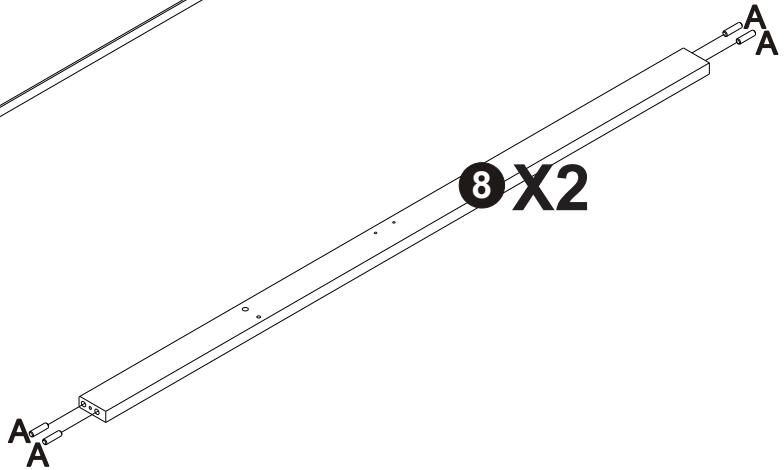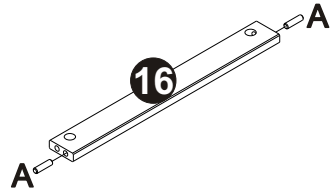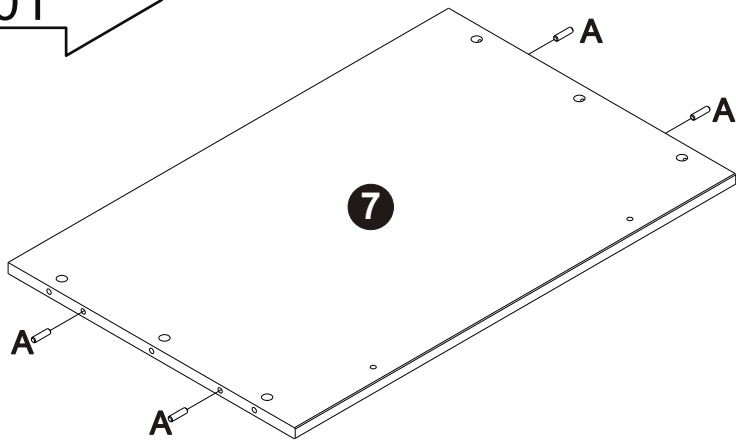


A		36
		Ø8x30mm

02

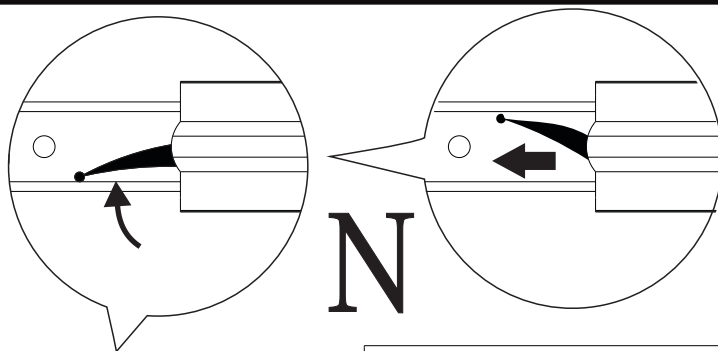

N






N




8x


N

03

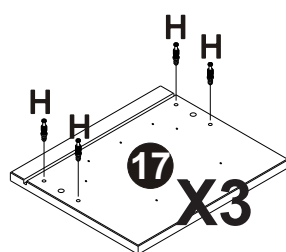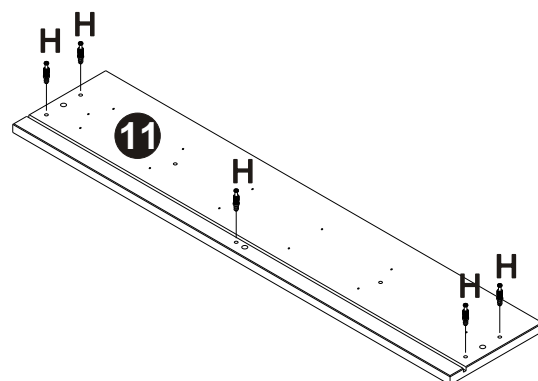



X3

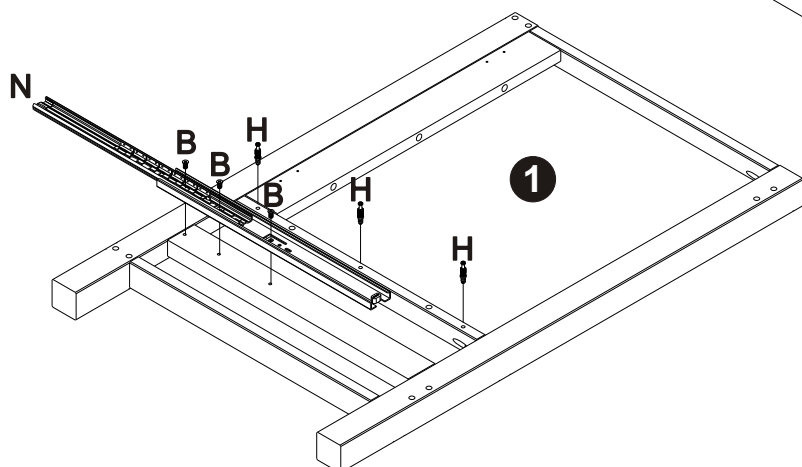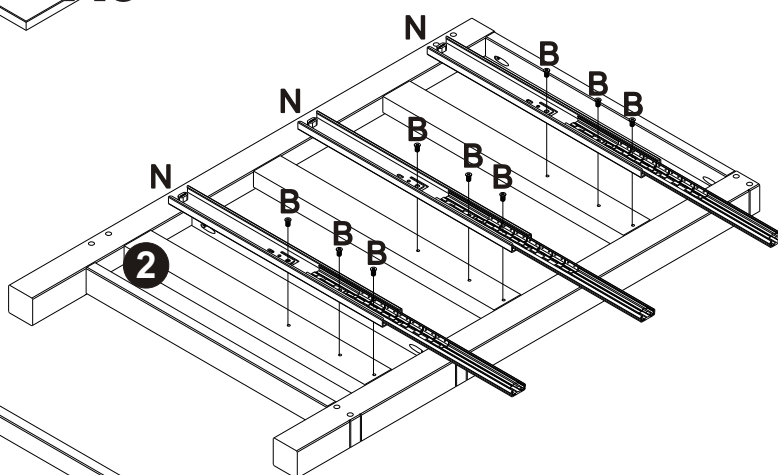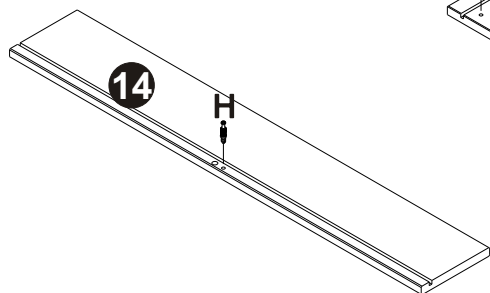


B		Ø6x10mm	12
N			04
H			21


04

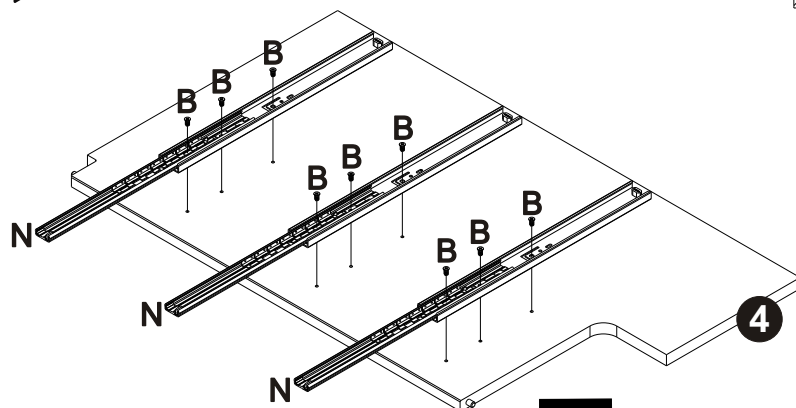


B		Ø6x10mm	12
N			04
H			03

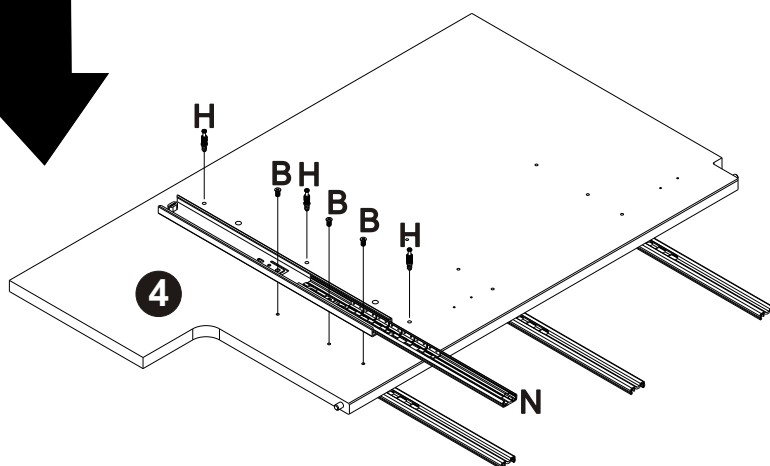


05

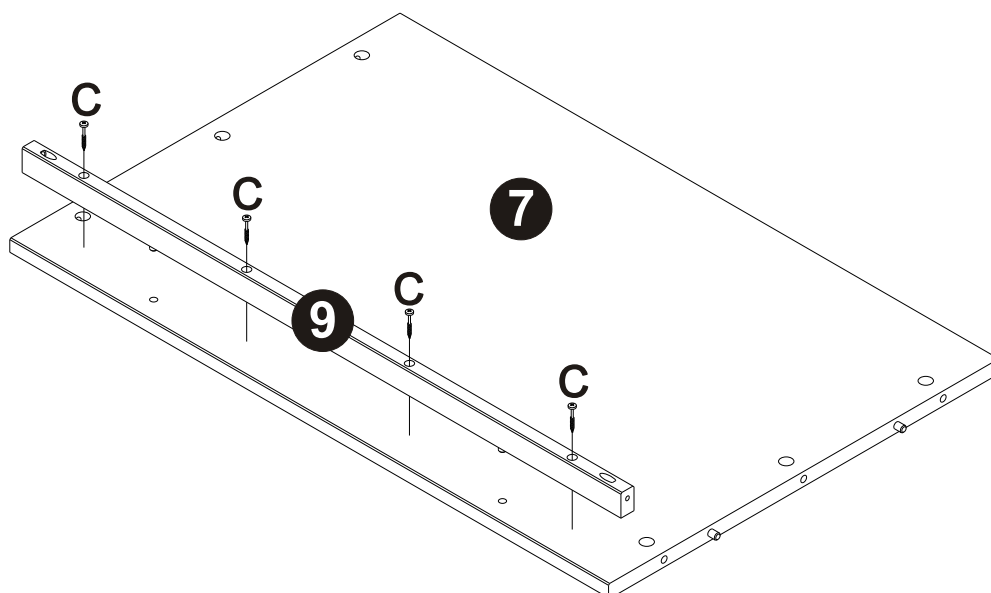


C		Ø3,5x30mm	04
---	--	-----------	----


06

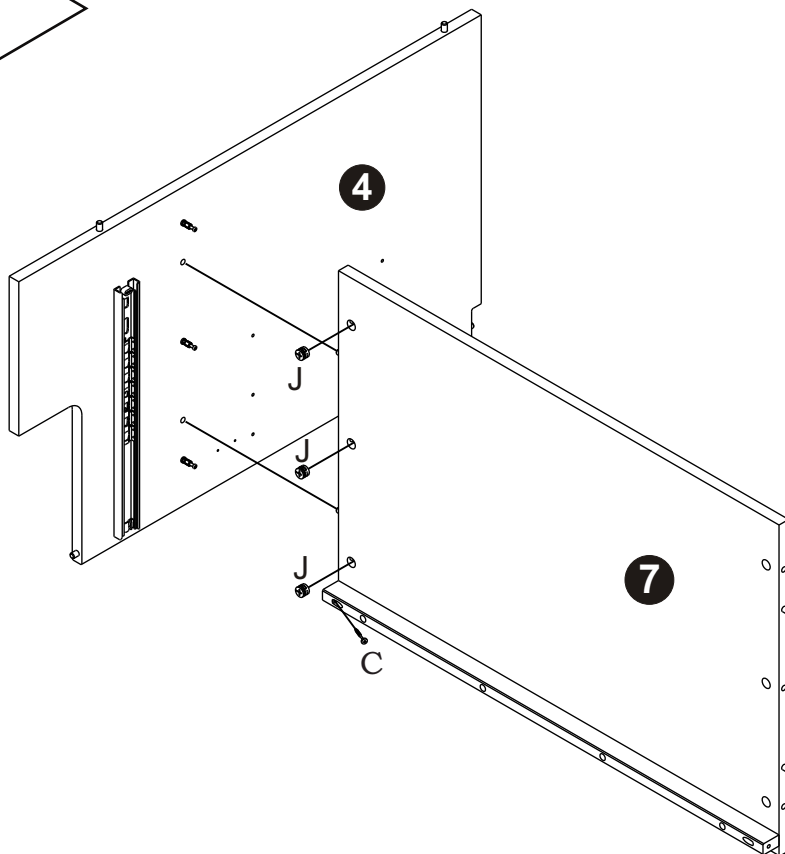


C	 Ø3,5x30mm	01
J		03

07

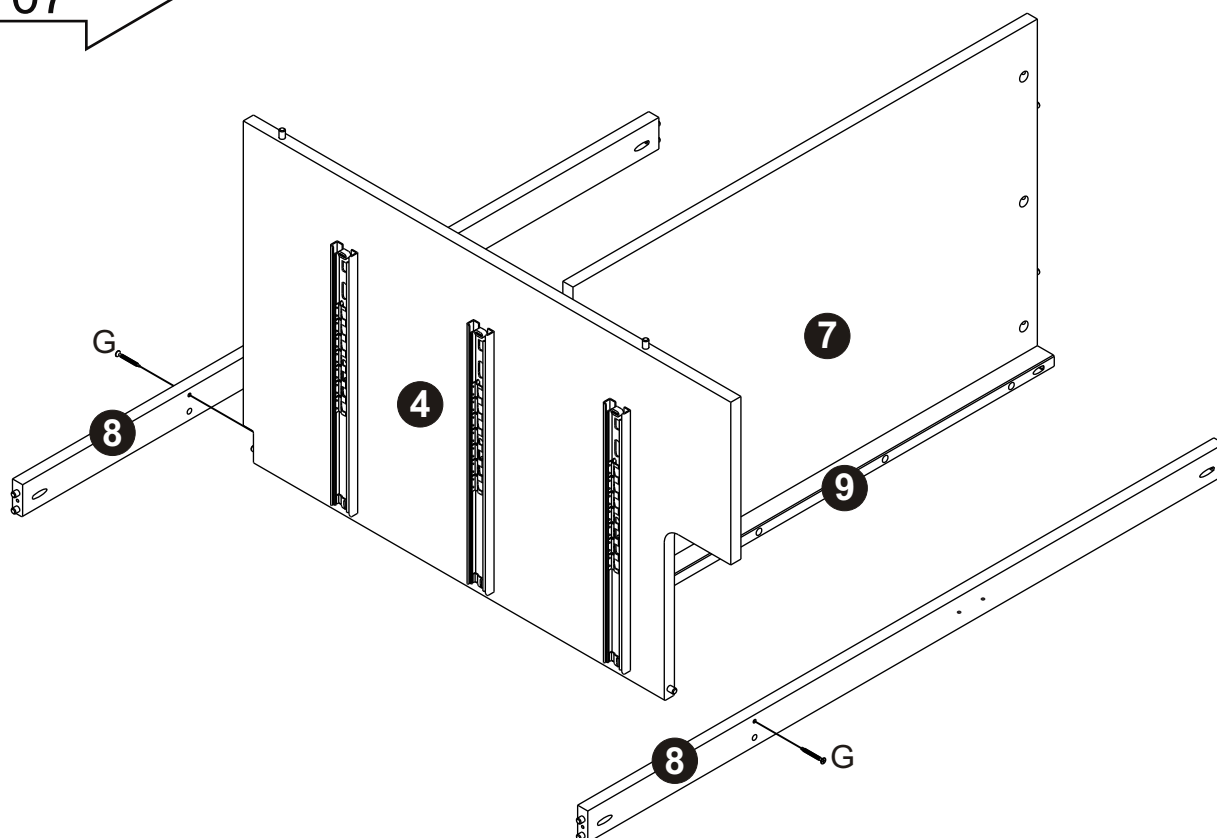


G	 Ø4,0x40mm	02
---	--	----

08

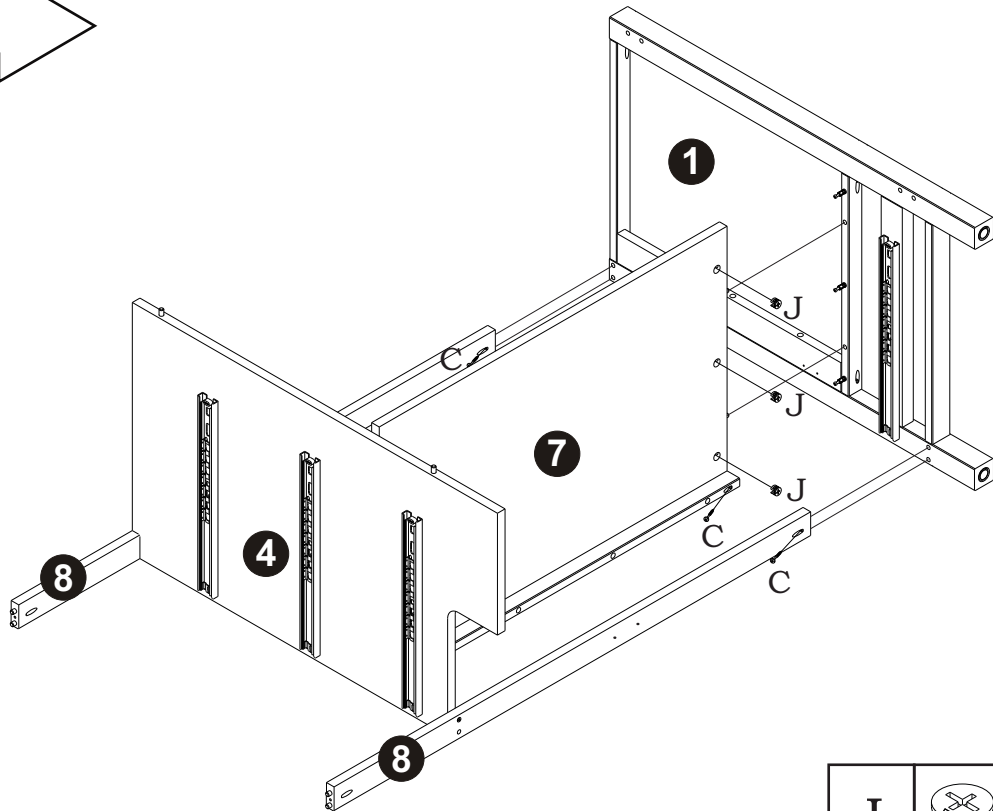


J		03
C		03


09

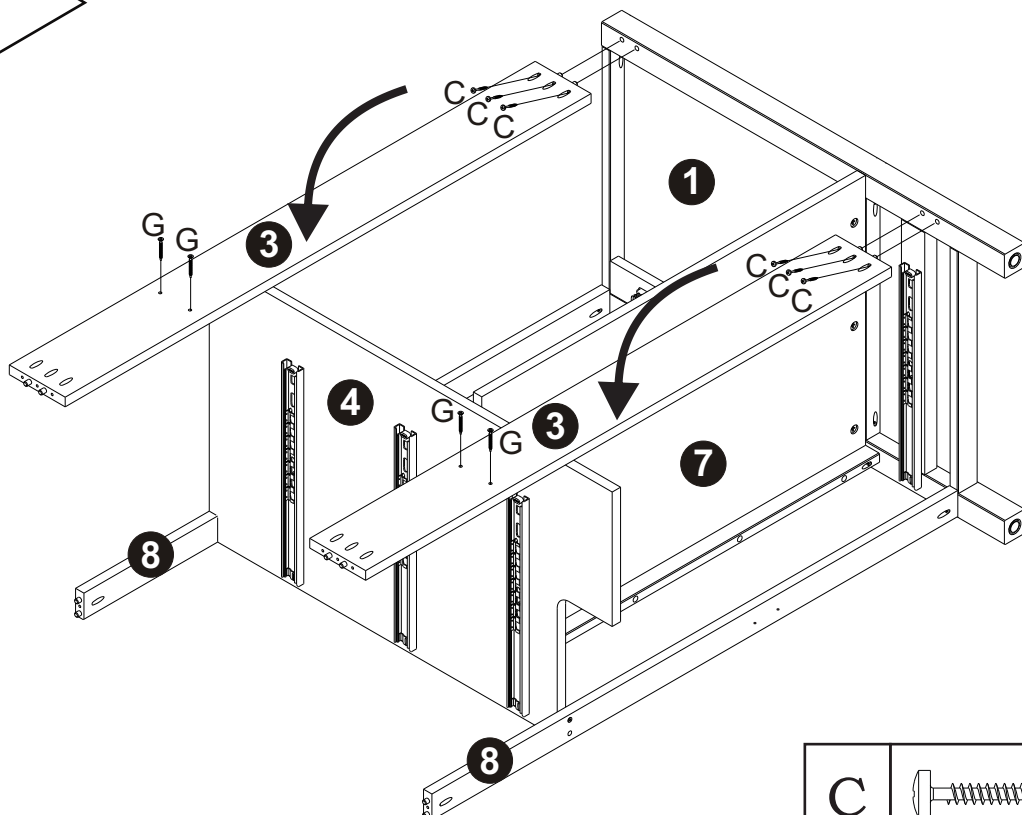


C		06
G		04

10

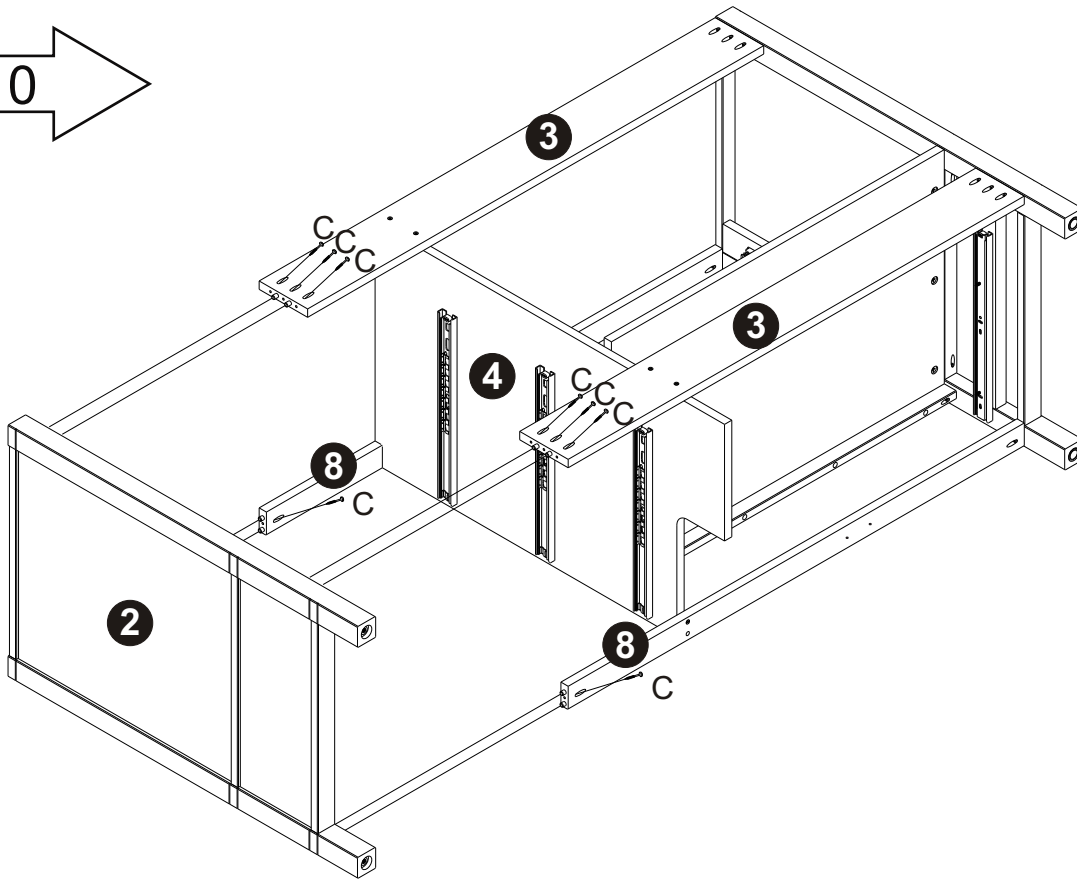


C		08
Ø3,5x30mm		

11


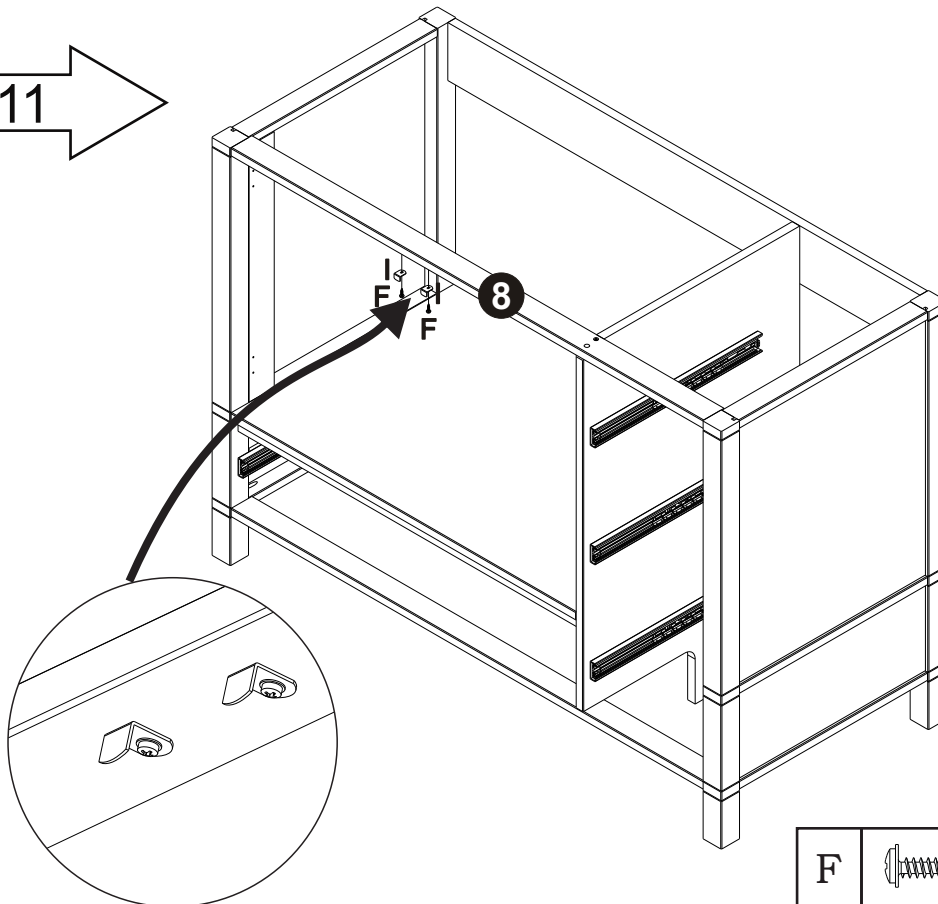


F		02
Ø3,5x14mm		
I		02

12

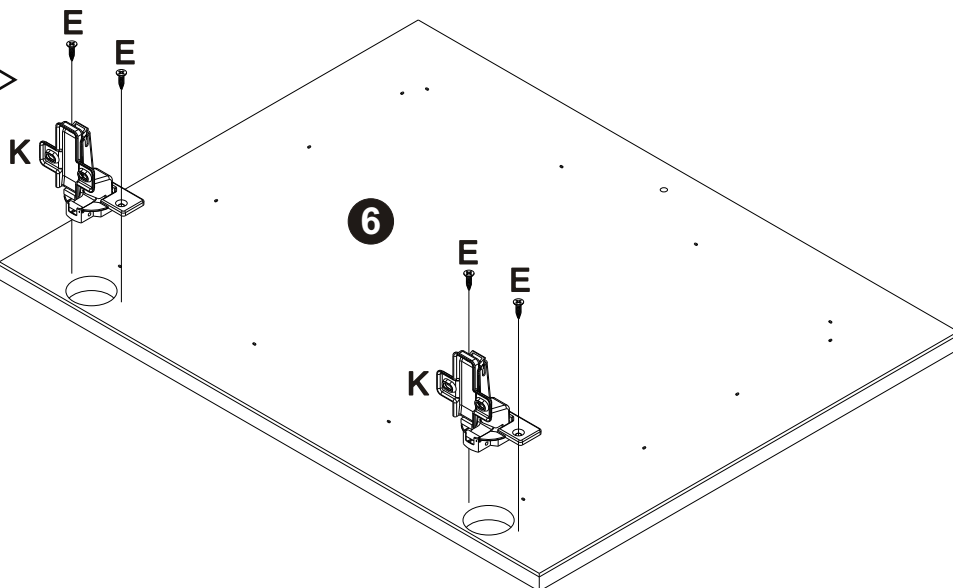



2x

K		04
E		08

Ø3,5x14mm





13




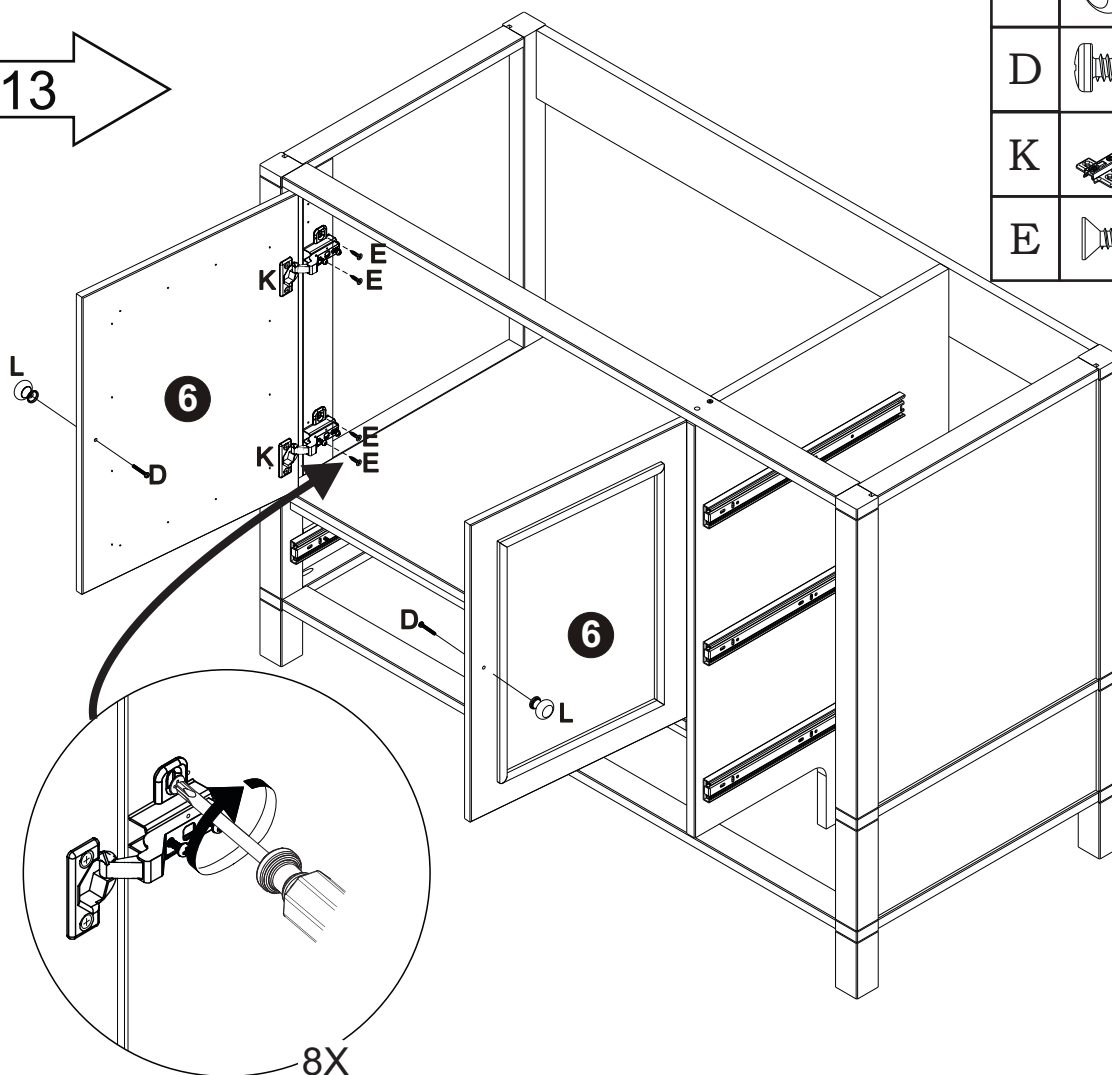



L		02
D	 Ø4x30mm	02
K		04
E	 Ø3,5x14mm	08

3x



14

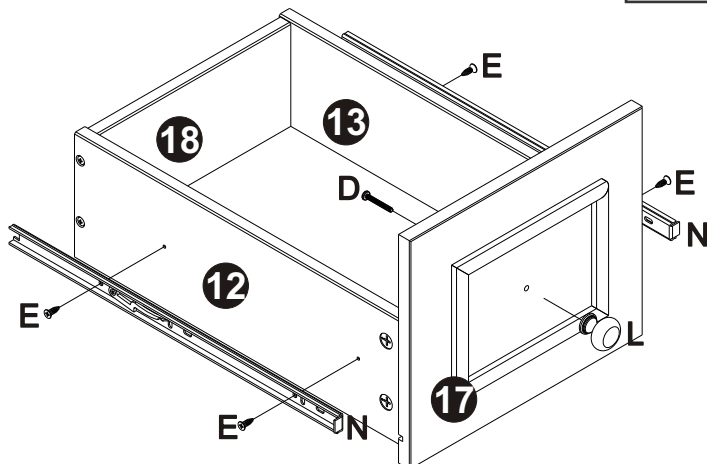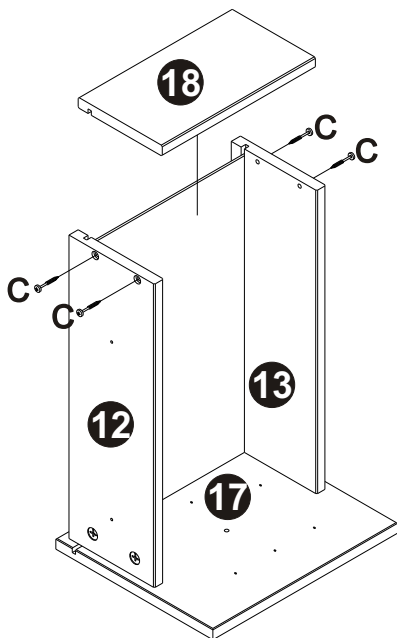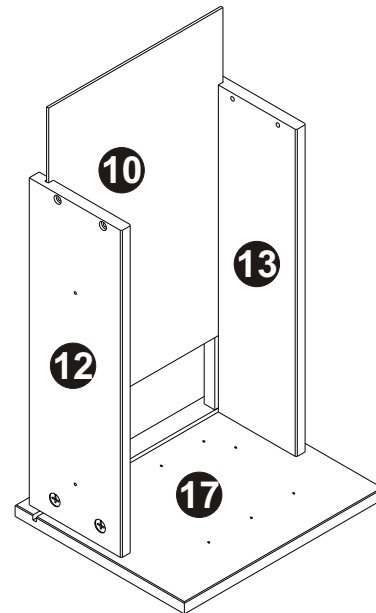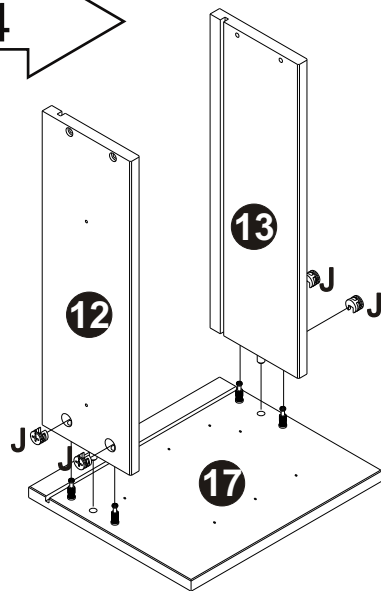

C		Ø3,5x30mm	12
D		Ø4x22mm	03
E		Ø3,5x14mm	12
J			12
L			03
N			06

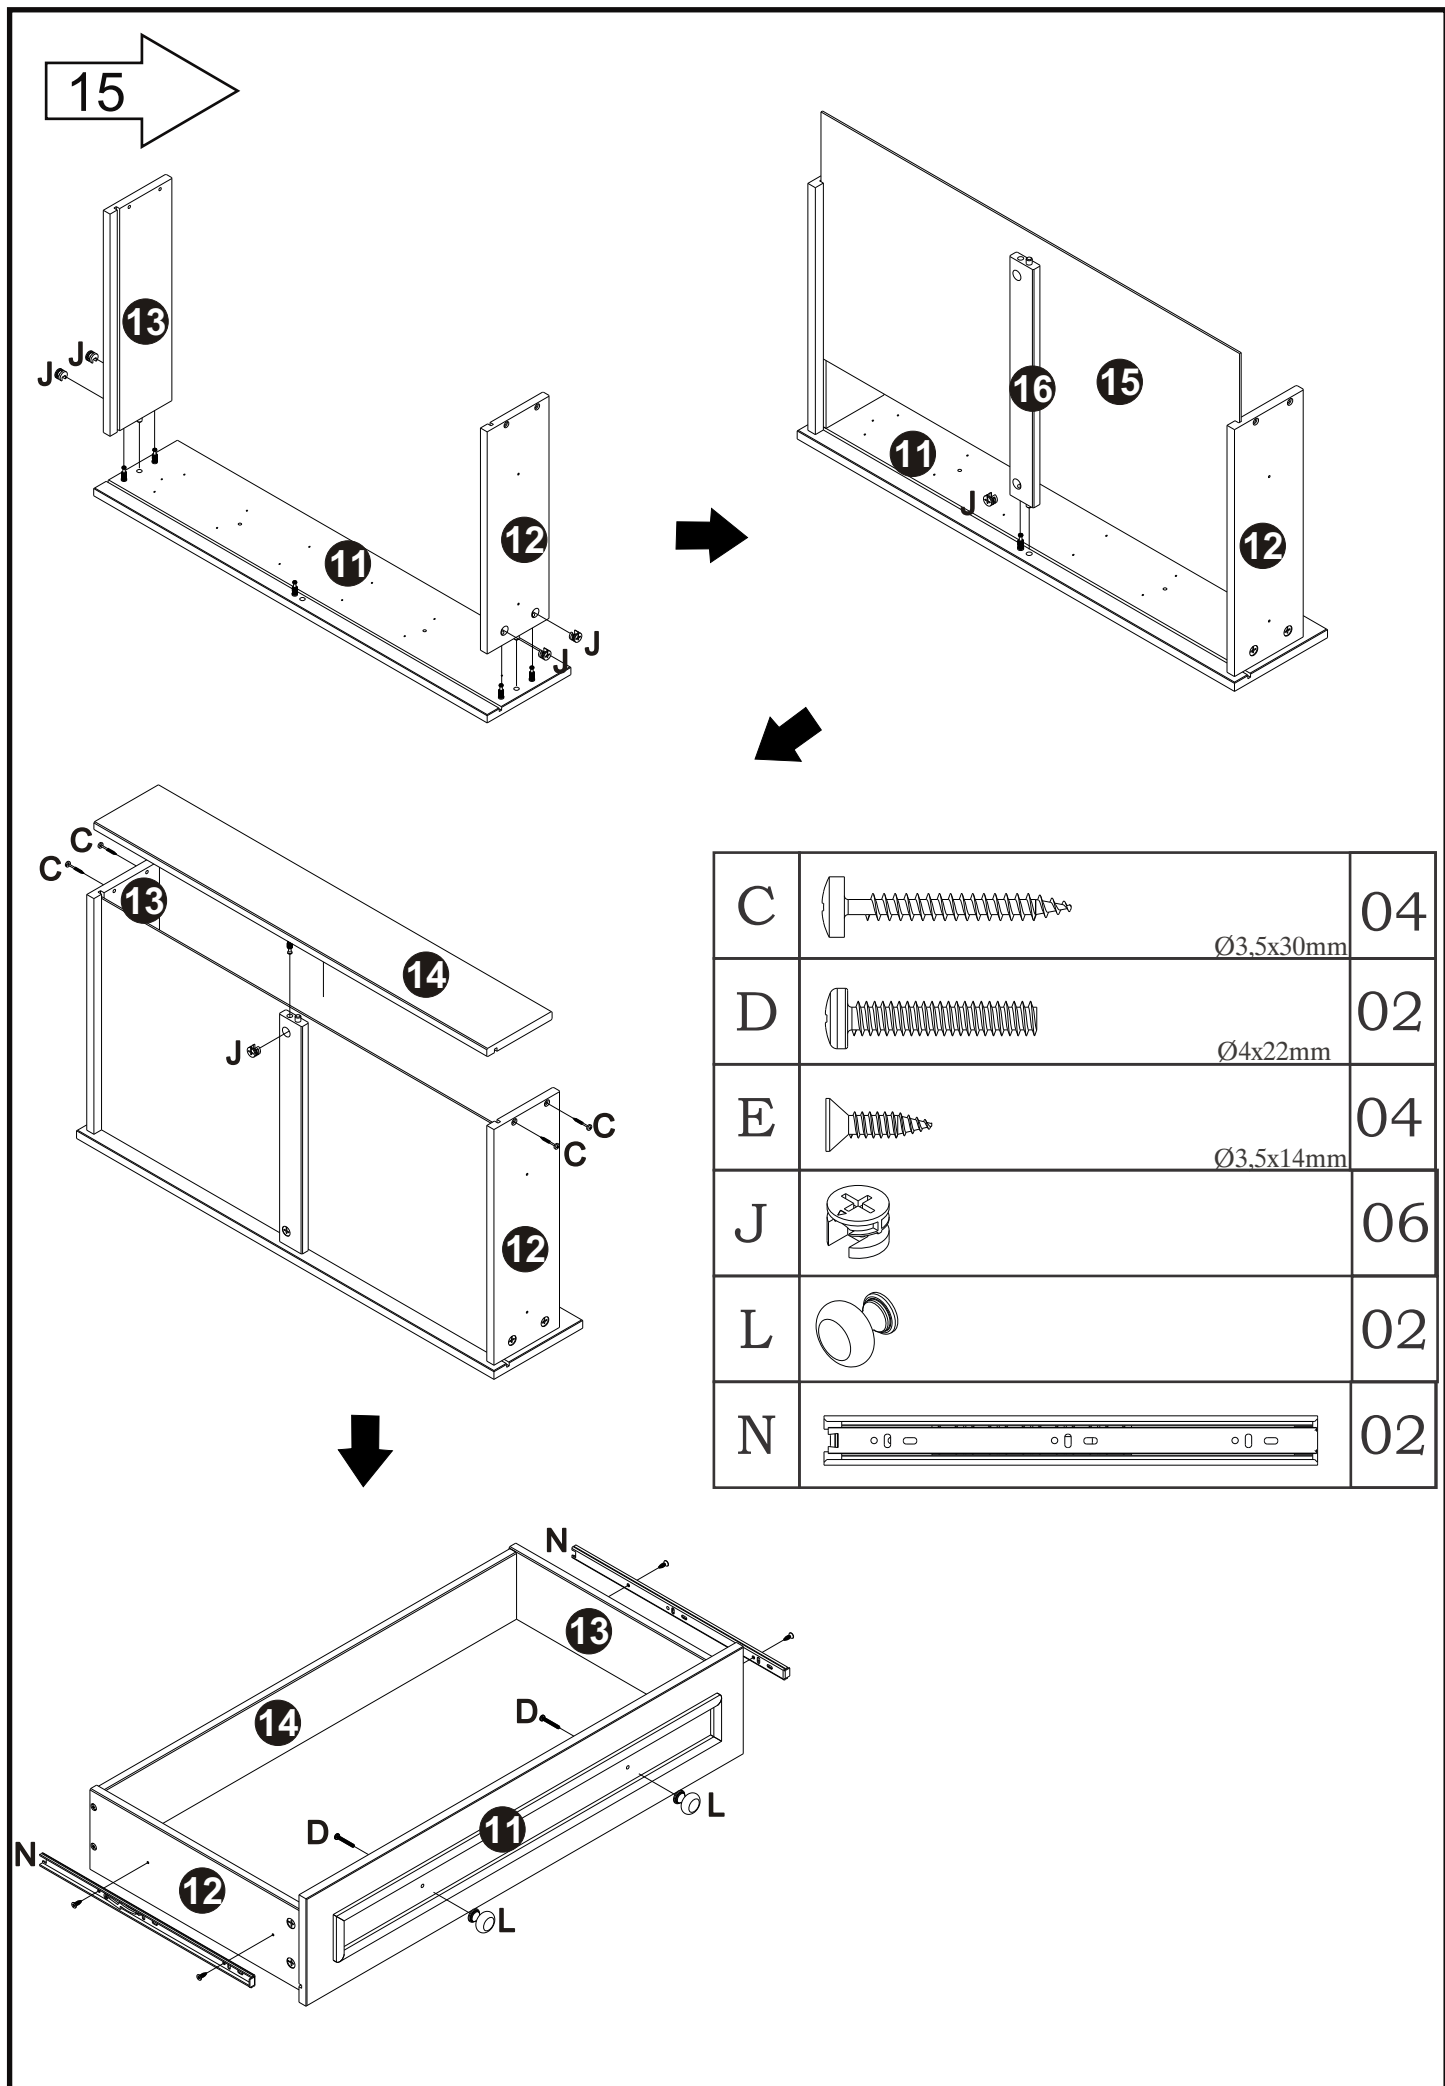

16

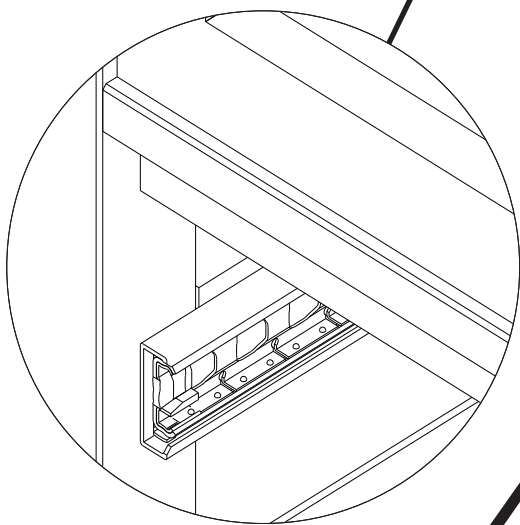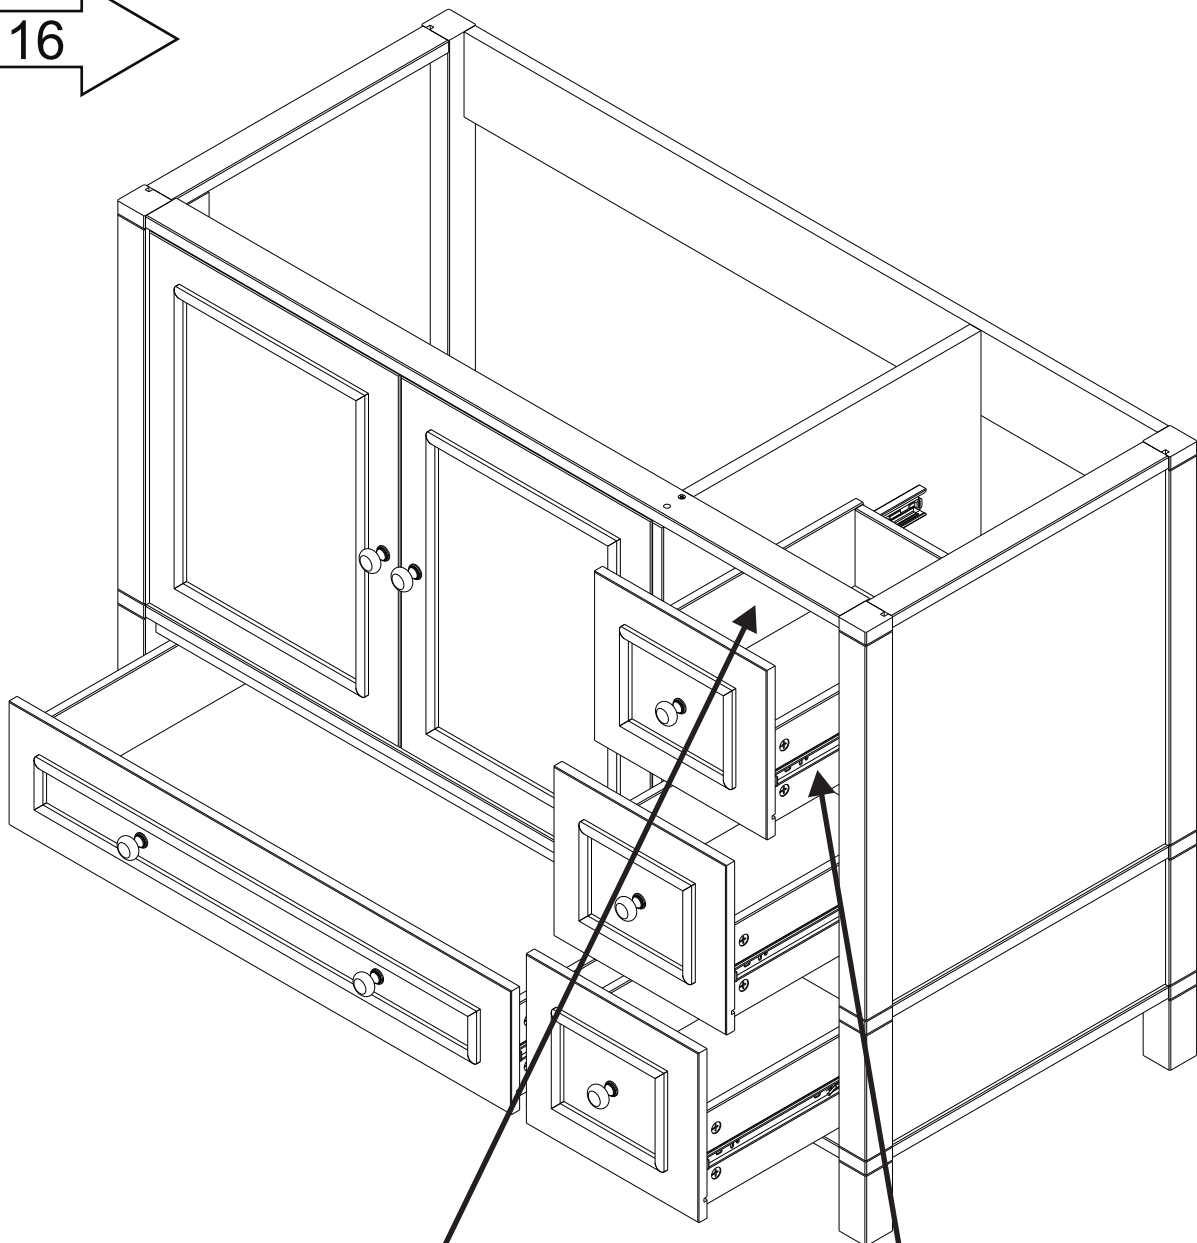

4x

