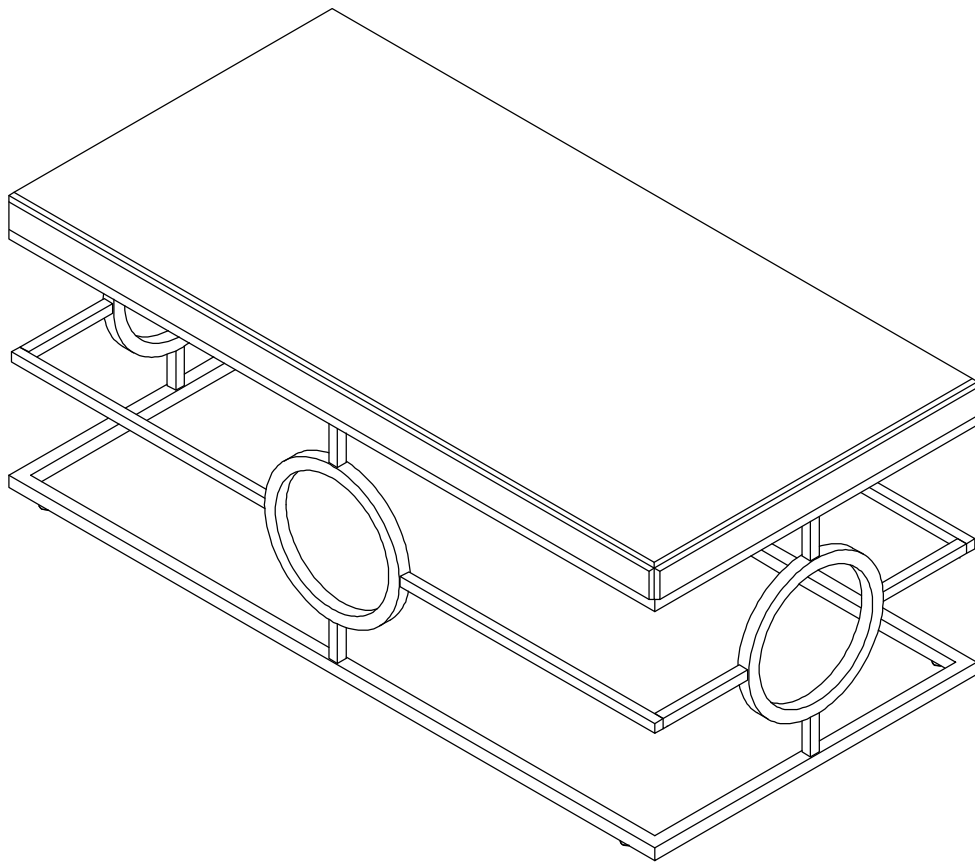







**Pearl Coffee Table**  
**Item #: CTPL100CTE**  
**ASSEMBLY INSTRUCTIONS**





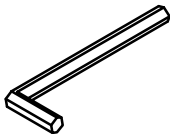


# ASSEMBLY INSTRUCTIONS


## Item #: CTPL100CTE

Please identify and locate all assembly parts (see parts list) before discarding any packing materials.  
Some parts may have become loose during transit.

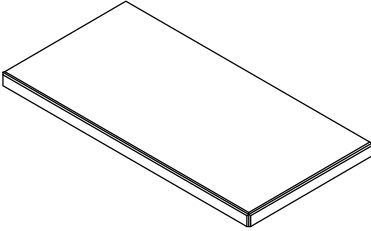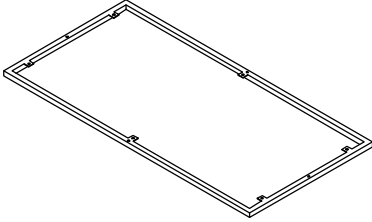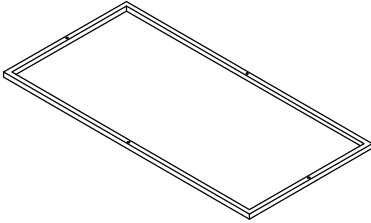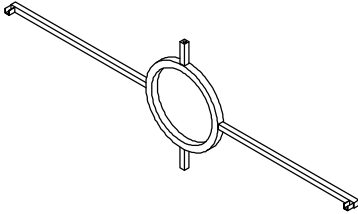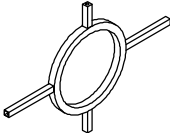
PARTS LIST			
NO.	SKETCH	DESCRIPTION	QYT
1		MIRROR BOX	1PC
2		TOP FRAME	1PC
3		BOTTOM FRAME	1PC
4		LARGE FRAME	2PCS
5		SMALL FRAME	2PCS

NO.	SKETCH	DESCRIPTION	QYT
6		<b>SHORT BOLT</b> <b>1/4" x 12mm</b>	<b>4PCS</b>
7		<b>MEDIUM BOLT</b> <b>1/4" x 15mm</b>	<b>6PCS</b>
8		<b>LONG BOLT</b> <b>1/4" x 47mm</b>	<b>8PCS</b>
9		<b>LEVELER</b> <b>1/4" x 12mm</b>	<b>4PCS</b>
10		<b>ALLEN KEY</b> <b>4mm</b>	<b>1PC</b>


**NOTE:** Do not tighten until each step is completed or instructed.

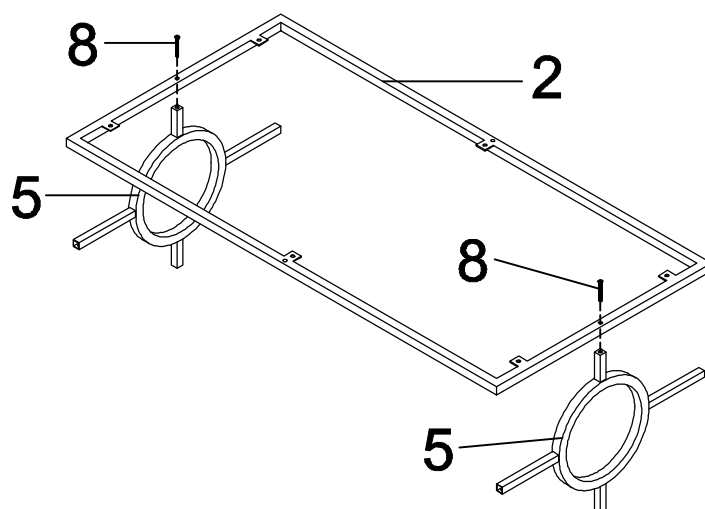


**Step 1:** Attach Small Frame (5) to Top Frame (2) using Long Bolt (8) as shown.

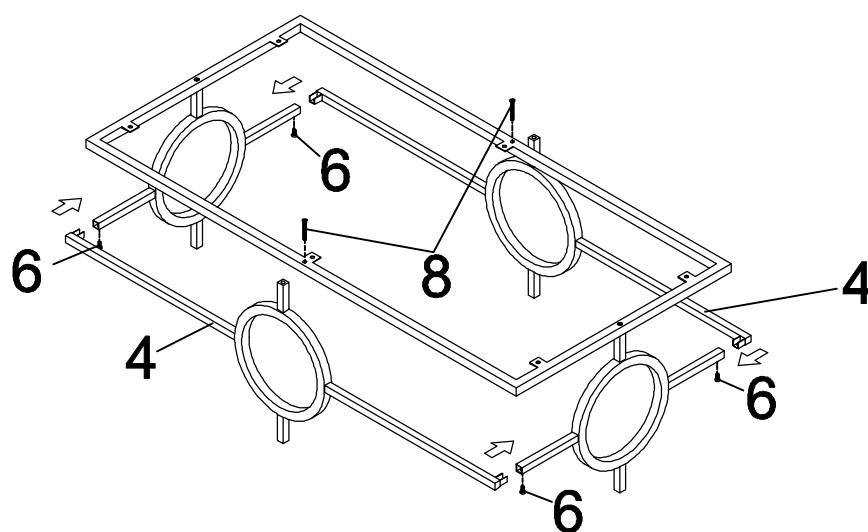


**Step 2:** Attach Large Frame (4) to the assembly in Step 1 using Shot Bolt (6) and Long Bolt (8) as shown.

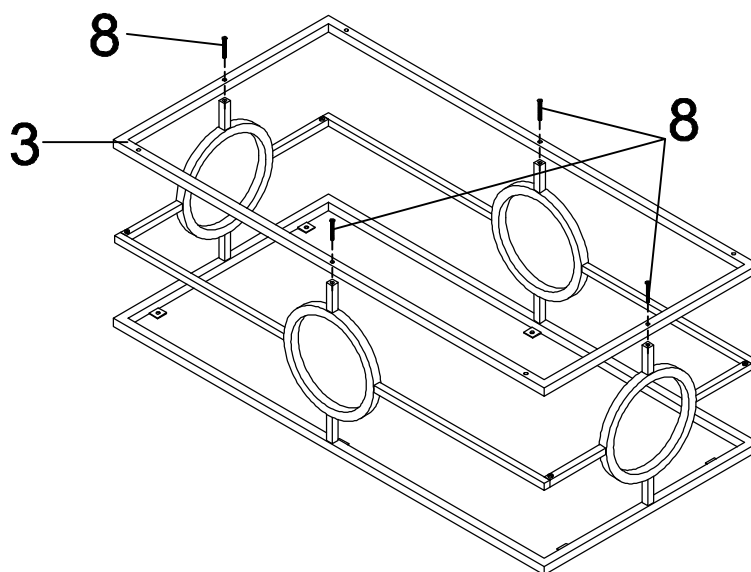


**Step 3: Attach Bottom Frame (3) to the assemble in Step 2 using Long Bolt (8) as shown.**

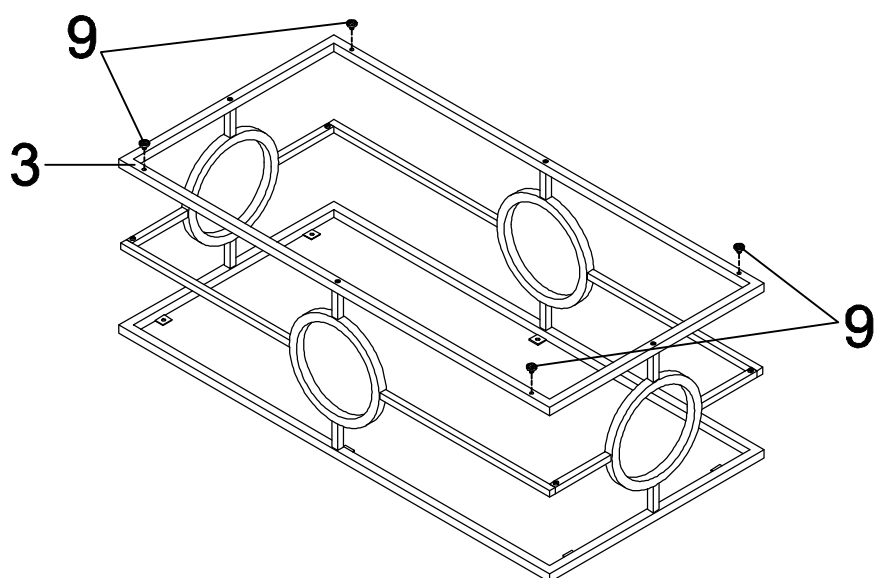

**Step 4: Insert Leveler (9) onto Bottom Frame (3) as shown.**

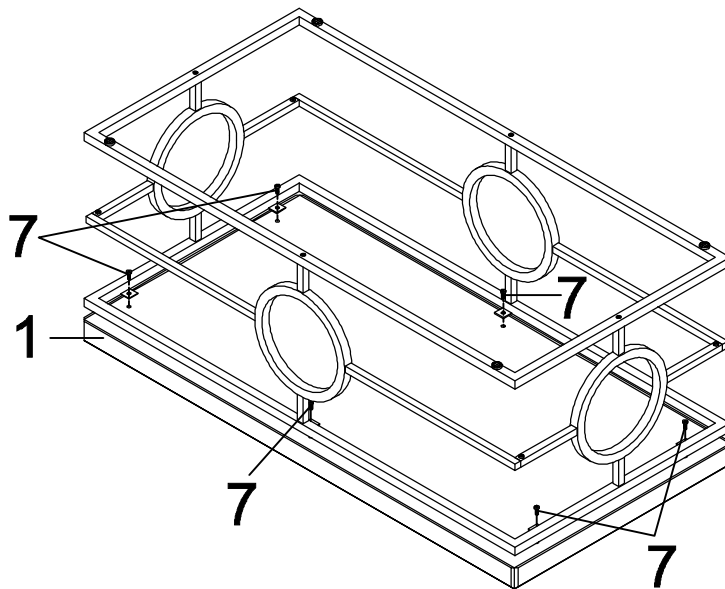

**Step 5: Attach the assemble in Step 4 to Mirror Box (1) using Medium Bolt (7) as shown.**

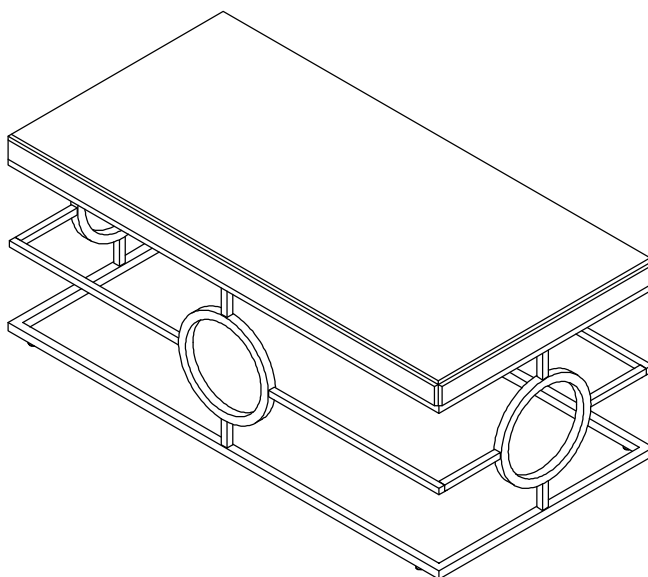

**Complete. Congratulations on your assemble success.**