

TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture


 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.


TOV

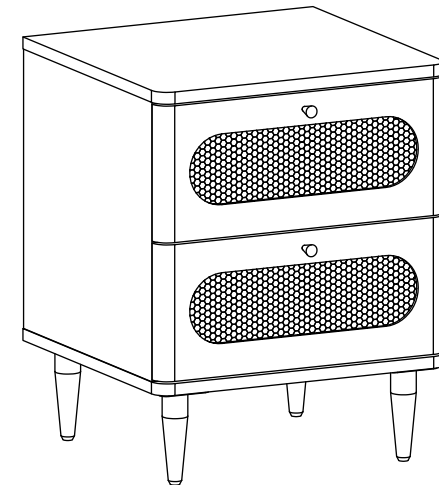


Carmen Nightstand

DON'T BE BORING.

Hardware and Components

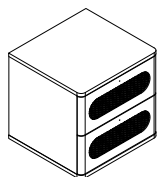


A x1pc



B x4pcs



C x1pc (Allen Key - 4mm)




D x16pcs (20mm x 6mm)



E x16pcs (Ø16 x Ø6)


Step 1

Open the box, remove the packaging materials. Look for the red streamer. Open the bottom drawer for the hardware and the legs inside smallbox.

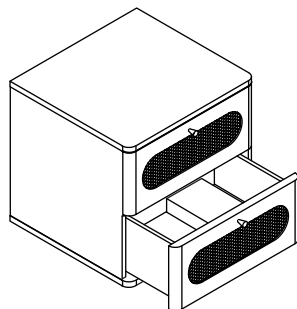


Step 2

- A.** Place the Nightstand (A) upside down on a clean, non marring surface (i.e. packing foam).
- B.** Align the Legs (B) to the holes on the bottom of Nightstand (A) with pre-installed threaded nuts.
- C.** Tighten the legs with hardware (D), (E) and Allen Key (C).
- D.** With help, turn the Nightstand over so it is standing in an upright position.

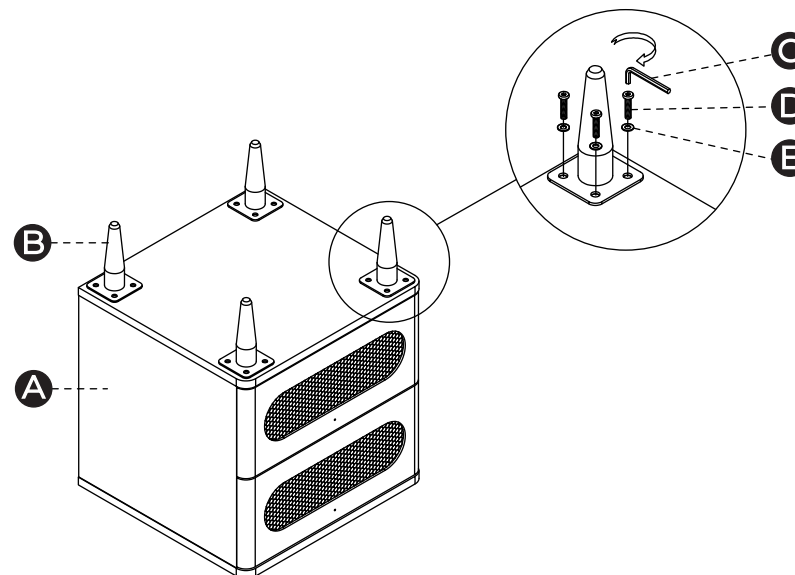


Step 3

- A.** The knob is fitted inside the drawer, open the drawer, unscrew and remove the knob.

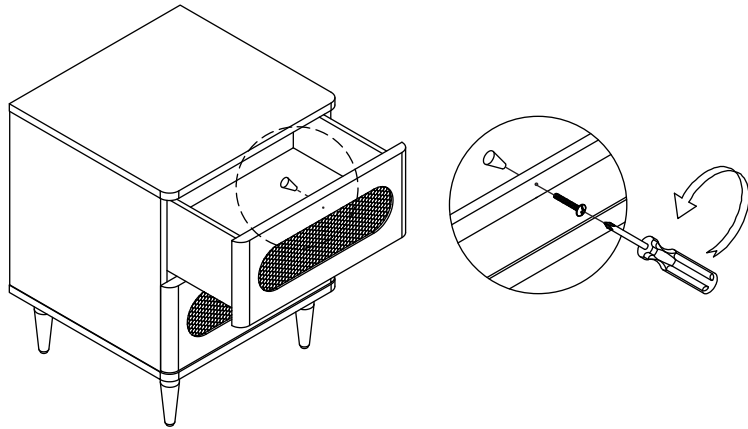


- B.** Attach the knob onto outside of drawer using the screw.

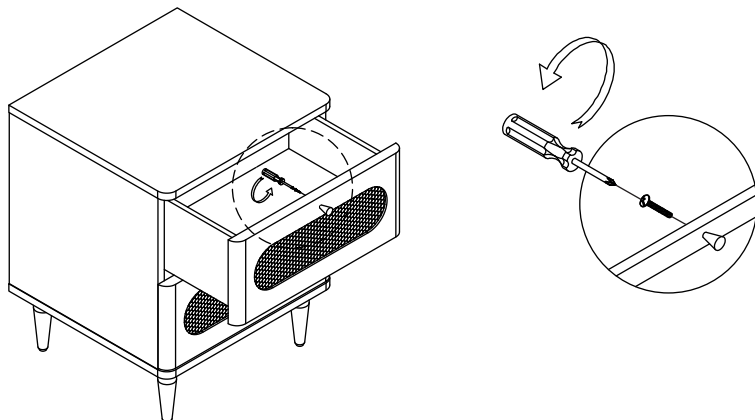

Step 4

- A.** If necessary, adjust the leveler on the legs until the Nightstand is level.
- B.** Complete!

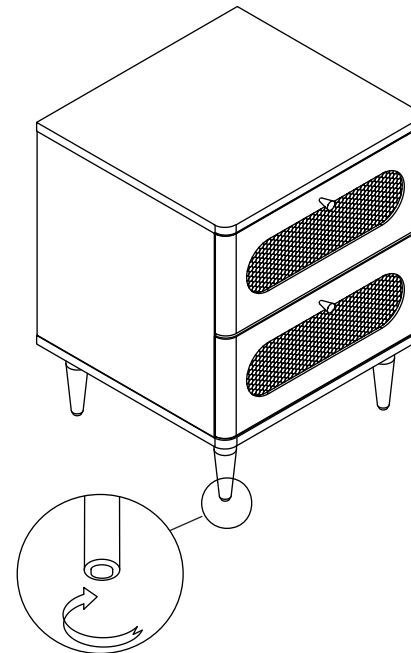

Stuck?

Contact our team @ 516-888-3355

Scan for product care!

