


Hardware and Parts packed with the Headboard

58070 4/6-5/0


Uph/Pnl Headboard

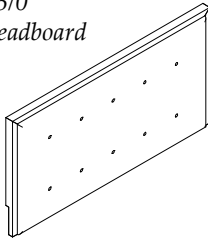

(H-A)

1 pc.


Headboard Post



(H-B)


One Left &
One Right

Headboard Stretcher

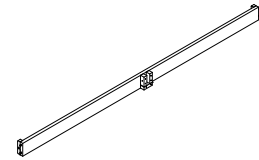


(H-C)

1 pc.

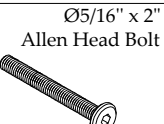


(H-D)

6 pcs.

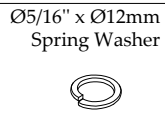


(H-E)

6 pcs.

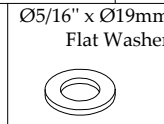


(H-F)

6 pcs.

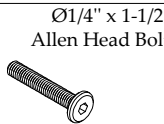


(H-G)

2 pcs.

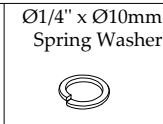


(H-H)

2 pcs.

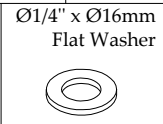


(H-I)

2 pcs.

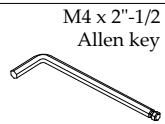

(H-J1)

1 pc.

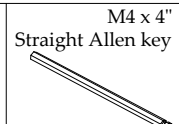


(H-J2)

1 pc.

Hardware and Parts packed with the Footboard


58071 4/6-5/0 Panel
Footboard & Slats

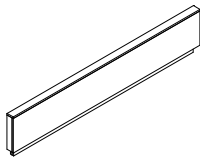

(F-A)

1 pc.

5/0 Roll Slat
60-7/8" long

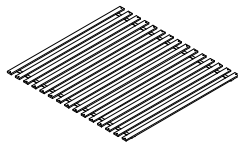

(F-B)

15 pcs.


Slat Support Leg



(F-C)

1 pc.


Center Slat



(F-D)

2 pcs.


Ø1/4" x 2"
Allen Head Bolt



(F-E)

2 pcs.

Ø1/4" x 1-1/2"
Allen Head Bolt



(F-F)

2 pcs.

Ø1/4" x Ø10mm
Spring Washer



(F-G)

4 pcs.

Ø1/4" x Ø16
Flat Washer



(F-H)

4 pcs.

M4 x 2-1/2
Allen Key



(F-I1)

1 pc.

M4 x 4" Straight
Allen key



(F-I2)

1 pc.

Ø4 x 30mm
Wood Screw




(F-K)

32 pcs.

Hardware and Parts packed with the Bed Rails

58073 -- 5/0-6/6 Storage Rail 1In



(R-A4)

1pc

Ø5/16"-18 Arc
Washer & Nut



(R-B)

4 pcs.

13 mm Open
Wrench



(R-C)

1 pc.

Ø5/16" x 3"
Long Bolt



(R-D)

4 pcs.

4/6-5/0 Queen Standard Bed

58070 -- 4/6-5/0 Uph/Pnl Headboard


58071 -- 4/6-5/0 Panel Footboard & Slats

58072-- 5/0-6/6 Panel Rails 2In

58073 -- 5/0-6/6 Storage Rail 1In

58074 -- 5/0-6/6 Panel Rail 1In

58074 -- 5/0-6/6 Panel Rail 1In



(R-A5)

1 pc

Ø5/16"-18 Arc
Washer & Nut



(R-B)

4 pcs.

13 mm Open
Wrench



(R-C)

1 pc.

Ø5/16" x 3"
Long Bolt



(R-D)

4 pcs.

58072-- 5/0-6/6 Panel Rails 2In



(R-A6)

2 pcs

Ø5/16"-18 Arc
Washer & Nut



(R-B)

8 pcs.


13 mm Open
Wrench



(R-C)


1 pc.

Ø5/16" x 3"
Long Bolt




(R-D)


8 pcs.

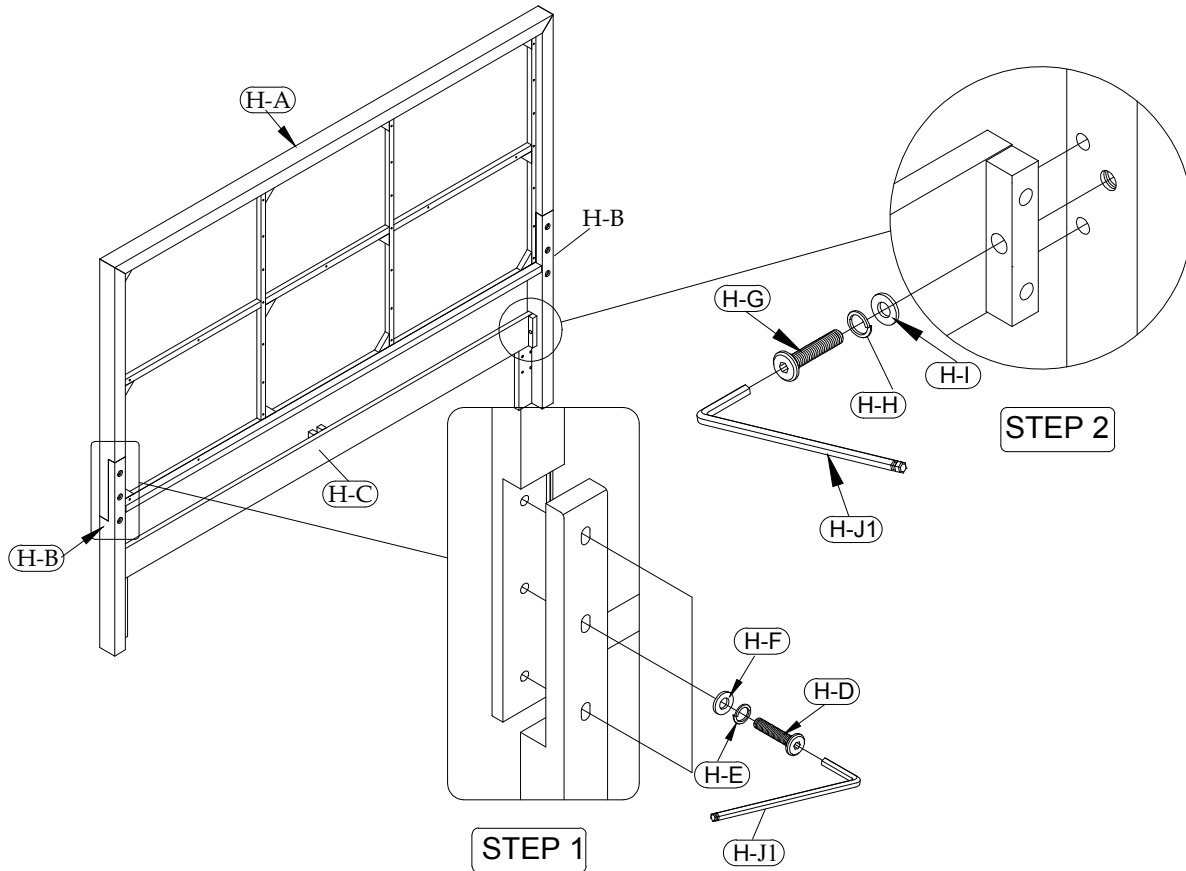


STEP 3

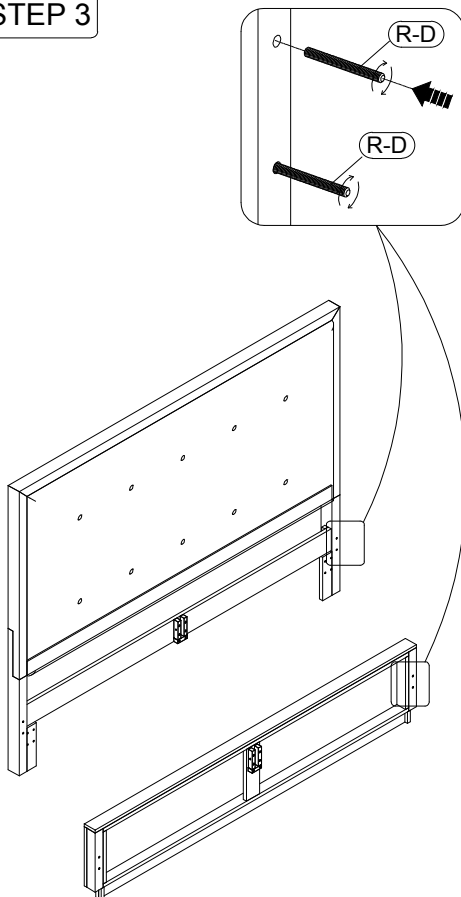


STEP 4

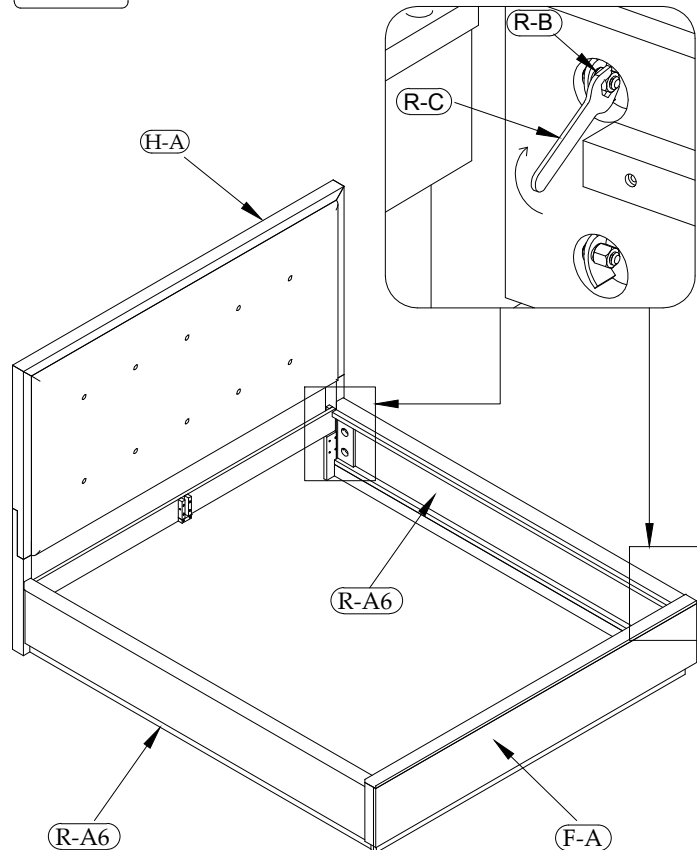


4/6-5/0 Queen Standard Bed
58070 -- 4/6-5/0 Uph/Pnl Headboard
58071 -- 4/6-5/0 Panel Footboard & Slats
58072-- 5/0-6/6 Panel Rails 2In

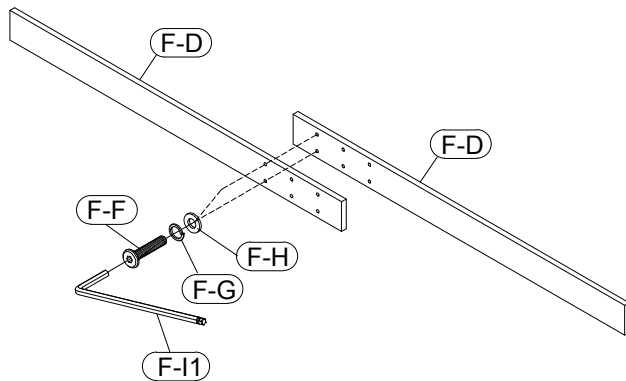

STEP 5

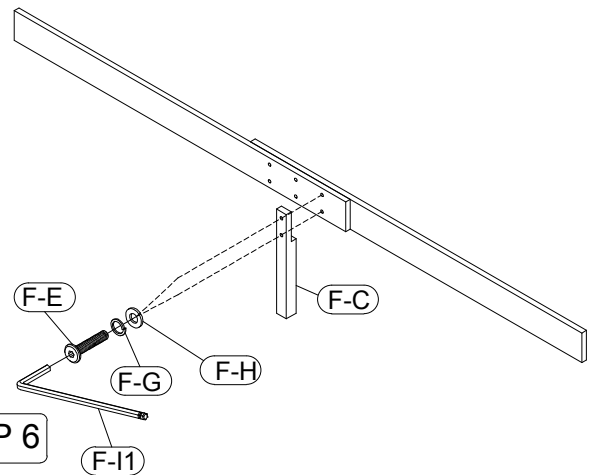


STEP 6

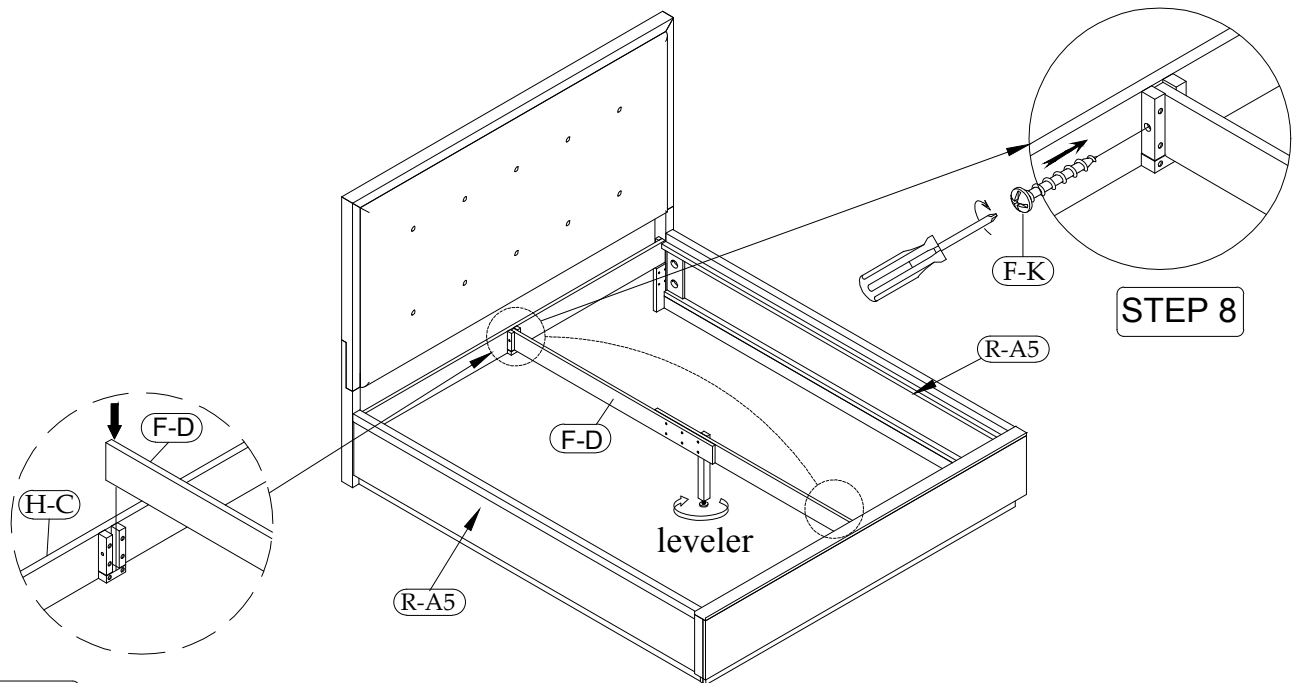


STEP 7

STEP 8


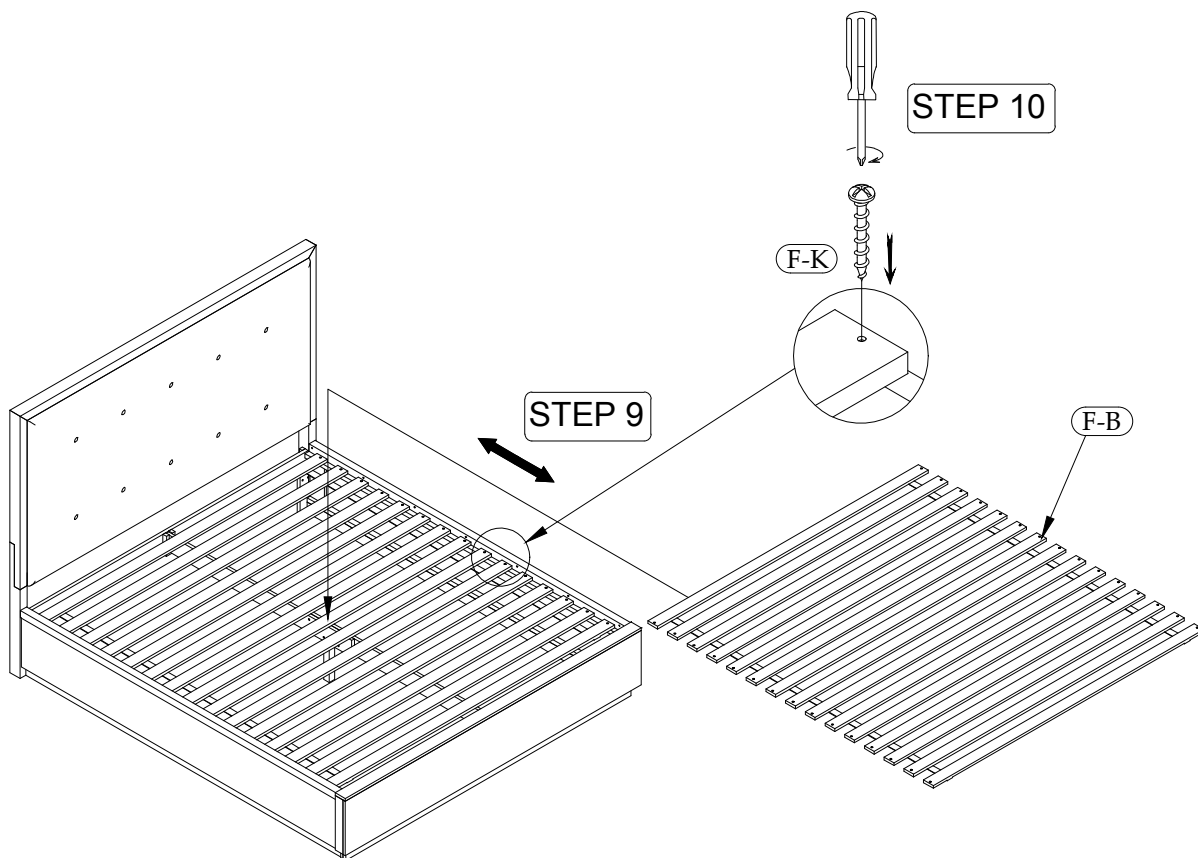


Only use this step for 58082 -- 6/0 Panel Rails 2In


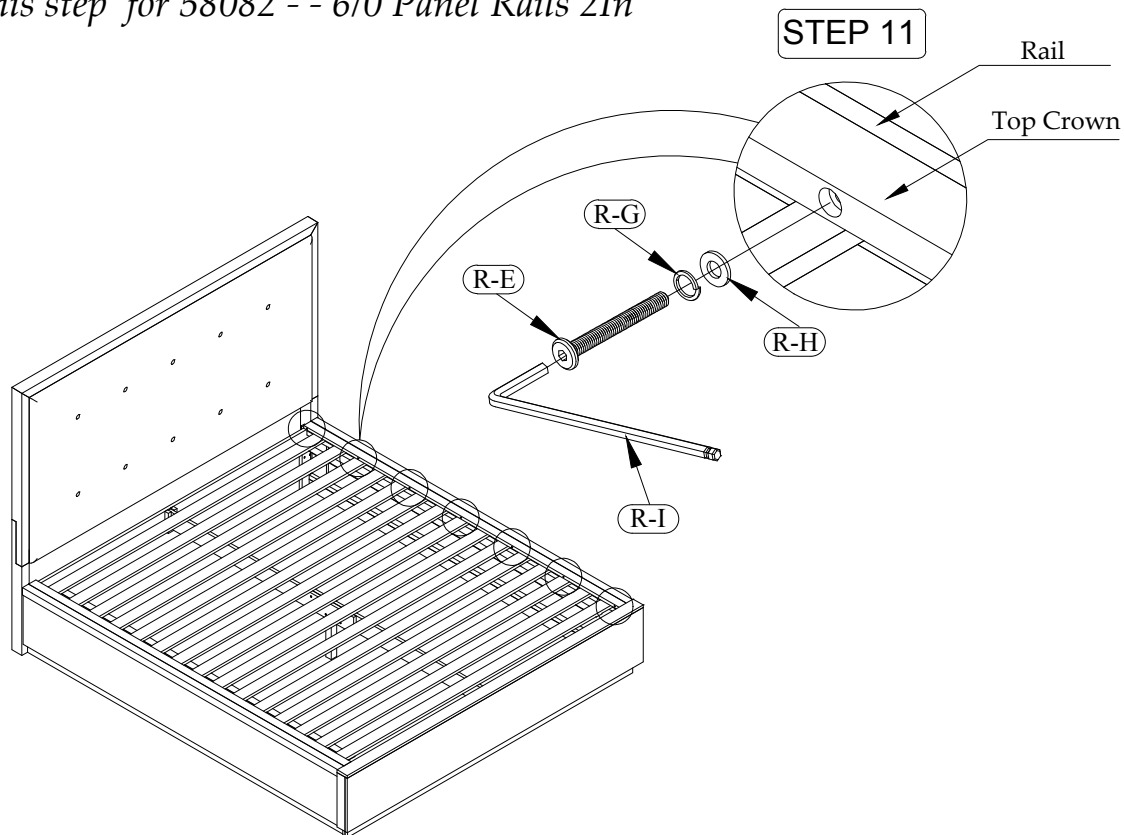



4/6-5/0 Queen Standard Bed
58070 -- 4/6-5/0 Uph/Pnl Headboard
58071 -- 4/6-5/0 Panel Footboard & Slats
58073 -- 5/0-6/6 Storage Rail 1In
58074 -- 5/0-6/6 Panel Rail 1In

STEP 3

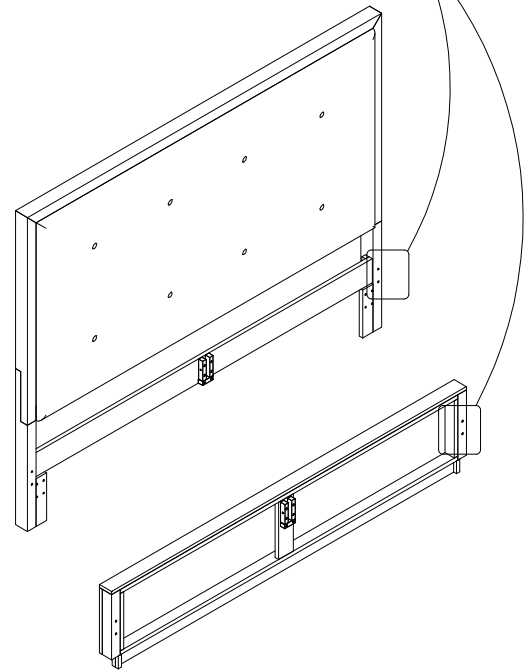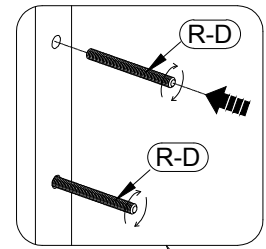


STEP 4

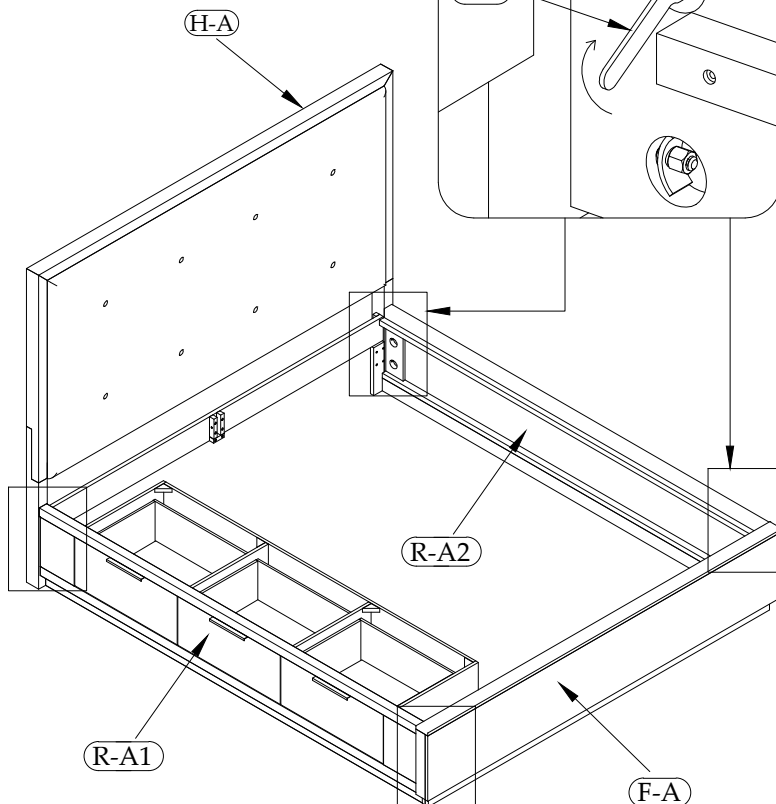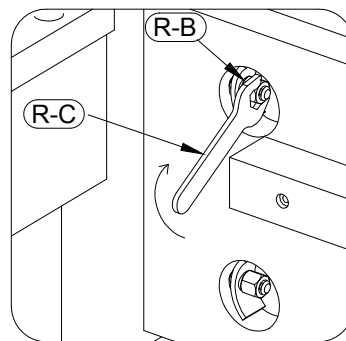


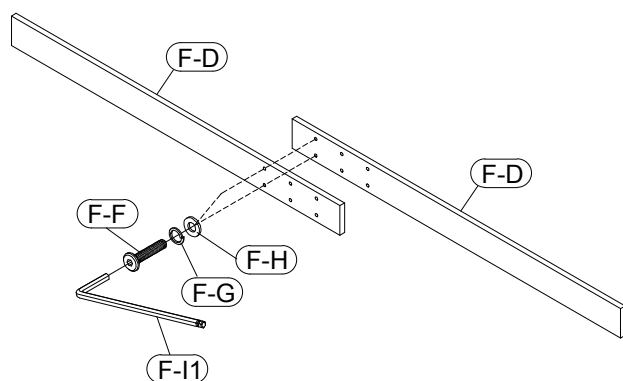


STEP 5

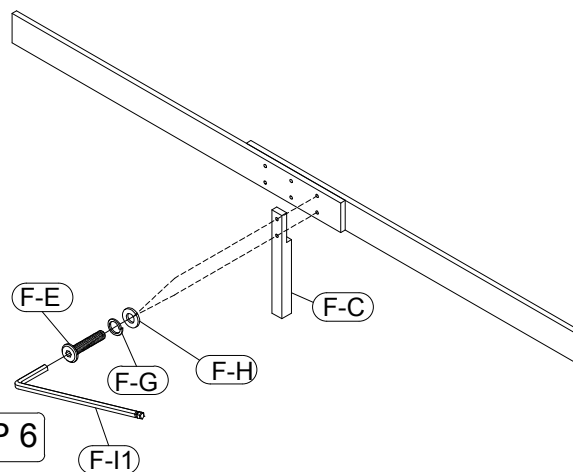

STEP 6

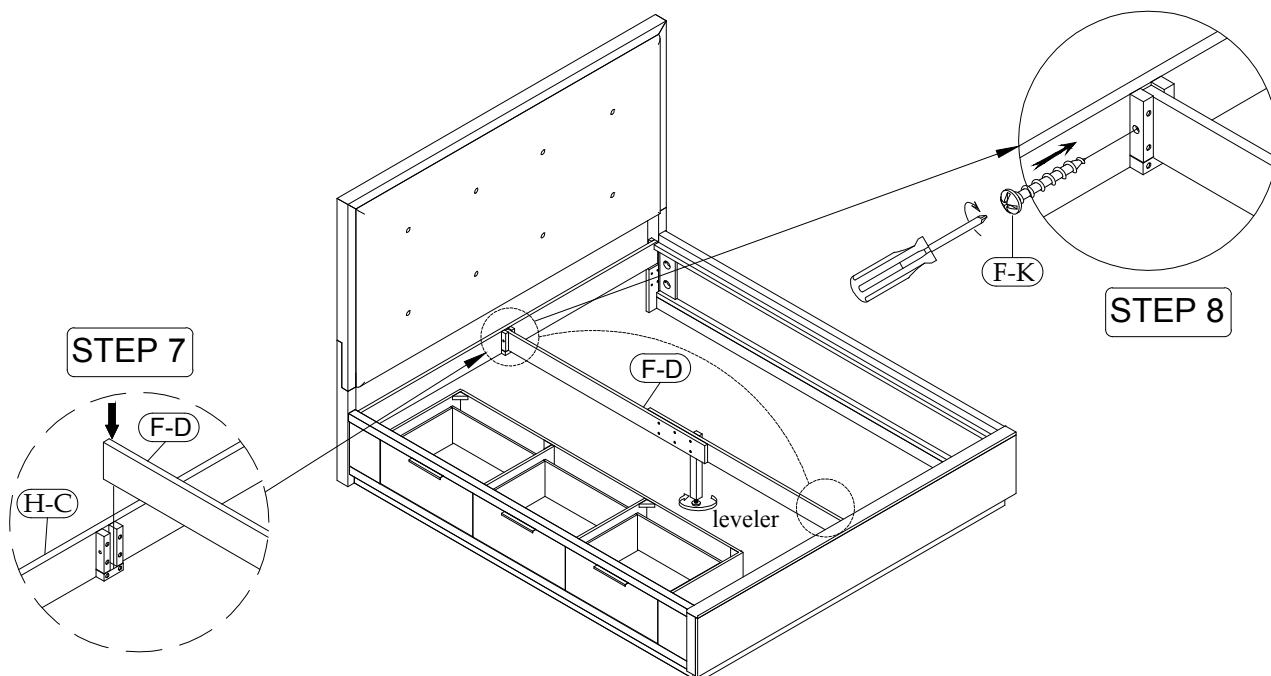

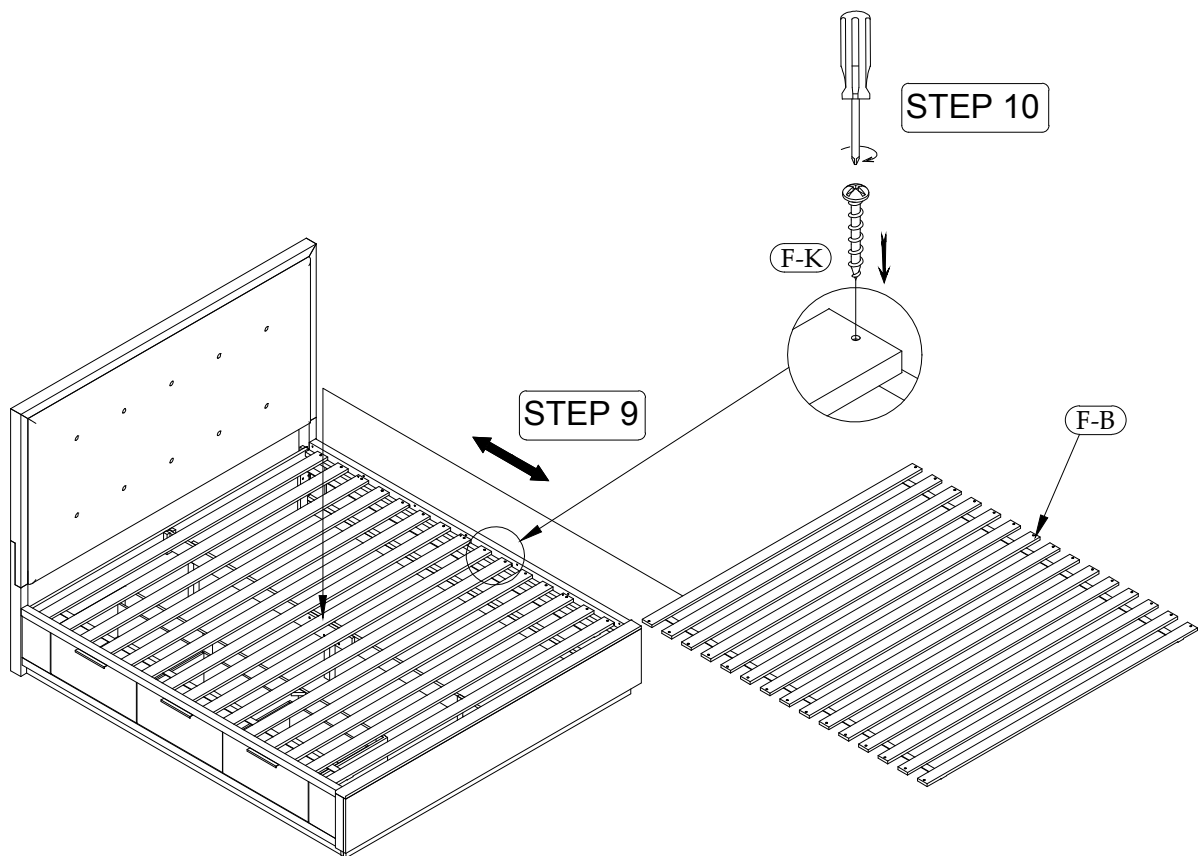

*5/0 Queen Standard Bed
58070 -- 5/0 Panel Headboard*

