



1

1.- FIX BOTH LEGS AS SHOWN IN THE IMAGE, INSERT THE SCREWS FROM THE BACK IN THE HOLES.

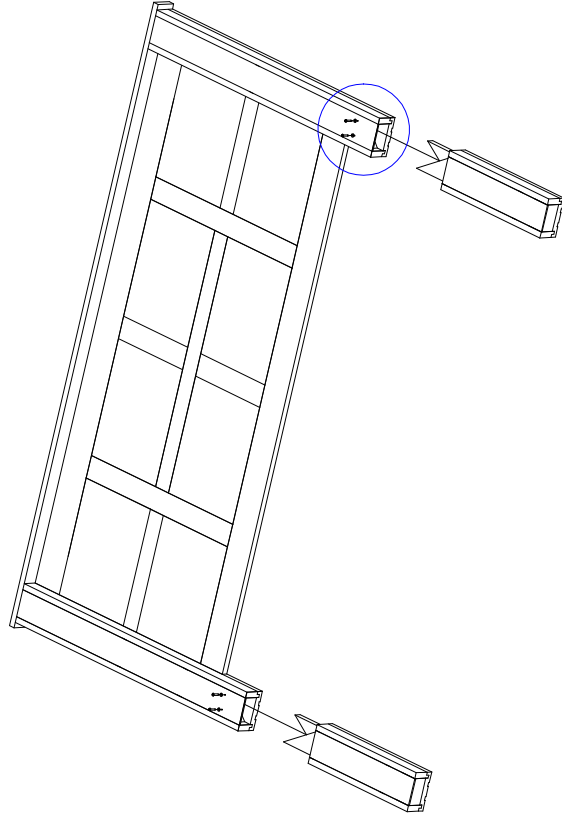

PLAN WASHER $\frac{3}{16}$ X 1"

DRYWALL SCREWS
8 X 2"

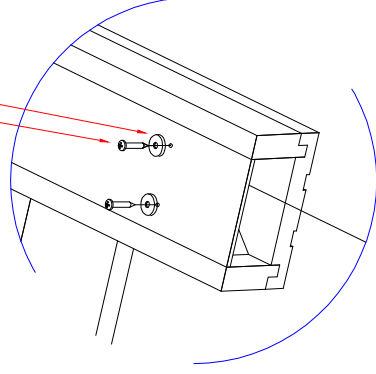

DESCRIPTION	#PZ
PAN HEAD SCREW 8 x 2"	4
PLAN WASHER $\frac{3}{16}$ X 1"	4

ALL IMAGES ARE FOR ILLUSTRATIVE PURPOSES ONLY.
SHOULD NOT BE TAKEN AS REFERENCE POINT.



INTERNATIONAL
FURNITURE DIRECT, LLC

ASSEMBLING INSTRUCTIONS

I-HBD-E004

BY: IFD

CABECERA 567, 867, 686 7852, 690, 1200, 8691, 8681, 7952		
ITEM	DESCRIPTION	#PZ
1PJ018	PIJA PAVONADA 8 x 2"	4
1RON006	RONDANA PLANA $\frac{7}{16}$ X 1"	4