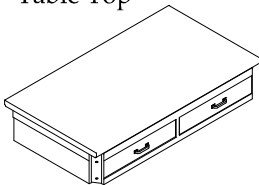

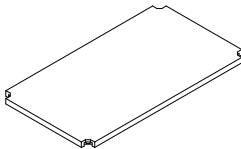
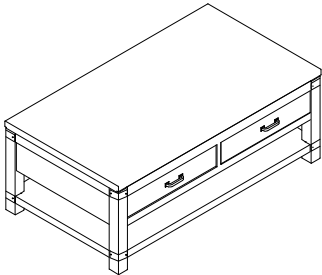

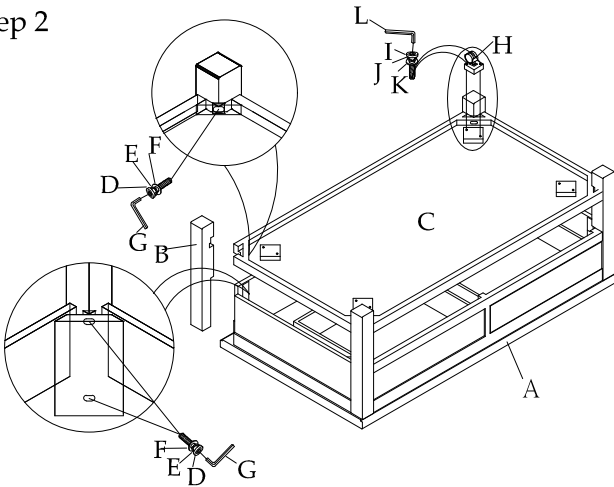


Riverside FURNITURE		Bay Cliff Occasional Tables Assembly Instructions		Page 1 of 1 Made in China	
email: info@riverside-furniture.com					
Components and Hardware List					
Table Top  (A) 1 pc		Legs  (B) 4 pcs		Bottom Shelf  (C) 1 pc	
 37702 RECTANGLE COCKTAIL TABLE					
M5/16" x 2" Allen Head Bolt  (D) 12 pcs.		5/16" Spring Washer  (E) 12 pcs.		5/16" Flat Washer  (F) 12 pcs.	
				5mm Allen Wrench  (G) 1 pc.	
1/4" Spring Washer  (J) 8 pcs.		5/16" x 1-1/2" Allen Head Bolt  (I) 8 pcs.			
1/4" Spring Washer  (J) 8 pcs.		1/4" Spring Washer  (J) 8 pcs.		5mm Allen Wrench  (G) 1 pc.	
1/4" Flat Washer  (K) 8 pcs.		5/16" Flat Washer  (F) 12 pcs.		4mm Allen Wrench  (L) 1 pc.	
				Wood Block with Caster  (H) 4 pcs.	
				5mm x 4" Wrench  (M) 1 pc.	
				4mm x 4" Wrench  (N) 1 pc.	
Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.					
Step 1: Remove both drawers from the Table Top and lay them aside. Place the Table Top (A) upside down on a soft non-abrasive surface.					
Step 2: Attach the Legs (B) to the underneath side of the Table Top with the 5/16" x 2" long Bolts (D), Spring Washers (E) and Flat Washers (F). Do not fully install Bolts until after Shelf is assembled. Attach the Bottom Shelf (C) to the Legs with the same Bolts and Washers as in previous Step. Tighten all Bolts using the Allen Wrench (G).					
<i>Note: If the straight Wrenches (M & N) are used in a power driver, use care to prevent Bolts from being over tightened and possibly damaging parts.</i>					
If the casters will be used: Attach the Wood Blocks (H) to the underneath side of the Bottom Shelf with the 1/4" x 1-1/2" long Bolts (I), Spring Washers (J) and Flat Washers (K). Tighten all Bolts using the Allen Wrench (L).					
To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring.					
Step 3: Carefully set the Table upright and reinstall the drawers back into the Table Top.					
Step 2 			Step 3 