




Z-brackets are designed to fit into the rear channel on supported speakers to enable easy wall mounting

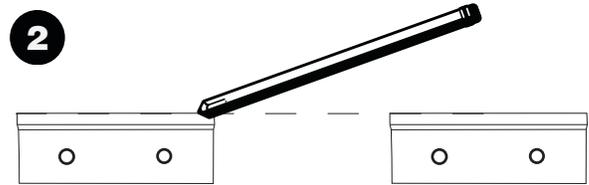


After choosing an installation area (securing brackets to wall studs is recommended), level and mark both bracket heights, so they are level to each other.

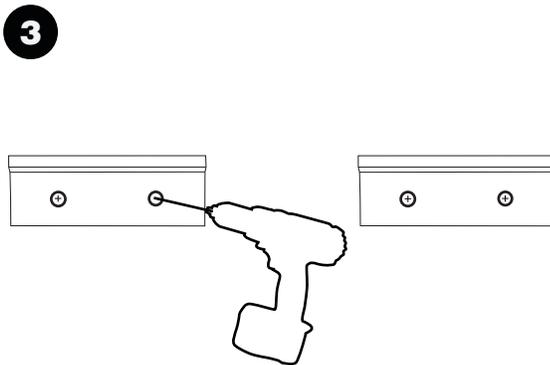

Secure the brackets to the wall.

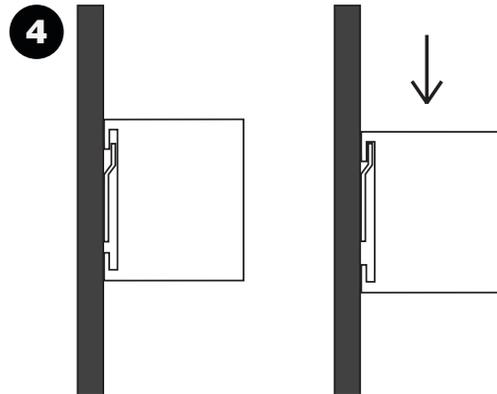

Hang speaker on the wall and ensure that it is level and at the appropriate height.

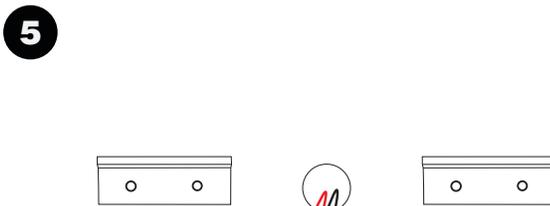

(SoundBar shown)

If the speaker is at an acceptable height/level, then wire and hang the speaker and attach the grille to complete the installation.