

ASSEMBLY INSTRUCTION

Page: 1 of 1



GLOBAL FURNITURE USA

MODEL : 9842 LANDO






DESCRIPTION : LANDO-SILVER-QB-HB W/LED
: LANDO-SILVER-KB-HB W/LED


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	NAME	PART	QTY
A	Headboard		1pc
B	Headboard Post - (L/R)		2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key		1pc
2	JCBC M6 x 40mm		6pcs
3	M6 Spring washer		6pcs
4	M6 Flat washer		6pcs
5	AC/DC Adapter		1pc
HARDWARE LOCATED IN HEADBOARD BOX			

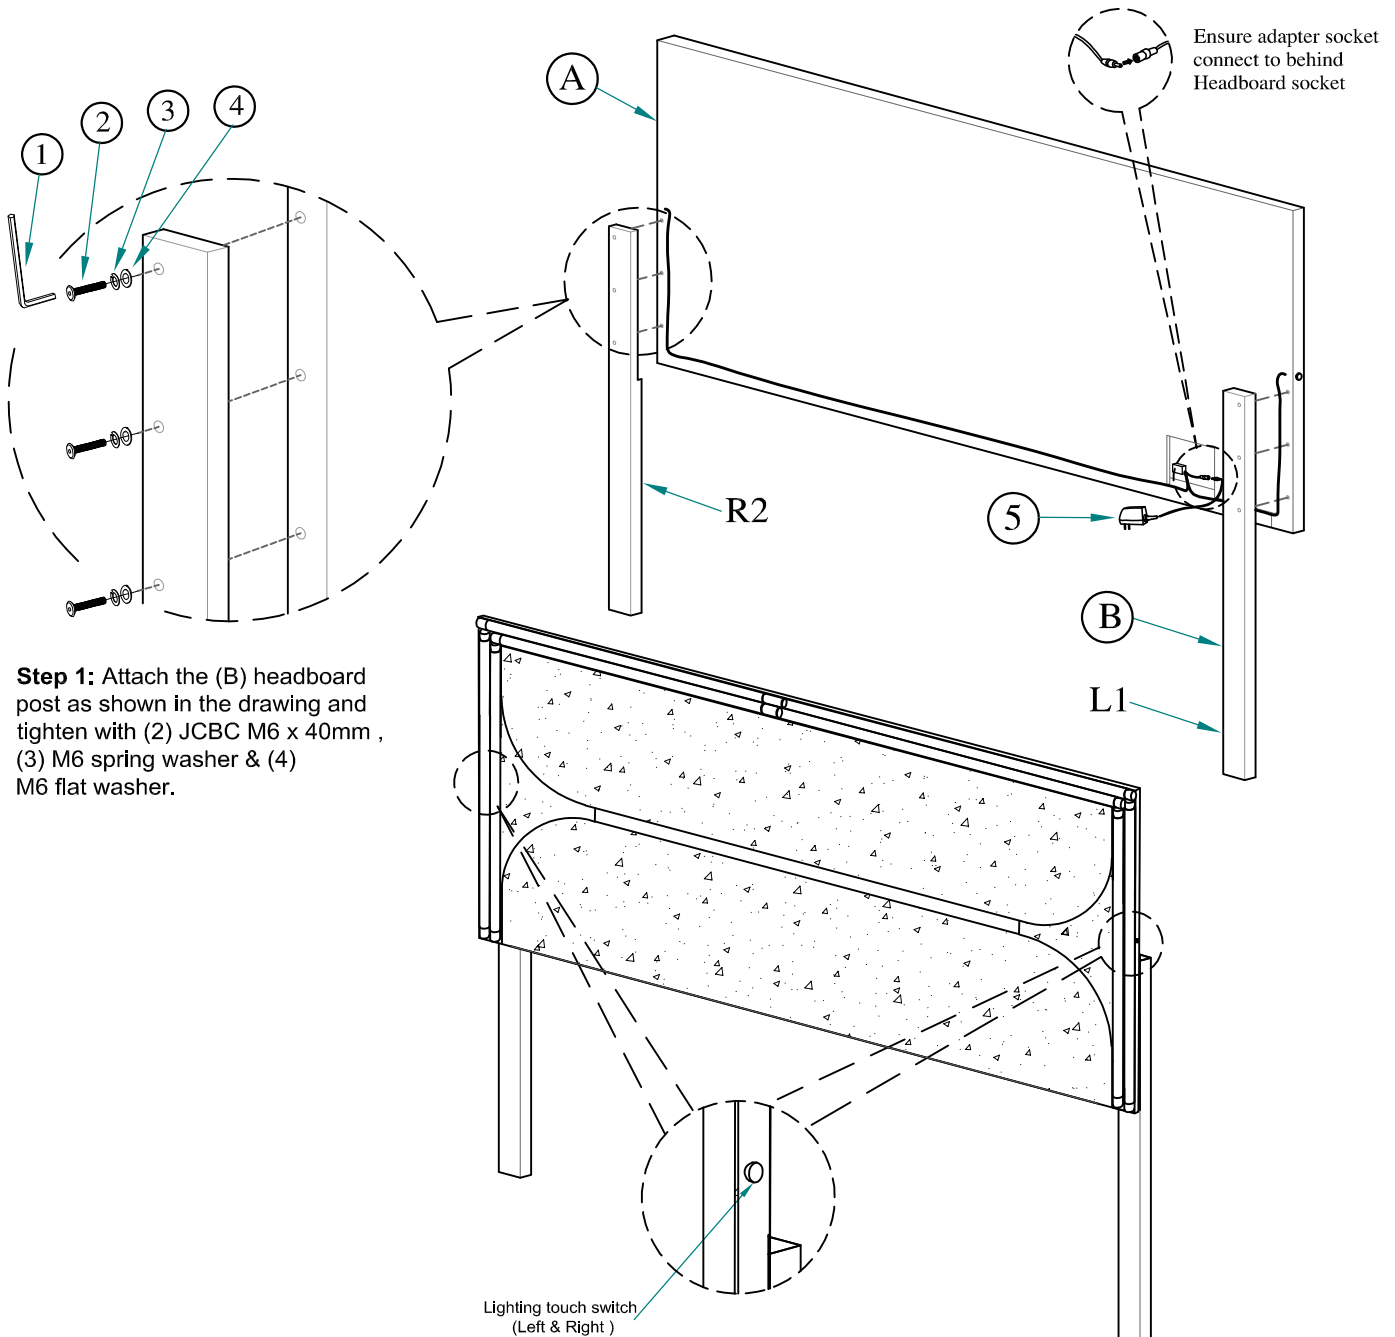

ASSEMBLY INSTRUCTION

Page: 1 of 2




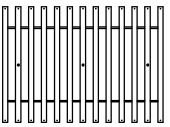



GLOBAL FURNITURE USA

MODEL : 9842 LANDO







DESCRIPTION : LANDO-SILVER-KB-HB W/LED/LANDO-SILVER-KB-FB W/FULL SLATS/
LANDO-SILVER-QB/KB-SR


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	NAME	PART	QTY
A	Headboard		1pc
B	Footboard		1pc
C	Side Rail		2pcs
D	Roll Slat		13pcs
E	Slat Support Leg		3pcs
F	Center Vertical Slat		1pc
G	Acrylic Bun Foot		2pcs



HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key 4mm		1pc
2	JCBC M6 x 60mm		3pcs
3	M6 Spring washer		3pcs
4	M6 Flat washer		3pcs
5	Screw 32mm		26pcs
6	Adjustable Leveller		3pcs
HARDWARE LOCATED IN FOOTBOARD BOX			

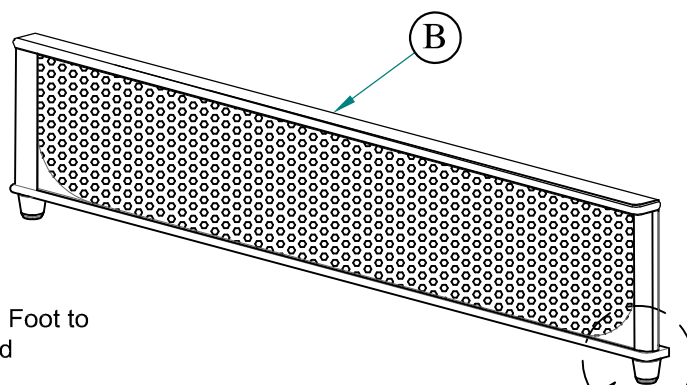


Step 1:

Secure the (G) Acrylic Bun Foot to the bottom of (B) Footboard as a diagram shown.

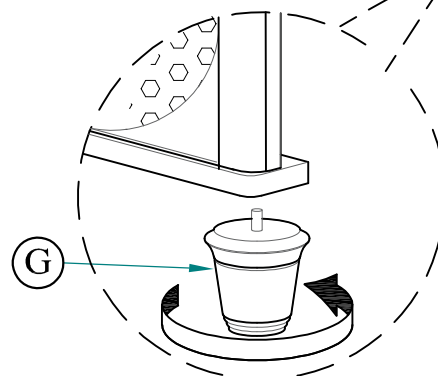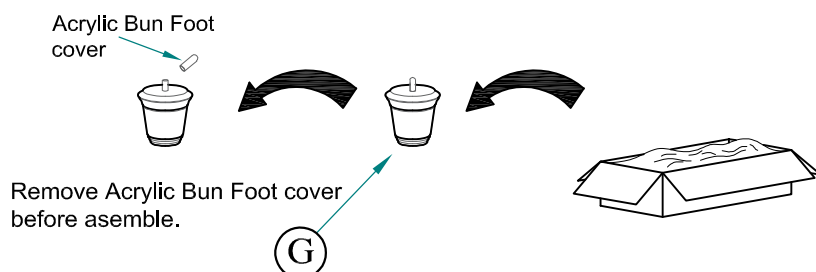


Step 2 :



Attach the (C) Side Rail to the
(A) Headboard & (B) Footboard.

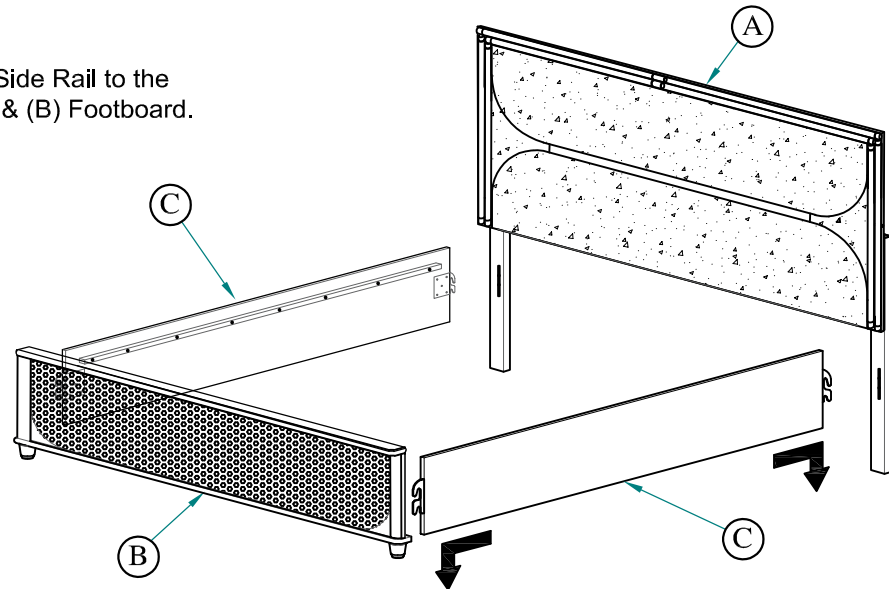**Step 3 :**

Secure the (D) Roll Slat using the
(5) Screw 32mm provided.

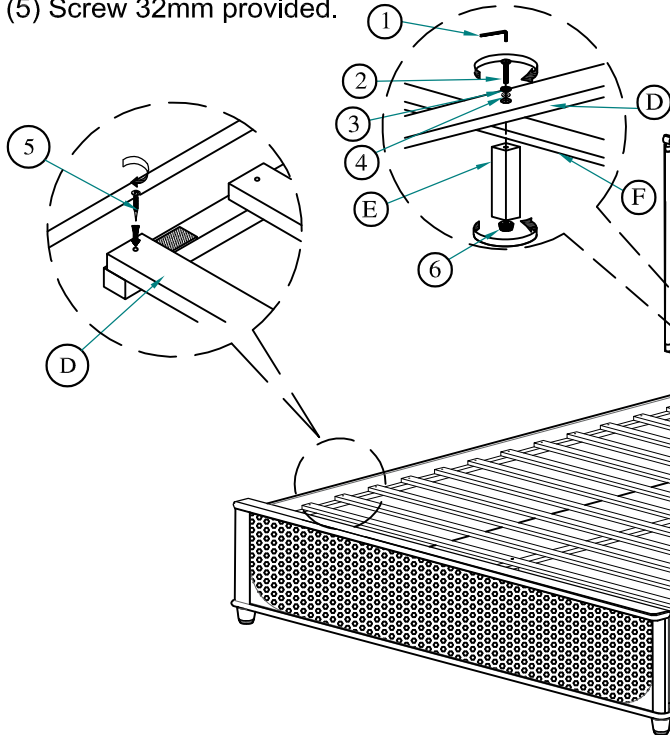**Step 4 :**

Attach (E) Slat Support Leg & (F) Center Vertical Slat
to the bottom of (D) Roll Slat using (2) JCBC M6 x 60mm &
(3) M6 Spring Washer & (4) M6 Flat washer .
Attach the (6) Adjustable leveller and adjust it
to level the bed with the floor.

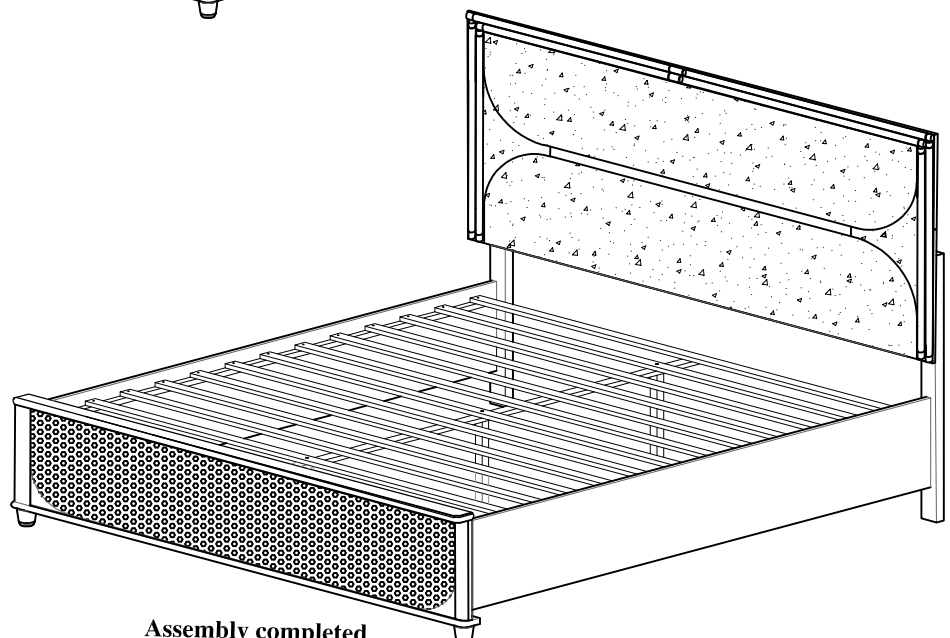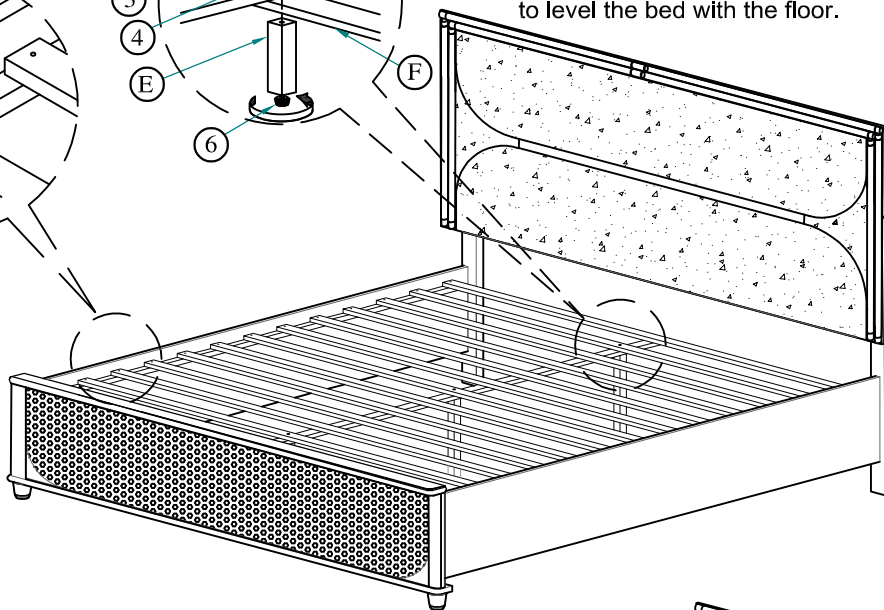

Assembly completed

ASSEMBLY INSTRUCTION

Page: 1 of 2




GLOBAL FURNITURE USA

MODEL : 9842 LANDO





DESCRIPTION : LANDO-SILVER-NS

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	DRAWING	DESCRIPTION	QTY
A		NightStand	1pc
B		Acrylic Bun Foot	2pcs
C		Metal Leg	2pcs


HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 4mm		1pc
2	JCBC M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs


Acrylic Bun Foot cover

Remove Acrylic Bun Foot cover before assemble.


Remove Acrylic Bun Foot carton located in the drawer of the casegood. Remove and unwrap each foot.

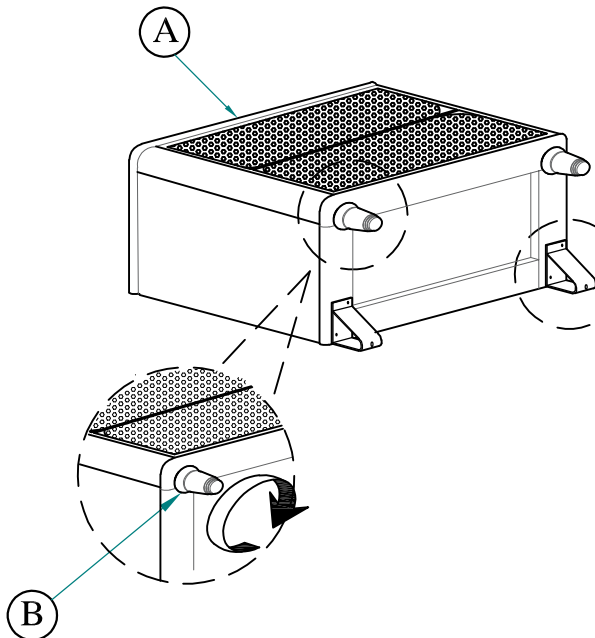

Step 1: Secure the (B) Acrylic Bun Foot to the bottom of (A) Nightstand as a diagram shown.

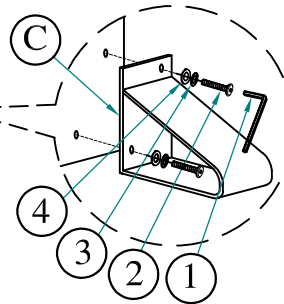





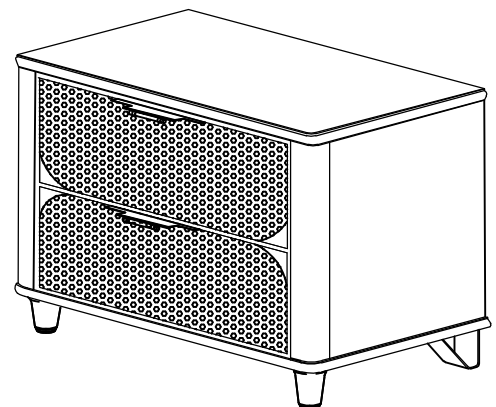
Step 2 : Secure the (C) Metal Leg to the bottom of (A) Nightstand tighten using (2) JCBC M6 x 20mm, (3) M6 Spring Washer & (4) M6 Flat Washer as a diagram shown.



Assembly completed

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

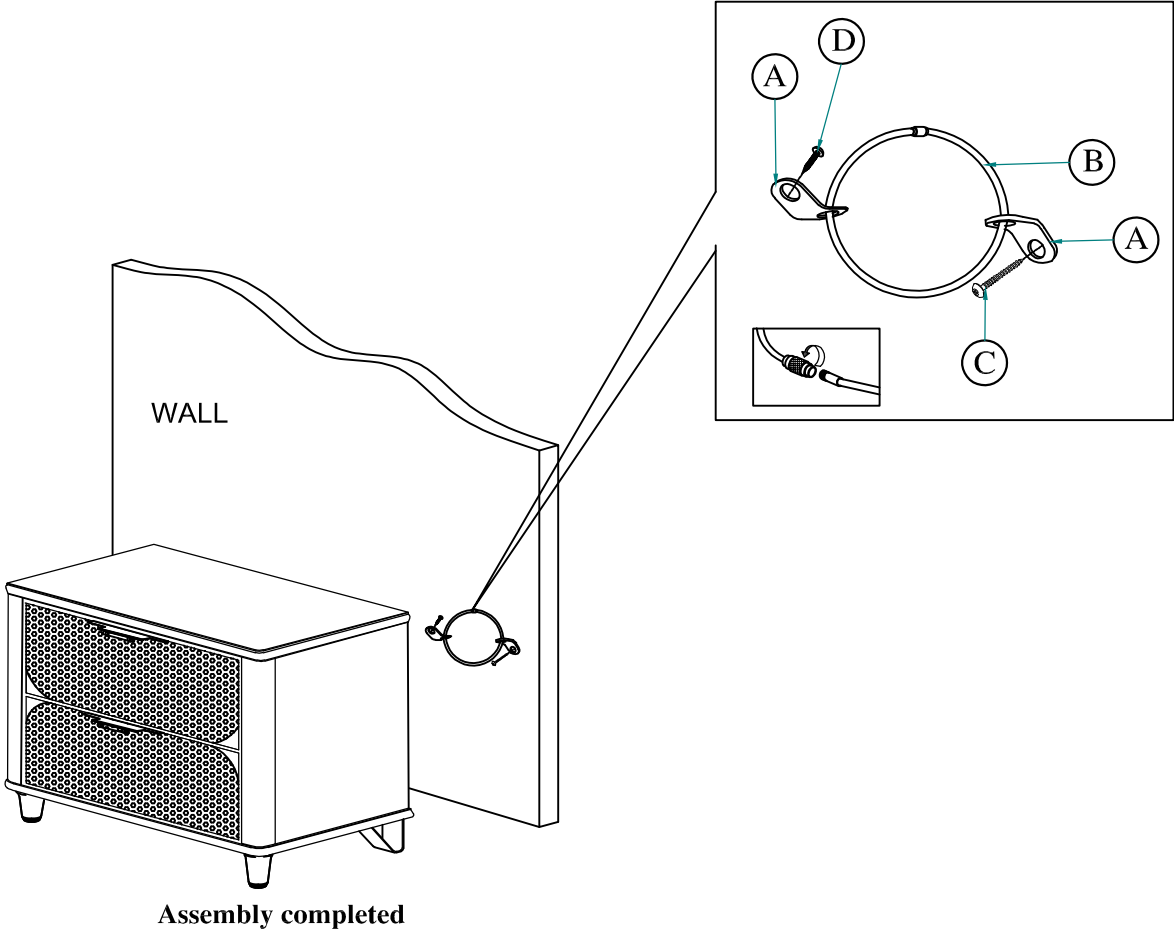

ASSEMBLY INSTRUCTION

Page: 1 of 2





GLOBAL FURNITURE USA

MODEL : 9842 LANDO





DESCRIPTION : LANDO-SILVER-DR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	DRAWING	DESCRIPTION	QTY
A		Dresser	1pc
B		Acrylic Bun Foot	2pcs
C		Metal Leg	2pcs
D		Center Leg	1pc


HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 4mm		1pc
2	JCBC M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs

Acrylic Bun Foot cover

Remove Acrylic Bun Foot cover before assemble.

Remove Acrylic Bun Foot carton located in the drawer of the casegood. Remove and unwrap each foot.

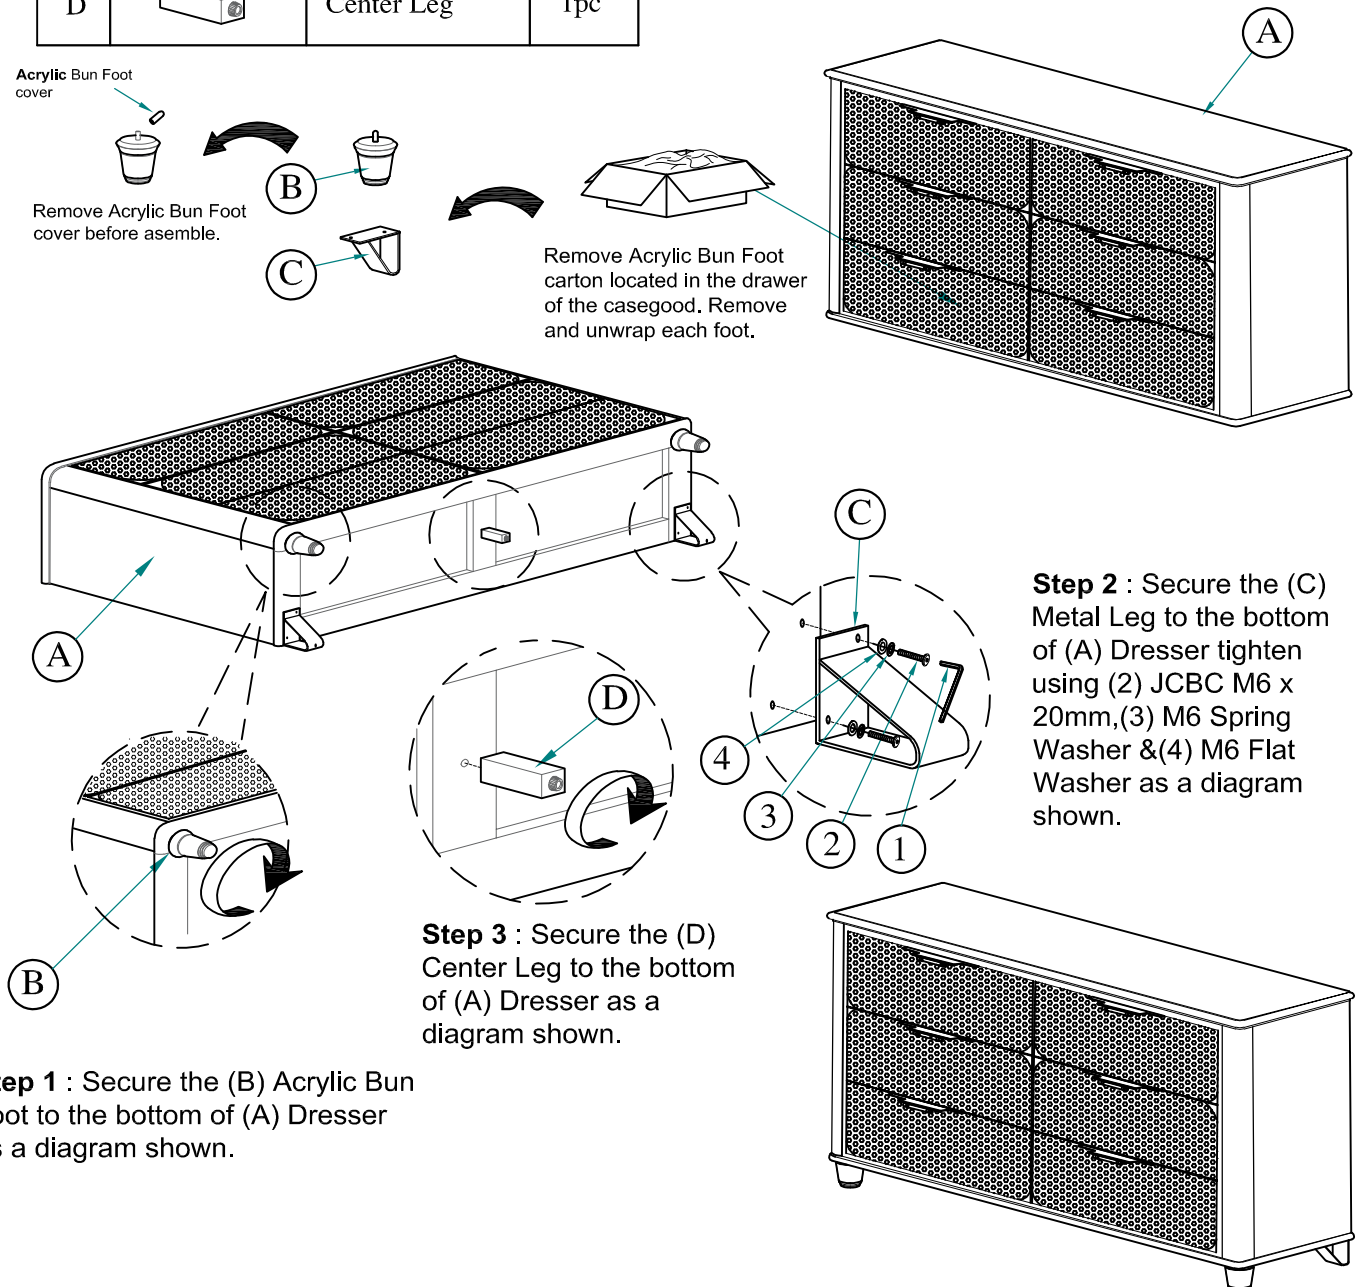





Step 1 : Secure the (B) Acrylic Bun Foot to the bottom of (A) Dresser as a diagram shown.



Step 3 : Secure the (D) Center Leg to the bottom of (A) Dresser as a diagram shown.

Step 2 : Secure the (C) Metal Leg to the bottom of (A) Dresser tighten using (2) JCBC M6 x 20mm, (3) M6 Spring Washer & (4) M6 Flat Washer as a diagram shown.

Assembly completed

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

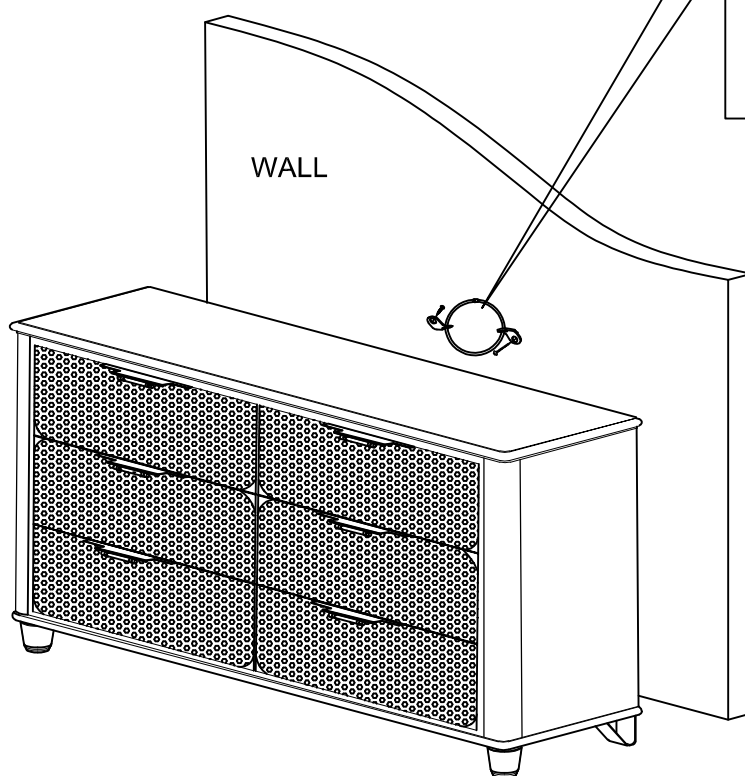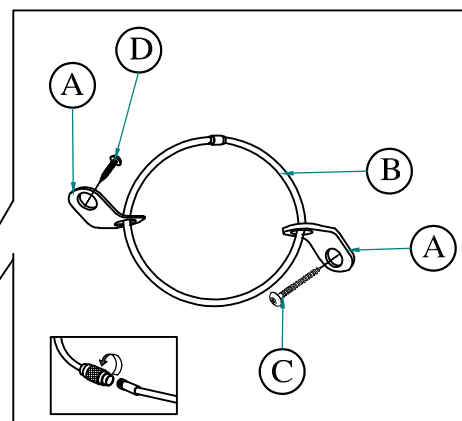

Assembly completed

ASSEMBLY INSTRUCTION

Page: 1 of 1




GLOBAL FURNITURE USA

MODEL : 9842 LANDO






DESCRIPTION : LANDO-SILVER-DR/LANDO-SILVER-MR W/LED

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.


PART LIST#

NO	NAME	PART	QTY
A	Dresser		1pc
B	Mirror		1pc
C	Mirror Support		2pcs

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen key 4mm		1pc
2	JCBC M6 x 35mm		8pcs
3	M6 Spring washer		8pcs
4	1/4" Flat washer		8pcs
5	AC/DC Adapter		1pc

HARDWARE LOCATED IN MIRROR BOX

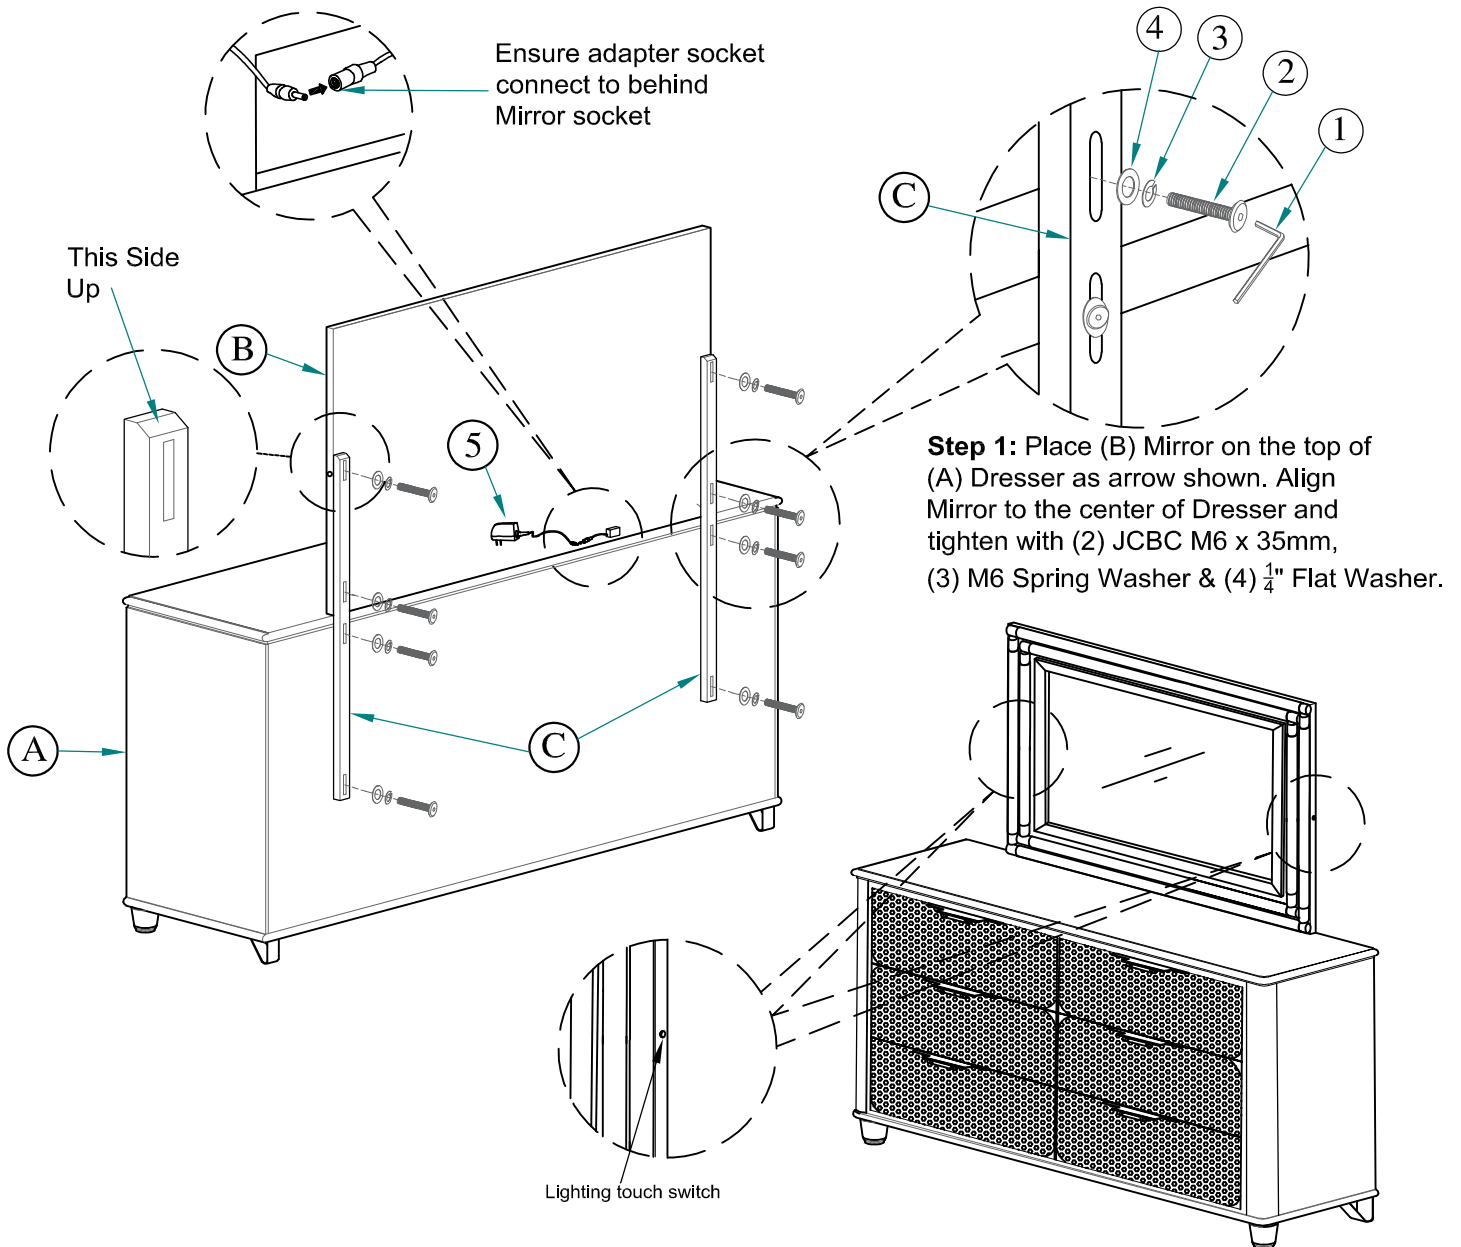

Assembly completed.

ASSEMBLY INSTRUCTION

Page: 1 of 2




GLOBAL FURNITURE USA

MODEL : 9842 LANDO





DESCRIPTION : LANDO-SILVER-CH


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.

PART LIST#

NO	DRAWING	DESCRIPTION	QTY
A		Chest	1pc
B		Acrylic Bun Foot	2pcs
C		Metal Leg	2pcs



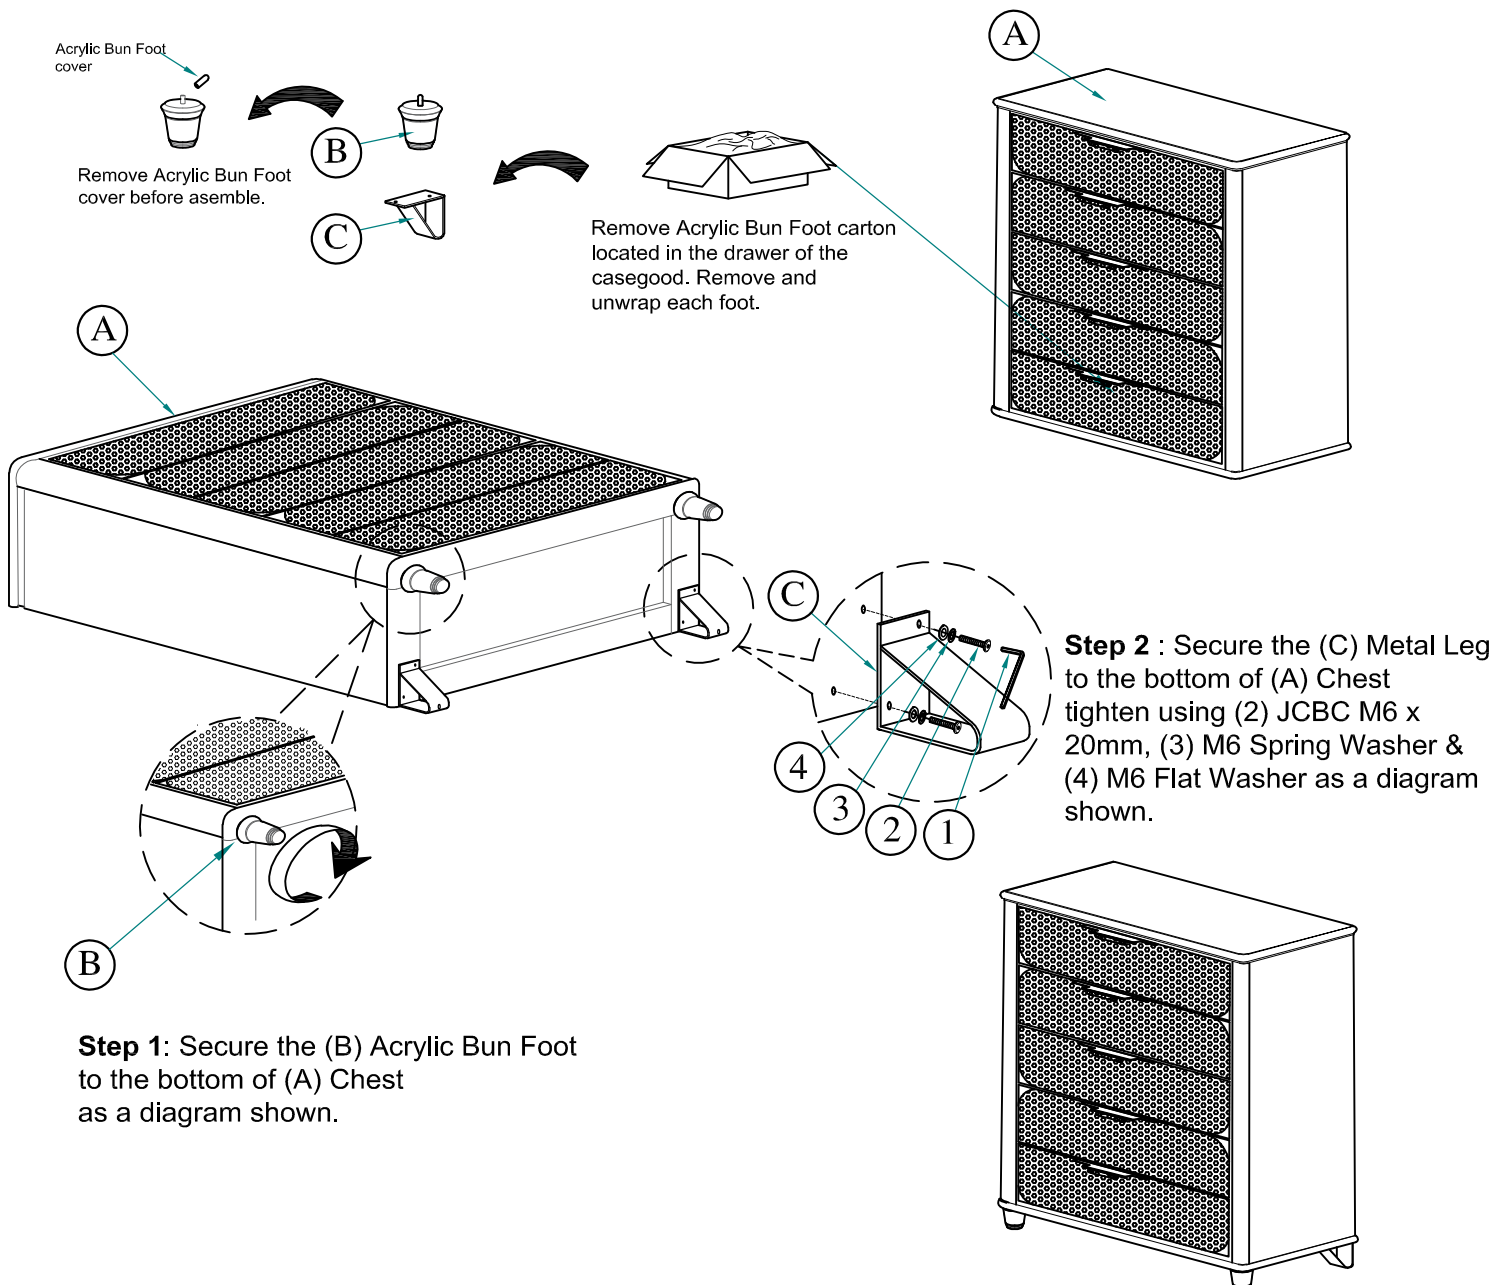

HARDWARE LIST#

NO	NAME	PART	QTY
1	Allen Key 4mm		1pc
2	JCBC M6 x 20mm		4pcs
3	M6 Spring Washer		4pcs
4	M6 Flat Washer		4pcs



Assembly completed

HARDWARE LIST (ANTI TIPPING)

NO	NAME	PART	QTY
A	Bracket		2pcs
B	Tie Wrap		1pc
C	Long Screw		1pc
D	Short Screw		1pc

