


STEP 1

ONCE THE SCREWS ARE TIGHTENED, PLACE THE OTHER LEG AND REPEAT THE PROCESS.

WITH THE HELP OF SOMEONE ELSE, PLACE THE SIDE LEG, ALIGNING THE UPPER CROSSBAR SCREWS AND TIGHTEN AS SHOWN IN DETAIL A, B AND B1. THEN REPEAT THE SAME ACTION WITH THE LOWER CROSSBAR.

STEP 2


ONCE THE SCREWS ARE TIGHTENED, PLACE THE OTHER LEG AND REPEAT THE TIGHTENING PROCESS.

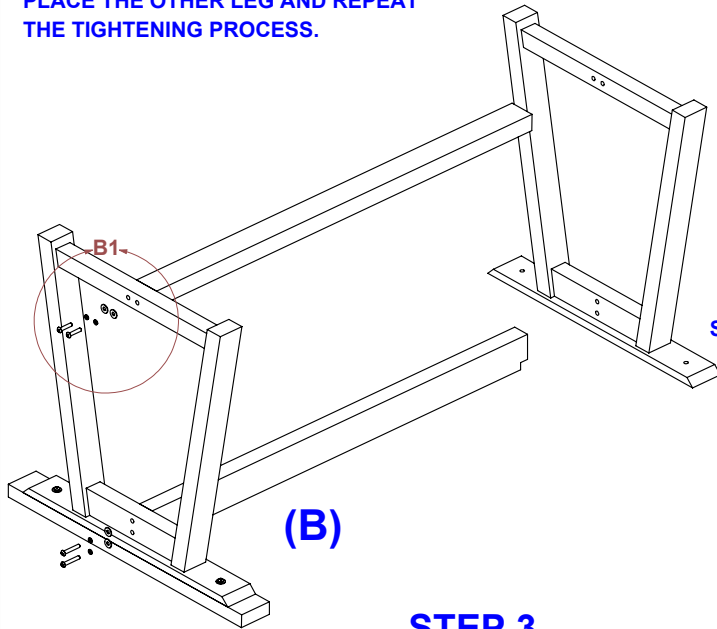

FLAT WASHER 5/16 X 1"


LOCK WASHER 5/16"

SOCKET ALLEN BUTTON
HEAD 5/16 x 2-1/2"

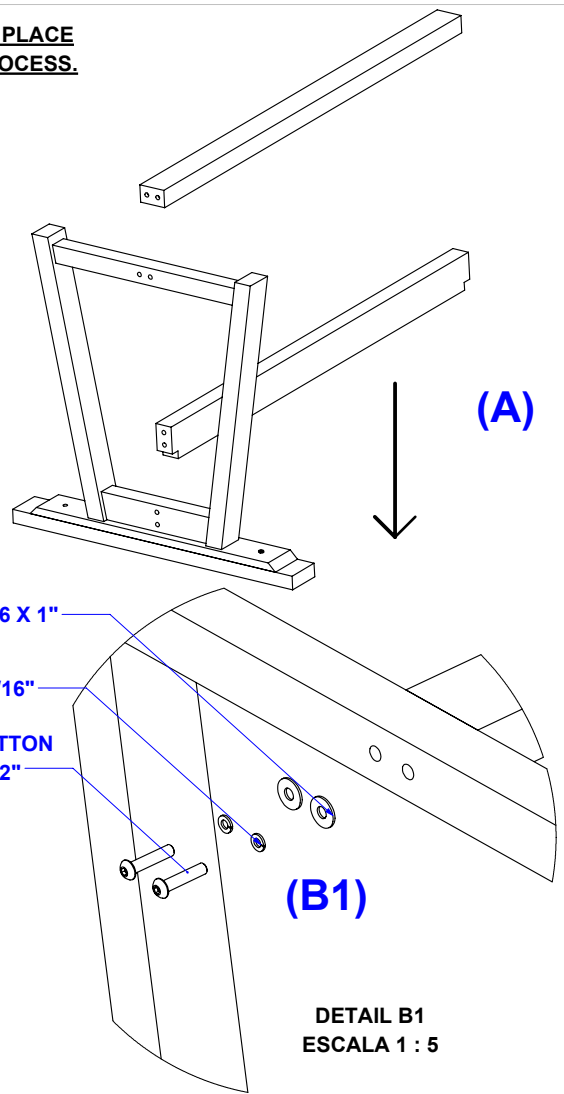

STEP 3


WHEN YOUR BASE IS TIGHTENED, TURN THE TOP ON A FLAT SURFACE, ALIGN THE BASE AS SHOWN IN FIGURE C AND C1. THEN TIGHTEN THE SOCKET ALLEN BUTTON

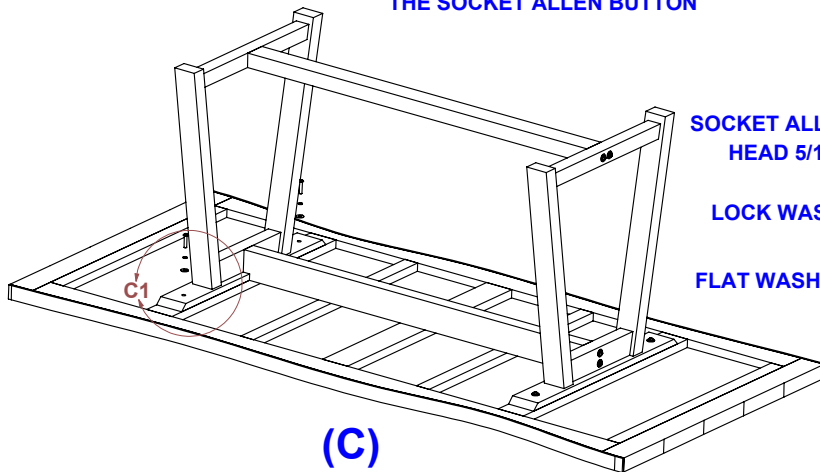

SOCKET ALLEN BUTTON
HEAD 5/16 x 1-1/2"

LOCK WASHER 5/16"

FLAT WASHER 5/16 X 1"

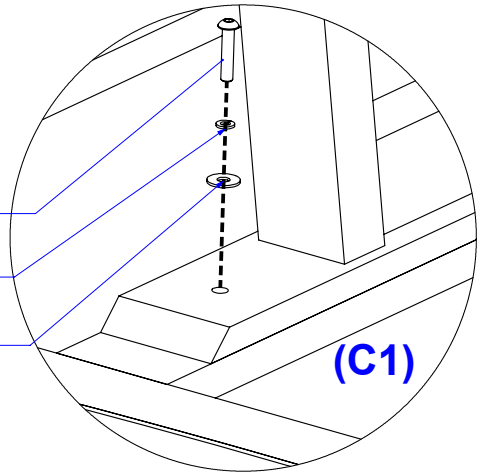

STEP 4

READY TO PLACE IN THE DESIRED LOCATION.



ASSEMBLY
INSTRUCTIONS

I-TBL-E029

DESCRIPTION

SOCKET ALLEN BUTTON HEAD 5/16 x 2-1/2"

SOCKET ALLEN BUTTON HEAD 5/16 x 1-1/2"

LOCK WASHER 5/16"

FLAT WASHER 5/16 X 1"

AYEN KEY 3/16"

#

8

4

12

12

1