ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL# 73172 SIDE CHAIR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact you local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) nee ded.

*** Do not fully tighten screws until fully assemble ***

| COMPONENT PARTS | | | |
|-----------------|-----------|----|----------|
| DECERPTION | PART NAME | | QTY(PCS) |
| 1) | BACK&SEAT | | 1 |
| 2 | LEG | 00 | 4 |

HARDWARE REQUIRED:






BOLT Ø5/16*2-1/2" - 8PCS






ALLEN KEY 5MM - 1PC



Attention:

How to Assemble:

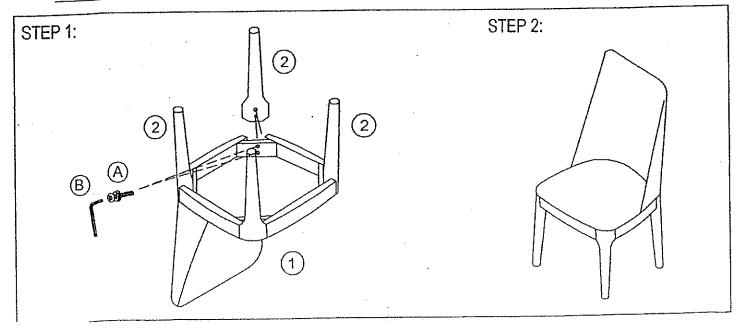

^{***} Mattreses not included.

^{***} Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to odering replacements.