



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

224330Q (B1-B3)
Queen Bed

ITEM: 224330Q (B1-B3)



ASSEMBLY INSTRUCTIONS


ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

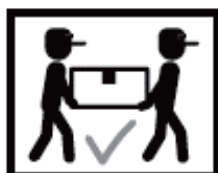

ASSEMBLY TIME

25 MINUTES

PART IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL

1PC

B LEFT HEADBOARD LEG


1PC

C RIGHT HEADBOARD LEG

1PC

D HEADBOARD BOTTOM RAIL


1PC

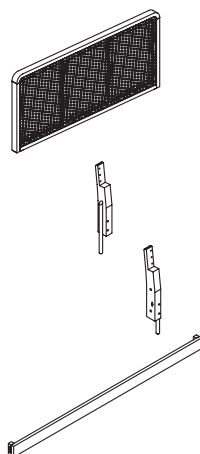

B2 (BOX 2)

E FOOTBOARD

1PC

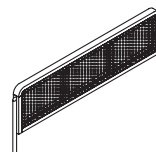

B3 (BOX 3)

F BED RAIL


2PCS

G BED SLAT

4PCS

H BED SLAT SUPPORT WITH LEVELER

4PCS

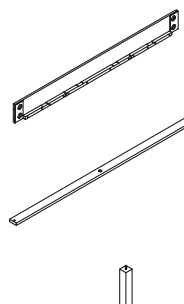


HB 224330Q(B1) *FROM BOX 1
HEADBOARD COMPLETE

1PC

E 224330Q(B2) *FROM BOX 2
FOOTBOARD*

1PC

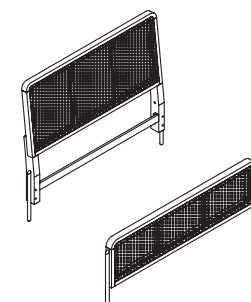

ITEM: 224330Q (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.





WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 224330Q (B1)

1	BOLT (5/16" x 45mm - BLK)		8PCS
2	LOCK WASHER (1.6 x 14mm - BLK)		8PCS
3	FLAT WASHER (1 x 18mm - BLK)		8PCS
4	ALLEN WRENCH (M5 x 65mm - BLK)		1PC
5	WOOD DOWEL (10 x 30mm - BRW)		4PCS

Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 224330Q (B3)

6	FLAT HEAD SCREW (8 x 38mm - BLK)		8PCS
7	THREADED BOLT (5/16" x 80mm - WHT)		8PCS
8	HEX NUT (5/16" x 100mm - WHT)		8PCS
9	HALF ROUND NUT (22 x 17 x 10mm - WHT)		8PCS
10	WRENCH (13mm - WHT)		1PC


NOTE :

Philips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: 224330Q (B1-B3)

ASSEMBLY INSTRUCTIONS

STEP 1

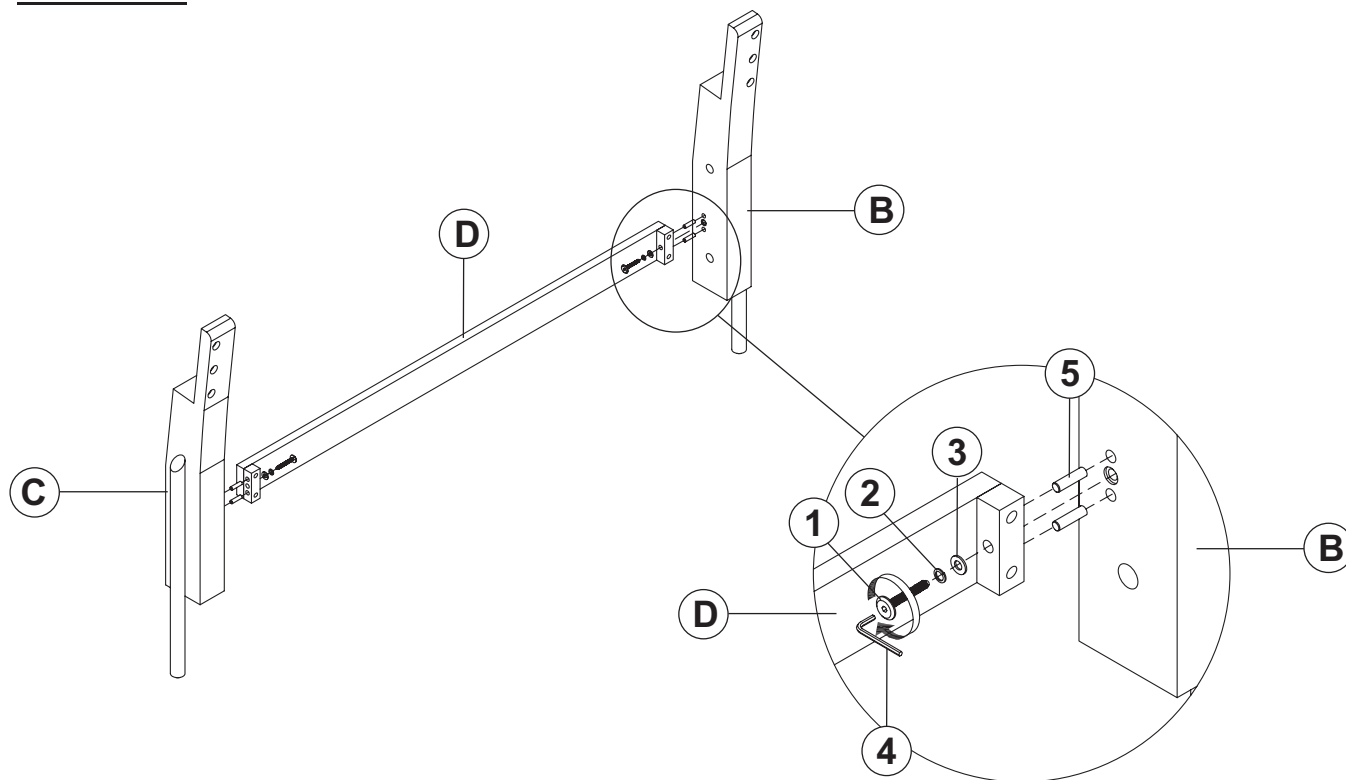

STEP 2

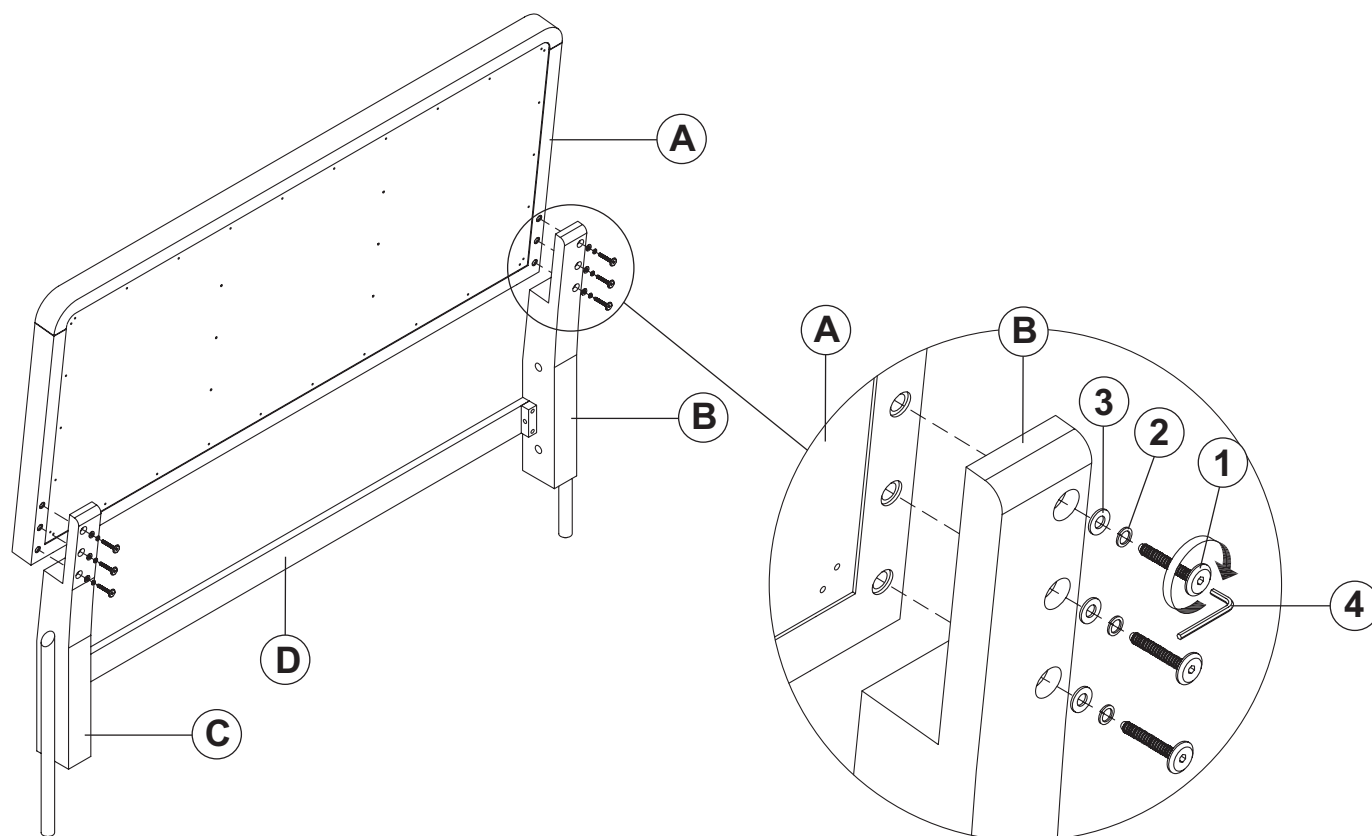


ITEM: **224330Q (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 3

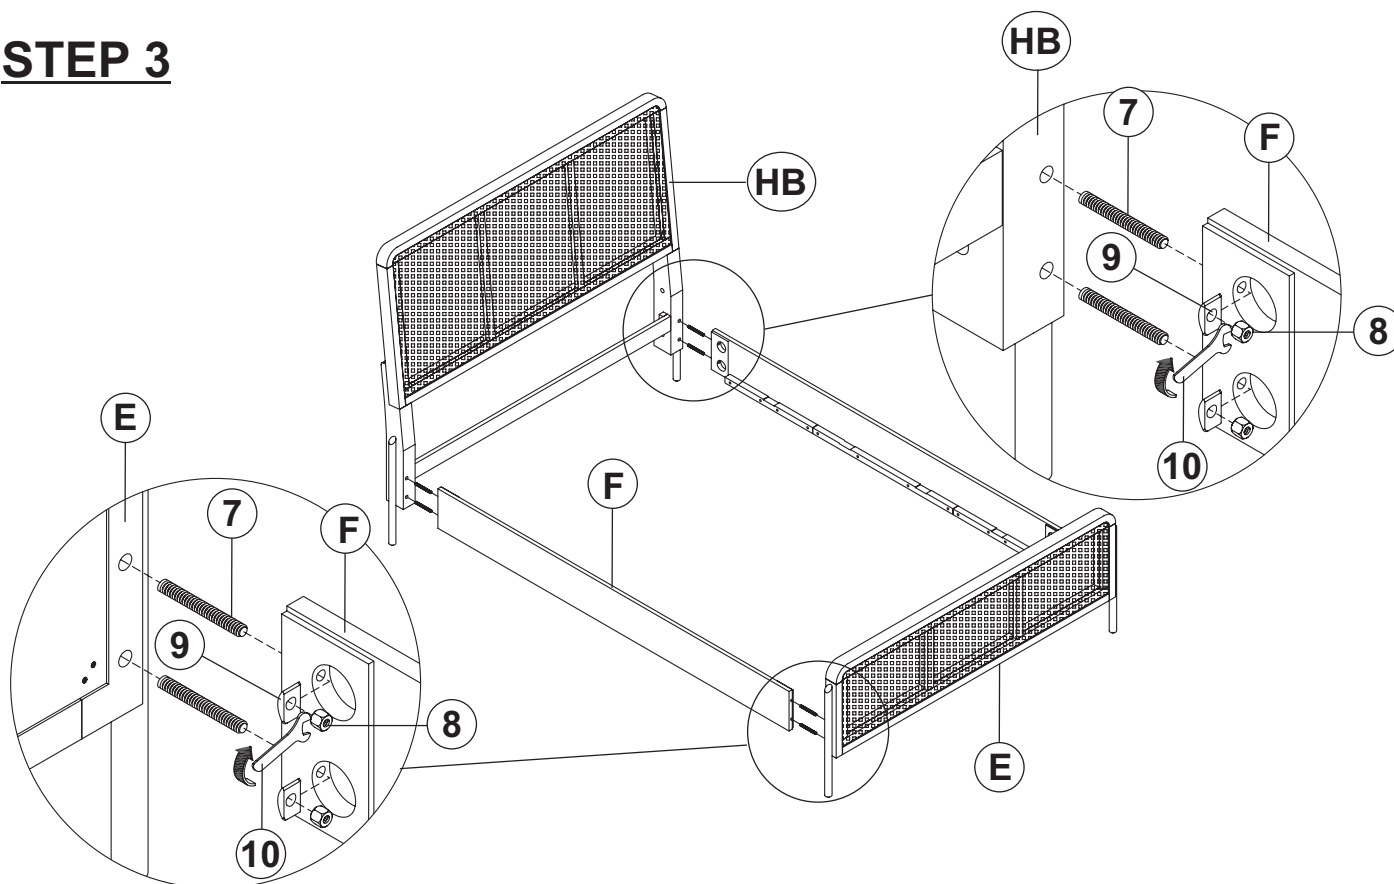

STEP 4

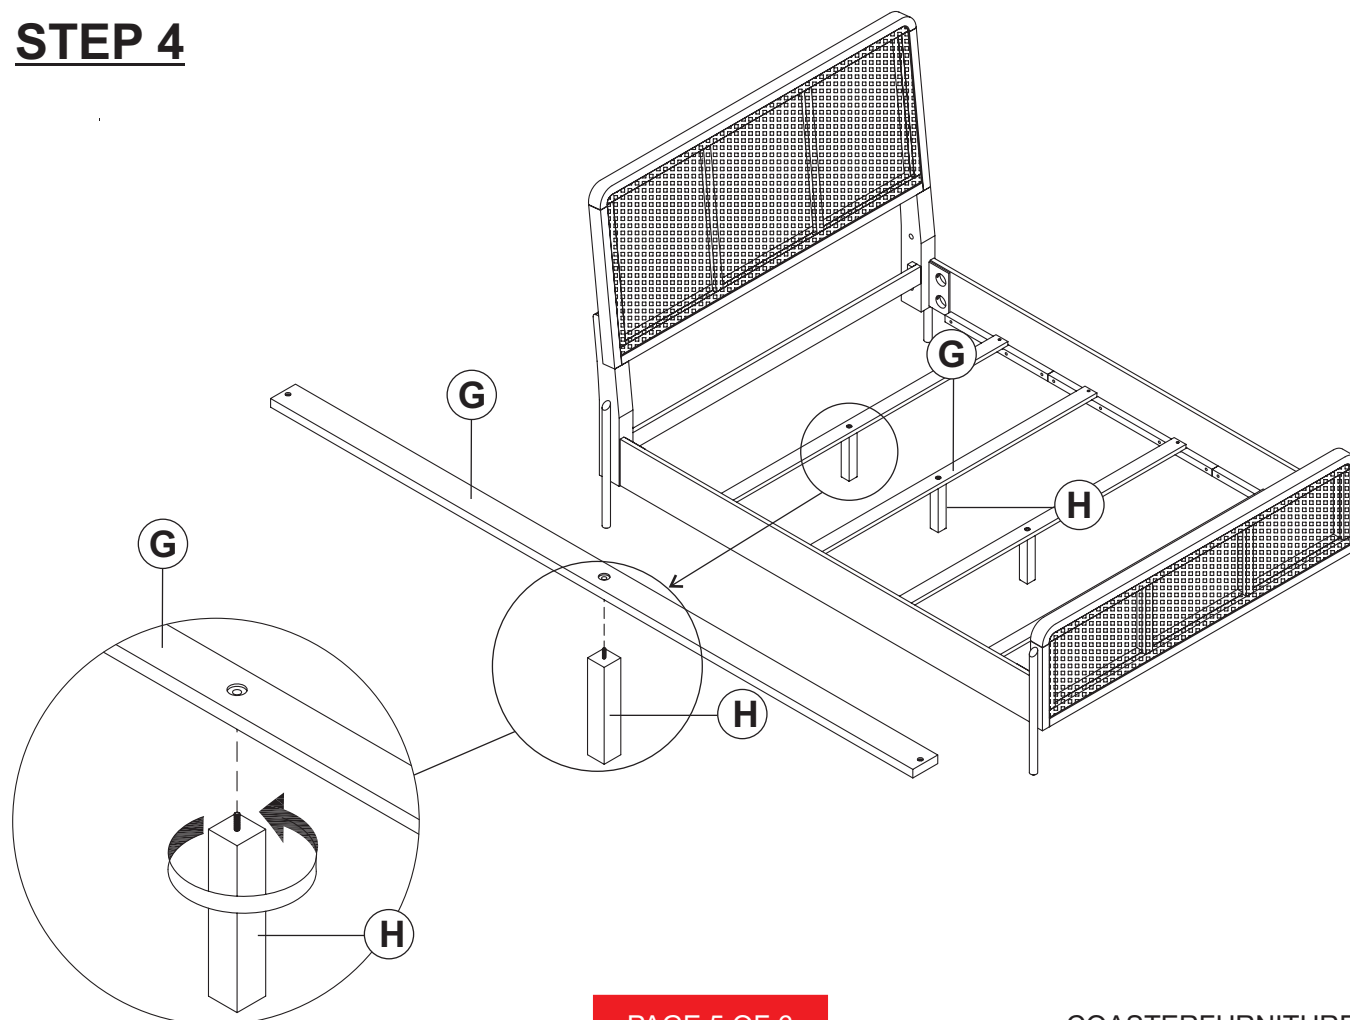


ITEM: **224330Q (B1-B3)**


ASSEMBLY INSTRUCTIONS



STEP 5

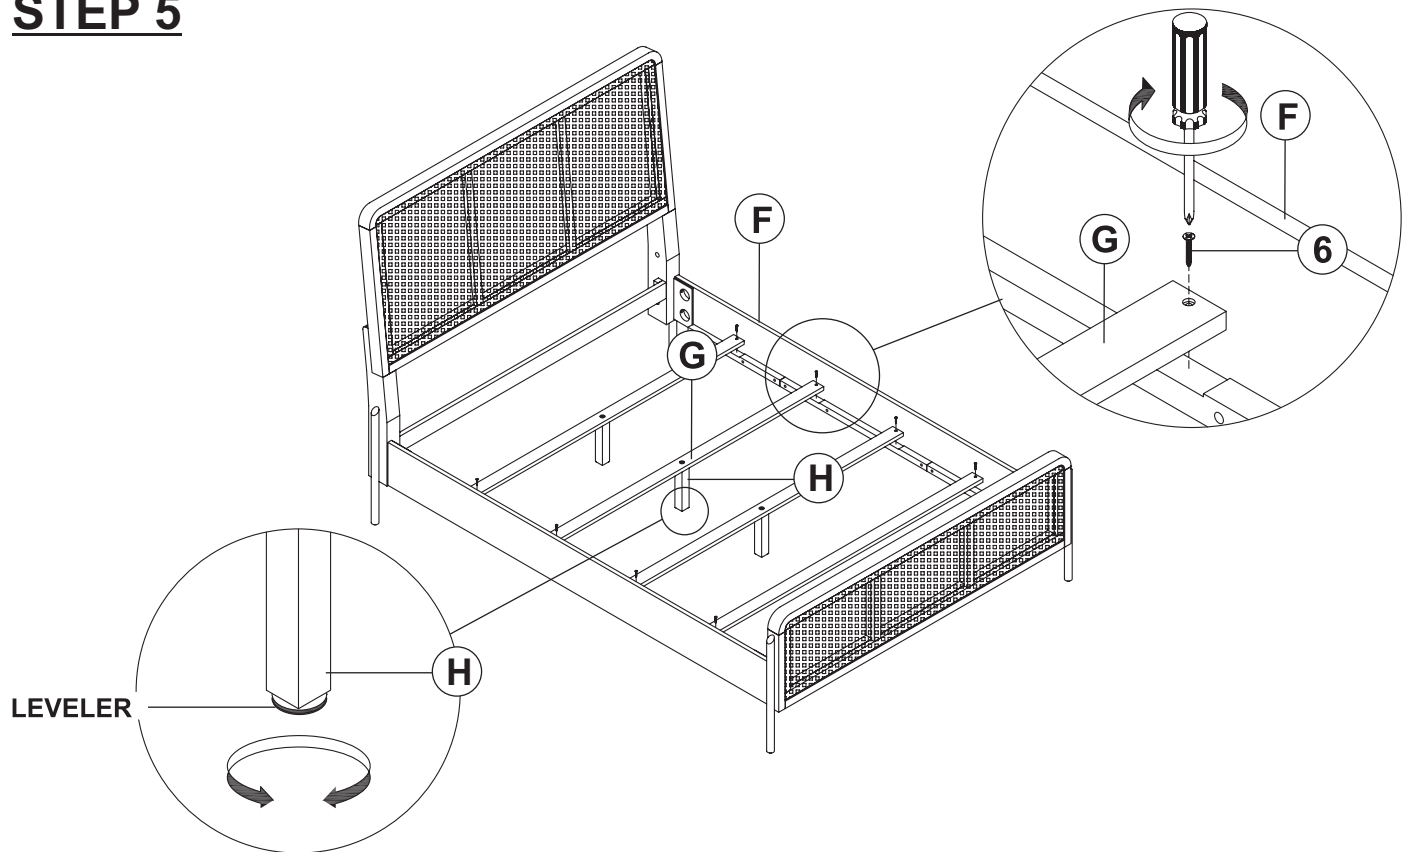


STEP 6 COMPLETE

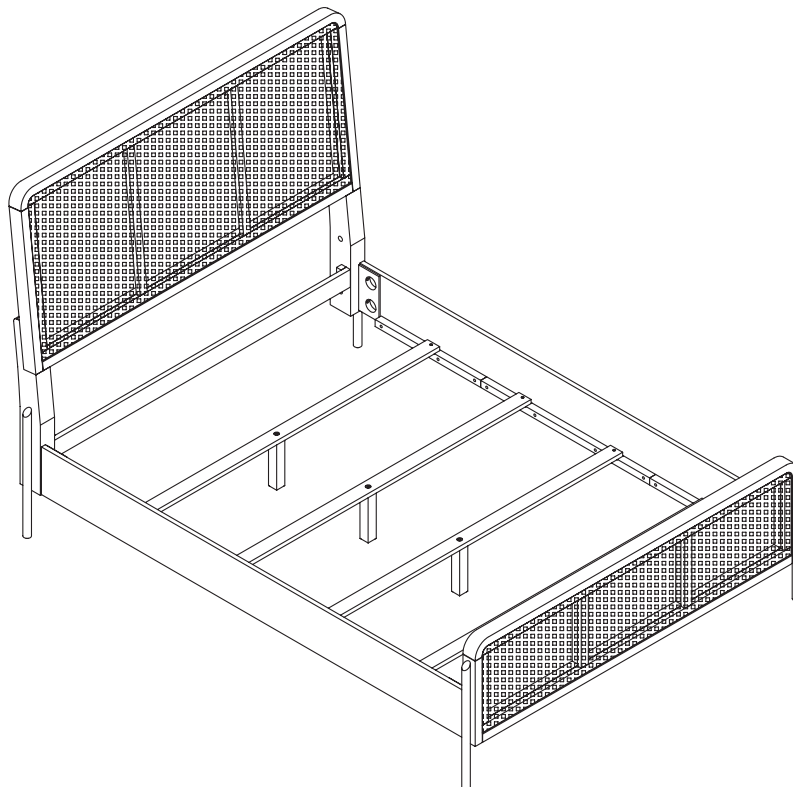

ITEM: **224330Q (B1-B3)**



Inner Size : 61.00"W x 82.00"D

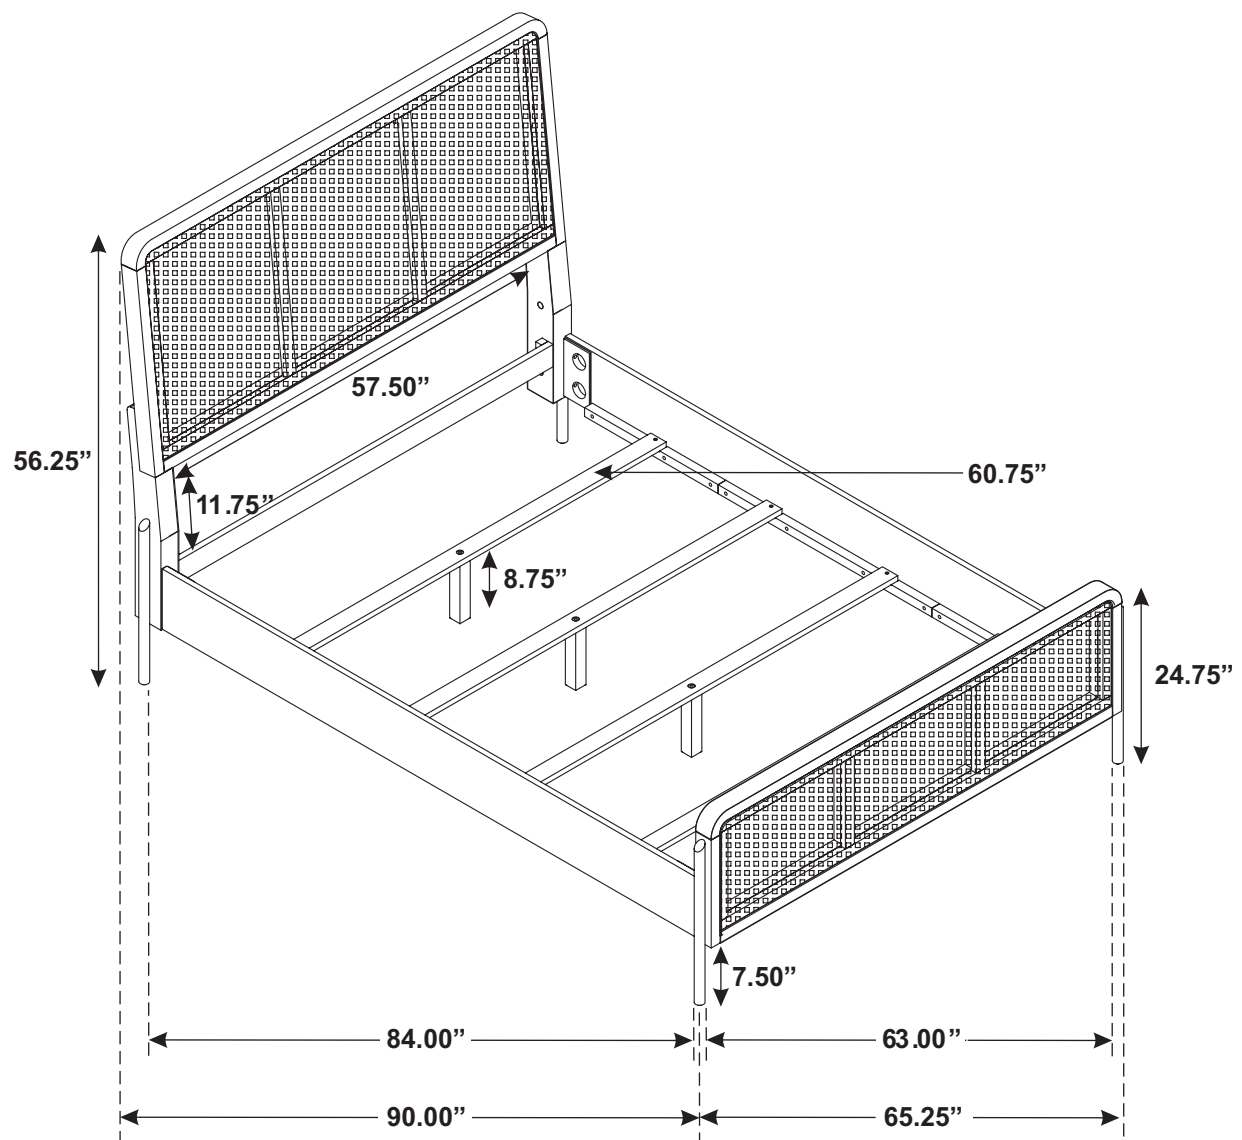

Note: Dimension tolerance $\pm 5\%$