

Dear Customer!

**If hardware is missing or parts
get damaged in shipping,
DO NOT RETURN THE ENTIRE ITEM.
We can replace hardware and any parts
Free of Charge.**

**For the best Customer Service experience,
visit our website at**


www.boltonfurniture.com

**Click on the Replacement Parts Tab
at the top of the page to order replacement
hardware or parts.**

**We will ship the replacements directly to
you.**


ASSEMBLY INSTRUCTIONS

FULL BED

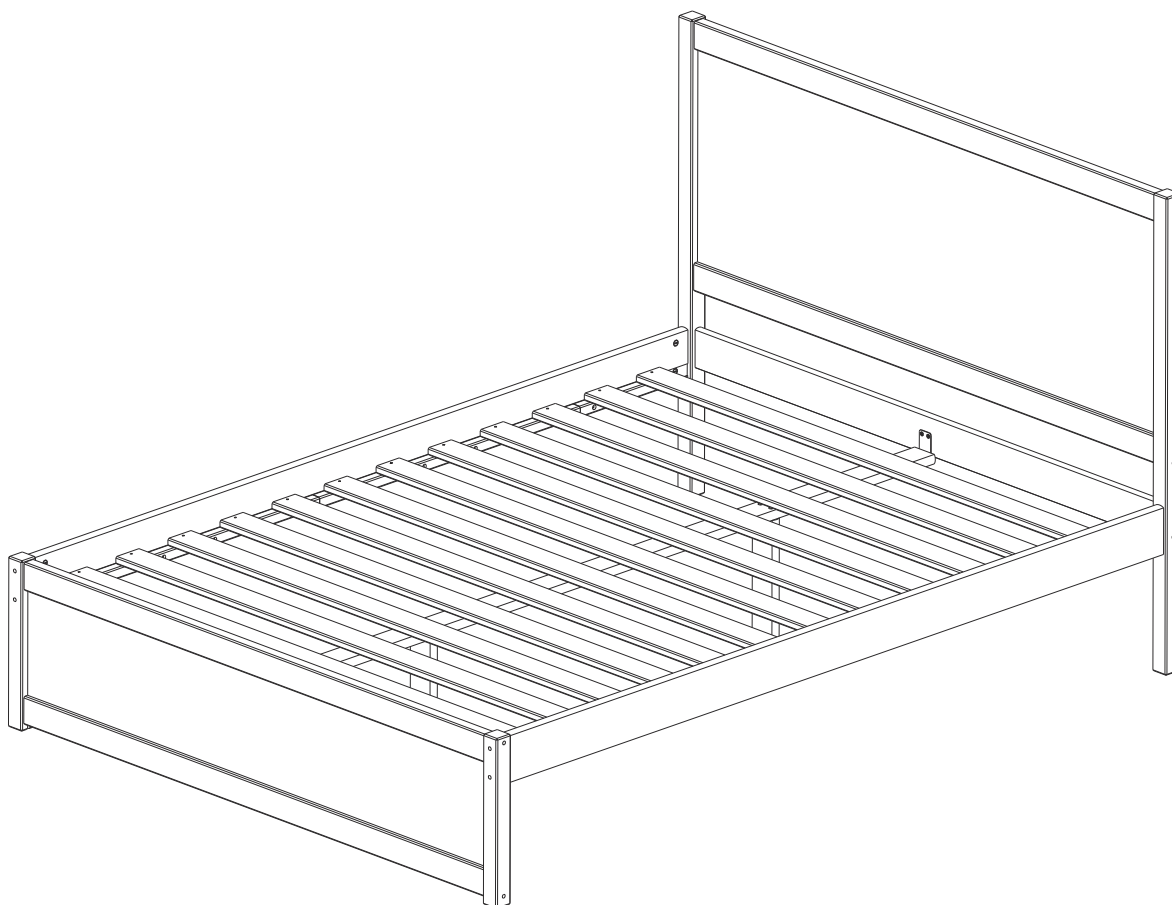


REPLACEMENT PARTS


Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "boltonfurniture.com"

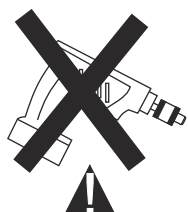


* Use of power tool to assemble this product will invalidate any claim and damage this product making it unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

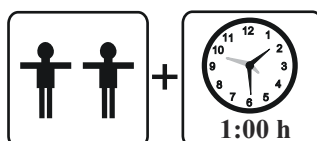

Tools Required




(Not included)




(Not included)


Part List - Full Bed

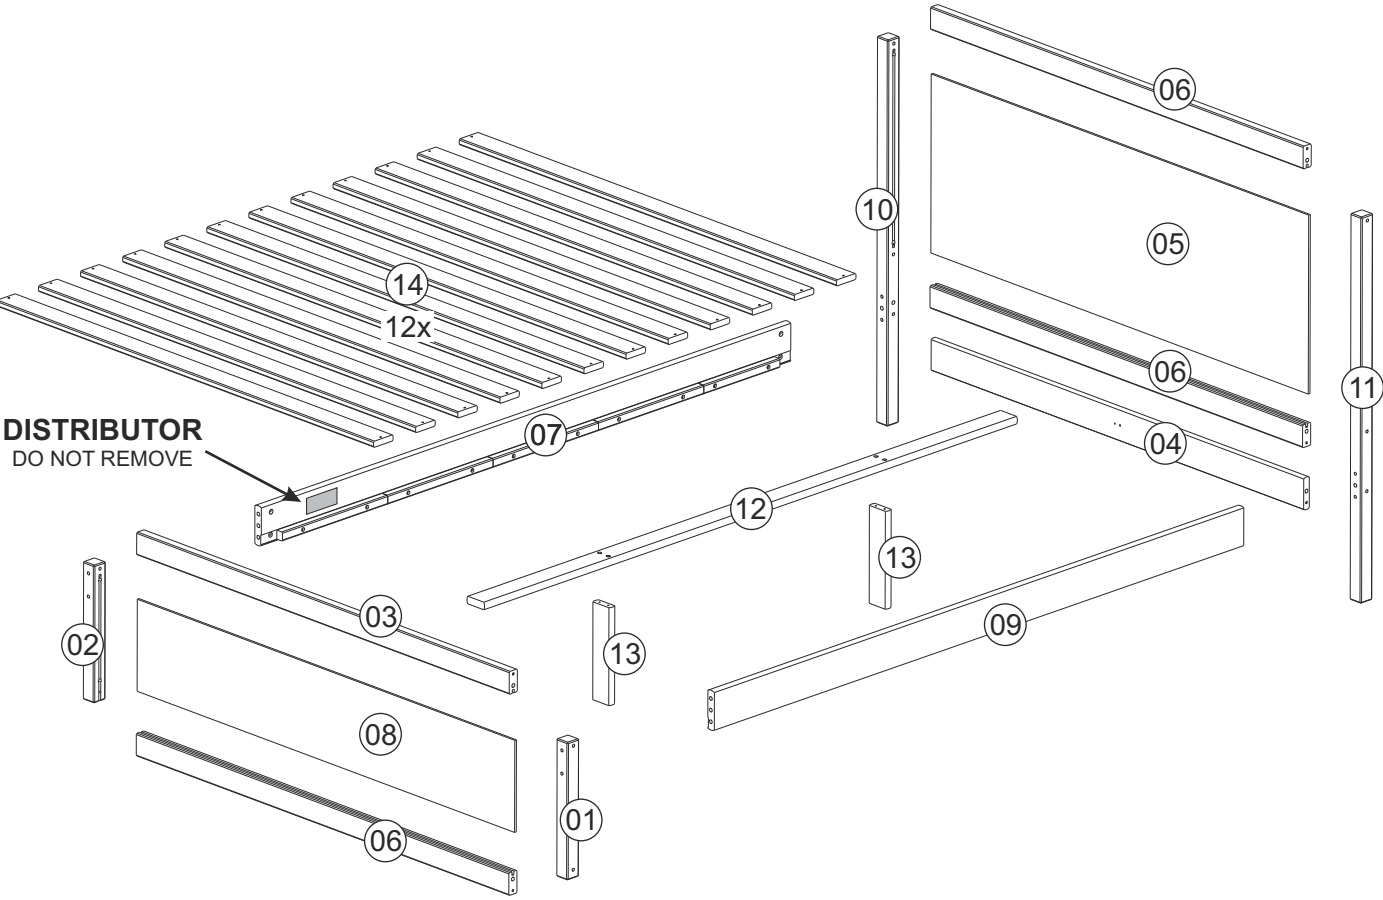



Identifying the Hardware - Identifying the Hardware using the illustrations below.


A  **08**
1/4 x 90


B  **08**
1/4


C  **10**
7 x 80


D  **14**
10 x 40


E  **24**
4,0 x 35

F  **02**
Spacer 81mm


G  **01**

H  **08**
3,5 x 16


I  **04**
4,5 x 50

J  **02**
4002 LONG




01




DISTRIBUTOR
DO NOT REMOVE

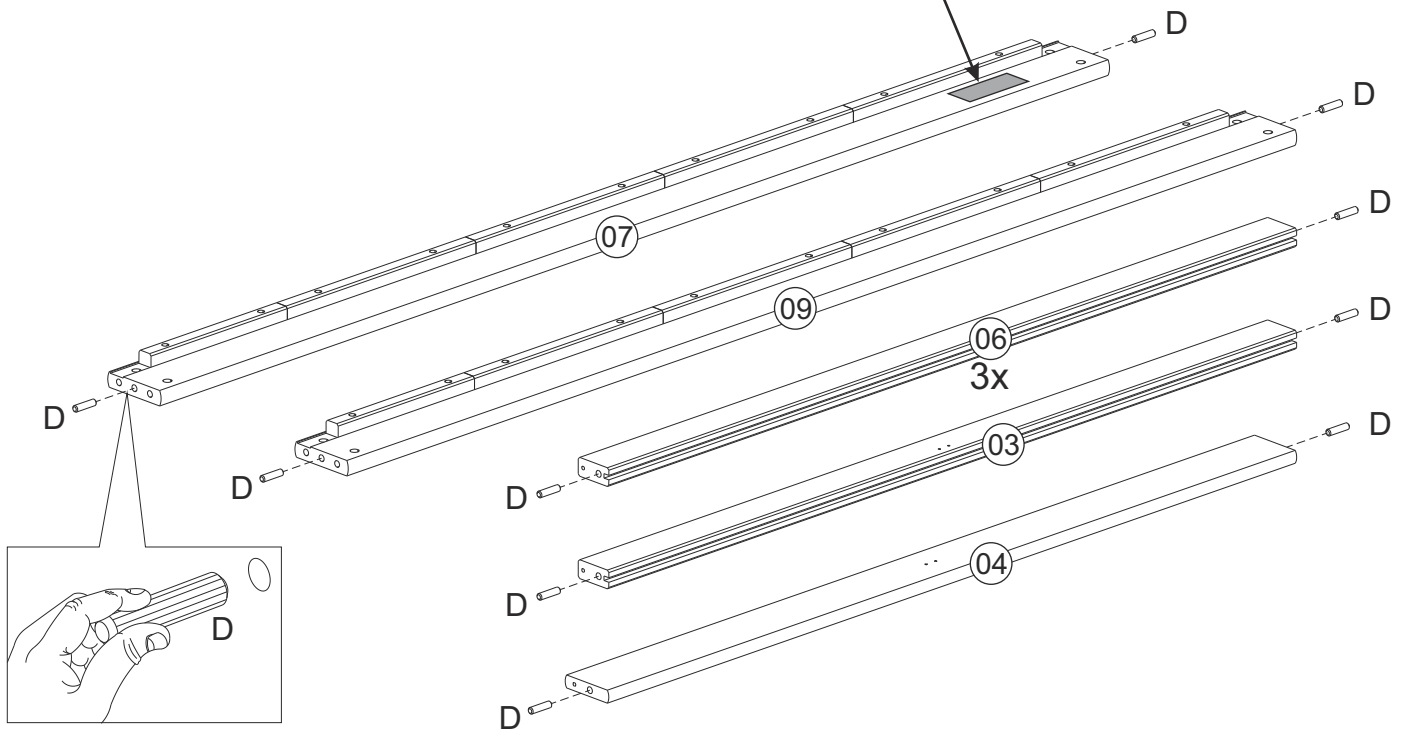


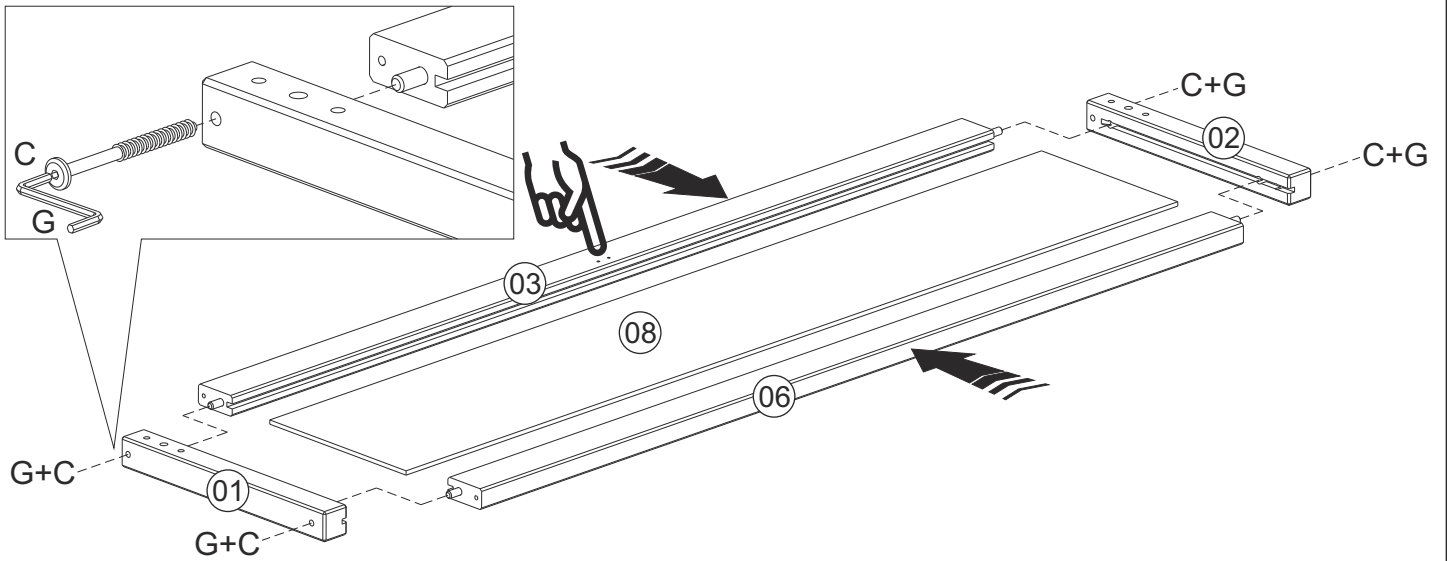
02

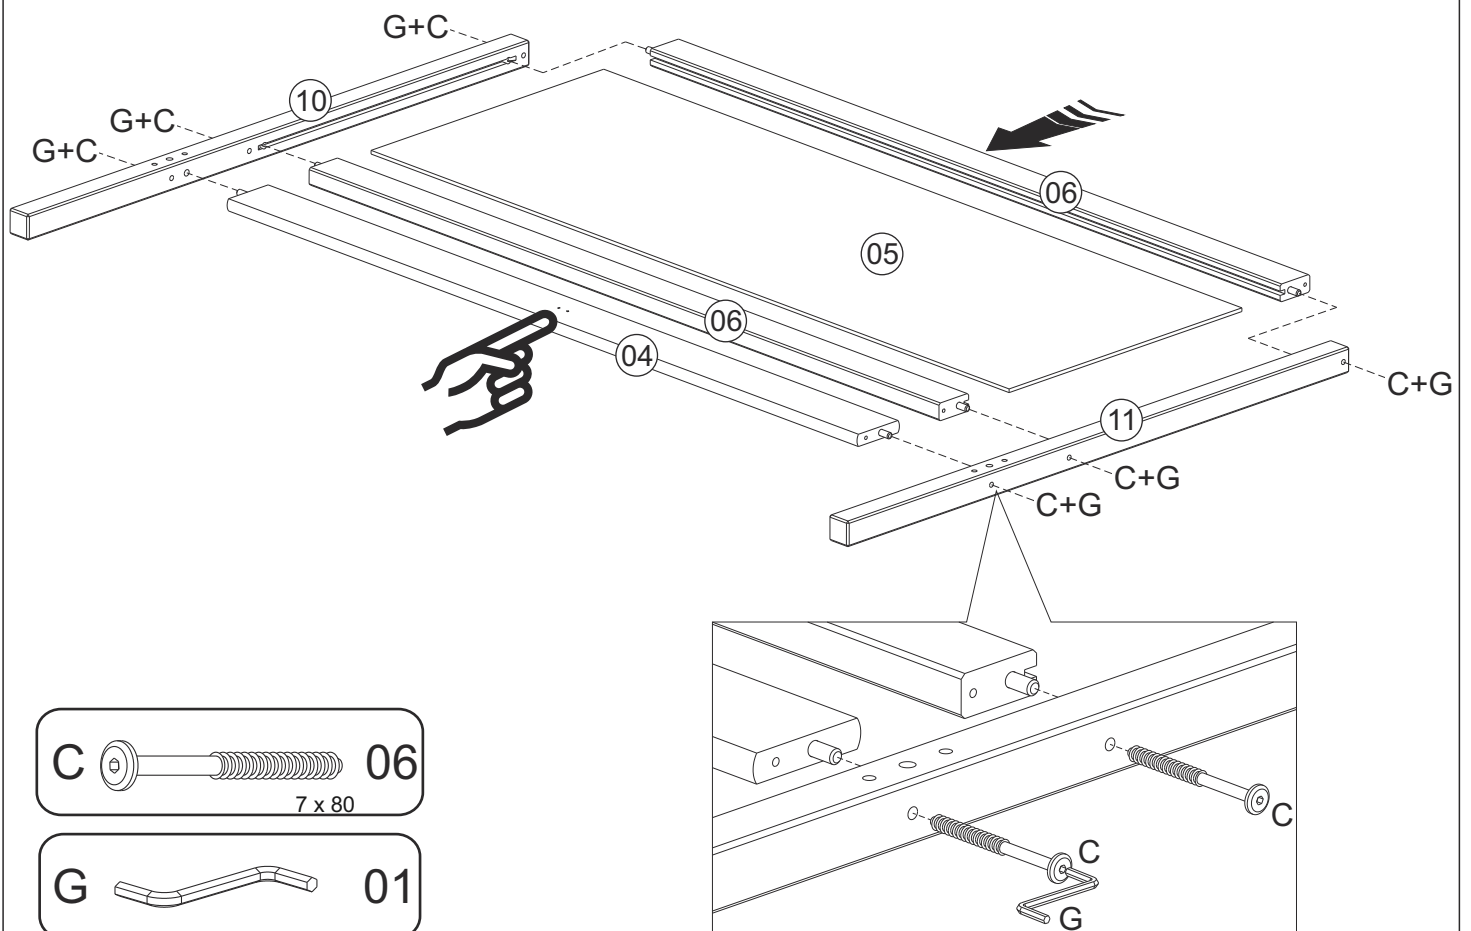


03

C  04
7 x 80


G  01




04


A  08
1/4 x 90

B  08
1/4

G  01

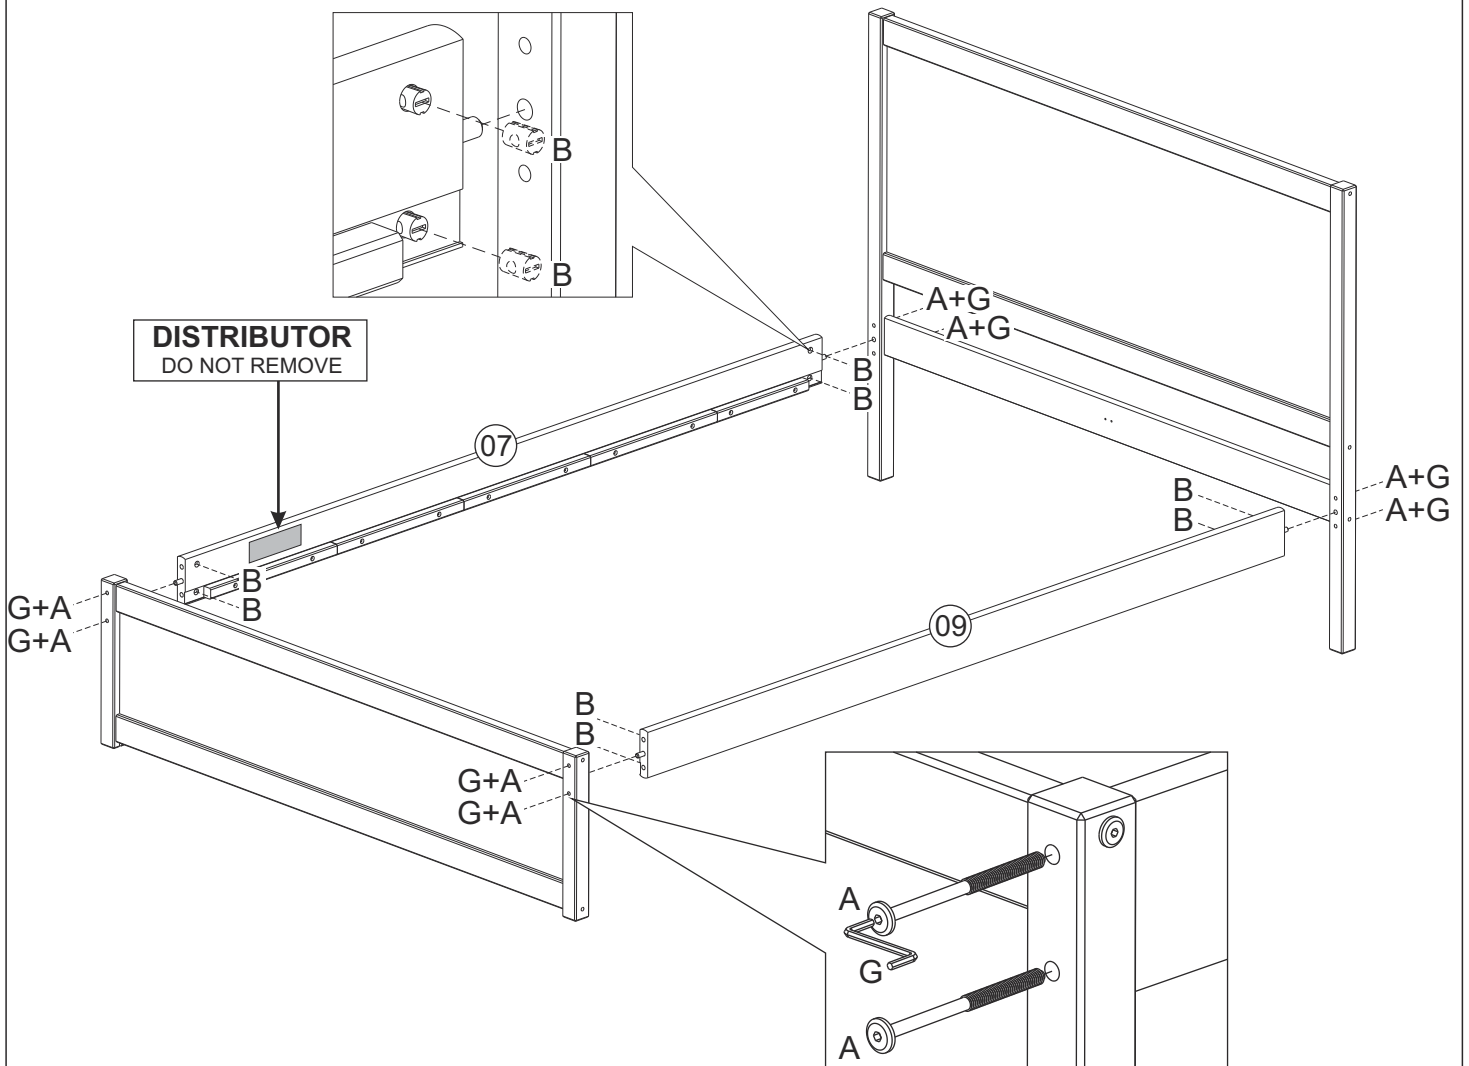

05

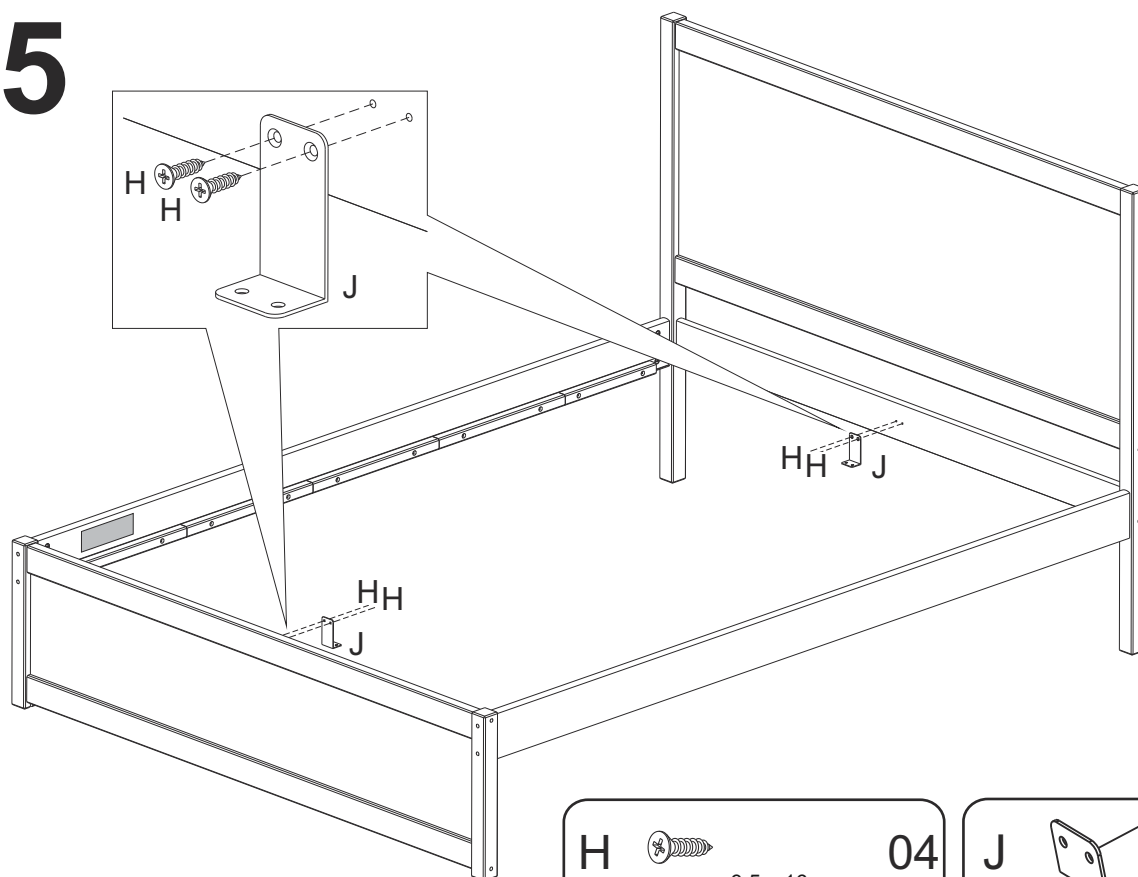


H



3,5 x 16

04


J



4002 LONG

02

06

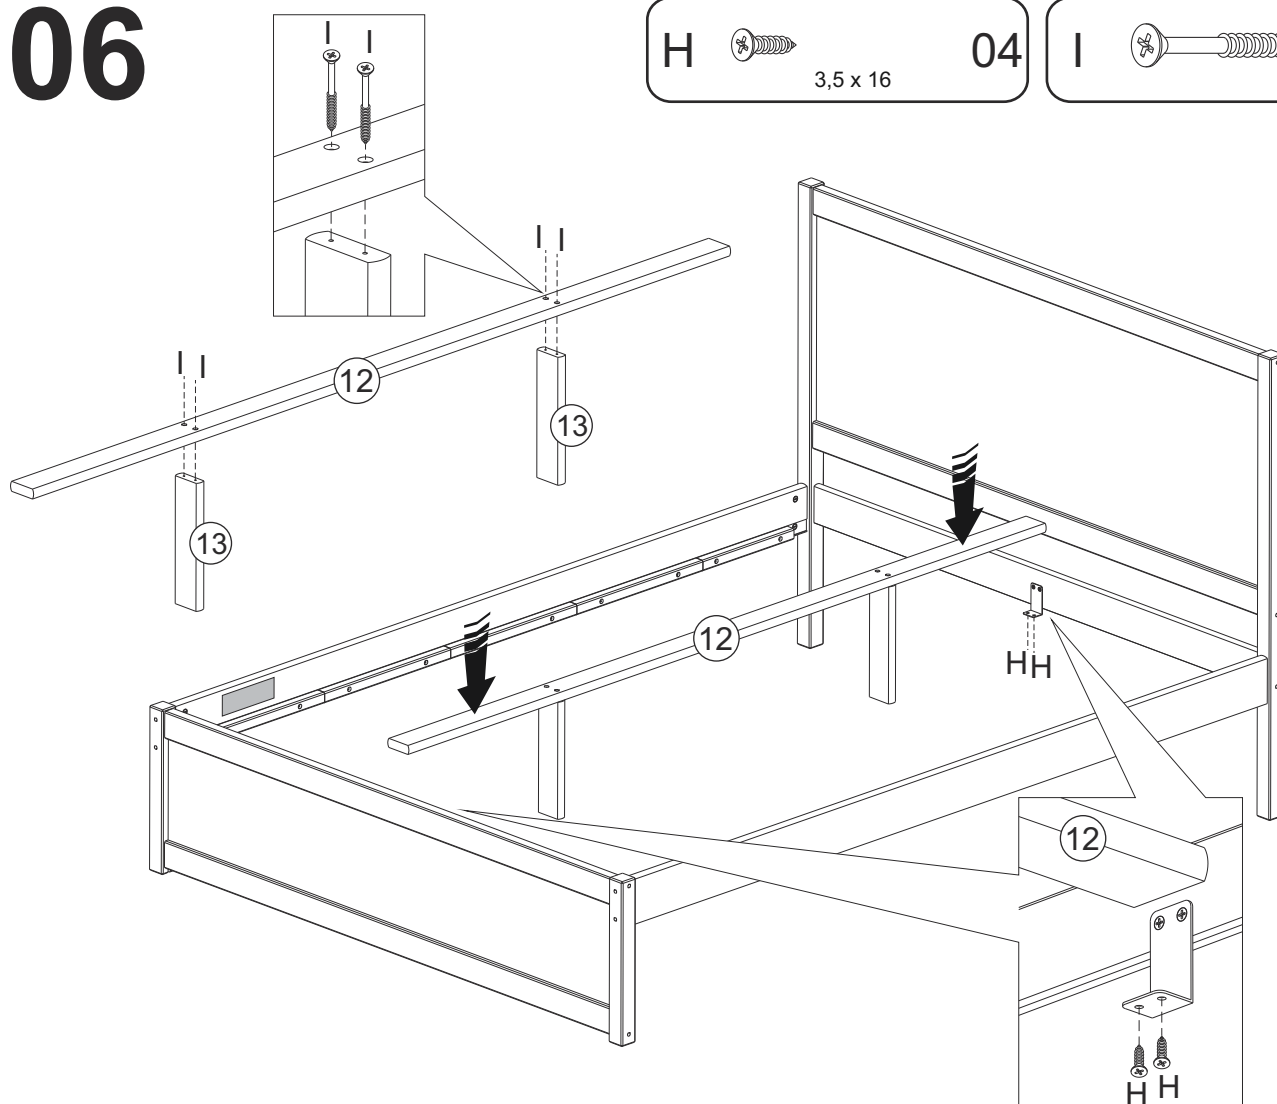


H



3,5 x 16

04

I



4,5 x 50

04

07

E



24

4.0 x 35

F



02

Spacer 81mm

