


**ASSEMBLY INSTRUCTIONS**  
**COASTER FINE FURNITURE**

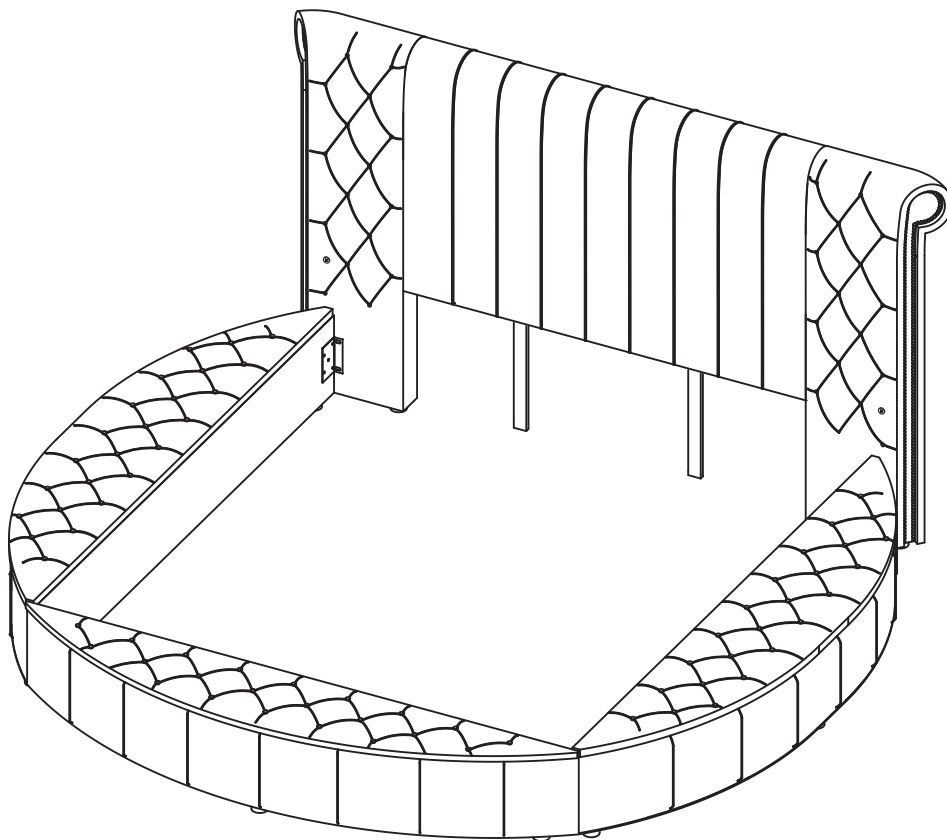

*Fine Furniture for every stage of life*

**360111Q(B1-B5)**  
**Queen Bed**

# ITEM: 360111Q(B1-B5)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

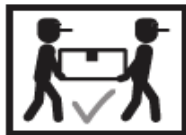


ASSEMBLY TIME

35 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX 1)

A HEADBOARD PANEL

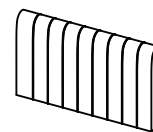

1PC

B HEADBOARD SUPPORT



2PCS

### B2 (BOX 2)

C LEFT WING



1PC


D RIGHT WING



1PC

### B3 (BOX 3)

E STORAGE FOOTBOARD



1PC


F FEET



9PCS

### B4 (BOX 4)


G LEFT BED RAIL STORAGE



1PC

### B5 (BOX 5)

H RIGHT BED RAIL STORAGE



1PC

### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ITEM: 360111Q(B1-B5)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









### WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

## HARDWARE IDENTIFICATION

### Z-B3 (BOX 3) - HARDWARE PACK IS LOCATED IN 360111Q(B3)

1	<b>ALLEN WRENCH</b> (Φ4 X 95mm- ZINC)		1PC
2	<b>BOLT</b> (Φ6 X 35mm - RBW)		18PCS
3	<b>FLAT HEAD SCREW</b> (Φ4 X 32mm - RBW)		9PCS
4	<b>LOCK WASHER</b> (Φ6 - RBW)		18PCS
5	<b>FLAT WASHER</b> (Φ7 X 19mm X 2.0 - RBW)		18PCS
6	<b>PLASTIC DOWEL</b> (Φ8 X 30MM)		4PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **360111Q(B1-B5)**

## ASSEMBLY INSTRUCTIONS


### STEP 1

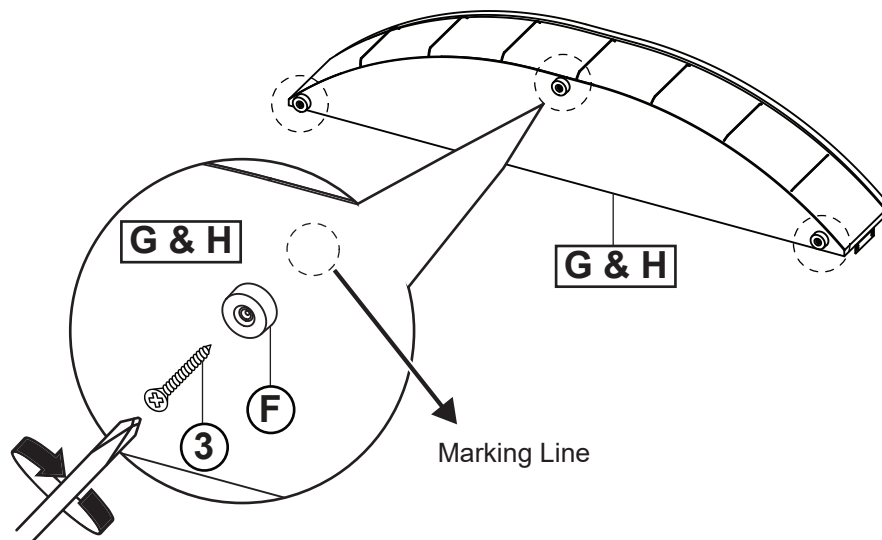

### STEP 2

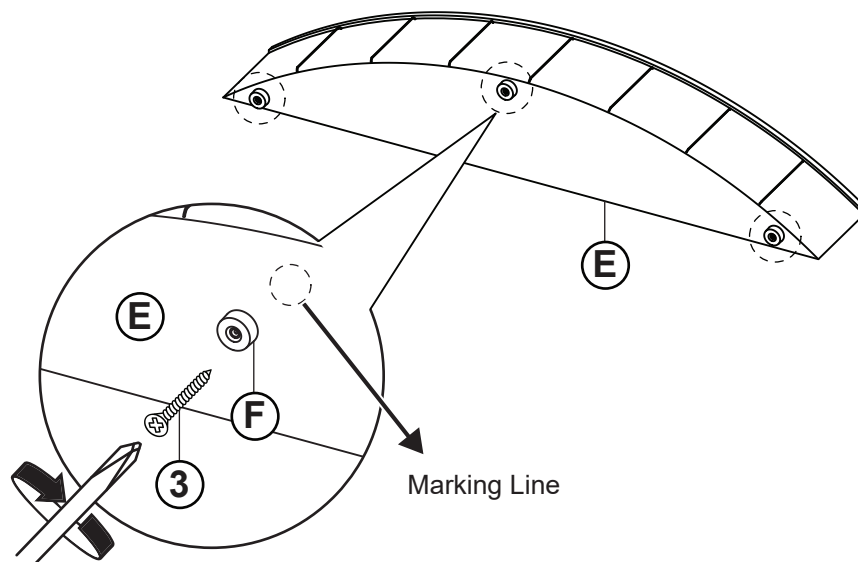

### STEP 3

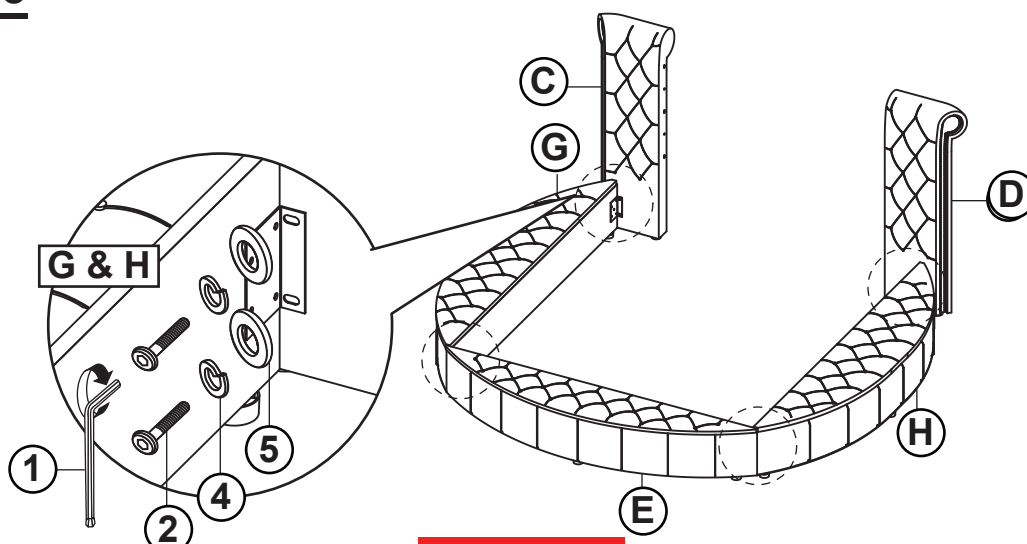




ITEM: **360111Q(B1-B5)**




## ASSEMBLY INSTRUCTIONS

### STEP 4

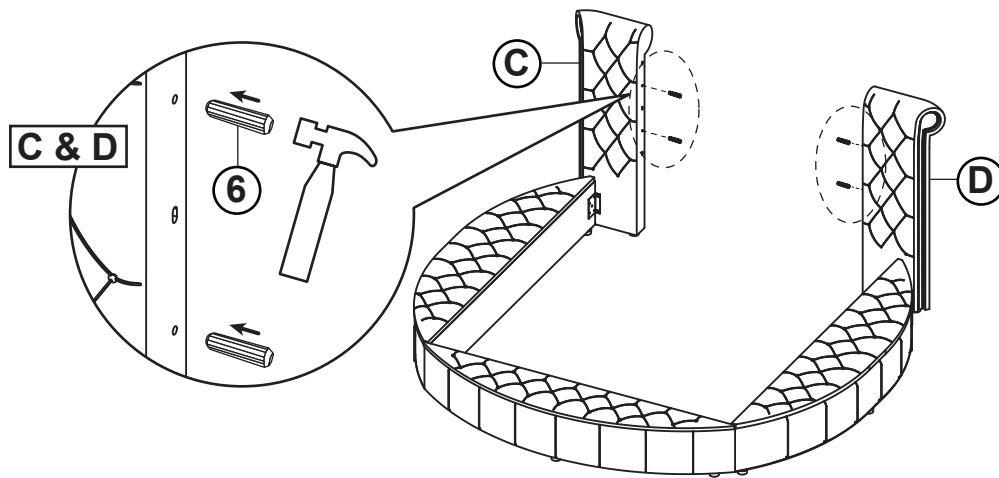


### STEP 5

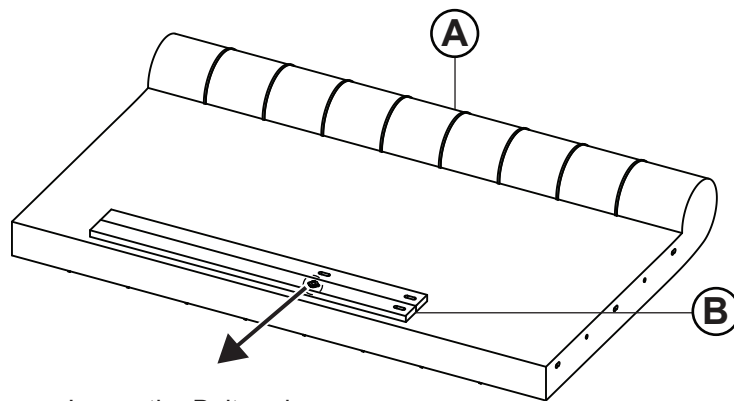

Loose the Bolt and remove the Headboard Support (B).

### STEP 6

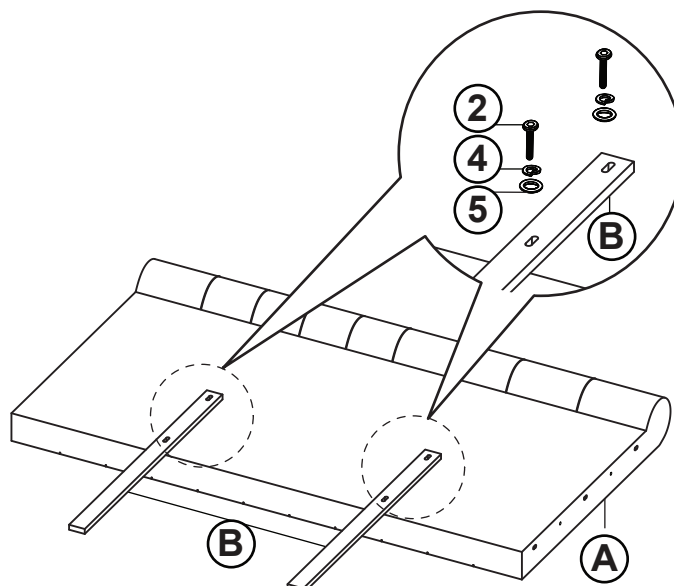


Hand Tighten all the Bolts.

ITEM: **360111Q(B1-B5)**




## ASSEMBLY INSTRUCTIONS



### STEP 7

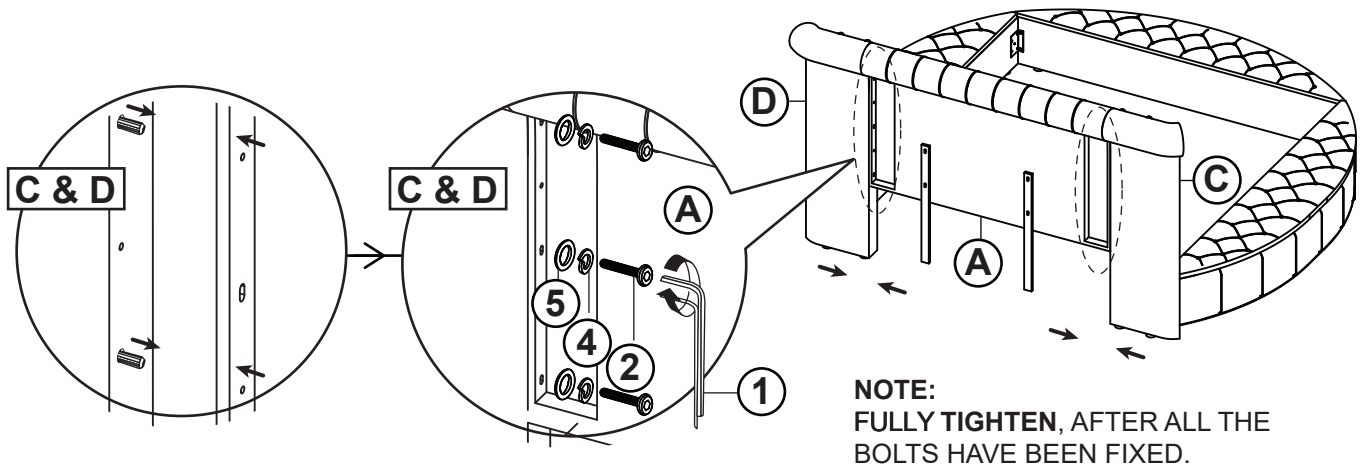

### STEP 8

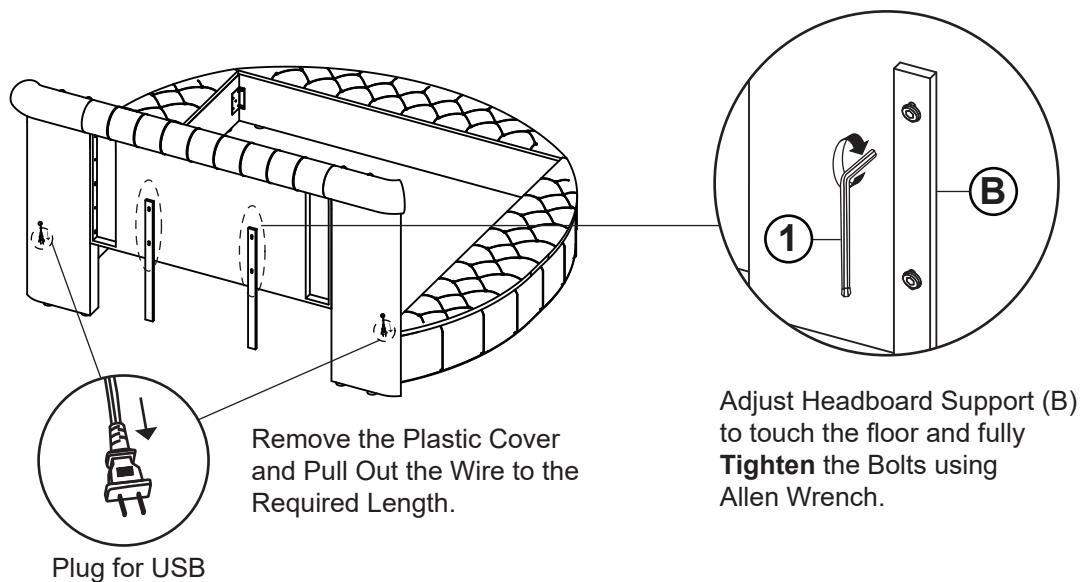


### STEP 9 **COMPLETE**

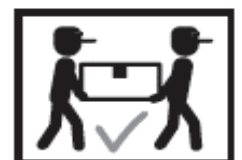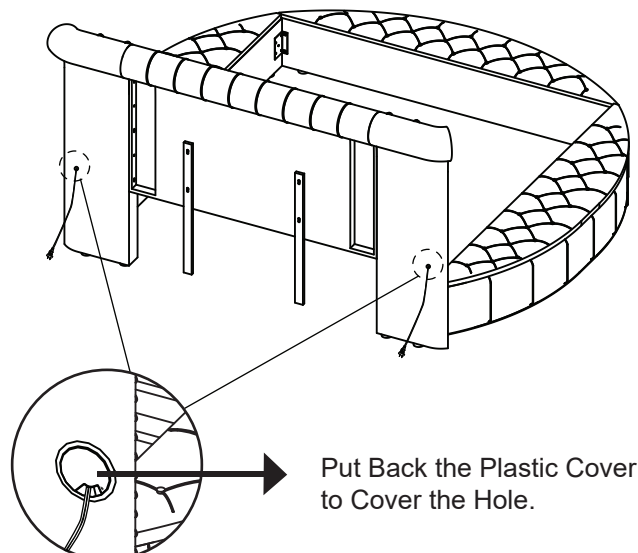

ITEM: **360111Q(B1-B5)**



Inner Size : 61.00"W x 82.00"D

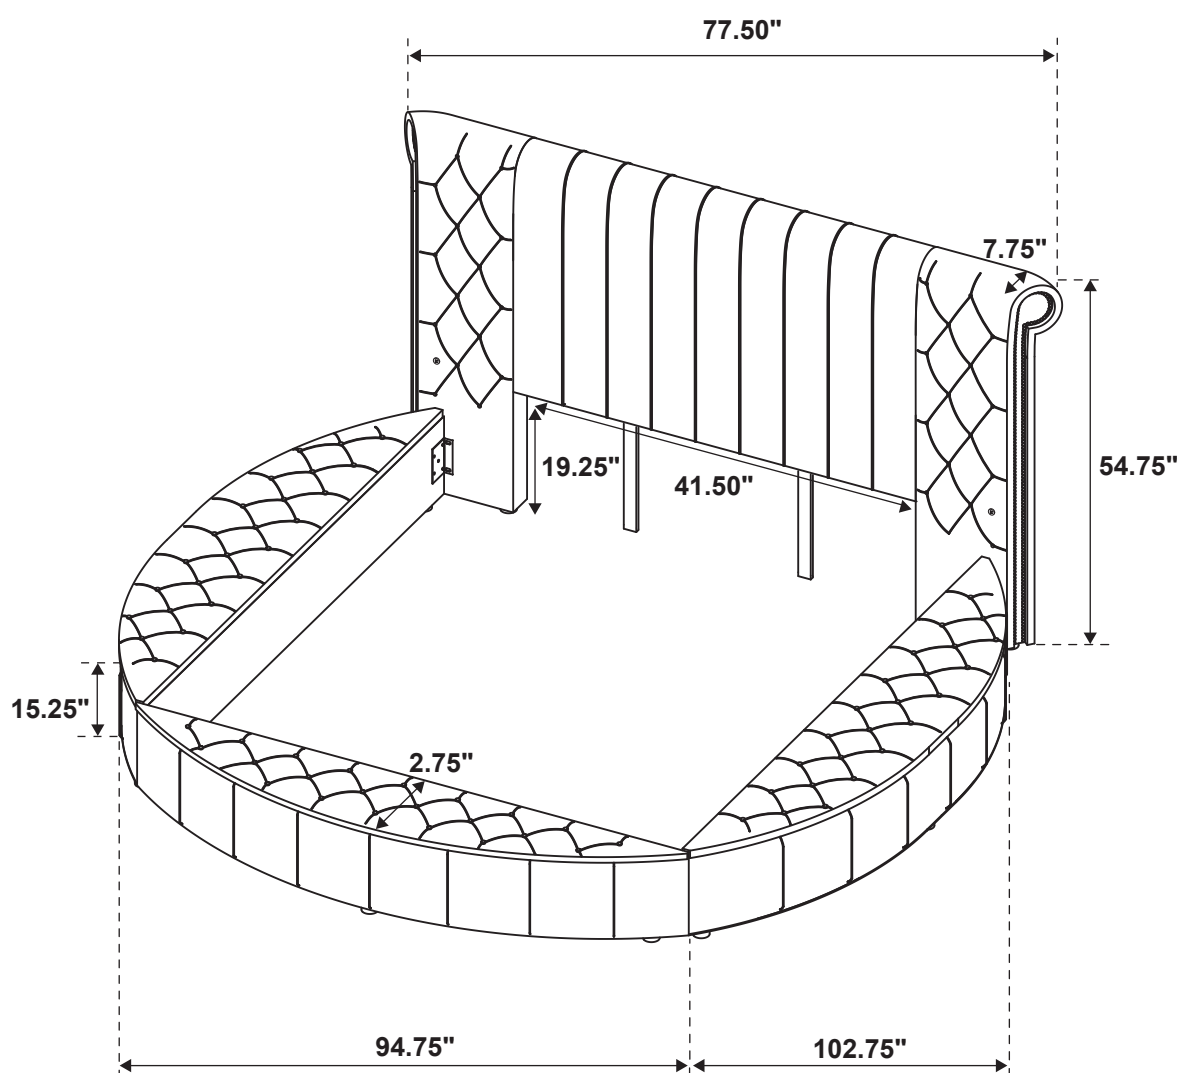

Note: Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**360112**  
**Nightstand**

ITEM: **360112**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A NIGHTSTAND

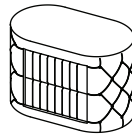

1PC

B FEET



4PCS

C GLASS TOP



1PC

## HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW  
(Φ4 X 32mm - RBW)



4PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **360112**




## ASSEMBLY INSTRUCTIONS

### STEP 1

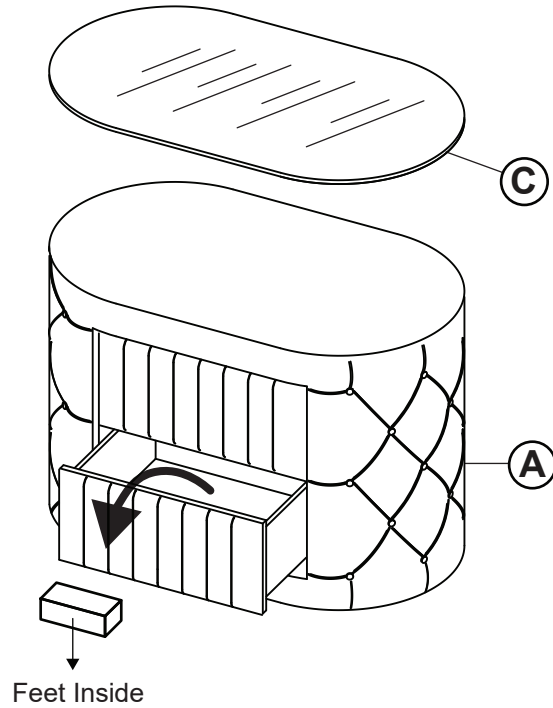

### STEP 2

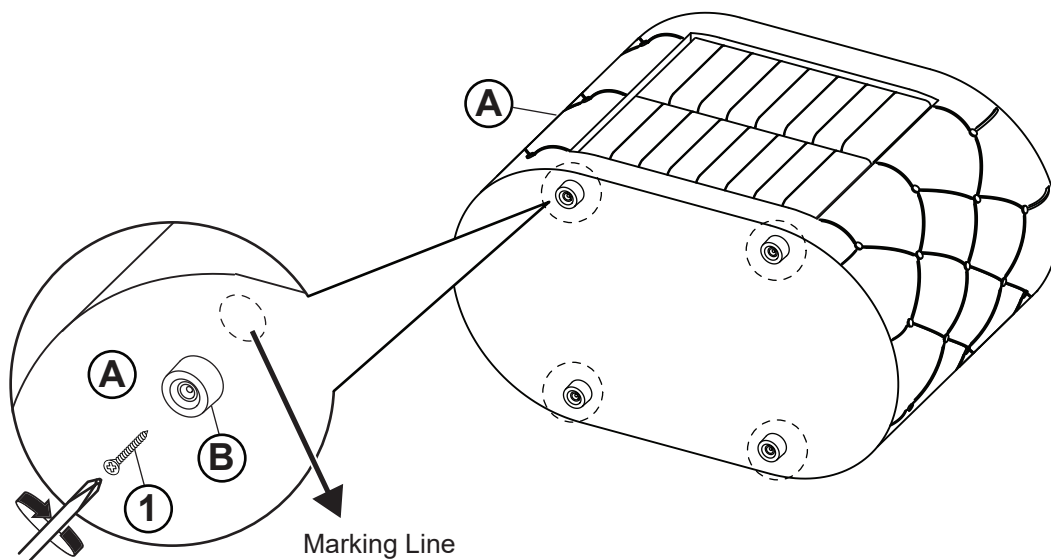


ITEM: **360112**




## ASSEMBLY INSTRUCTIONS

### STEP 3

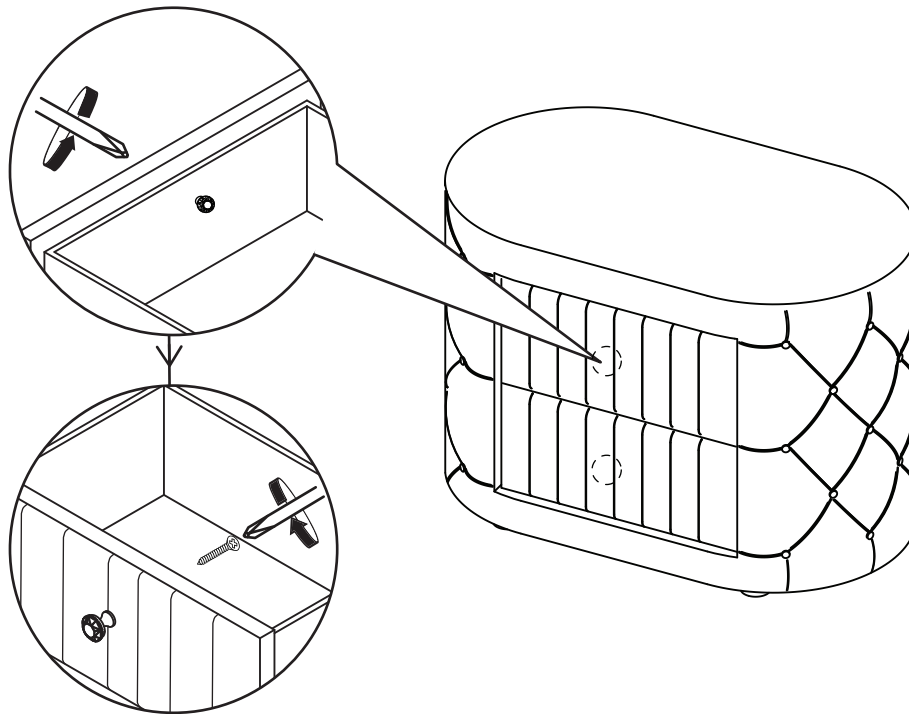

### STEP 4 COMPLETE

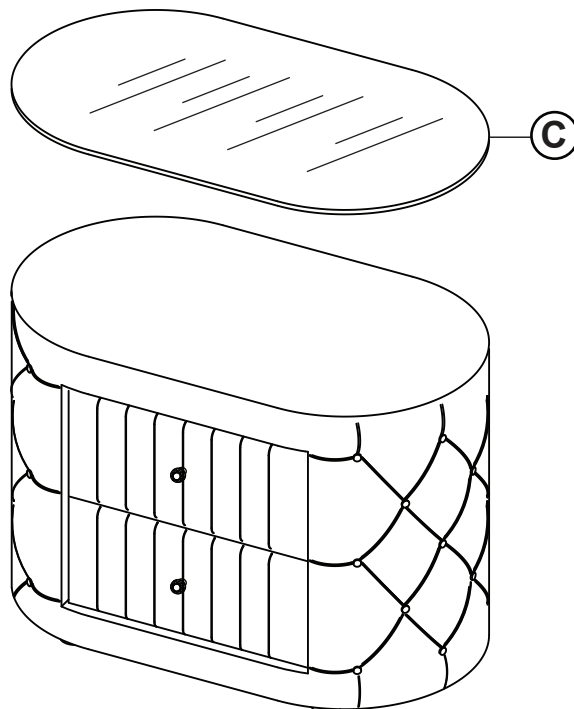

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT


#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### **STEP 1**

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

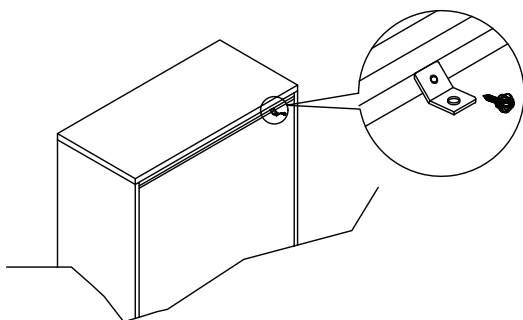



#### **STEP 2**

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

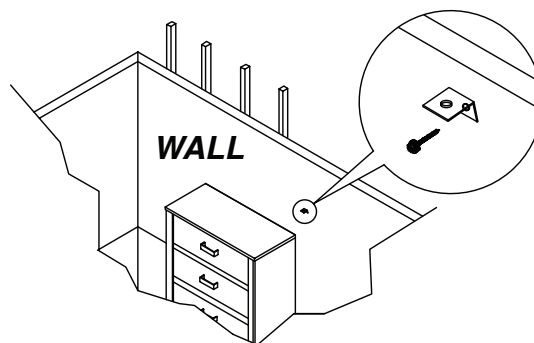

#### **STEP 3**

Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

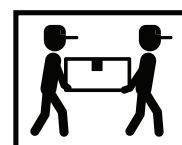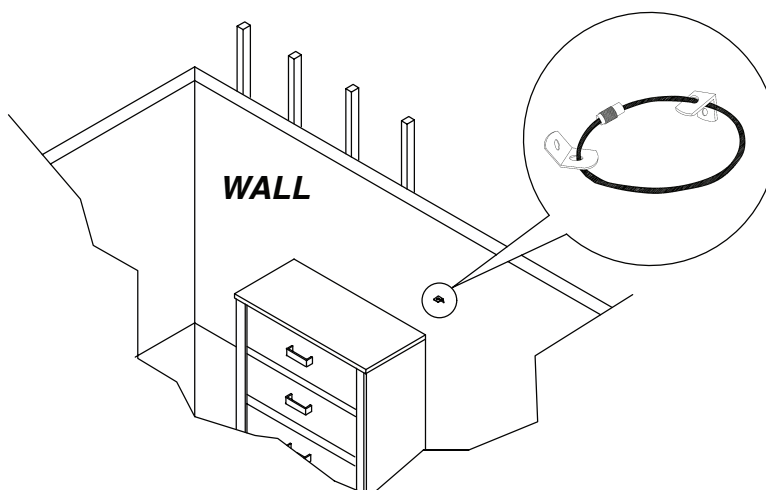




ITEM: **360112**



**Inner Size of Drawer : 15.00"W x 12.50"D x 5.25"H x 0.25"T**

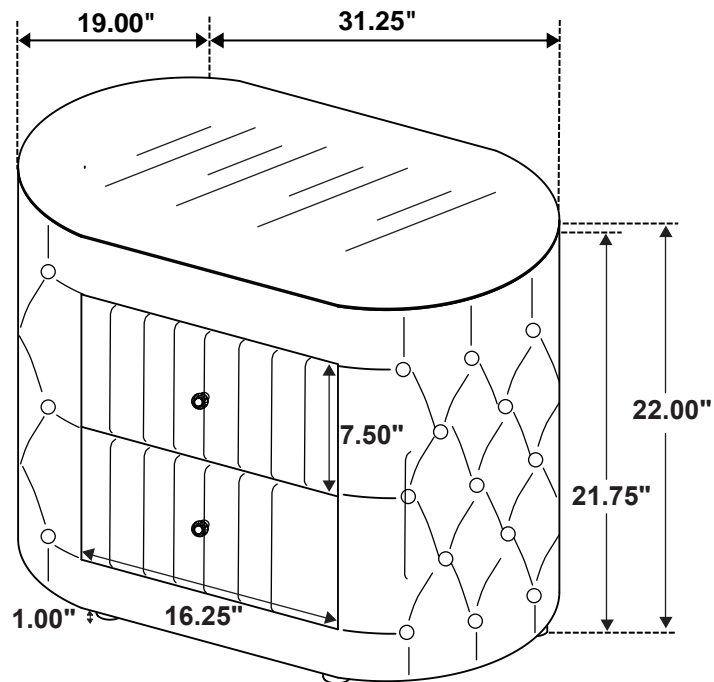

**Note: Dimension tolerance  $\pm 5\%$**

## ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**360113**  
**Dresser**

ITEM: **360113**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A DRESSER

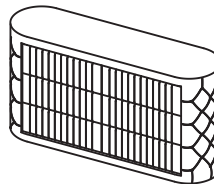


1PC

B FEET



4PCS

C GLASS TOP



1PC

## HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW  
(Φ4 X 32mm - RBW)



4PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **360113**




## ASSEMBLY INSTRUCTIONS

### STEP 1

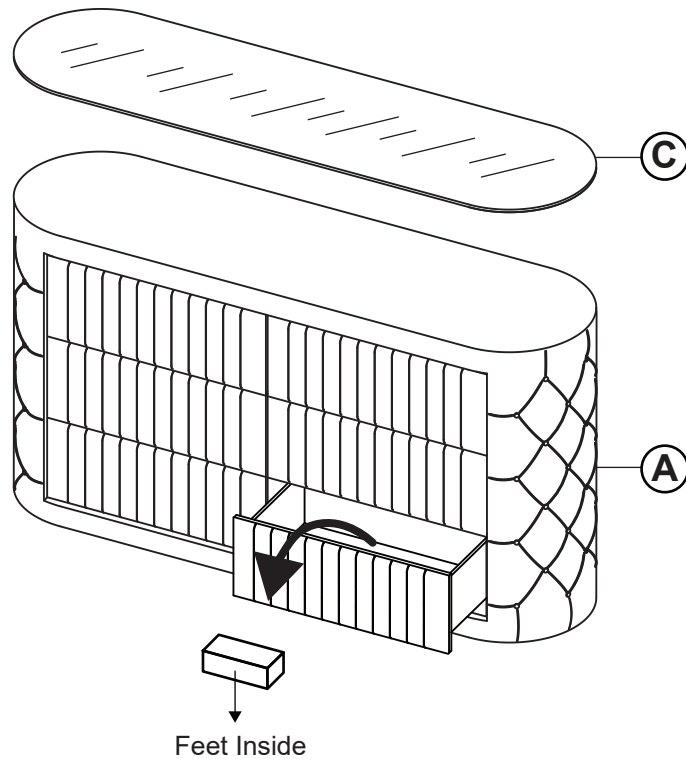

### STEP 2

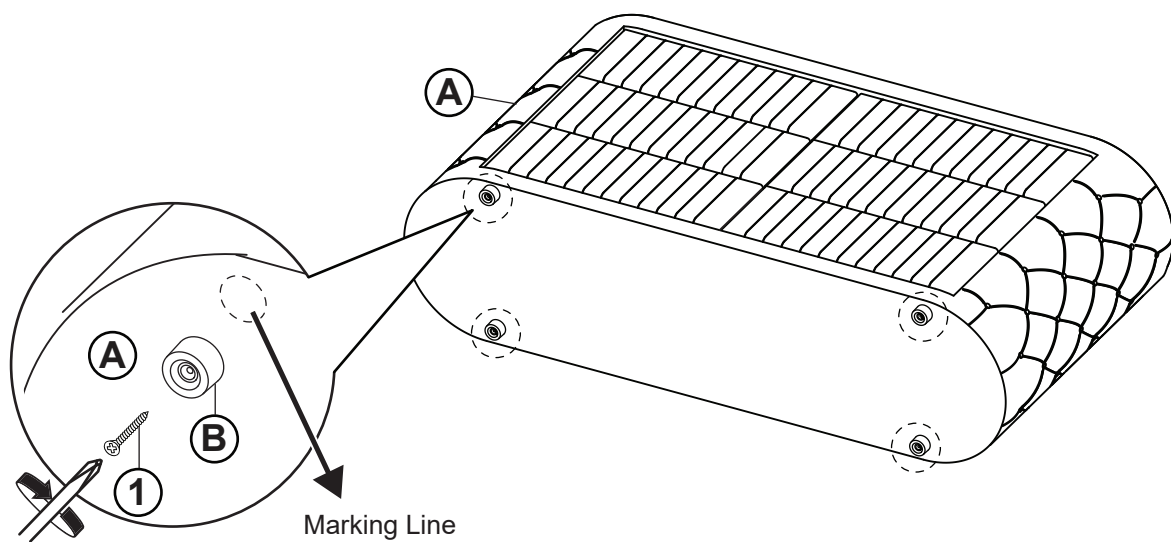


ITEM: **360113**




## ASSEMBLY INSTRUCTIONS

### STEP 3

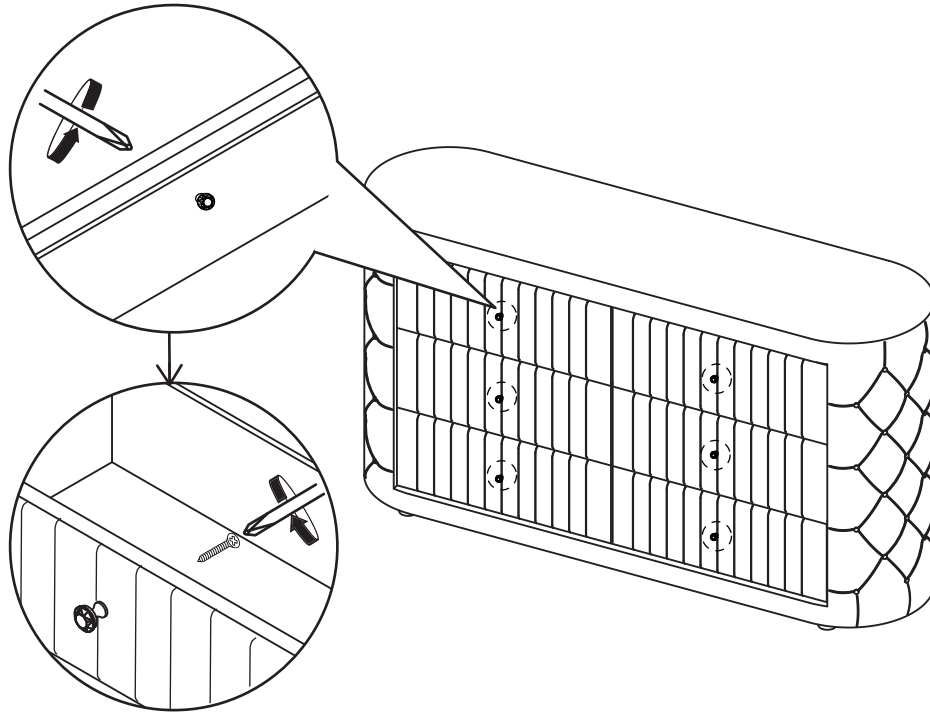

### STEP 4 **COMPLETE**

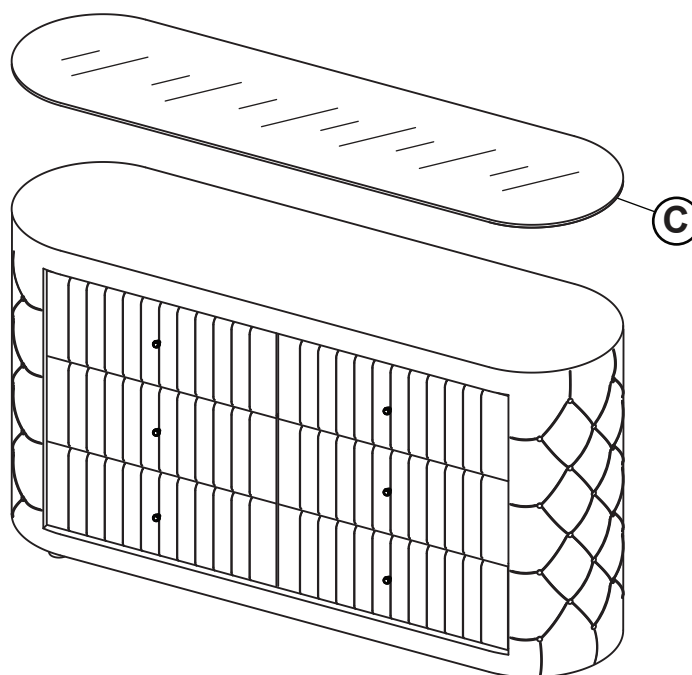

## ANTI-TIPPING INSTALLMENT INSTRUCTIONS

### FURNITURE TIPPING RESTRAINT


#### WARNING

Injury may result from tipping furniture.  
This restraint may protect against tipping furniture.  
Do not allow children to climb on furniture.  
This restraint is not a substitute for proper adult supervision.  
Failure to detach this restraint before moving the furniture may result in injury and damage.

This restraint must be screwed to a wood stud on the wall, using the long screw provided.


#### **STEP 1**

Secure the bracket to the back top of the unit, using the short screw provided, as shown in the drawing.

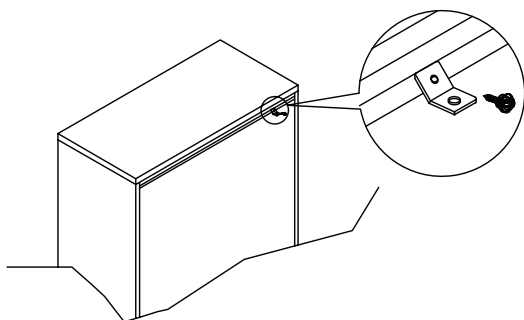



#### **STEP 2**

Locate the wood stud on the wall and secure the other bracket 2 inches below the back of the unit, using the long screw.

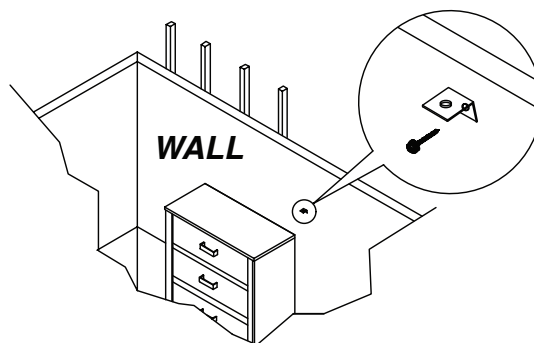

#### **STEP 3**


Place the furniture into position so both mounting brackets are vertically in line. Lace the threaded end of the restraint strap through the hole in each mounting bracket. Bring both ends together and rotate the thumb nut onto the threaded end until tight. Ensure that the restraint strap is securely laced and locked.

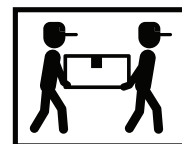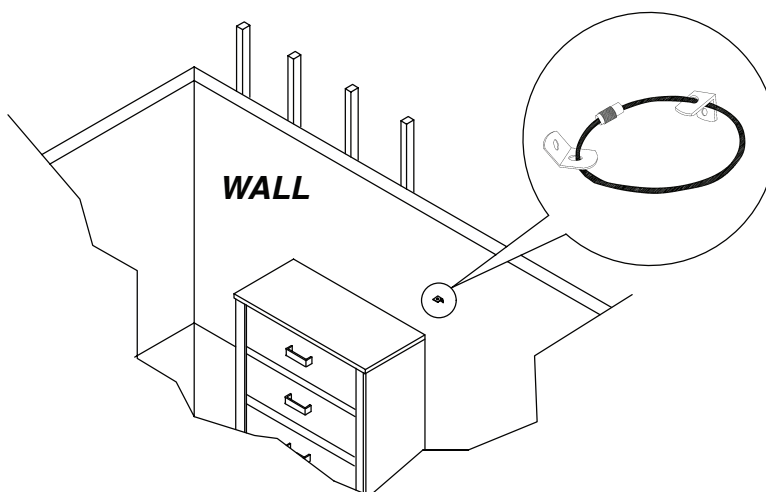

ITEM: **360113**



Inner Size of Drawer : 23.25"W x 12.50"D x 6.25"H x 0.25"T

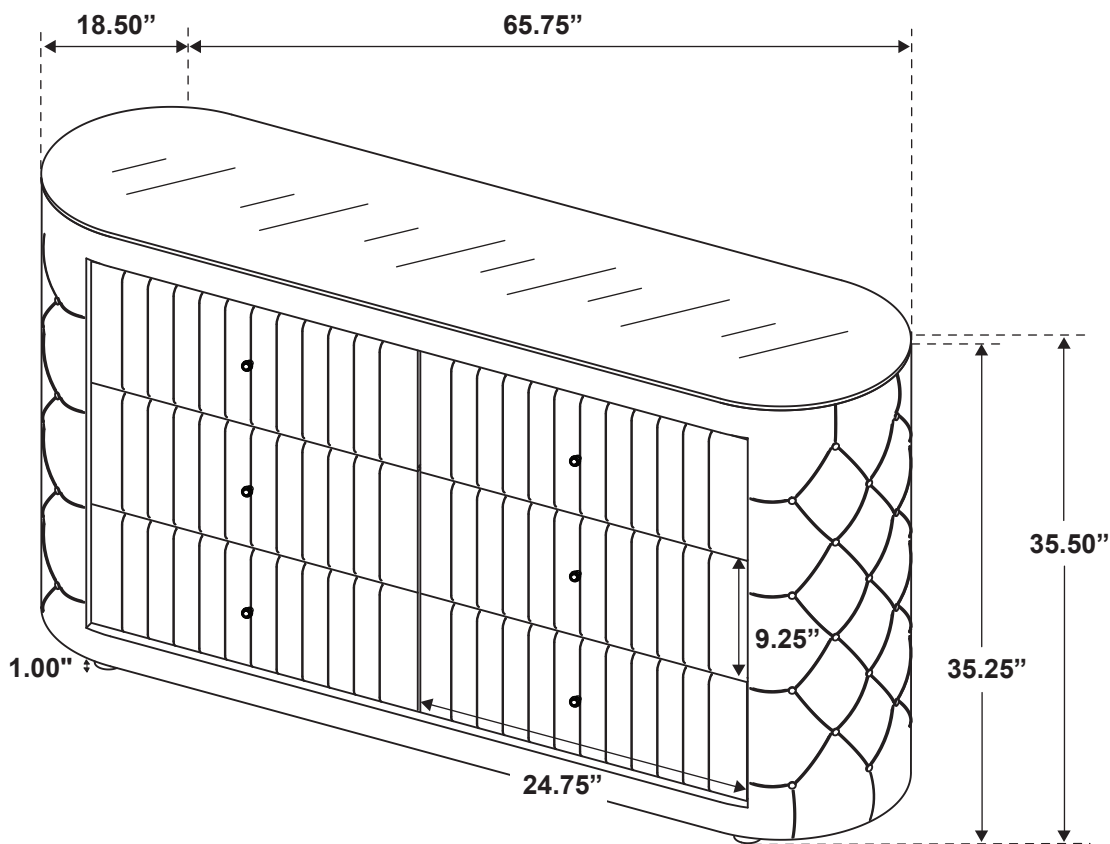

Note: Dimension tolerance  $\pm 5\%$

*ASSEMBLY INSTRUCTIONS*  
*COASTER FINE FURNITURE*



*Fine Furniture for every stage of life*

**360114**  
**Mirror**



ITEM: **360114**



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

## PARTS IDENTIFICATION

A MIRROR

1PC




B MIRROR SUPPORT  
(PACKED WITH MIRROR)

2PCS



C DRESSER  
\*FROM BOX ITEM # 360113

1PC

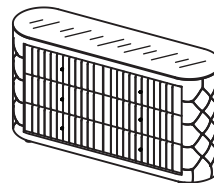

## HARDWARE IDENTIFICATION

1 ALLEN WRENCH  
(Φ4 X 95mm - ZINC)

1PC



2 BOLT  
(Φ6 X 40mm - RBW)

8PCS



3 LOCK WASHER  
(Φ6 - RBW)

8PCS



4 FLAT WASHER  
(Φ7 X 19mm X 2.0 - RBW)

8PCS




### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **360114**

**ASSEMBLY INSTRUCTIONS**

**STEP 1**

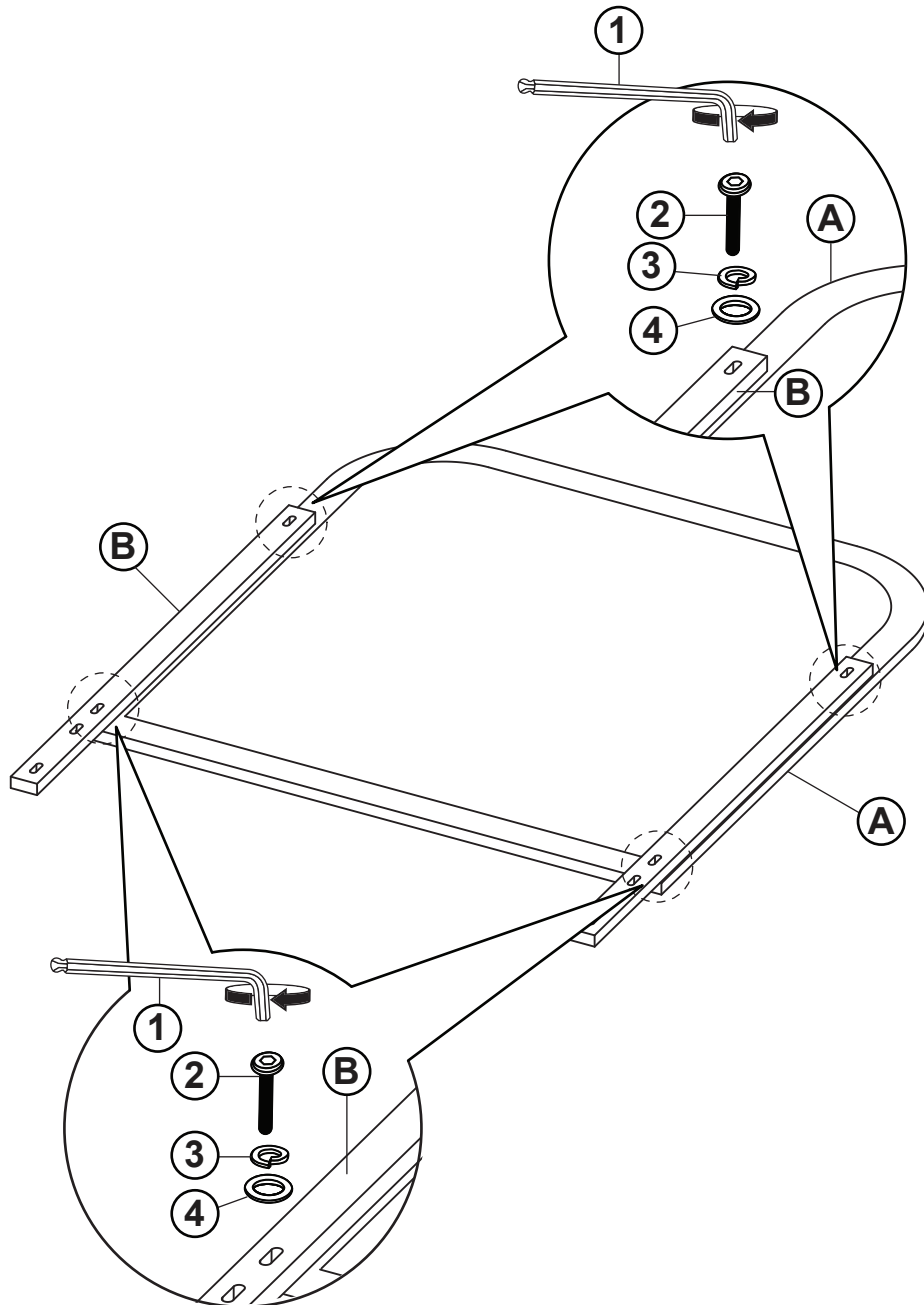


\*Back View

ITEM: **360114**




## ASSEMBLY INSTRUCTIONS


### STEP 2

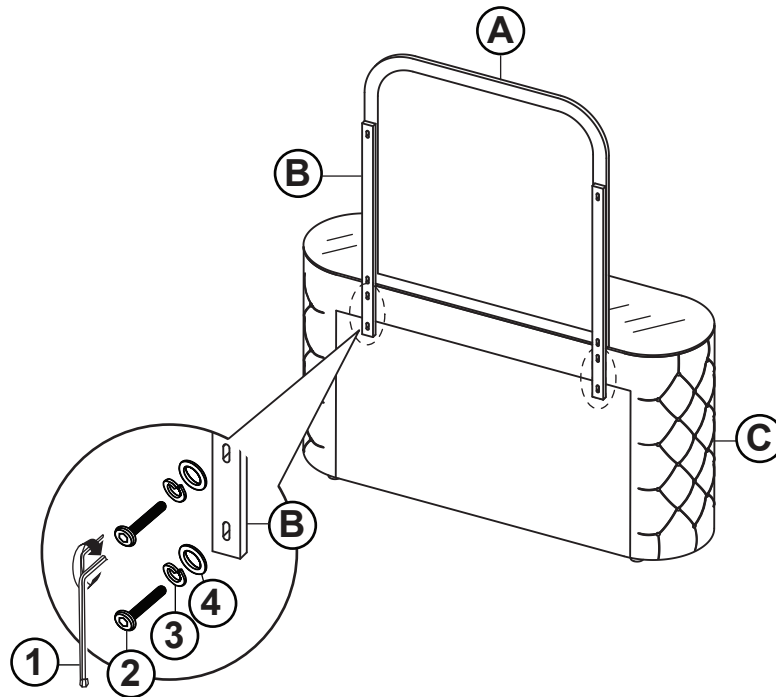

### STEP 3 COMPLETE

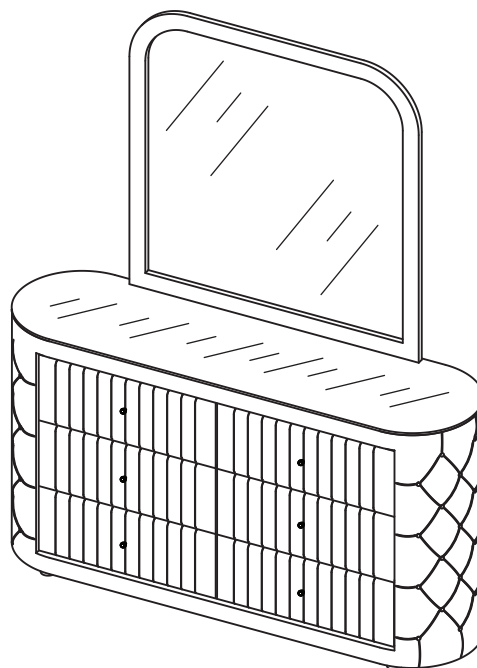

ITEM: 360114

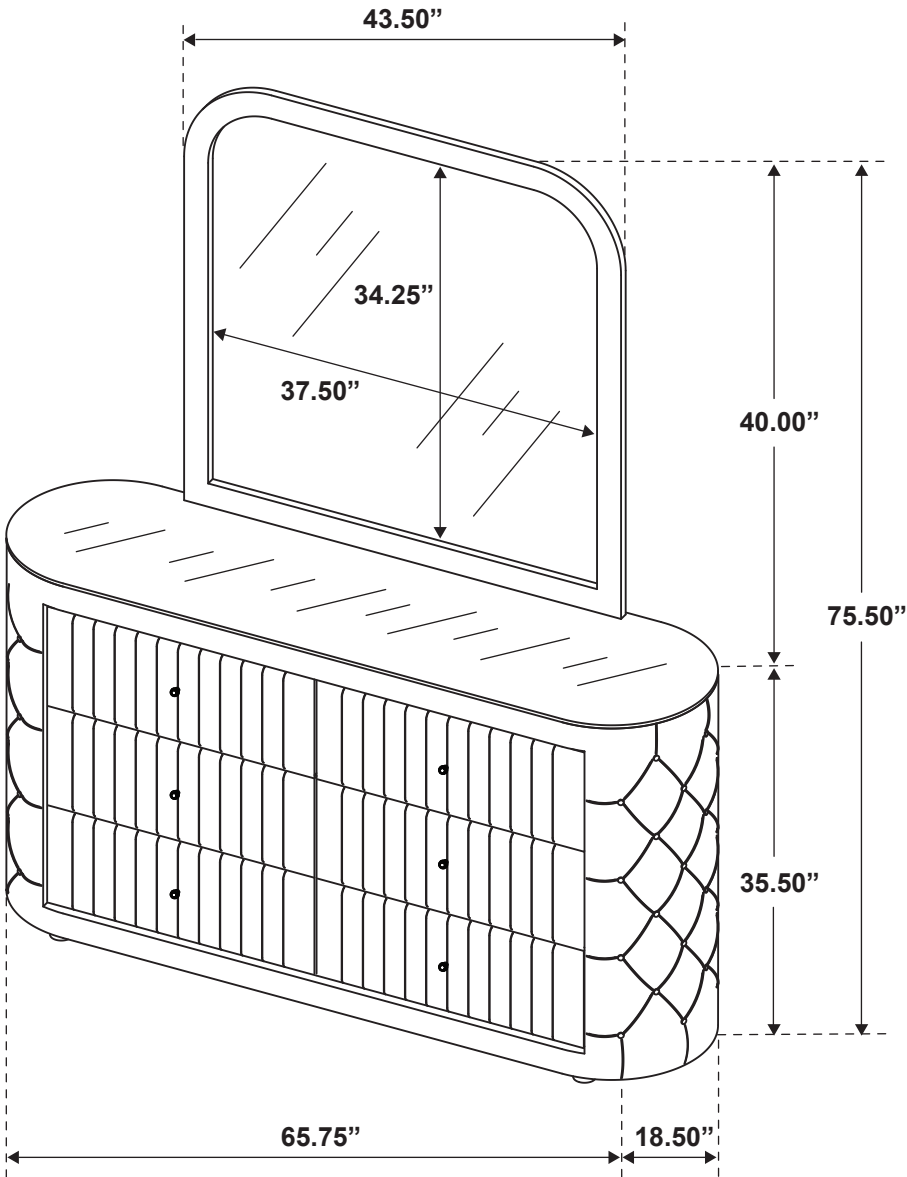

Note: Dimension tolerance  $\pm 5\%$