


Alaterre Furniture




Shelves-Wine Wall Storage

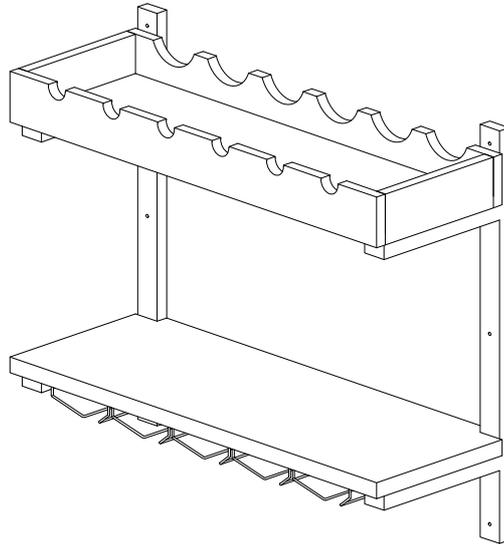

Thank you for purchasing the Shelves-Wine Wall Storage from ALATERRE FURNITURE. We have found it helpful to have a second person present during the assembly process.

Shelves-Wine Wall Storage Assembly Instructions

Parts

NO.	DRAWING	DESCRIPTION	QTY
A		METAL FRAME	2
B		STORAGE	1
C		SHELF	1

NO.	DRAWING	DESCRIPTION	QTY
D		M6x35MM BOLT	8
E		4x60MM SCREW	6
F		ALLEN KEY	1
G		DRYWALL EZ ANCHOR	6

Step 1


Read through these instructions thoroughly before beginning assembly. We have found this to be of great value when assembling this product.

Step 2

Remove all parts and hardware from packing material. Wooden pieces should be placed on a non abrasive surface to prevent damage to the finish


Step 3

Lay Metal Frame Assembly (A) on a non abrasive surface. Attach Storage (B) to Metal Frame (A) using 4-M6x35MM Hex Bolts (D). NOTE: DO NOT TIGHTEN ALL BOLTS AT THIS TIME !

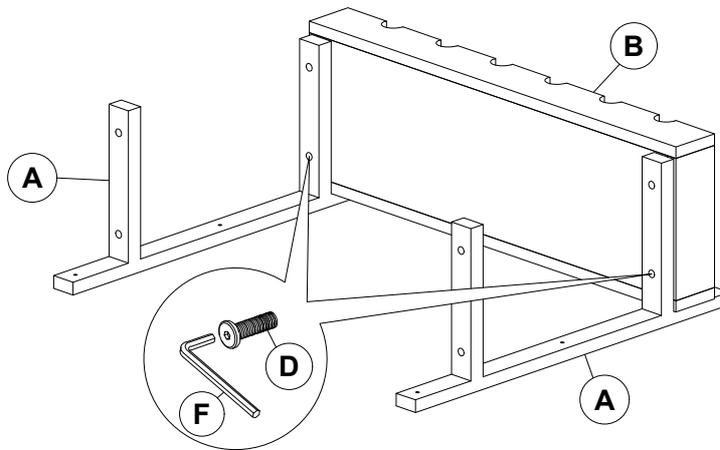

Step 4


Attach Shelf (C) to Metal Frame (A) using 4-M6x35MM Hex Bolts (D). NOTE: TIGHTEN ALL BOLTS AT THIS TIME !

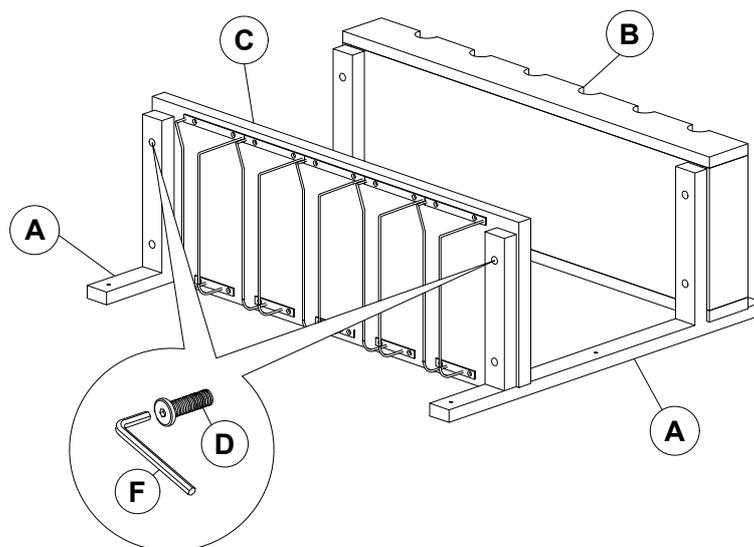

Step 5

Position Wall Storage in desired location. Mark holes where metal frame will be attach to wall. If possible, attach the Wall Storage to a stud (when possible) behind drywall using 6-4x60MM Wood Screws (E).

NOTE: If hole locations do not align with stud, install the Drywall EZ Anchors (G). Tap the EZ Anchor into the drywall up to the thread. Using a Phillips head screw driver, secure the EZ Anchor in the drywall at the desired locations. Attach the Wine Wall Storage to the EZ Anchors using 6-4x60MM Wood Screws.

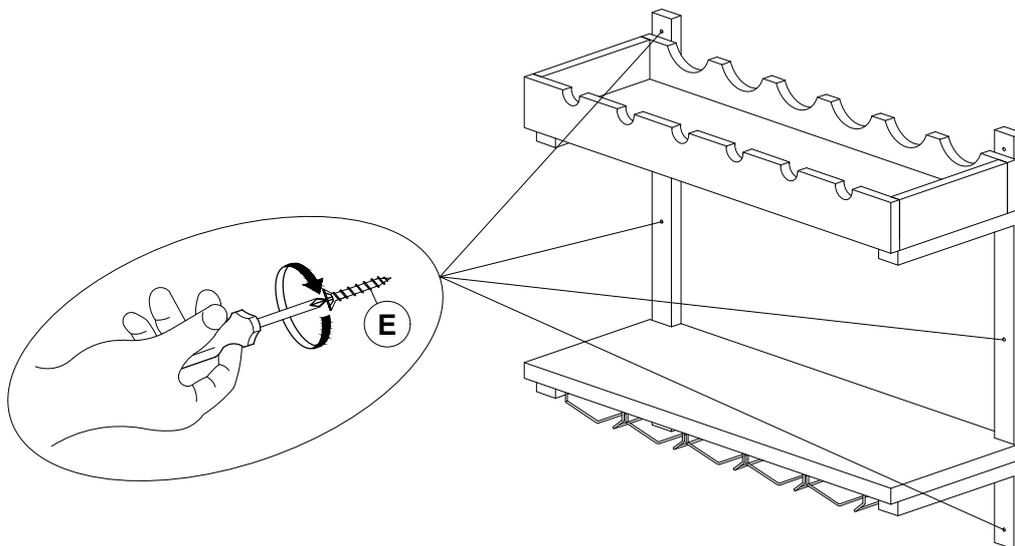

CARE

Clean with a non abrasive cloth using a mild soap. Make sure to wipe dry.

REPLACEMENT PARTS:

For best service, to order replacement parts go to www.alaterrefurniture.com. Use the order form on the website to order your replacement parts. Thank You!