







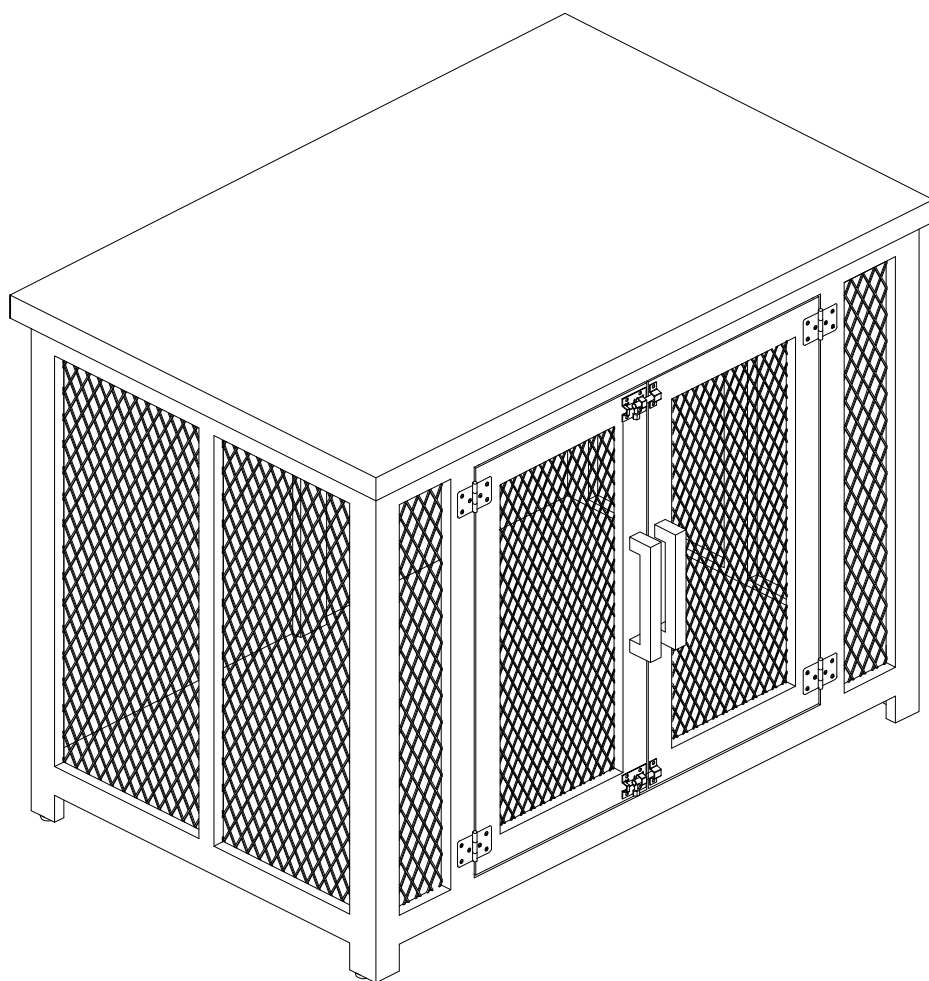


CROSLEY
FURNITURE

Credenza Dog Crate












CF4504

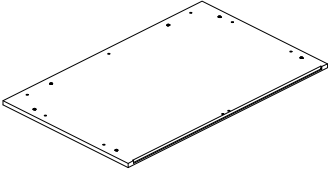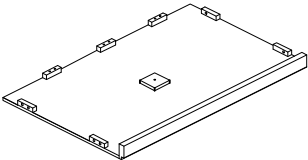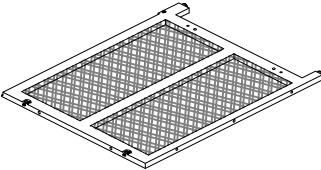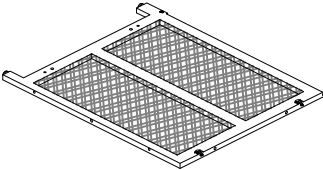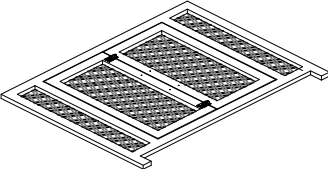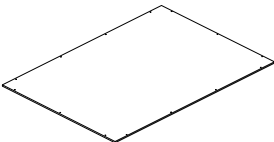

PART LIST


<div>A</div> 	<div>B</div> 	<div>C</div> 	<div>D</div> 
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC
<div>E</div> 	<div>F</div> 	<div>G</div> 	<div>H</div> 
Door Panel 1 PC	Back Panel 2 PCS	Back Partition Rail 1 PC	Support Foot 1 PC

HARDWARE LIST
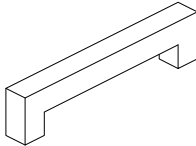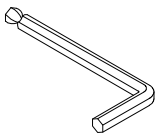
<div>#1</div>  <p>Ø8 x 30mm</p>	<div>#2</div>  <p>Ø1/4" x 1-1/4"</p>	<div>#3</div>  <p>Ø5/32" x 3/4"</p>	<div>#4</div> 	<div>#5</div> 
<p>Wood Dowel</p> <p>22 PCS (Extra 1)</p>	<p>Bolt</p> <p>11 PCS (Extra 1)</p>	<p>Small Bolt</p> <p>4 PCS</p>	<p>Spring Washer</p> <p>11 PCS (Extra 1)</p>	<p>Flat Washer</p> <p>11 PCS (Extra 1)</p>
<div>#6</div>  <p>Ø3 x 15mm</p>	<div>#7</div>  <p>Ø3 x 12mm</p>	<div>#8</div> 	<div>#9</div> 	<div>#10</div> 
<p>Screw</p> <p>27 PCS (Extra 1)</p>	<p>Short Screw</p> <p>8 PCS (Extra 1)</p>	<p>Thumb Latch</p> <p>2 PCS</p>	<p>Handle</p> <p>2 PCS</p>	<p>Allen Wrench</p> <p>1 PC</p>
<div>#11</div>  <p>Safety Strap Kit</p> <p>1 SET</p>				

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Please do not use tools to assemble this unit unless specifically indicated.

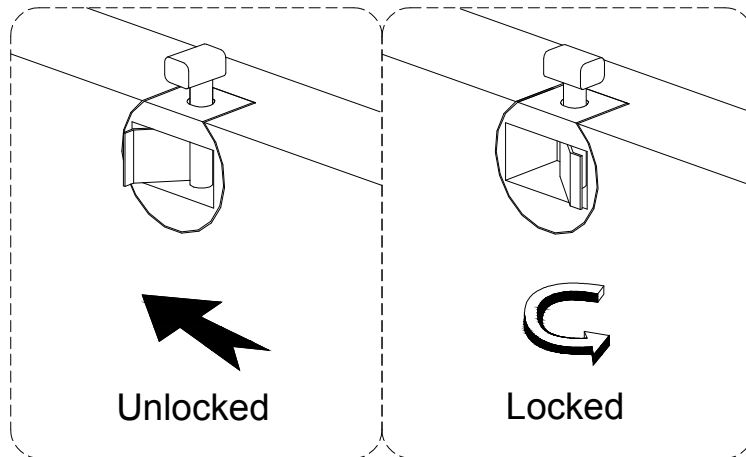


Reference the images above any time the instructions state "lock the hardware".
 Note: Be sure to check all hardware is locked when completed.

Step 1. Attach left panel (part C) and right panel (part D) to bottom frame (part B) using wood dowels (part #1), bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #10). Attach support foot (part H) to bottom panel (part B).

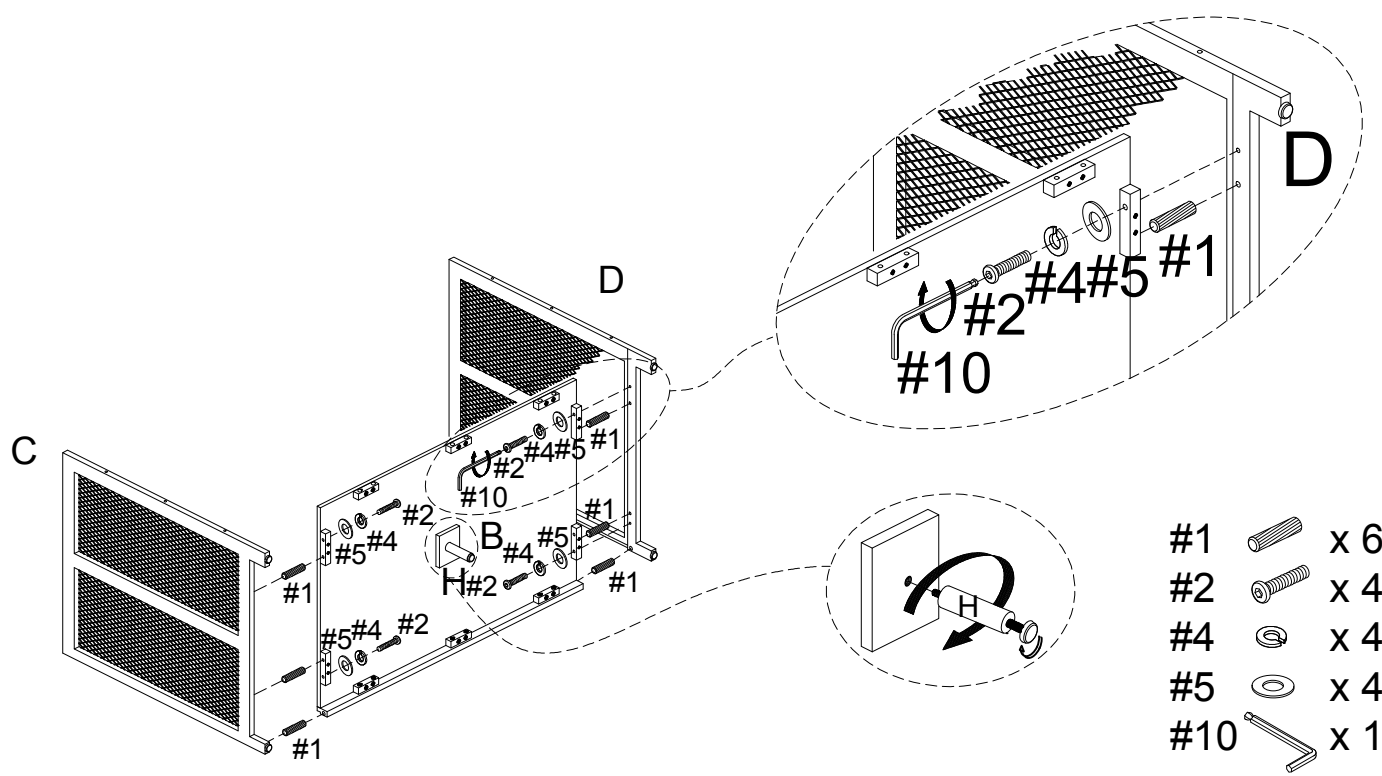


Step 2. Lay door panel (part E) down on a soft flat surface, such as carpet, as shown below. Attach thumb latches (part #8) to door panel (part E) using short screws (part #7) and phillips head screwdriver.

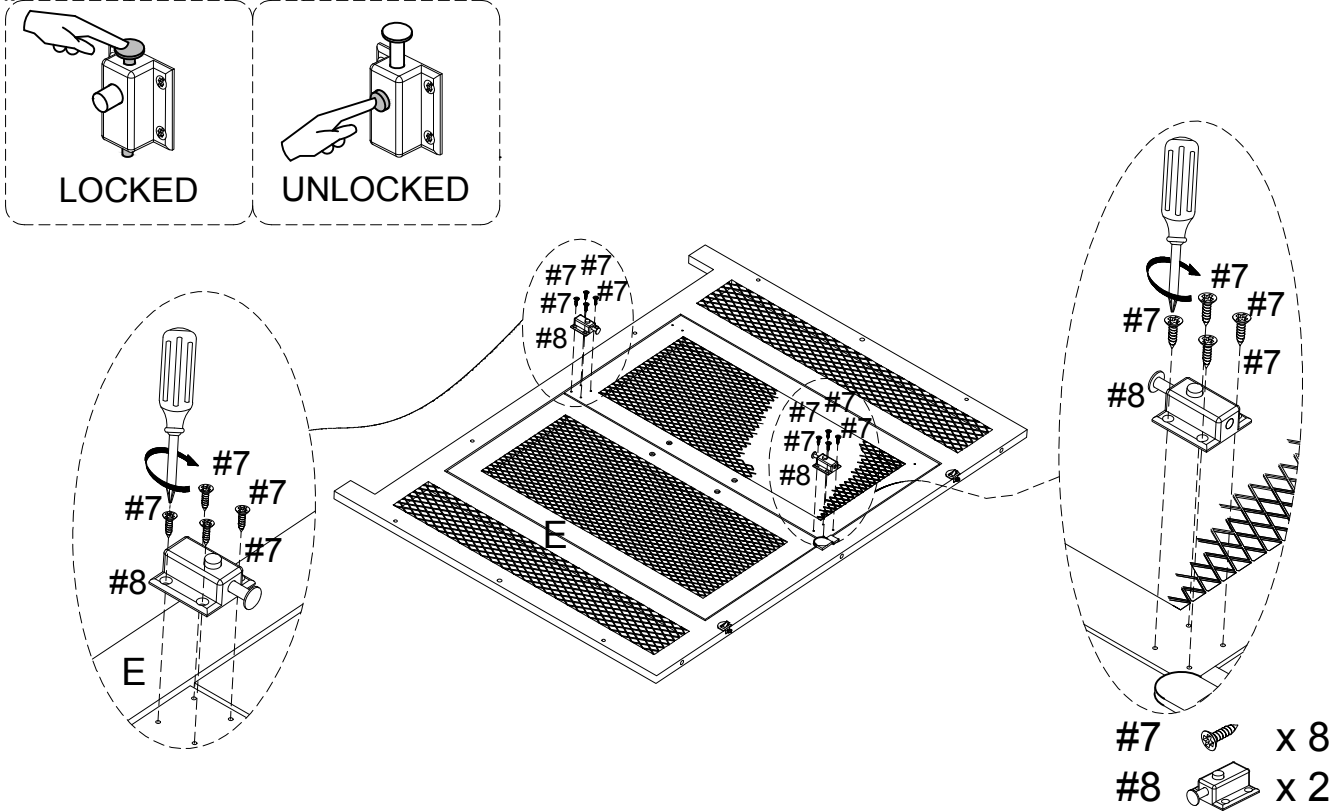


Step 3. Attach door panel (part E) to assembled unit (parts B,C & D) using wood dowels (part #1), bolts (part #2), spring washers (part #4), flat washers (part #5) and allen wrench (part #10).

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

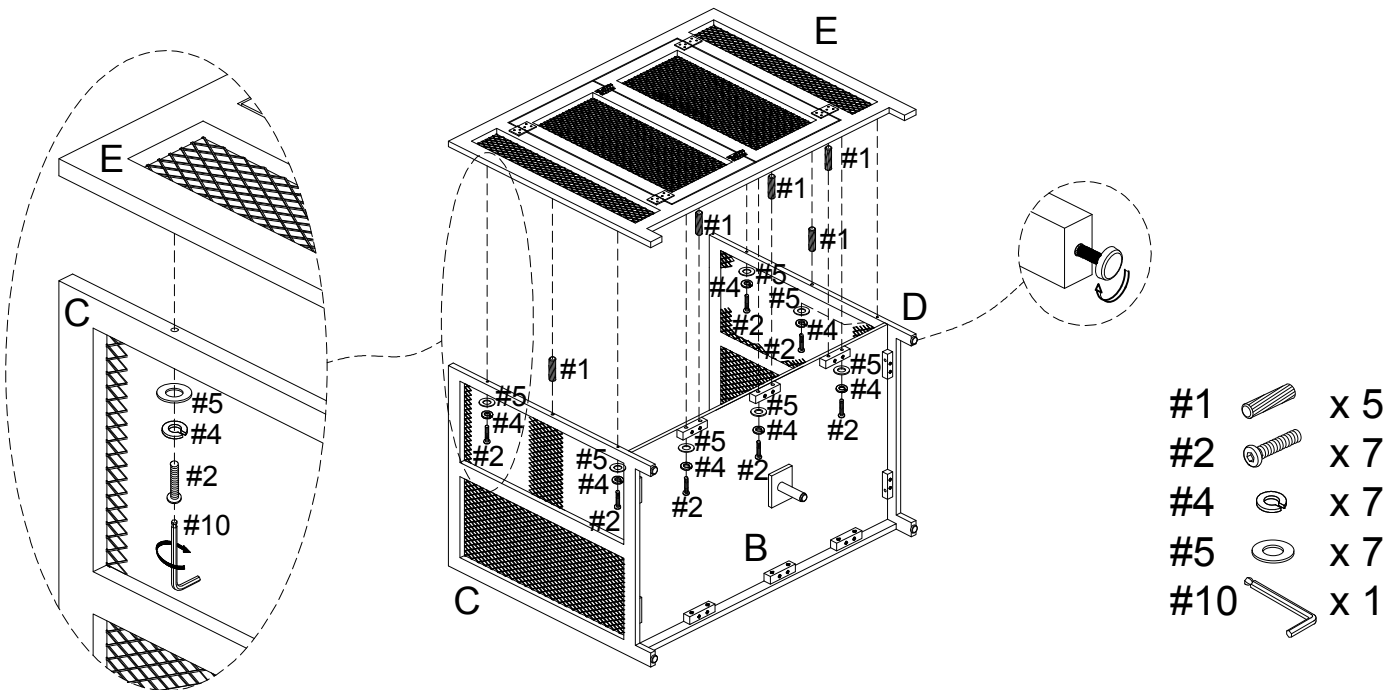


Step 4. Carefully turn unit upright. Attach back partition rail (part G) to bottom panel (part B) using wood dowels (part #1). Attach top panel (part A) to assembled unit (parts C, D, E & G) using wood dowels (part #1) and lock the hardware.

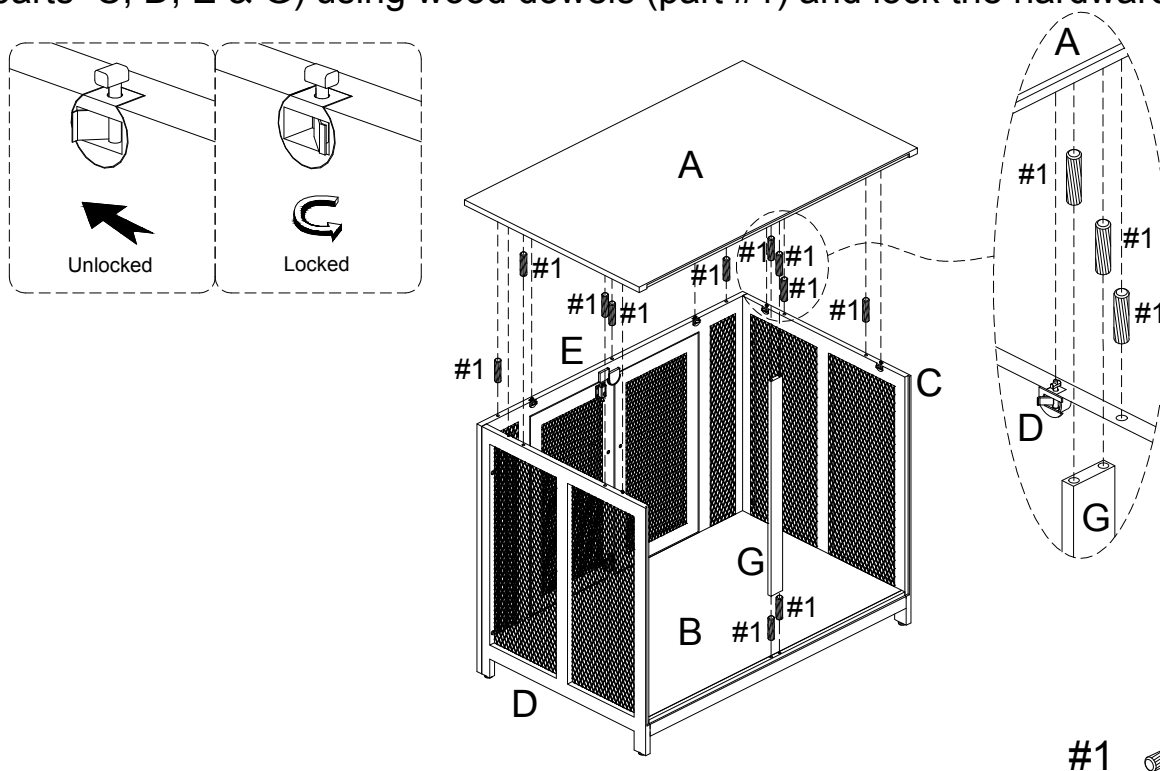




Step 5. Attach back panels (part F) to assembled unit (parts A, B, C, D & G) using screws (part #6) and phillips head screwdriver.


Important: Safety strap kit (part #11) must be installed to prevent tipping, damage and / or injury.

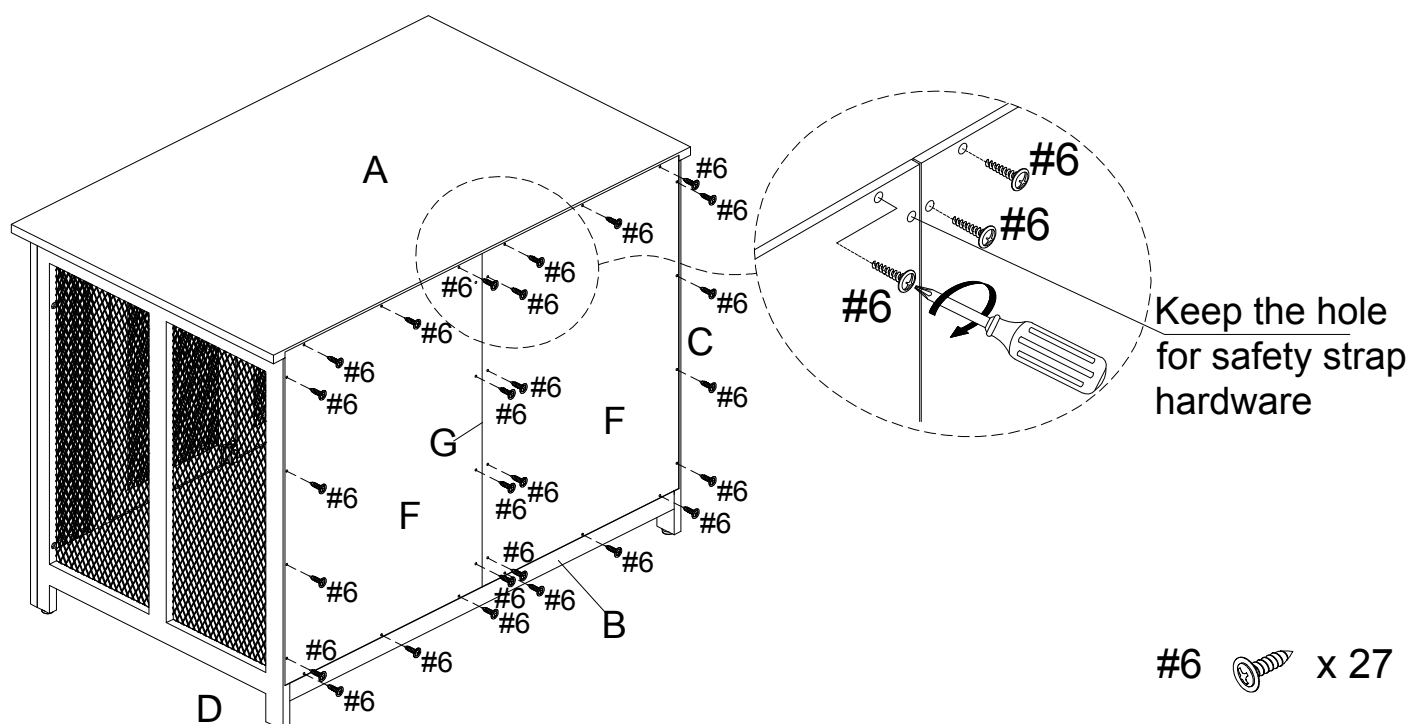




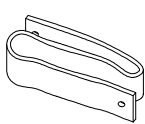


Step 6. Attach handles (part #9) to door panel (part E) using small bolts (part #3) and phillips head screwdriver.

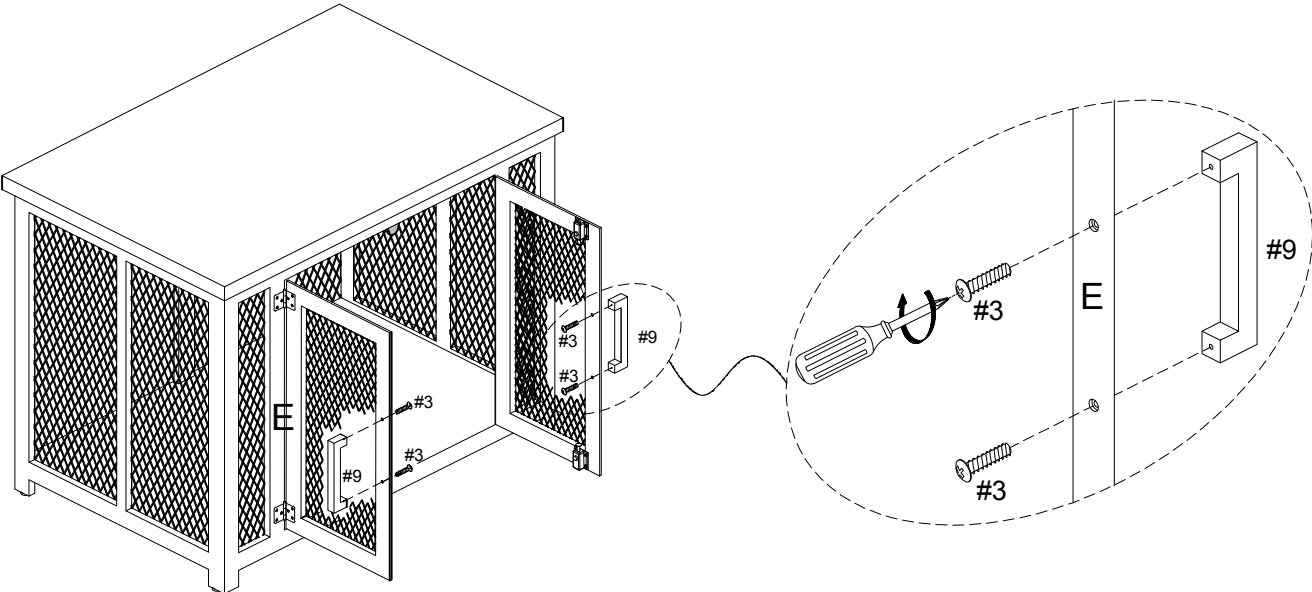

- #3  x 4
- #9  x 2

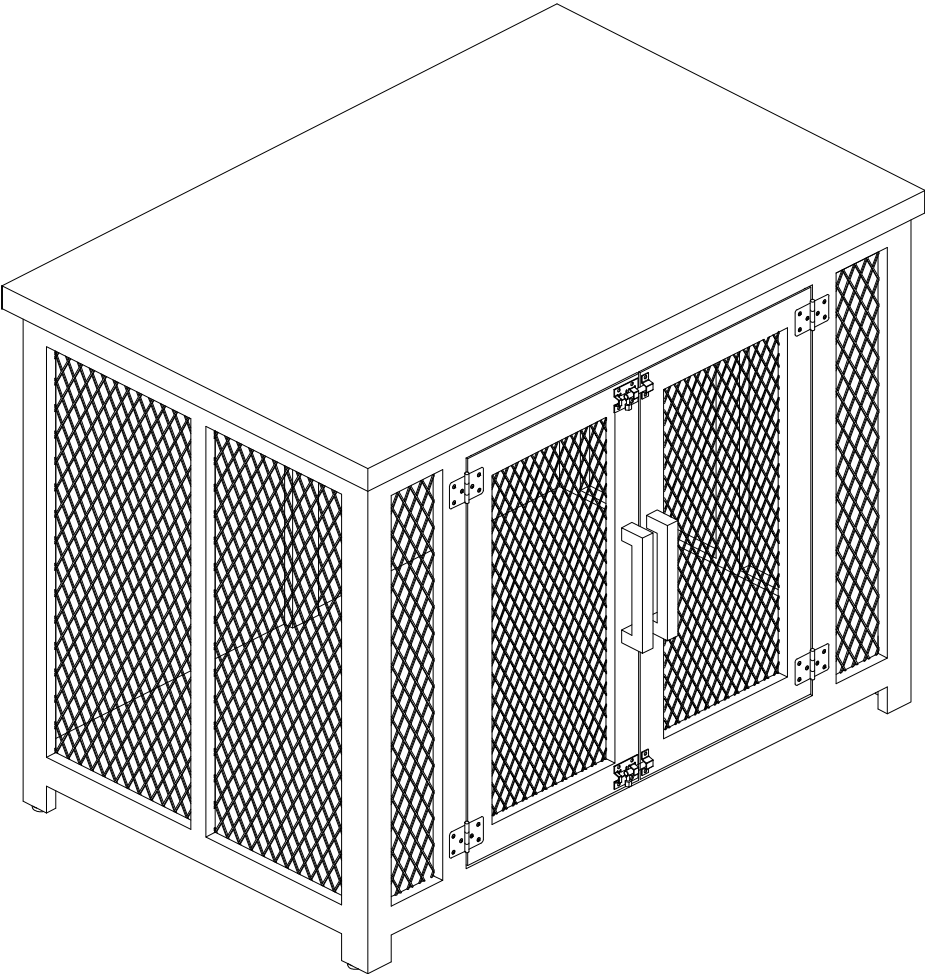


#11	A	B	C	D	E
			 Ø8*3/4"	 Ø8*1-1/2"	
Safety Strap Kit	Wall Anchor	Washer	Short Screw	Long Screw	Safety Wall Strap
1 SET	1 PC	2 PCS	1 PC	1 PC	1 PC

SAFETY WALL STRAP INSTALLATION


Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) through washer (B) and safety wall strap (E) and attach to back panel (part F) using phillips head screwdriver.
2. Drill a 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in back panel (part F) where the safety wall strap (E) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) through washer (B) and safety wall strap (E) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

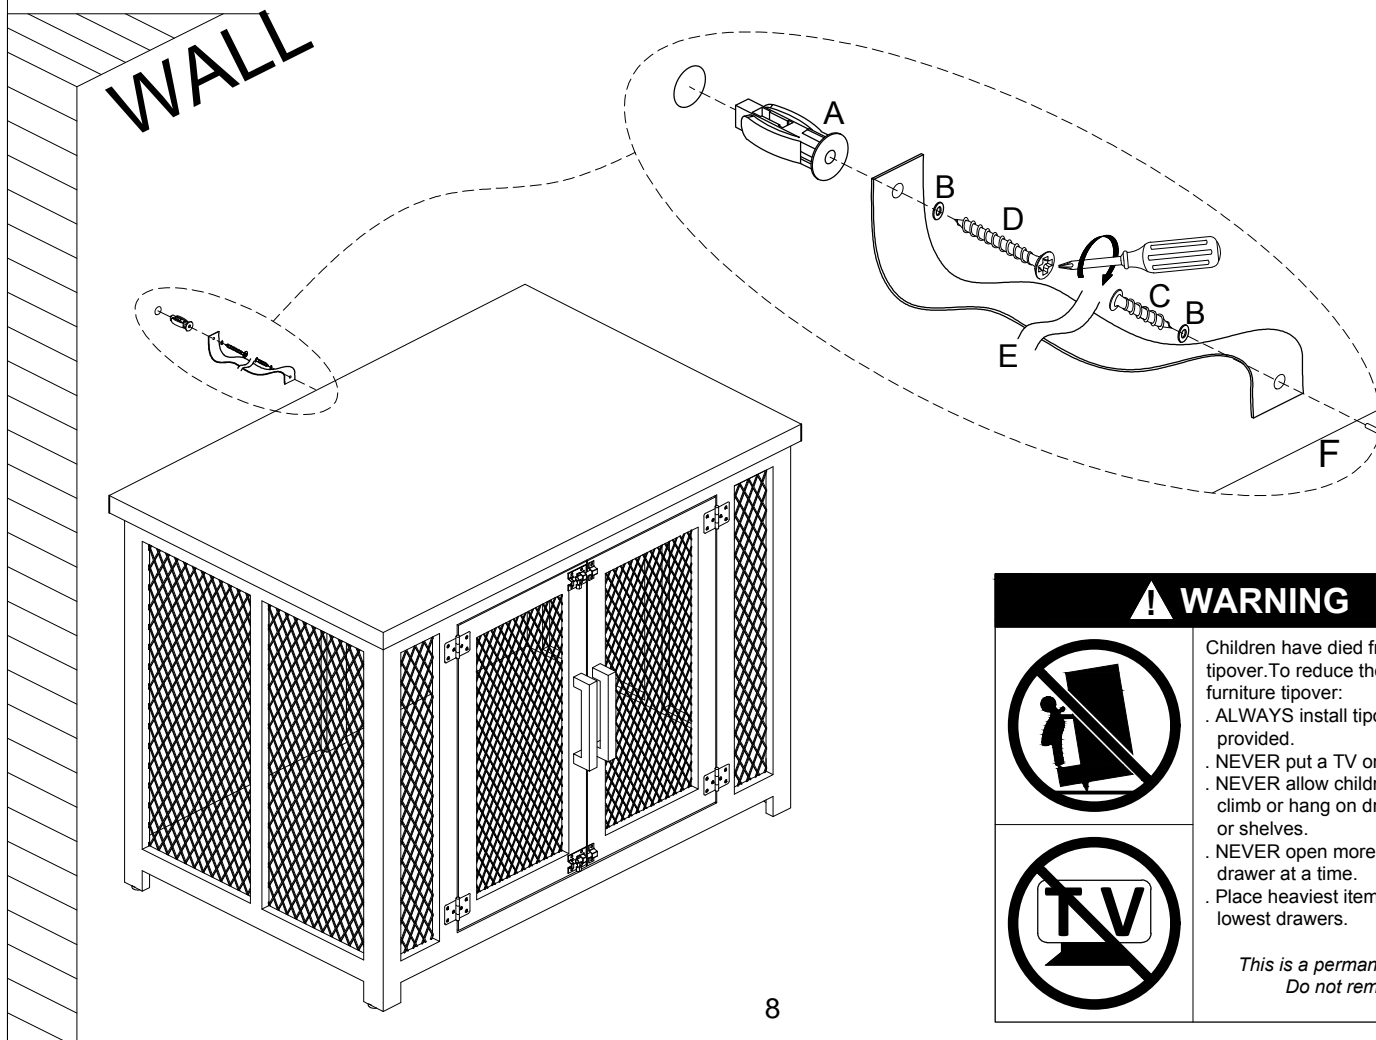


⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*