



9300148/9300157

ASSEMBLY INSTRUCTIONS

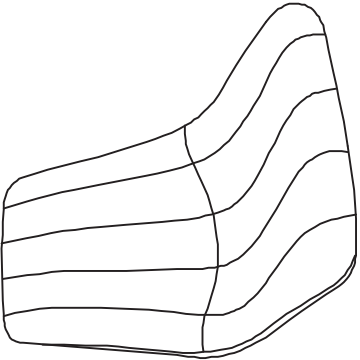
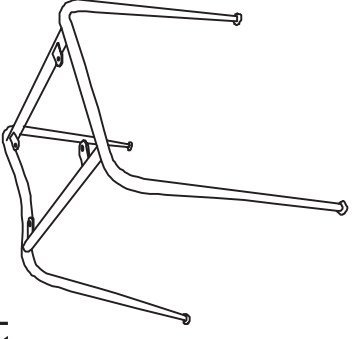
ROBERT KD

PU/FABRIC DINING

SIDE CHAIR

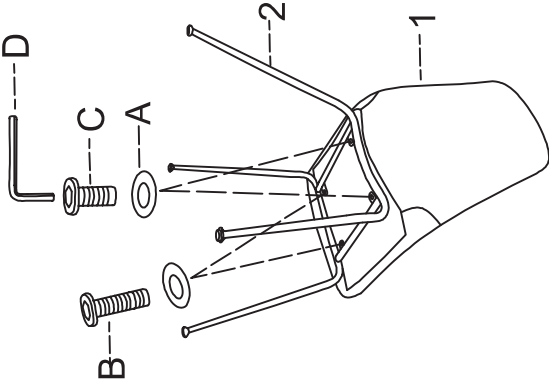
HARDWARE			
Ax4	Bx2	Cx2	Dx1
			
M6	M6X30MM	M6X16MM	M6

PARTS

1x1	2x1
	

The more vertical and higher legs are front legs and more slanted legs are rear legs. Make sure to screw the straight part of seat to front legs and the curved part of seat to the rear legs.

(1)



(2)

