




ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

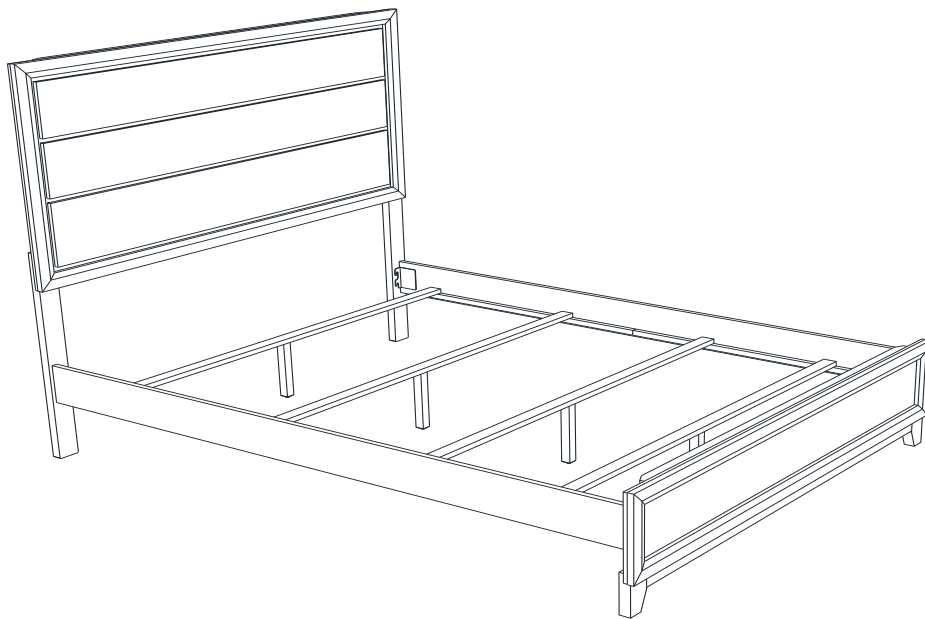

Fine Furniture for every stage of life

212421Q (B1&B2) Queen Bed

REVISION 0 : 10/16/2017
REVISION 1 : 08/09/2018
REVISION 2 : 08/28/2018
REVISION 3 : 01/02/2019
REVISION 4 : 12/13/2019

ITEM: 212421Q (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD
PANEL

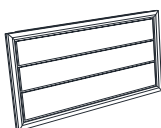


1PC

B FOOTBOARD

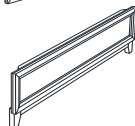


1PC

C RIGHT
HEADBOARD LEG




1PC

D LEFT
HEADBOARD
LEG



1PC

E BED SLAT



4PCS

F BED SLAT
SUPPORT WITH
LEVELER



4PCS

B2 (BOX 2)

G BED RAIL




2PCS

HB 212421Q(B1)
FROM BOX 1
HEADBOARD
COMPLETE



1PC

B 212421Q(B1)
FROM BOX 1
FOOTBOARD



1PC

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 212421Q (B1)

1 BOLT
(M6 x 30mm - BLK)



6PCS

2 LOCK WASHER
(1/4" - BLK)



6PCS

3 FLAT WASHER
(1/4"ID x 13mm - BLK)



6PCS

4 SMALL ALLEN
WRENCH
(M4 x 60mm - BLK)



1PC

5 BIG ALLEN
WRENCH
(M5 x 65mm - BLK)



1PC

6 FLAT HEAD
SCREW
(M4 x 32mm - RBW)



8PCS

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 212421Q (B1&B2)



ASSEMBLY INSTRUCTIONS


STEP 1

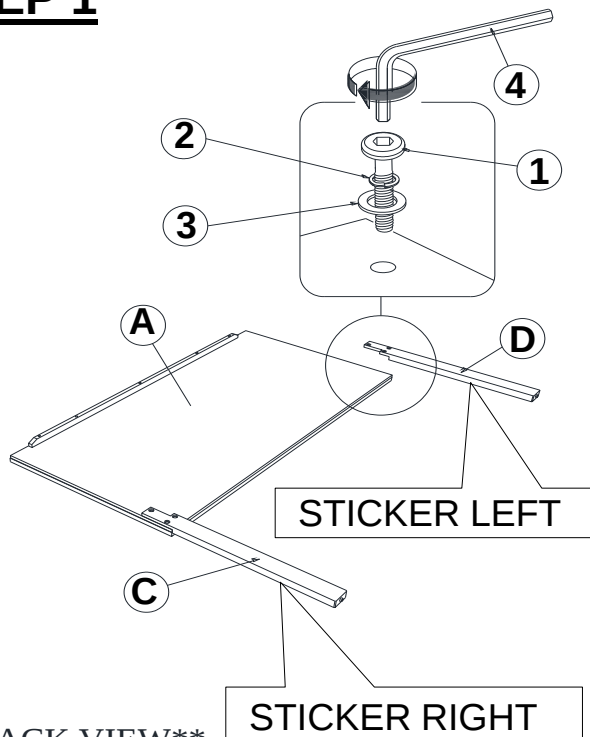


****BACK VIEW****

Note: Please take note of the marking sticker (L & R) on the headboard legs.

STEP 2

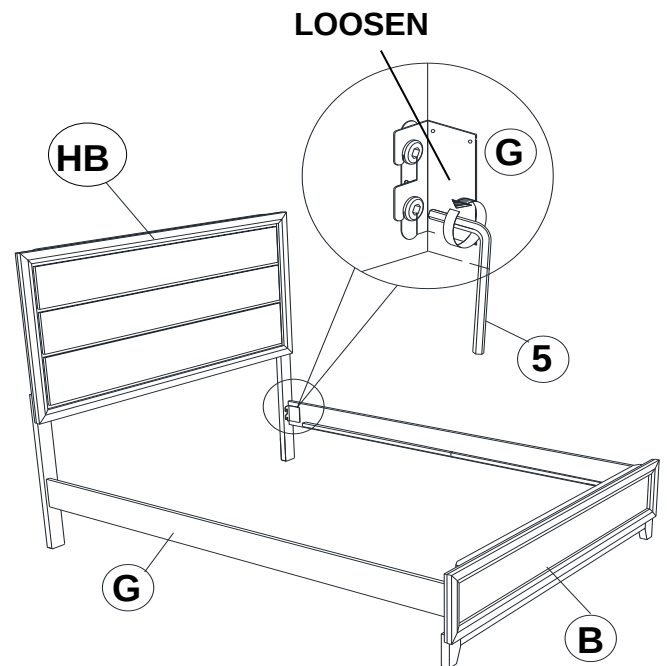

STEP 3

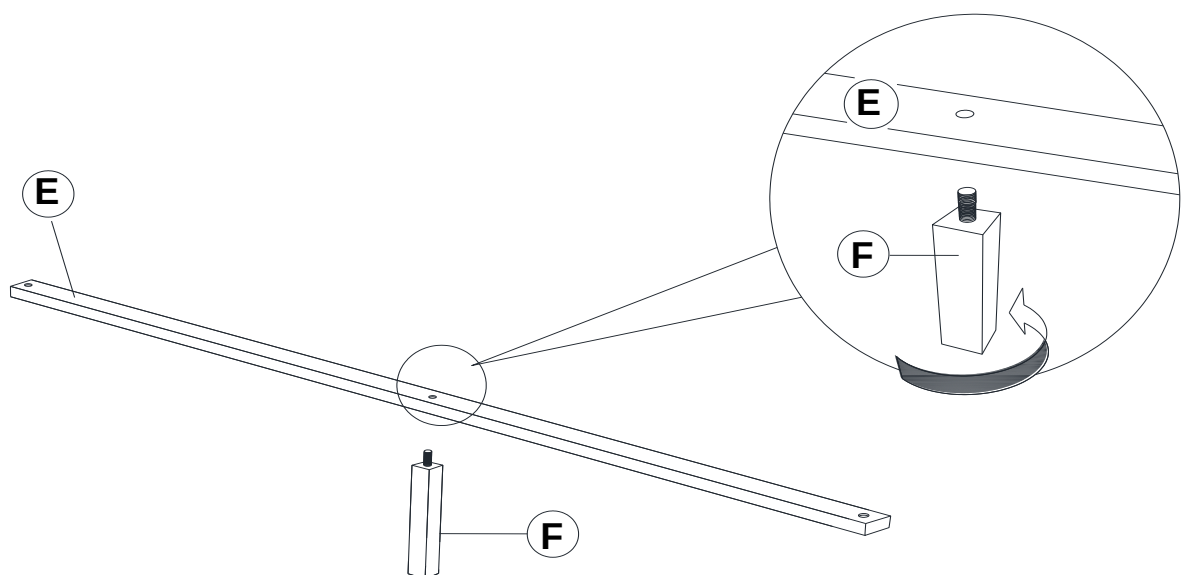


ITEM: **212421Q (B1&B2)**




ASSEMBLY INSTRUCTIONS

STEP 4

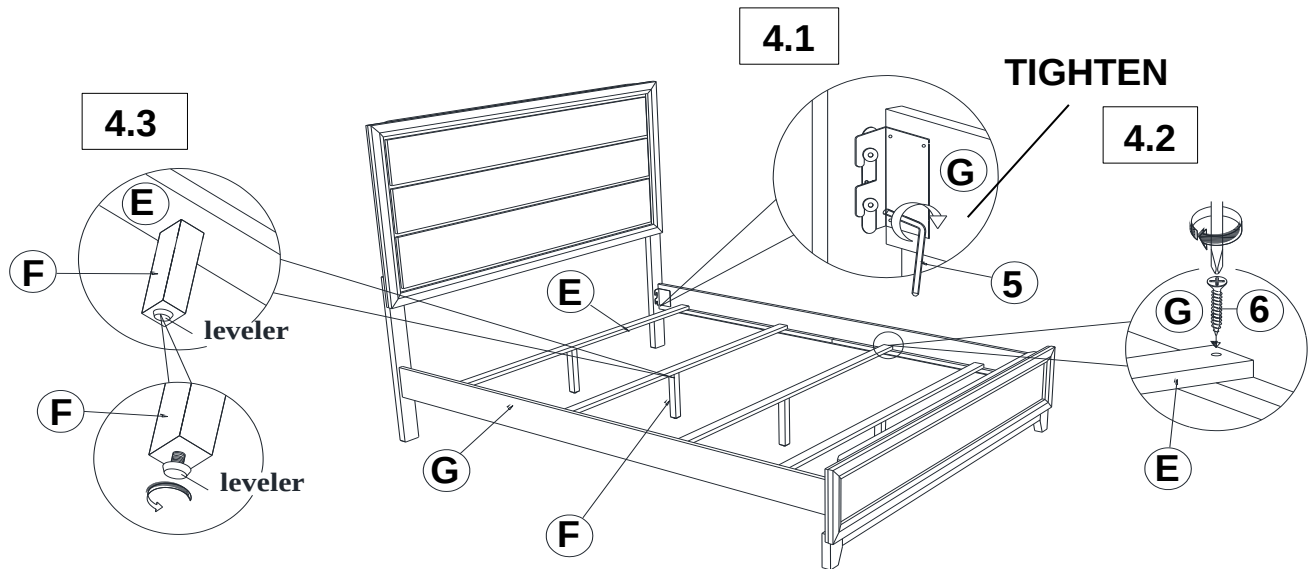


STEP 5 COMPLETE

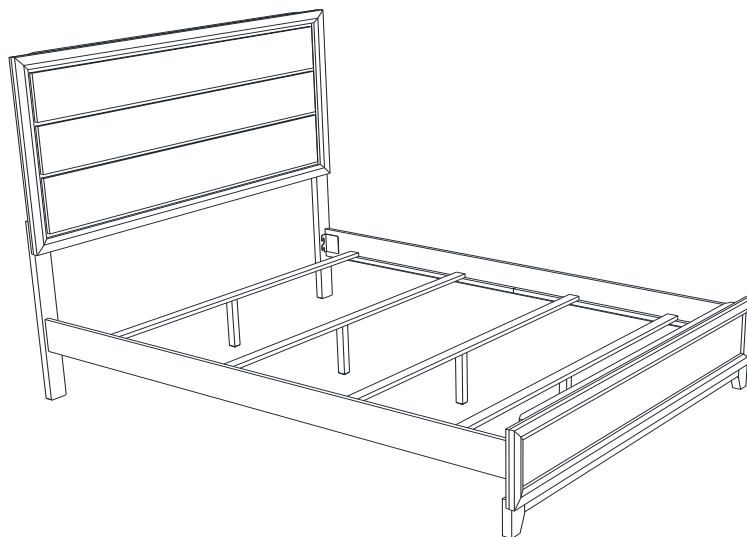

ITEM: 212421Q (B1&B2)



Inner Size : 60.75"W X 81.00"D

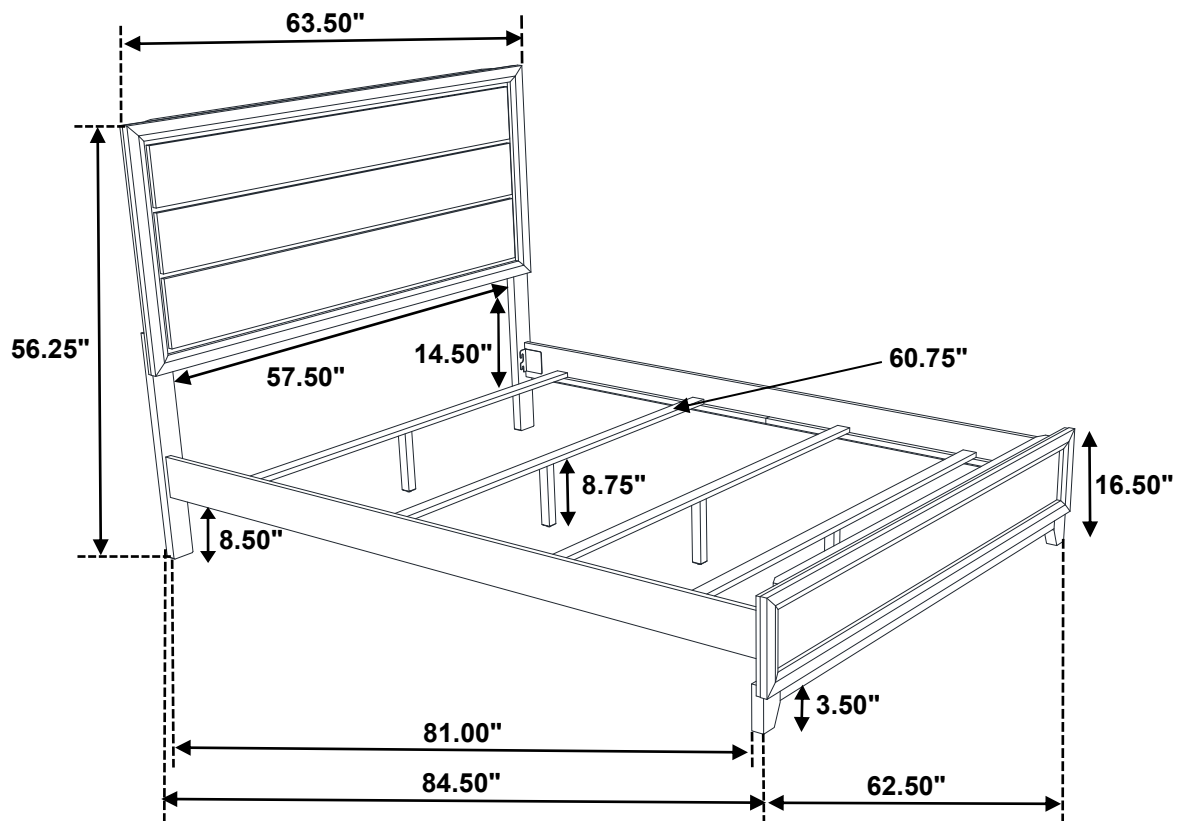

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

212422
Nightstand

REVISION 0 : 10/16/2017
REVISION 1 : 12/26/2017
REVISION 2 : 08/09/2018
REVISION 3 : 01/02/2019
REVISION 4 : 12/13/2019

ITEM: **212422**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A NIGHTSTAND

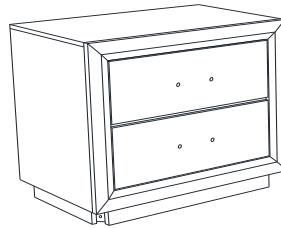

1PC


B LEG



4PCS

HARDWARE IDENTIFICATION

1 BOLT
(M6 x 50mm - BLK)



4PCS

2 LOCK WASHER
(1/4" - BLK)



4PCS

3 FLAT WASHER
(1/4"ID x 19mm - BLK)



4PCS

4 ALLEN WRENCH
(M4 x 60mm - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **212422**




ASSEMBLY INSTRUCTIONS


STEP 1

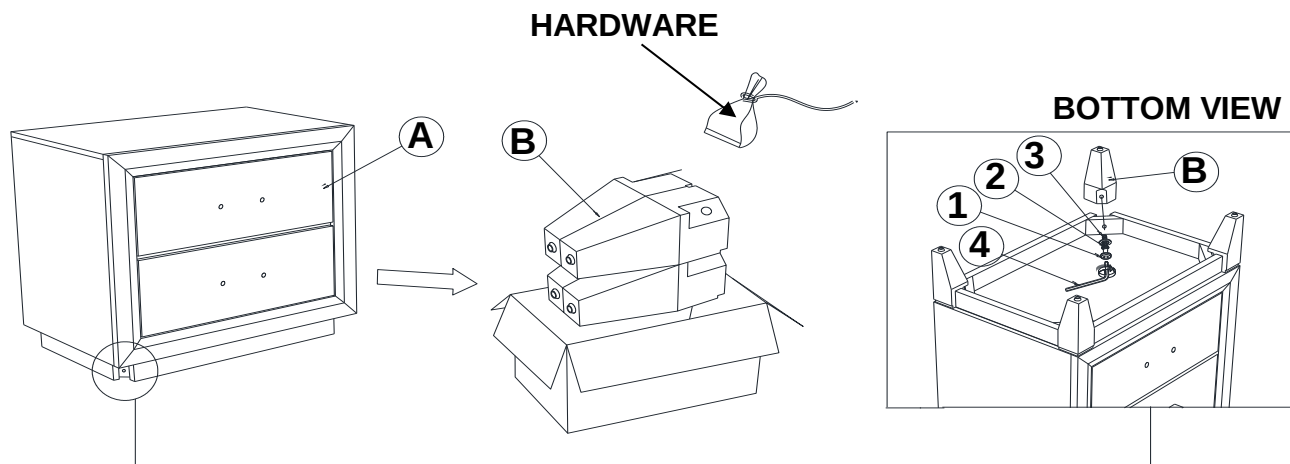

STEP 2

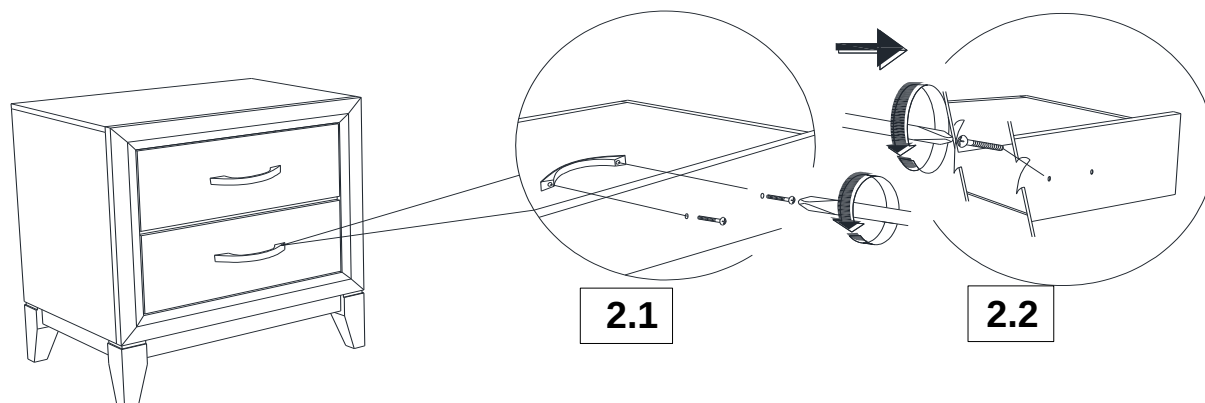


STEP 3 COMPLETE

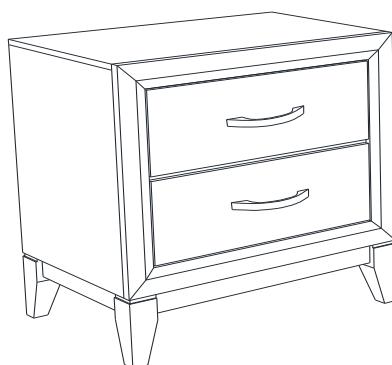

ITEM: **212422**



Inner Size of Drawer : 17.00"W x 12.50"D x 4.00"H x 0.25"T

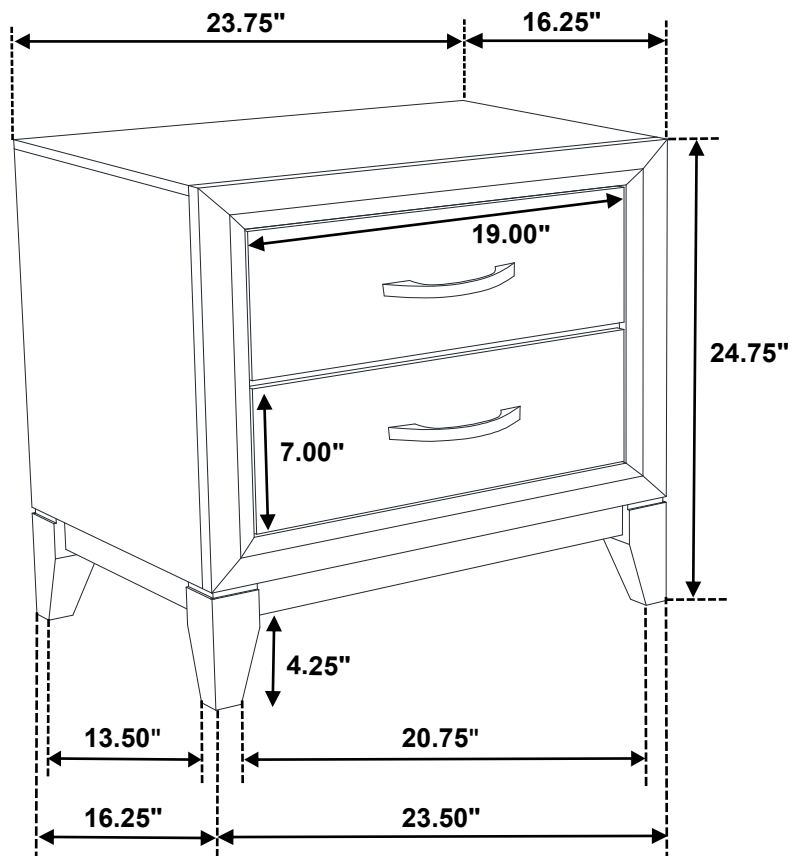

Note : Dimension tolerance $\pm$ 5%

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

212423
Dresser

REVISION 0 : 10/16/2017
REVISION 1 : 12/26/2017
REVISION 2 : 08/09/2018
REVISION 3 : 01/02/2019
REVISION 4 : 12/13/2019

ITEM:212423



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

5 MINUTES

PARTS IDENTIFICATION

A

DRESSER

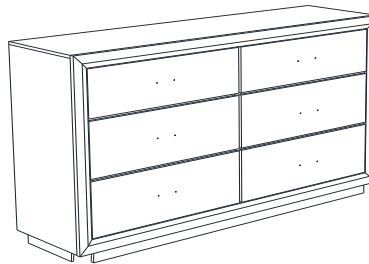

1PC

B

LEG



4PCS

C

CENTER SUPPORT LEG
WITH LEVELER




1PC

HARDWARE IDENTIFICATION

1

BOLT
(M6 x 50mm - BLK)



4PCS

2

LOCK WASHER
(1/4" - BLK)



4PCS

3

FLAT WASHER
(1/4"ID x 19mm - BLK)



4PCS

4

ALLEN WRENCH
(M4 x 60mm - BLK)



1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **212423**




ASSEMBLY INSTRUCTIONS

STEP 1

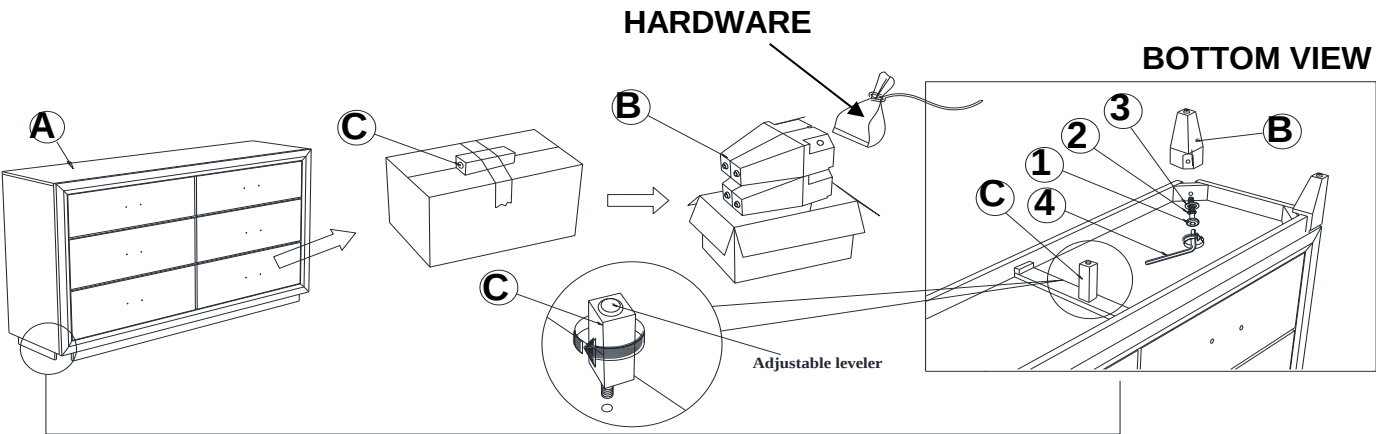

STEP 2

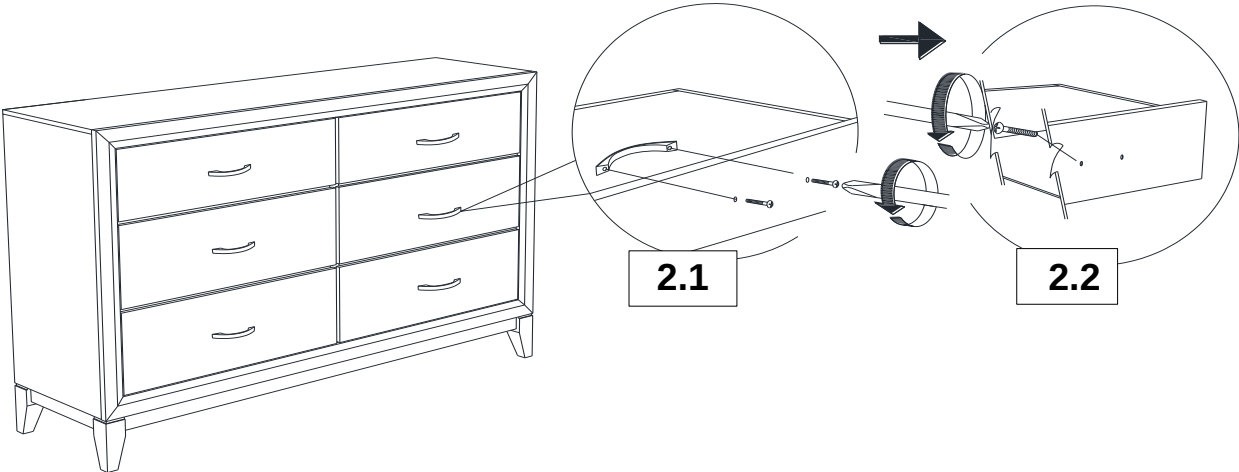

STEP 3
COMPLETE





Technical drawing of the 6-drawer dresser showing dimensions. The overall width is 58.00". The depth is 16.50". The overall height is 36.75". The dresser features six drawers arranged in two columns of three. The top drawer in the left column has a height of 7.75", the middle drawer is 9.00", and the bottom drawer is 9.00". The top drawer in the right column has a width of 26.50". The base of the dresser is 4.25" high. The front feet are 13.50" wide, and the back feet are 16.25" wide. The overall width at the base is 55.25".

COASTERFURNITURE.COM

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

212424
Mirror

REVISION 0 : 10/16/2017
REVISION 1 : 08/09/2018
REVISION 2 : 08/29/2018
REVISION 3 : 01/02/2019
REVISION 4 : 12/13/2019

ITEM: **212424**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

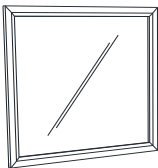


1PC

**B DRESSER FROM
BOX ITEM #212423**



1PC


**C MIRROR SUPPORT
(PACK WITH MIRROR)**



2PCS

HARDWARE IDENTIFICATION

**1 FLAT HEAD SCREW
(M4 x 32mm - RBW)**




12PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


STEP 1

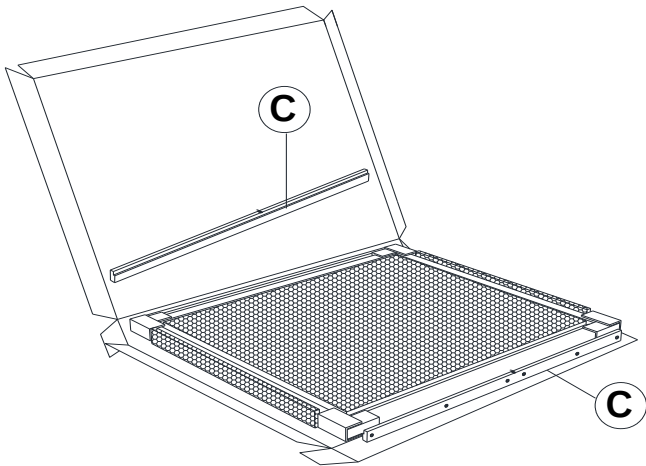


STEP 2

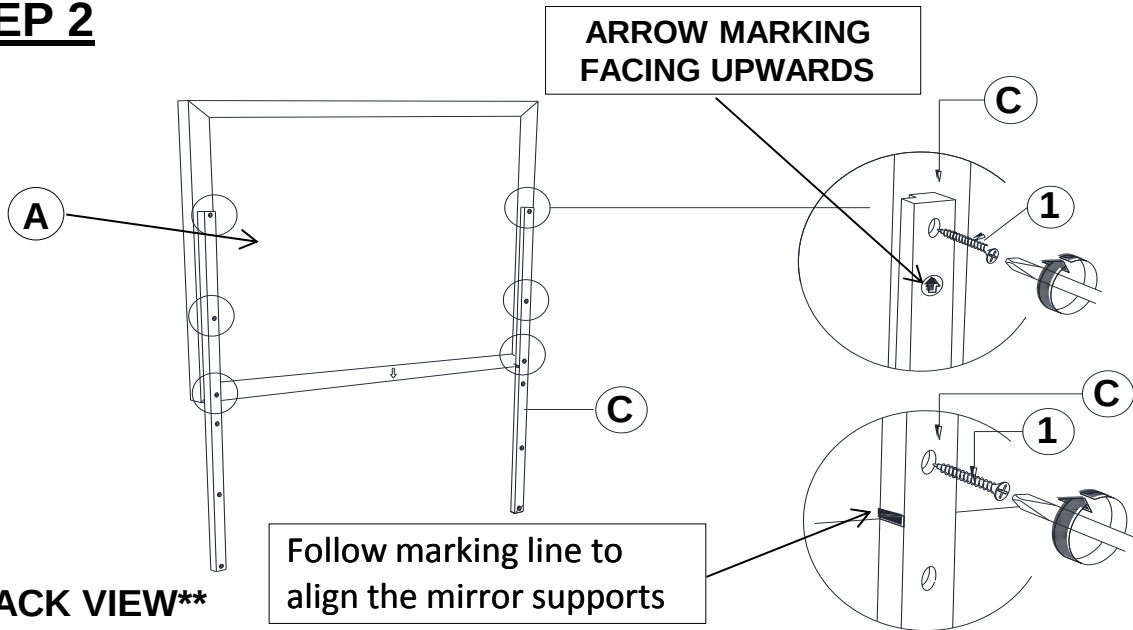

STEP 3

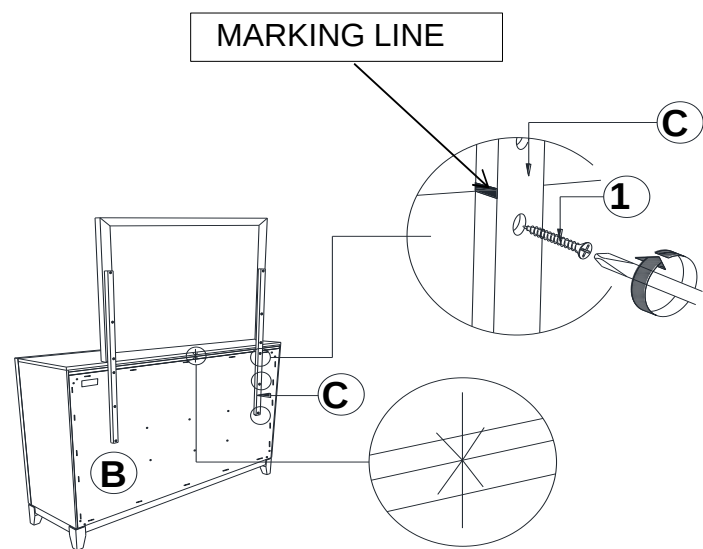


STEP 4
COMPLETE

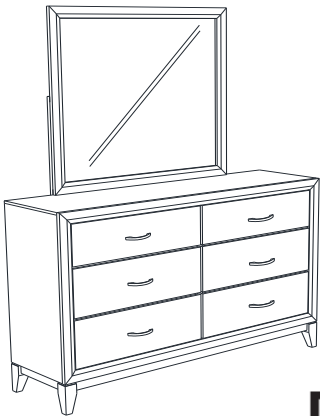

REMARK:
ARROW MARKING MUST BE ALIGNED

ITEM:212424

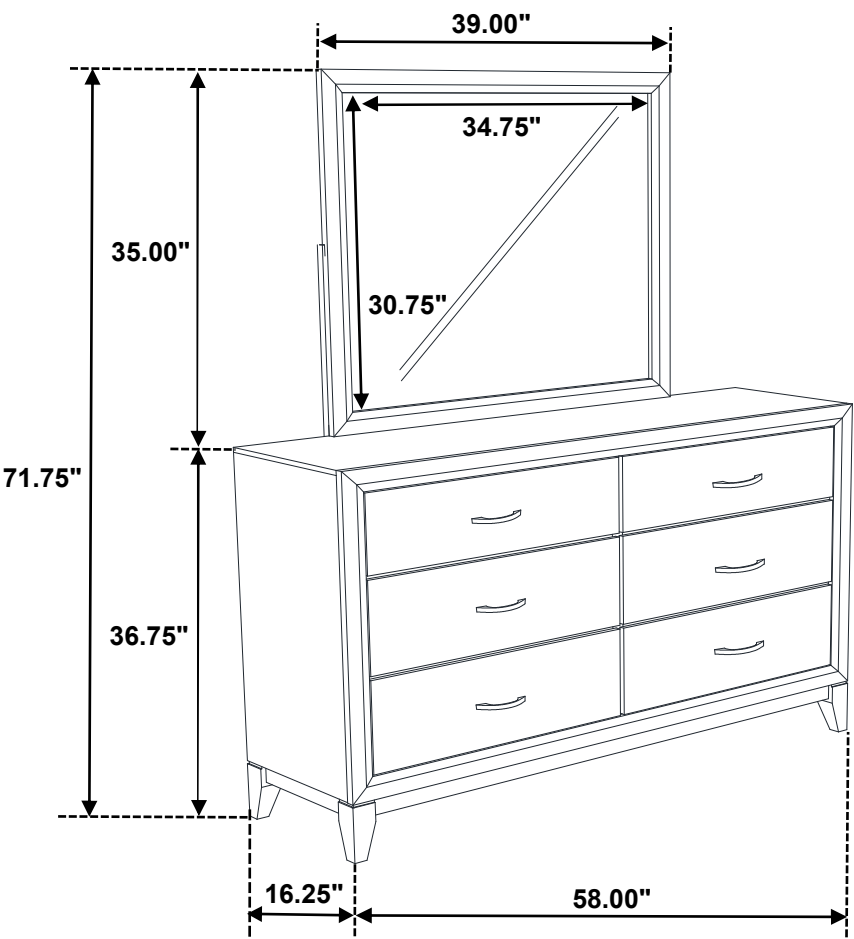

Note : Dimension tolerance $\pm$ 5%