


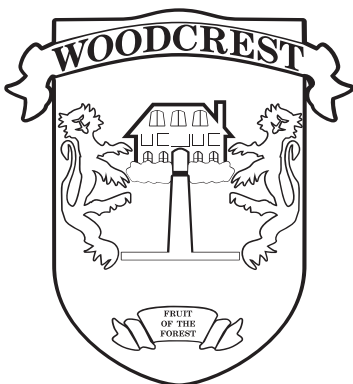
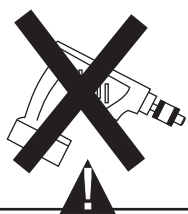


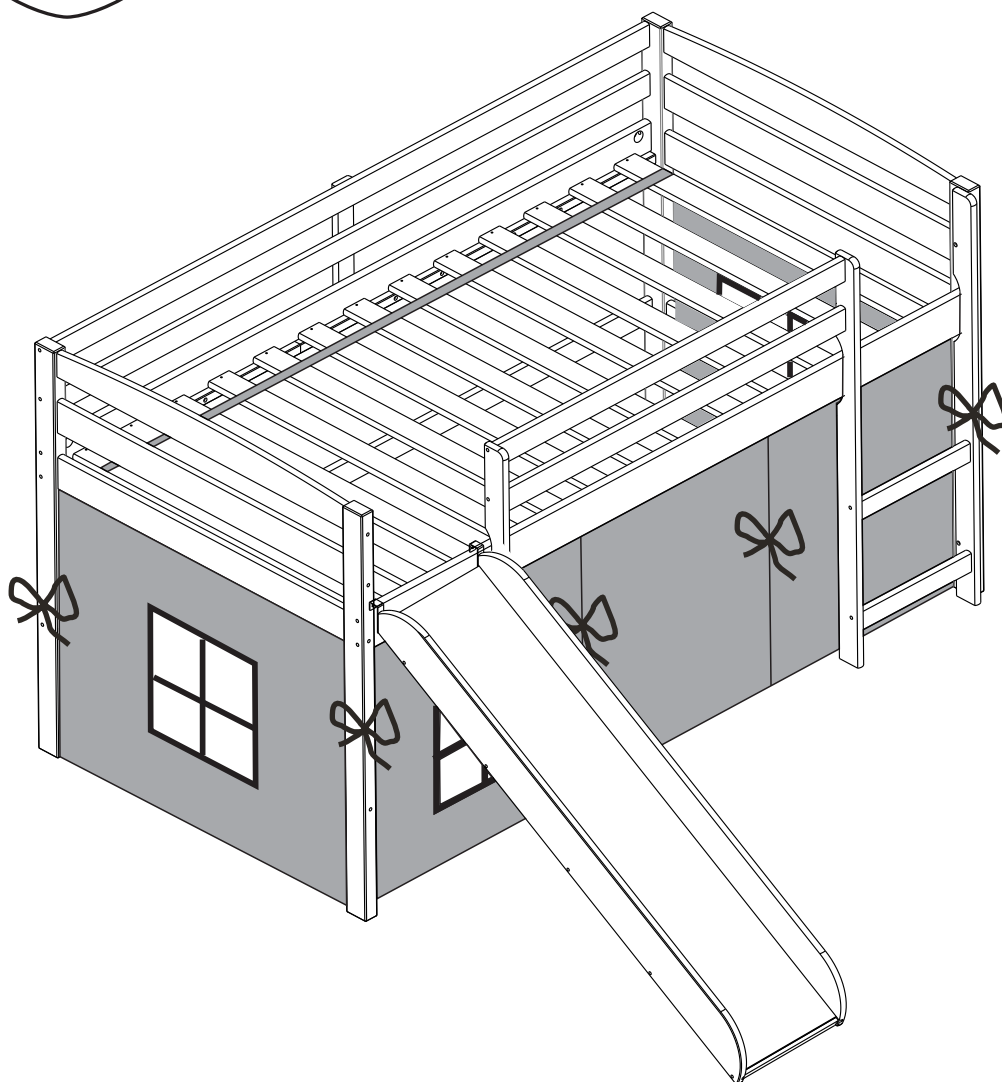


ST4500/ST4600/ST4700 TENT BED

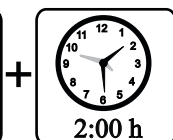


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

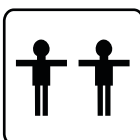

Tools Required



(Not included)





(Not included)





IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY




Part List - ST4500/ST4600/ST4700 TENT BED

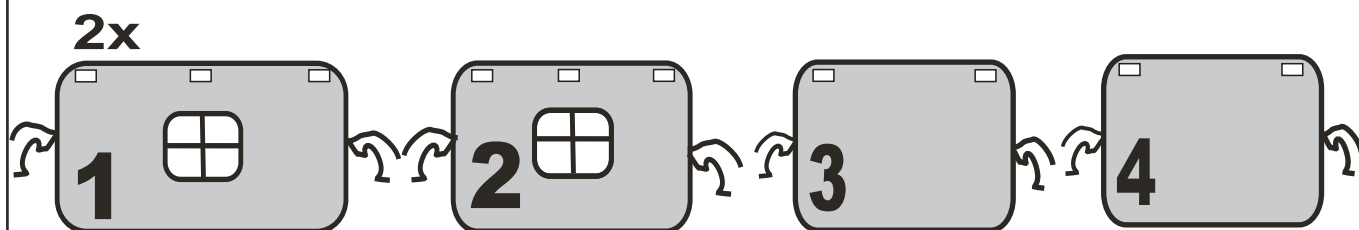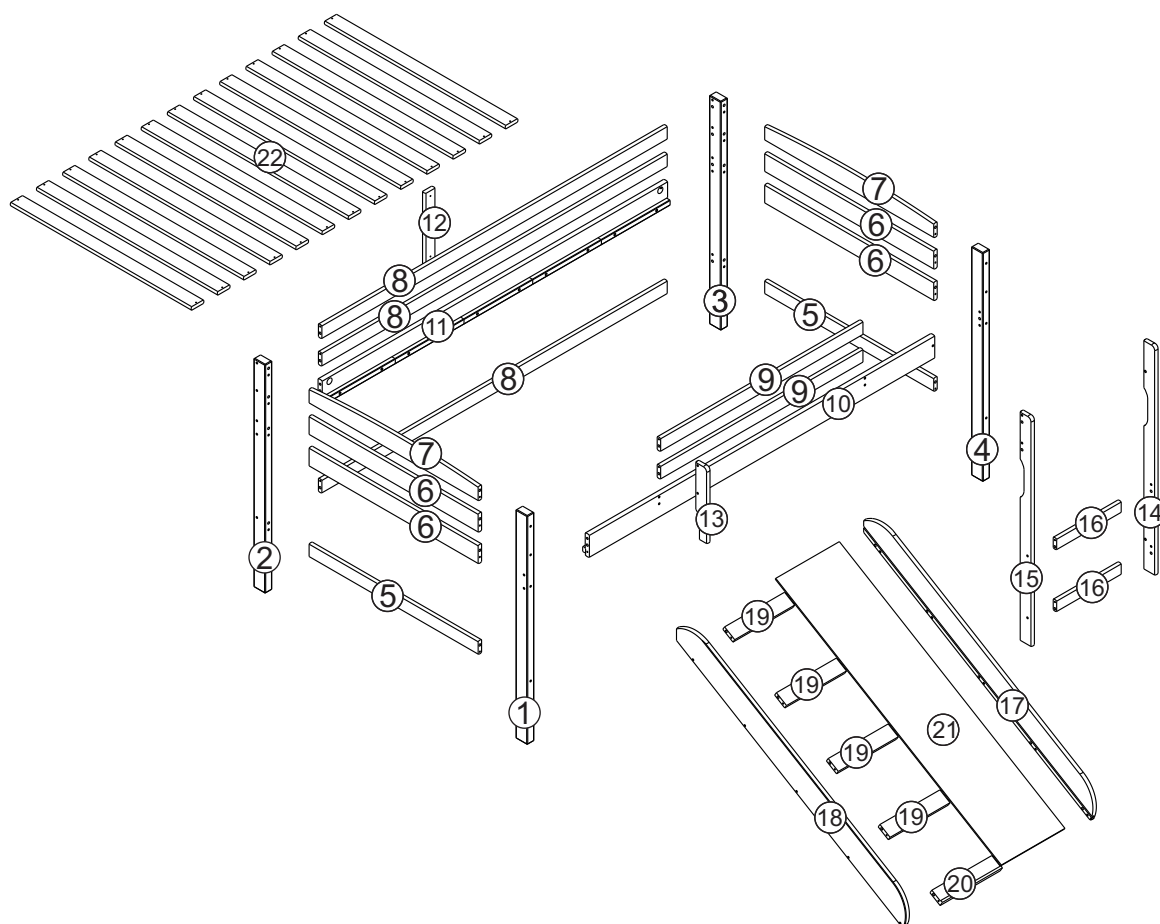





Identifying the Hardware-Identify the hardware using the illustrations below.

A  Qty 04 1/4 x 90 Screw	B  Qty 04 1/4" Half Moon	C  Qty 10 7,0 x 70 Screw
D  Qty 16 7,0 x 100 Screw	E  Qty 44 10 x 40 Wood Dowel	F  Qty 23 7,0 x 50 Screw
G  Qty 29 4,0 x 30 Screw	H  Qty 06 3,5 x 16 Screw	i  Qty 02 2096
J  Qty 01 Hex Screwdriver	L  Qty 02 4,0 x 40 Screw	M  Qty 02 Protector



**"Front side rail
with holes"**

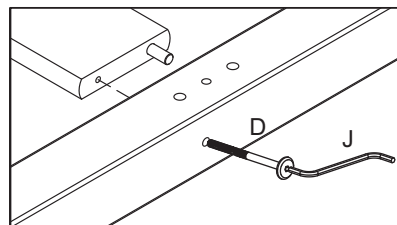





03

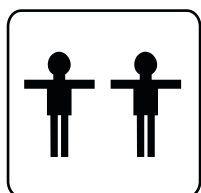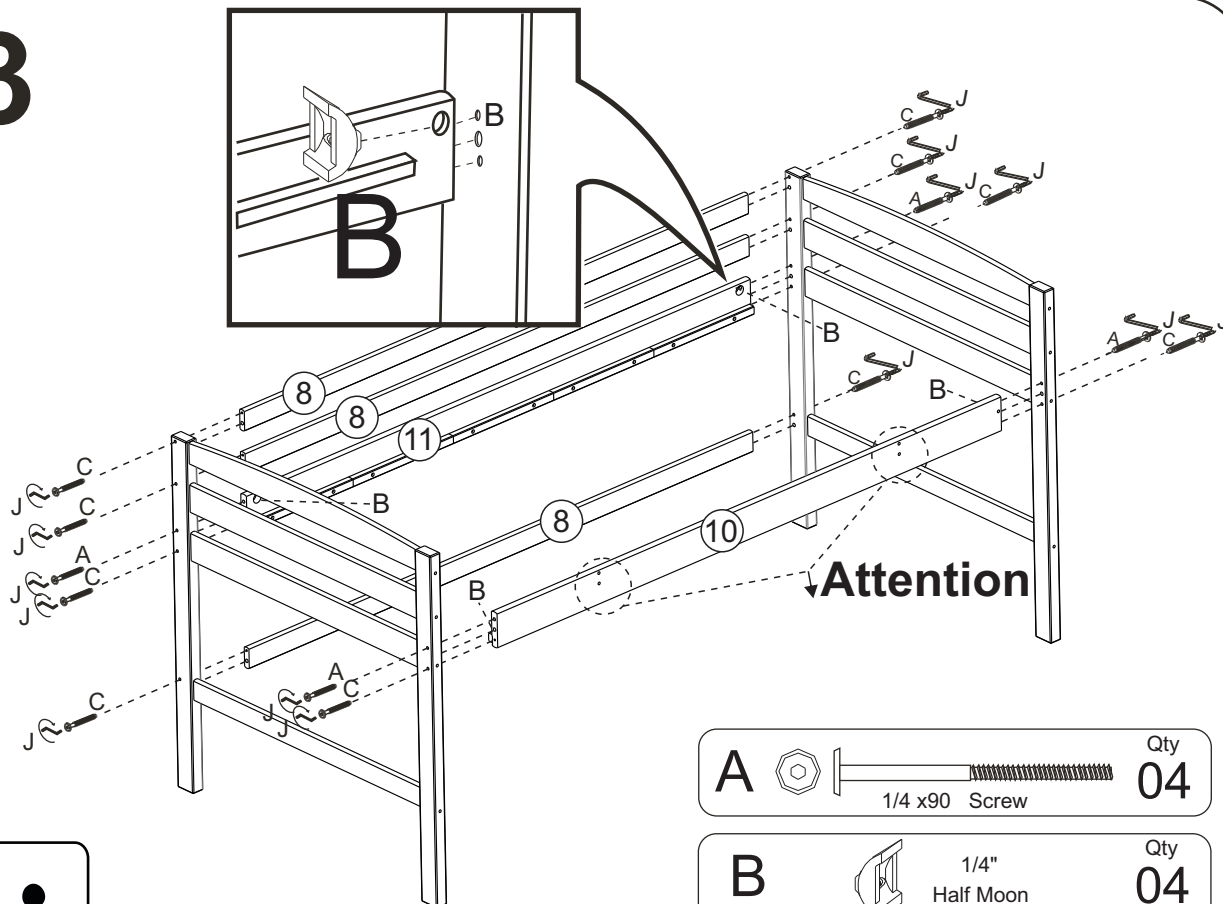

04

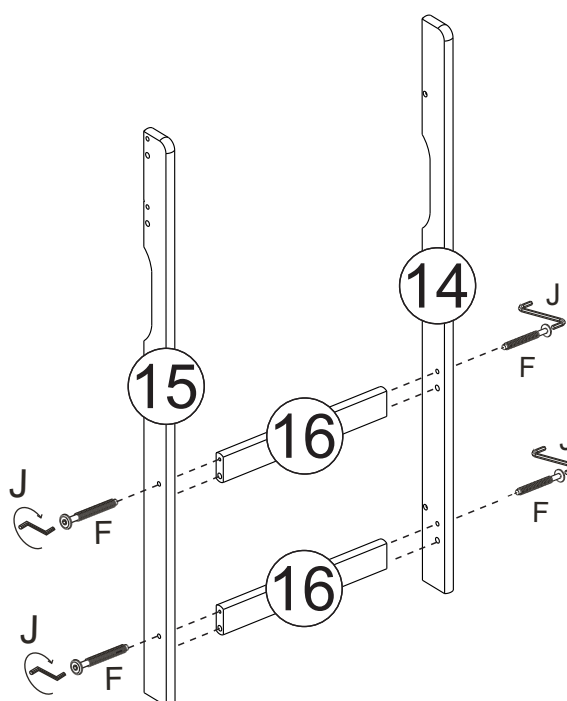



05

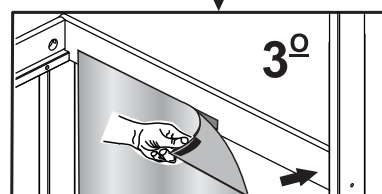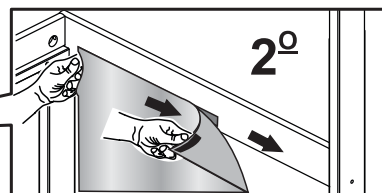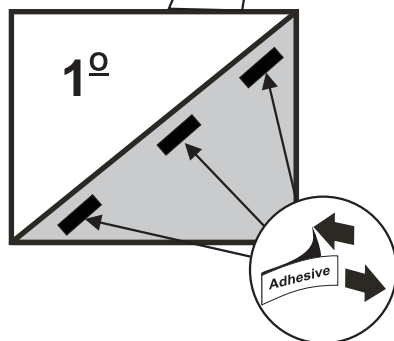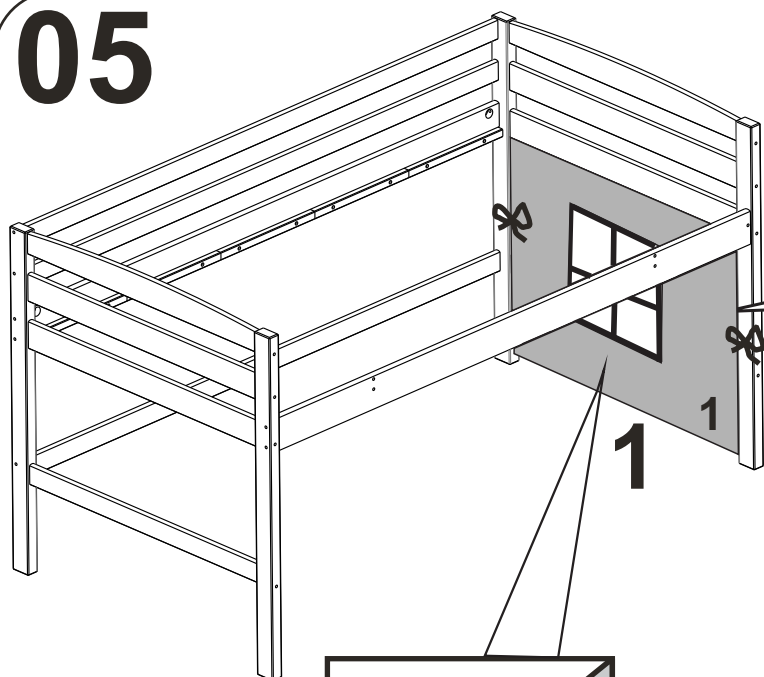

ATTENTION

Please remove the fine paper glued (Adhesived) on the velcro applied on the **Tent**. After this step, hold tight the **Tent** on both ends to fix on the crossbars and on front side rail like showing on instructions.

06

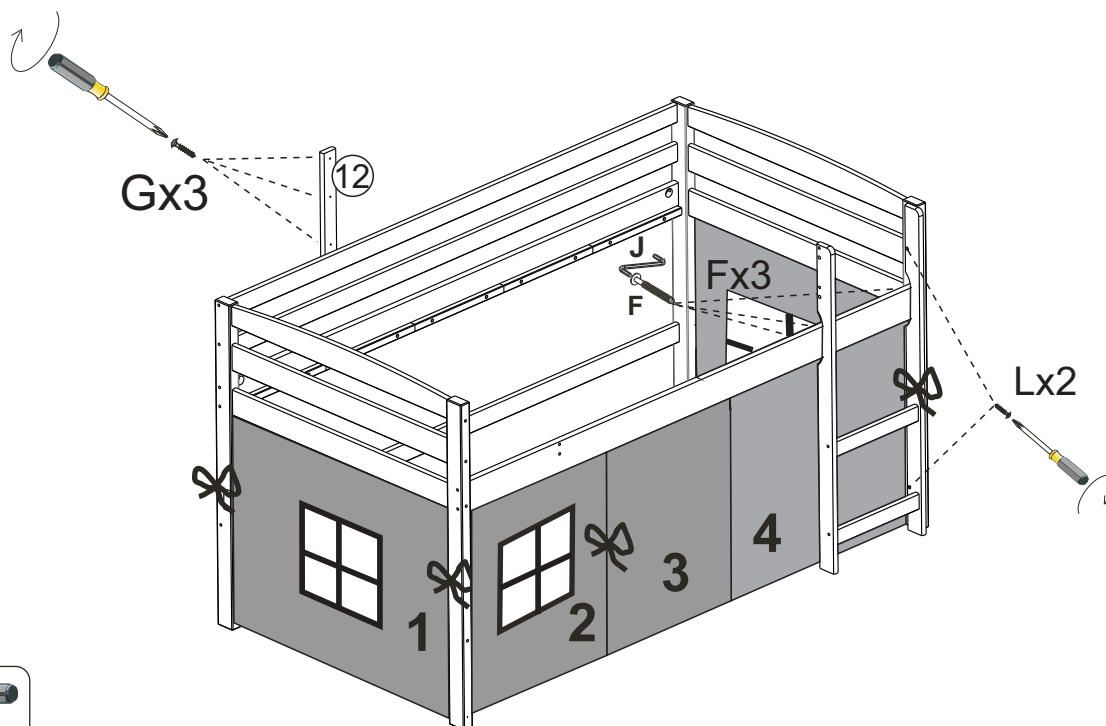



F 7,0 x 50 Screw Qty **03**

G 4,0 x 30 Screw Qty **03**



J Hex Screwdriver Qty **01**

L 4,0 x 40 Screw Qty **02**


07

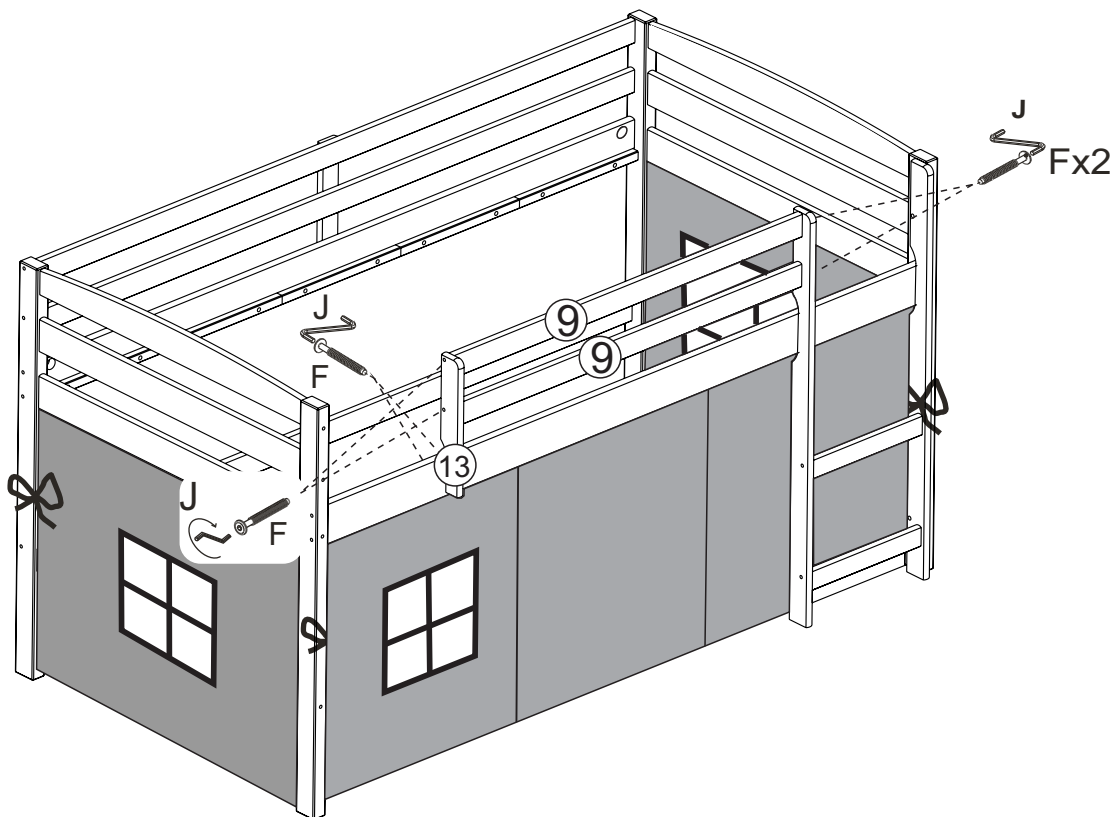









08

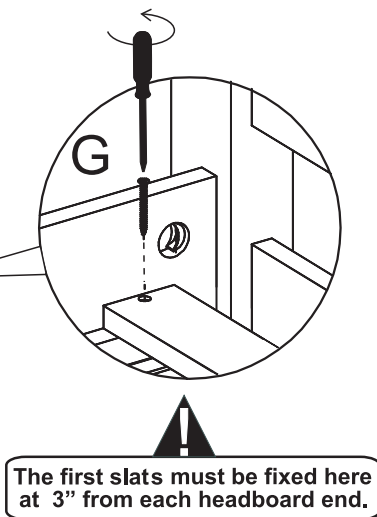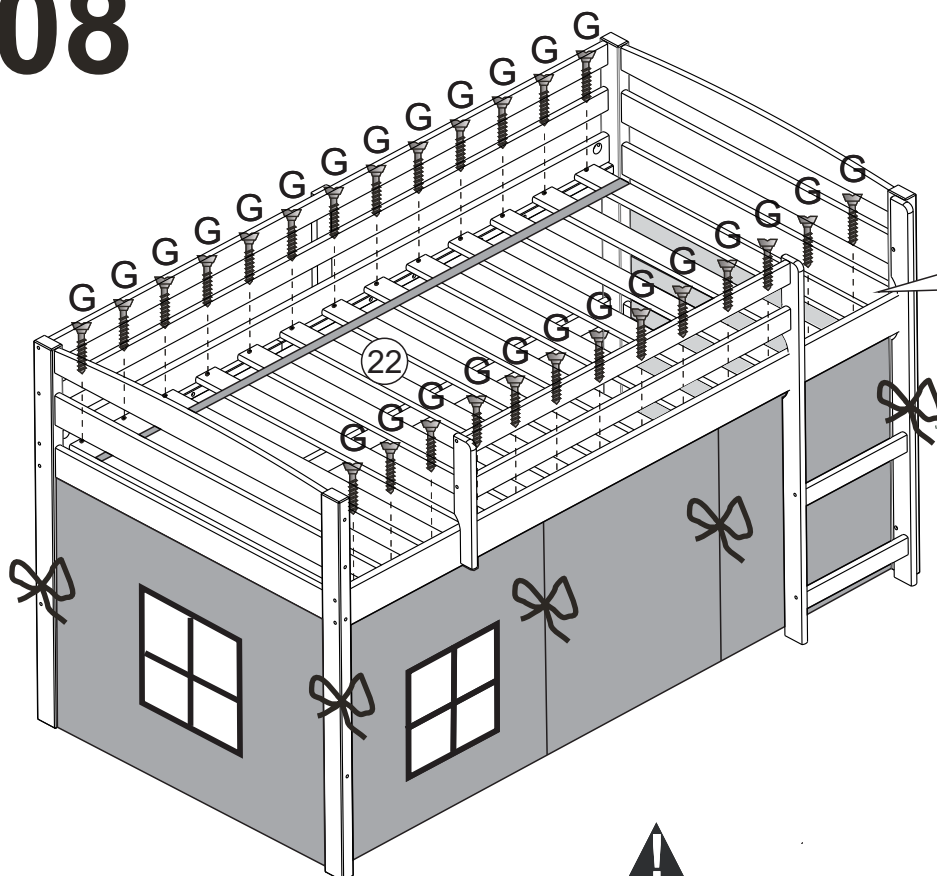

Install slats kit with spacer tape on top (Facing up).

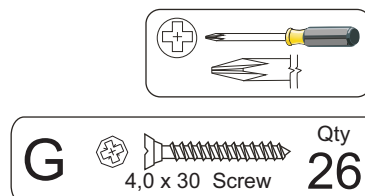

09

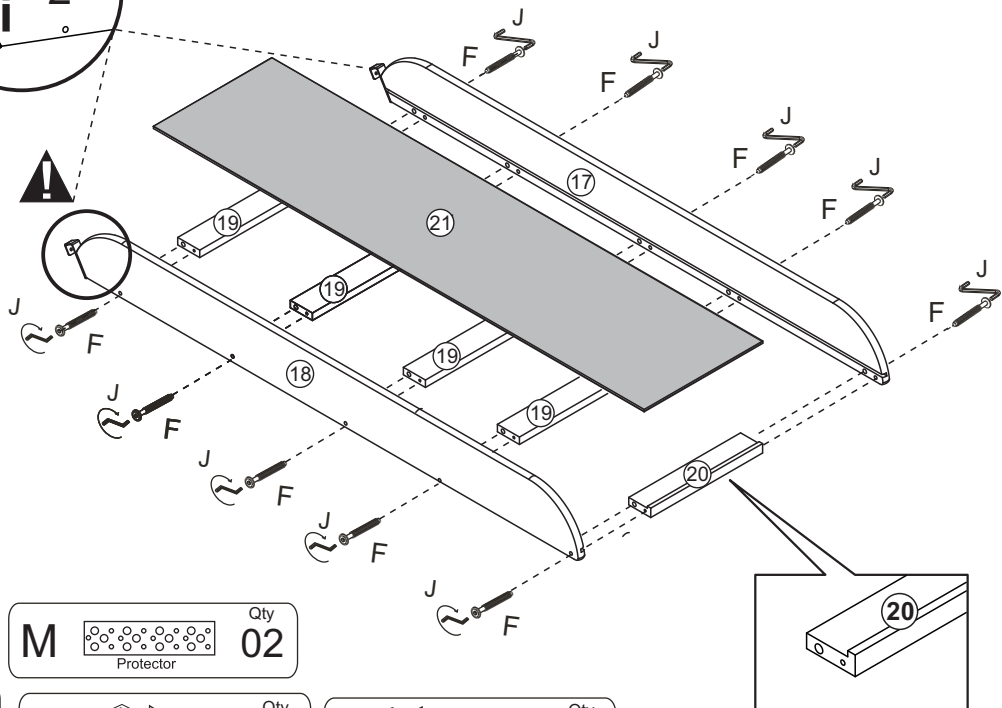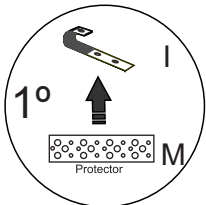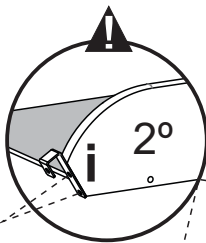

10

WARNING
THE MATTRESS
SURFACE MUST NOT
BE ABOVE THIS LINE
"MATTRESS 7 1/2" HIGH LIMITED"

