



ASSEMBLY INSTRUCTIONS

MODEL

FM7270-F

Questions?

GIVE US CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PT)


TOOLS REQUIRED



Allen Wrench
(Included)



Screwdriver
(Not Included)

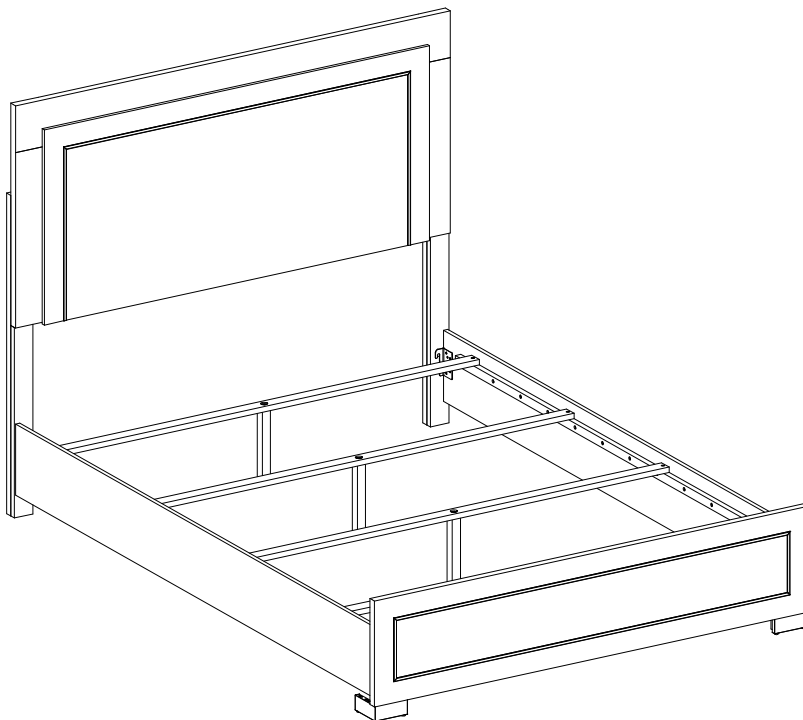

2 - People

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

VERSION# 24-07-22



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



Monday to Friday
8:30AM- 5:30PM (PT)



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING



Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!



Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!



Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.



Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.



Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



Save the instructions and store
any supplied tools for later
maintenance.



After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

FULL SIZE BED

FM7270-F




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

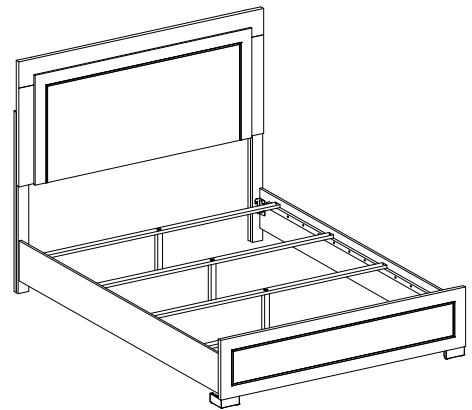


PARTS

1 1pc

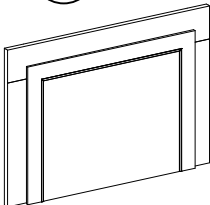


HEADBOARD

2 1pc

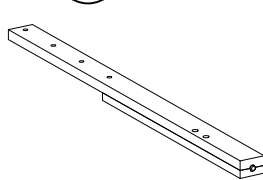


HEADBOARD LEG - L

3 1pc

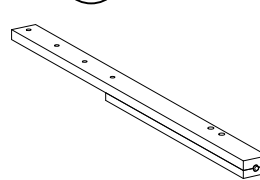


HEADBOARD LEG - R

4 1pc

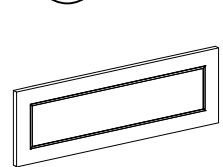


FOOTBOARD

5 2pcs




FOOTBOARD SUPPORT

6 1pc

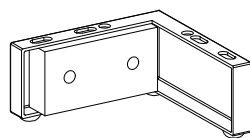


FOOTBOARD LEG - L

7 1pc

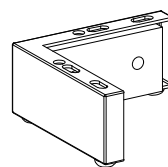

FOOTBOARD LEG - R

8 2pcs

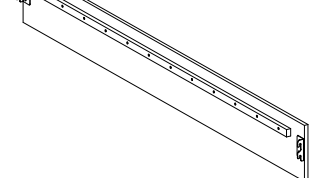


SIDE RAIL

9 4pcs



BED SLAT


10 4pcs



SLAT SUPPORT


HARDWARE

A 8pcs




BOLT M8 x 16MM

B 8pcs




BOLT M8 x 40MM

C 8pcs




LOCK WASHER M8

D 8pcs



FLAT WASHER M8

E 8pcs



BOLT M6 x 35MM

F 8pcs



LOCK WASHER M6

G 8pcs



FLAT WASHER M6

H 1pc



ALLEN KEY M5

I 1pc



ALLEN KEY M4

J 8pcs












CSK SCREW M4 x 32MM

K 1pc



ADAPTOR

FM7270-F is packed in 2 cartons

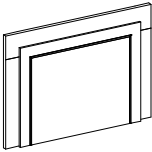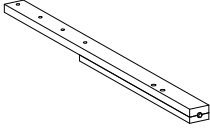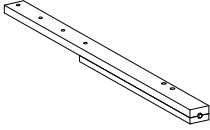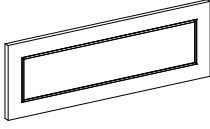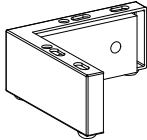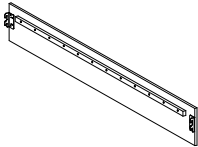Carton	Designation			Hardware	
FM7270-F-HBFB	Full Size Headboard	1		 A x 8pcs  B x 8pcs  C x 8pcs  D x 8pcs  E x 8pcs  F x 8pcs  G x 8pcs  H x 1pc  I x 1pc  J x 8pcs  K x 1pc	
	Headboard Leg-L	1			
	Headboard Leg-R	1			
	Footboard	1			
	Footboard Support	2			
	Footboard Leg-L	1			
	Footboard Leg-R	1			
	Slat	4			
	Slat Support	4			
FM7270-F-R	Full Size Side Rails	2			

ASSEMBLY INSTRUCTIONS

1

Part (#1) x 1pc

Part (#2) x 1pc

Part (#3) x 1pc



Hardware (#B) x 8pcs

Hardware (#C) x 8pcs

Hardware (#D) x 8pcs

Hardware (#H) x 1pc

Align the headboard post (#2L,#3R) to the headboard (#1). Use allen key (#H) to attach headboard post (#2L,#3R) to the headboard (#1) by using screw assembly of screw (#B) with lock washer (#C) and flat washer (#D).

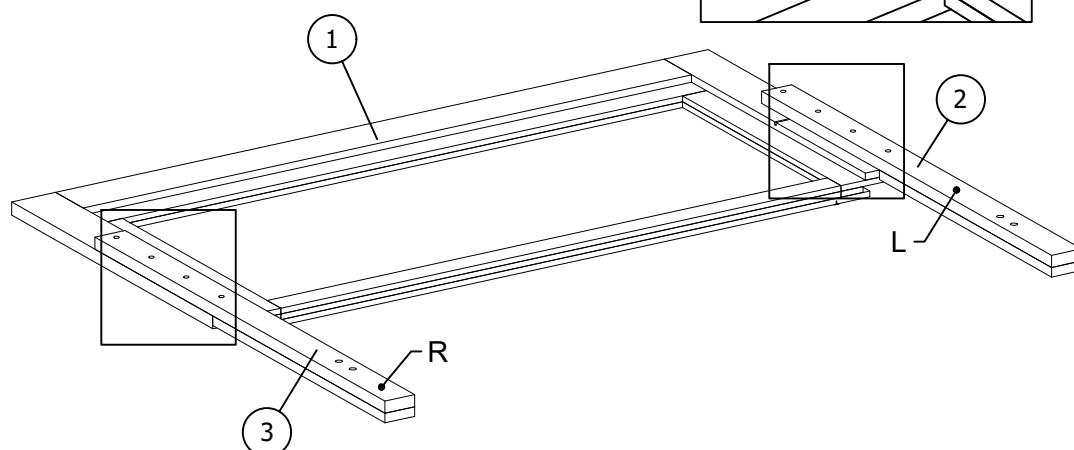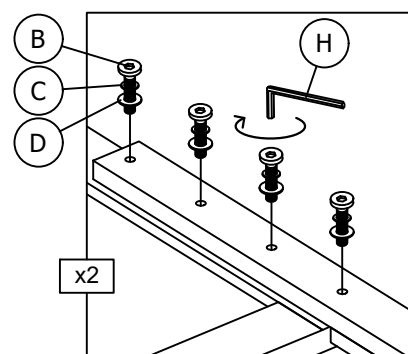

2

Part (#4) x 1pc

Part (#5) x 2pcs

Part (#6) x 1pc

Part (#7) x 1pc



Hardware (#E) x 8pcs

Hardware (#F) x 8pcs

Hardware (#G) x 8pcs

Hardware (#I) x 1pc

Align footboard leg (#6L,7R) to the footboard (#4) as shown in the diagram. Use allen key (#I) to secure the footboard support (#5) to the footboard by using screw (#E) with lock washer (#F) and flat washer (#G).

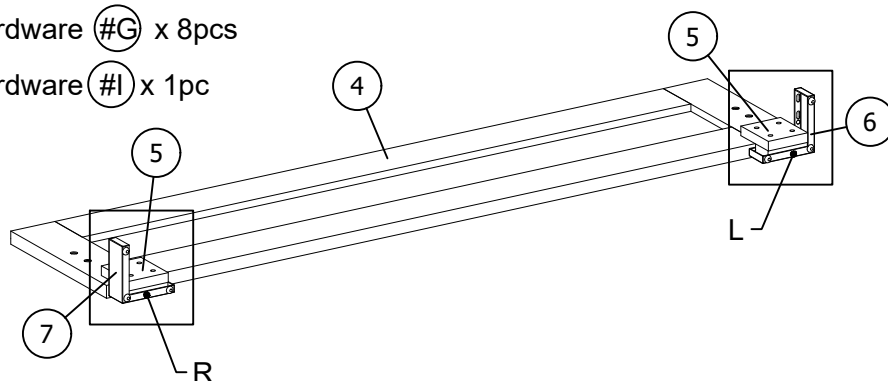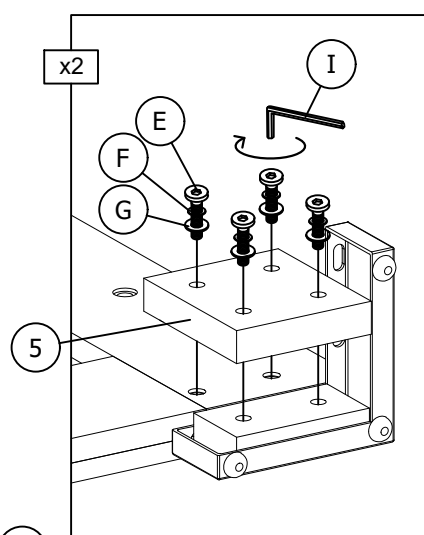


ASSEMBLY INSTRUCTIONS

3

- Part (#1) x 1pc
- Part (#2) x 1pc
- Part (#3) x 1pc
- Part (#4) x 1pc
- Part (#8) x 2pcs
- Hardware (#A) x 8pcs
- Hardware (#H) x 1pc

3-2 Hook screw plate attached on the side rail (#8) onto bolt (#A).


3-3 Use allen key to tighten the bolt (#A) and secure the side rail (#8) to the headboard post (#3) and footboard (#4).

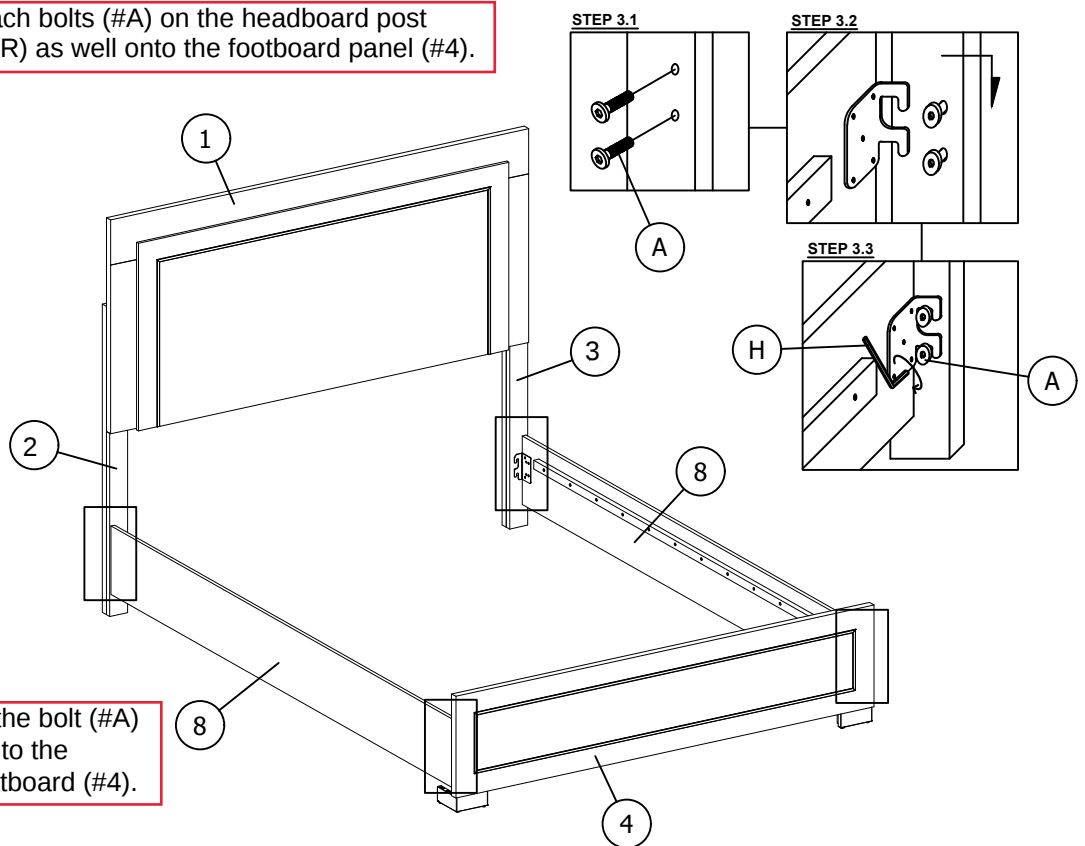

4

- Part (#9) x 4pcs
- Part (#10) x 4pcs

Attach the slat support (#10) to the center of the bed slat (#9).

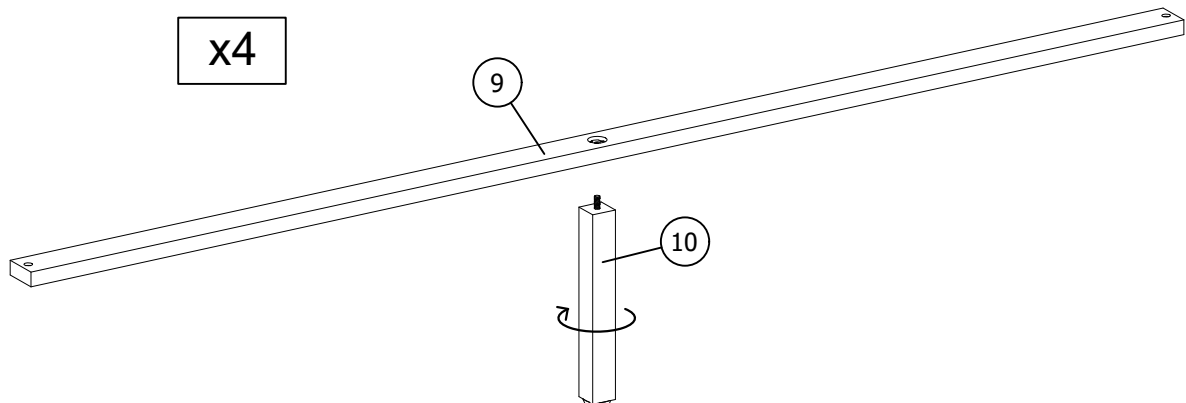

ASSEMBLY INSTRUCTIONS


5

Part (#8) x 2pcs

Part (#9) x 4pcs

Hardware (#J) x 8pcs


Extend the slats (#9) over the side rail (#8) and secure by using screw (#J). Tighten with screwdriver (not included).

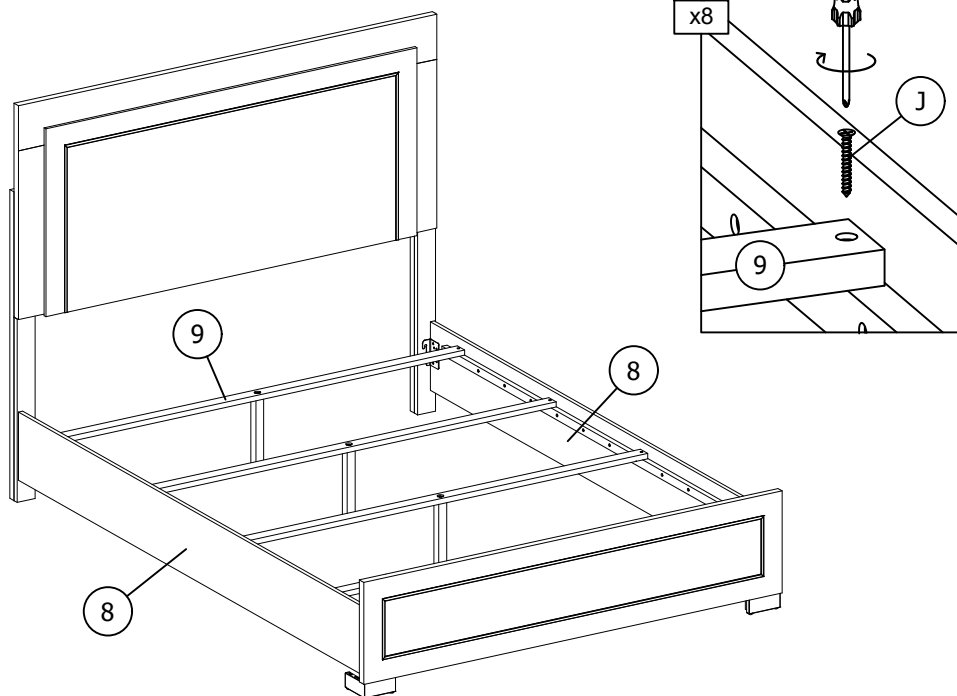

6



Hardware (#K) x 1pc

Connect the attached power connector on the headboard to the power adaptor (#K).

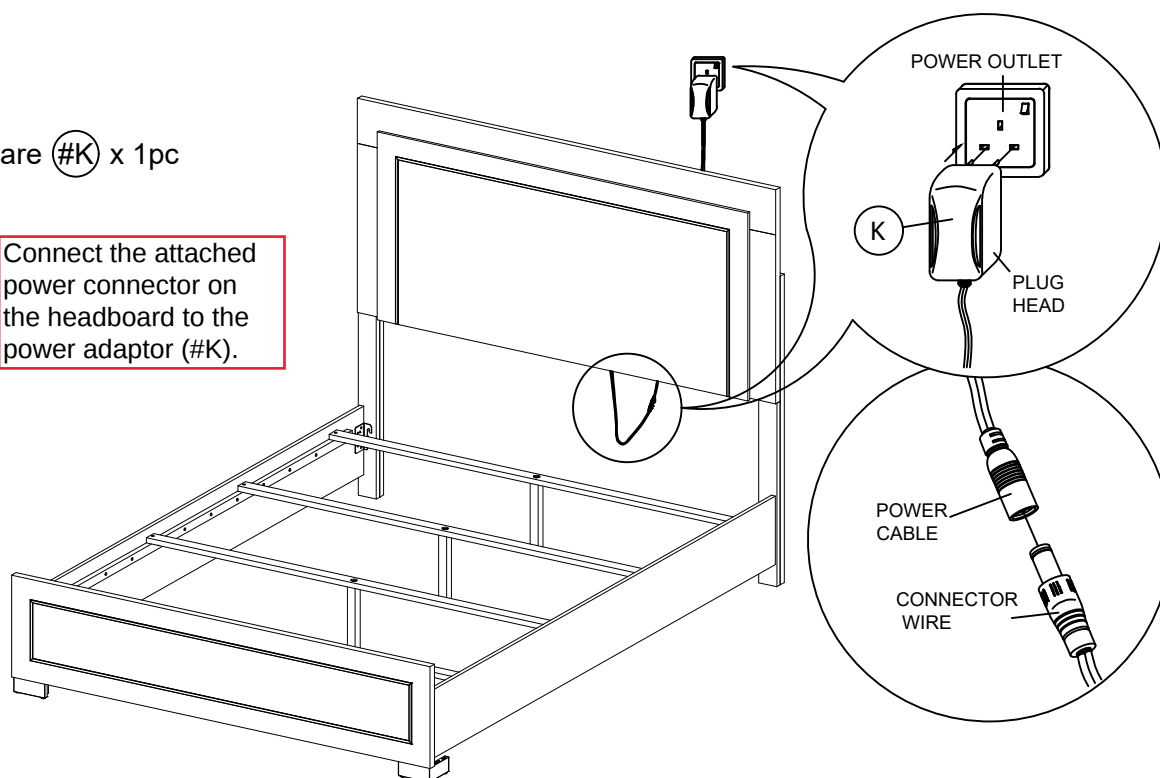

ASSEMBLY INSTRUCTIONS

7

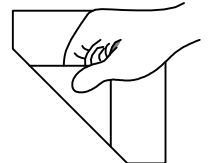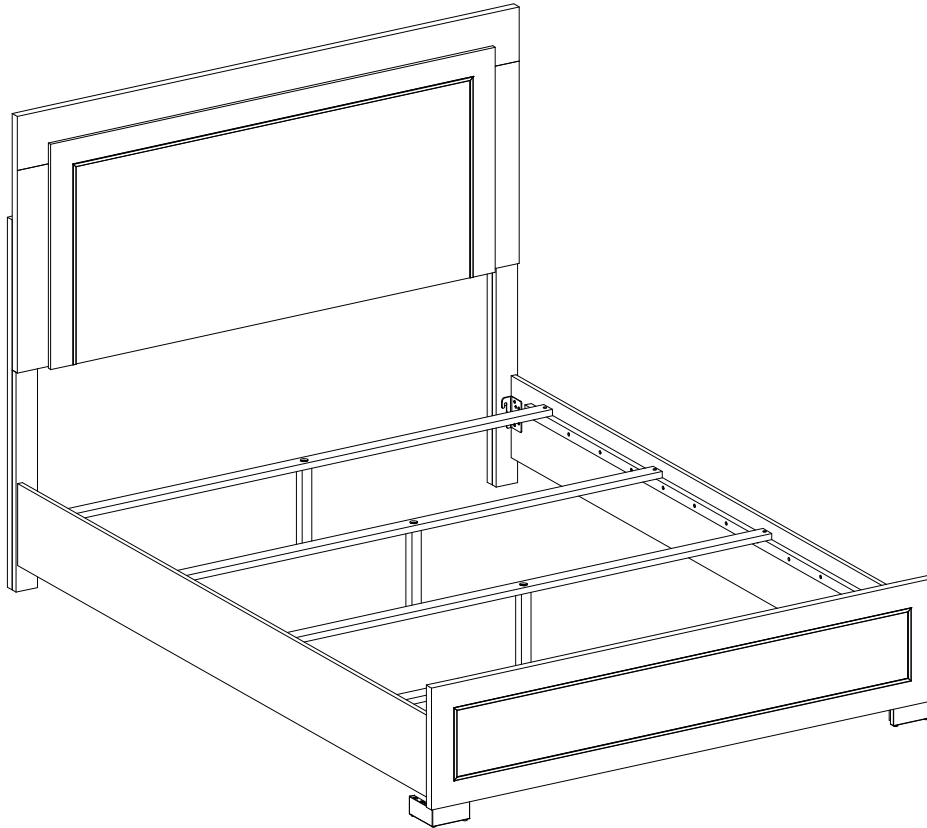

Please peel to
Protection Film

ASSEMBLY COMPLETED



Please ensure the
furniture rests on an even
and flat surface. If the
product wobbles or feels
loose, double-check all
bolts and/or screw are
properly tightened and
secured.

- ✔ **Keep this handy!**
Please retain this instruction
manual and any order-related
information for future reference.
- ✔ **Lift, don't drag!**
To avoid damage to product,
please always LIFT the product
when transporting or adjusting
the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.