




**By Sorelle - A Division of C&T International, Inc.**  
46 Whelan Road, East Rutherford, N. J. 07073 U. S. A.  
Tel, +1(201)531 1919 Fax, +1(201)531 1920  
Website: [www.sorellefurniture.com](http://www.sorellefurniture.com)

## **Paxton&Modesto Double Dresser**


### **Assembly Instruction**

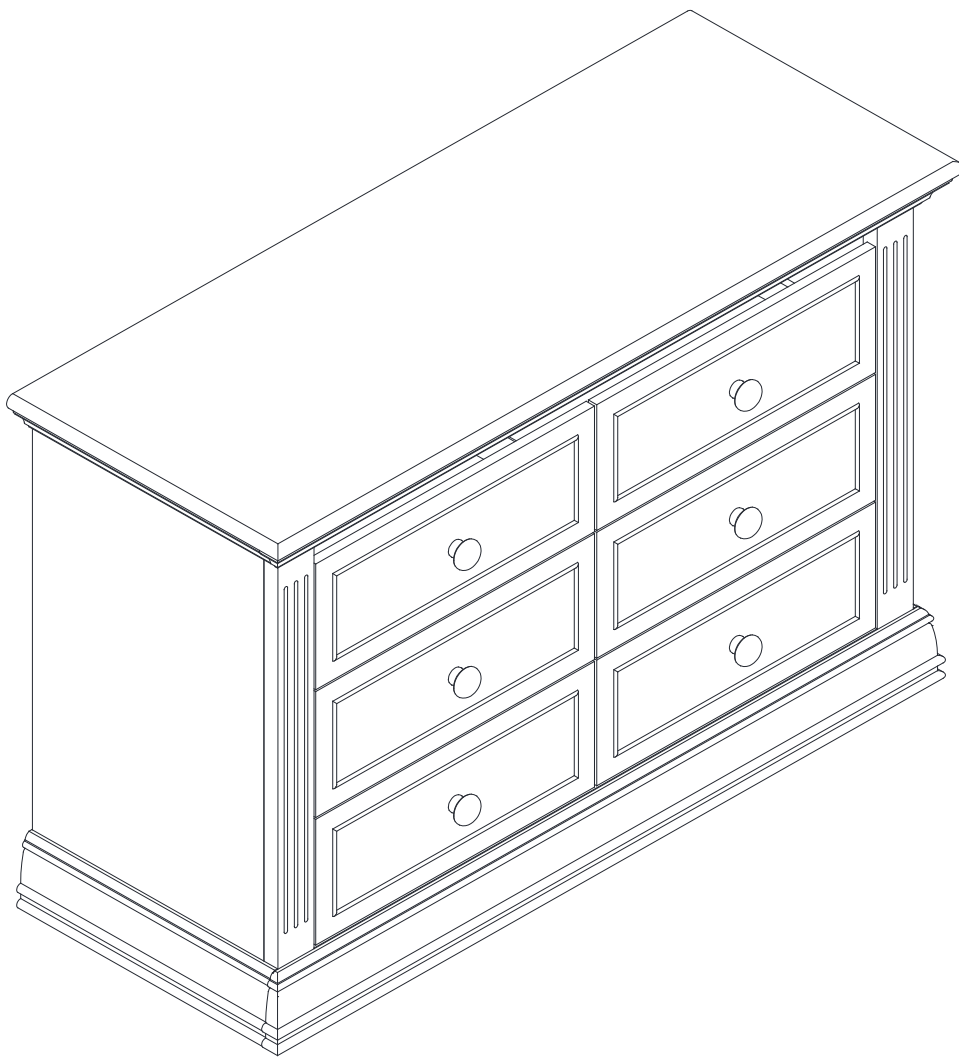


#### **Important Information:**

Read all instructions **BEFORE** assembling.  
KEEP INSTRUCTIONS FOR FUTURE USE.


## Assembly Parts




(A) Left Side Panel (x1)



(B) Middle Panel (x1)




(C) Right Side Panel (x1)

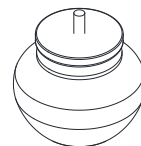


(D) Feet ( x4 )




(E) Adjustable Post ( x1 )

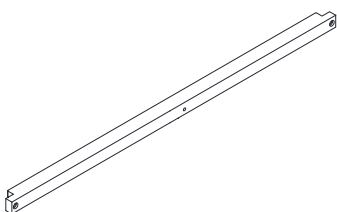


(F) Front - Middle Rail ( x2 )

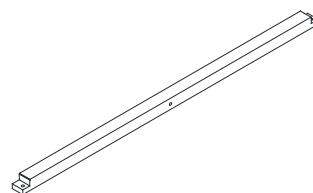


( G ) Front - Upper Rail ( x1 )

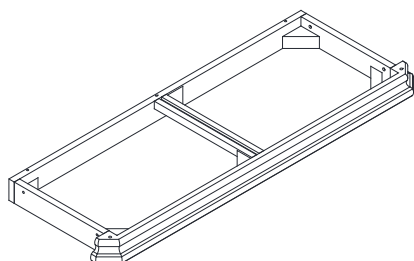


( H ) Bottom Frame ( x1 )

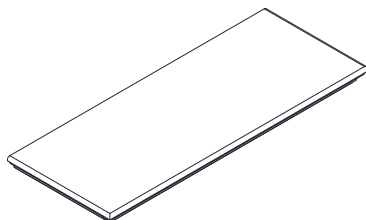


( I ) Top Frame ( x1 )

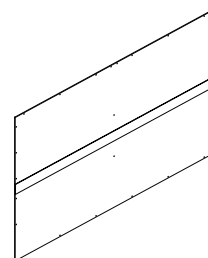

( J ) BackPanel ( x1 )

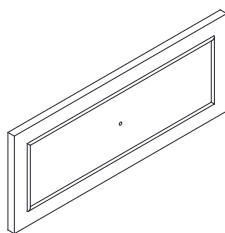


( R ) Drawer Front (x6)

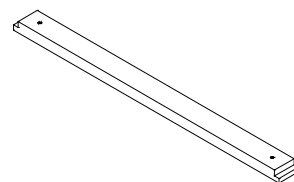


(R5) Drawer Bottom Support (x6)


( R ) TOP Drawer Front (x2)

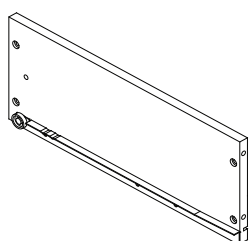


(R1) Drawer Left (x6)

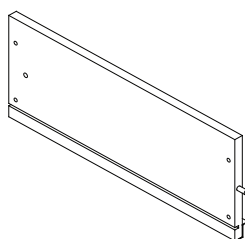


(R2) Drawer Right (x6)

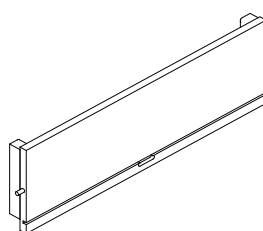

(R3) Drawer Back (x6)

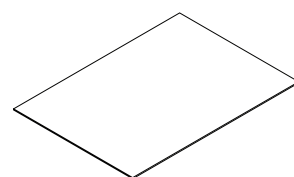


(R4) Drawer Bottom (x6)

**Assembly Parts**
**Hardware list**



(a) Drawer Screw 12mm ( 6 pcs)



( b ) Drawer Screw 25 mm ( 6 pcs)



( c ) Metal Connector ( 6 pcs)




( d ) 1/4 x 25mm Allen bolt (16 pcs)




( e ) Flat Washer ( 16pc)



( f ) Spring Washer ( 16pcs)

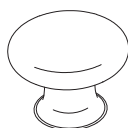

( g ) knob (12pcs)



( h ) 5/32 Allen bolt 12pcs




( i ) Ø3.5 X 15mm Phillips Screw (26 pcs)




( j )Drawer Screw 25mm (48 pcs)



( k ) Wall Strap Kit (1 pc)

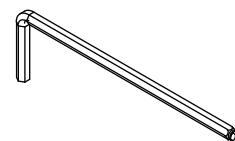

( l ) Allen Key (1 pc)

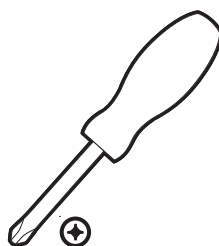

( m ) Screwdriver (1 pc)

## Finley Double Dresser Assembly

- 1 Attach Feet rail (D) & Adjustable Post (E) to Bottom Frame (H) as Figure 1.

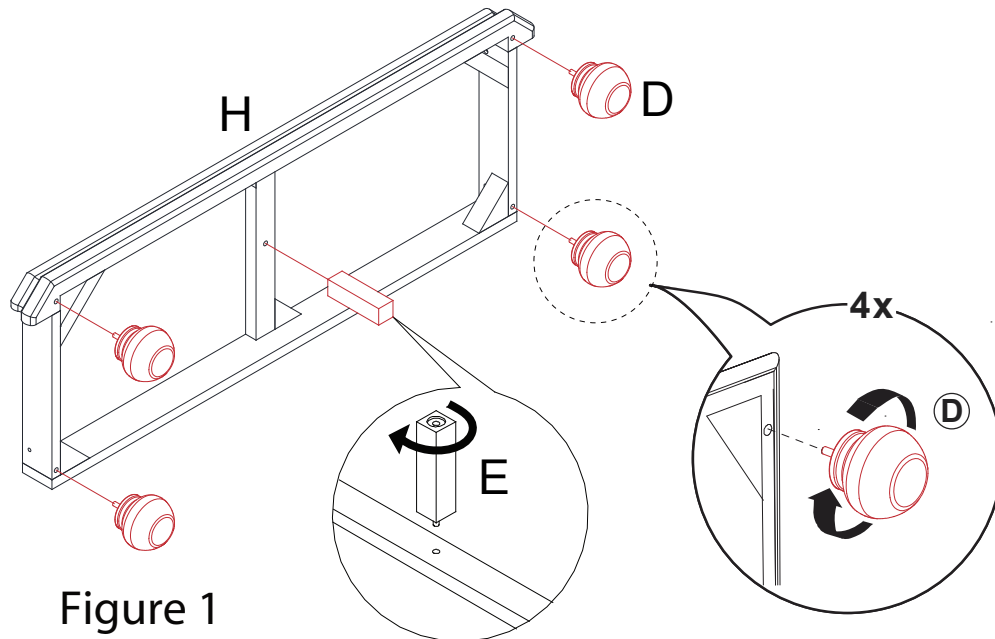


Figure 1

- 2 Attach left side panel (A) and right side panel (C) to Bottom Frame (H) by using 4 Bolts (d) & 4 Flat washer (e) & 4 Spring washer (f) as Figure 2.

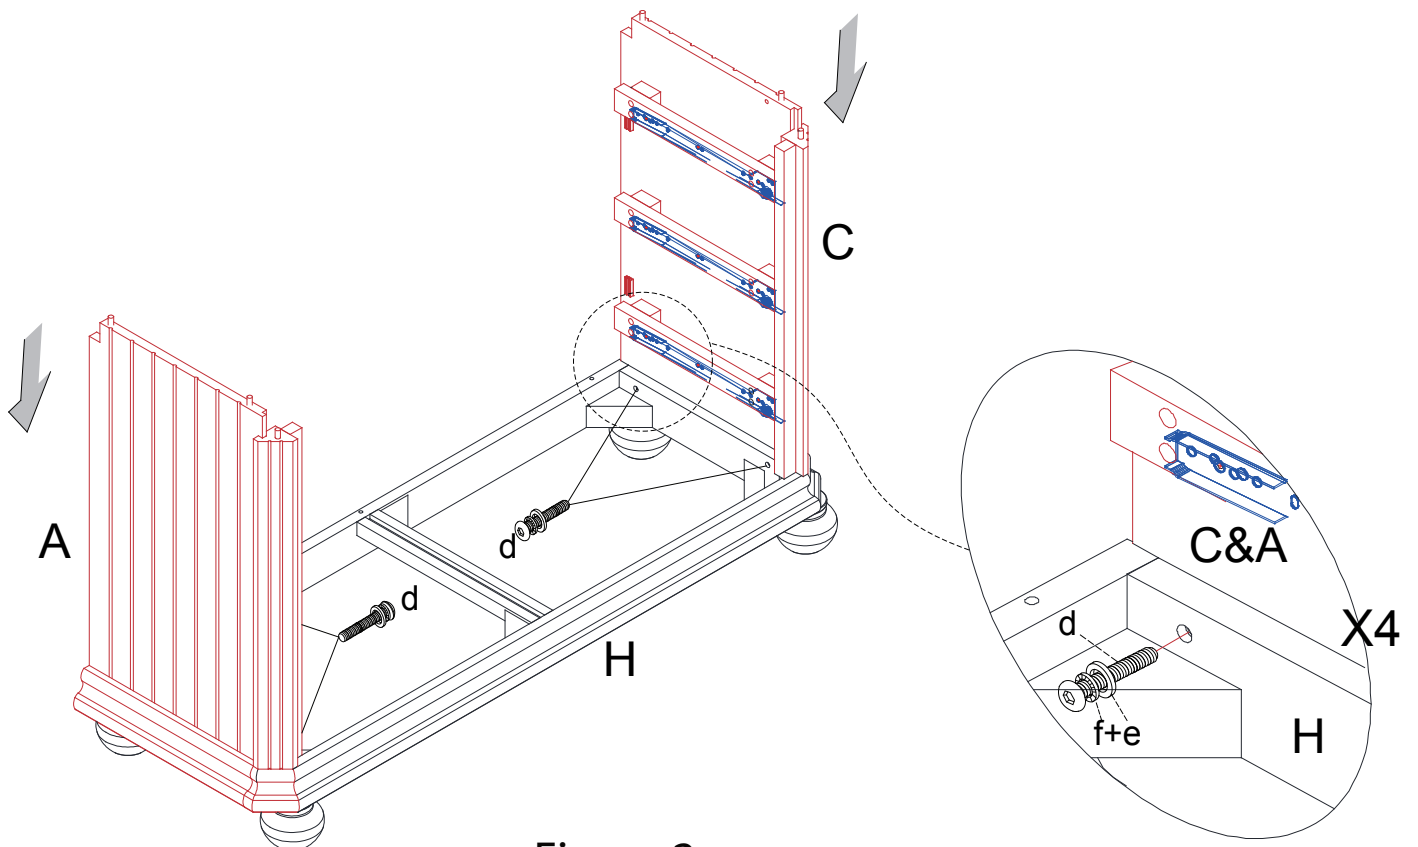


Figure 2

**Finley Double Dresser Assembly**

- ③ Attach 1 Front - Upper Rail ( G ) & 2 Front - Middle Rail ( F ) to Middle Panel(B) as Figure 3.

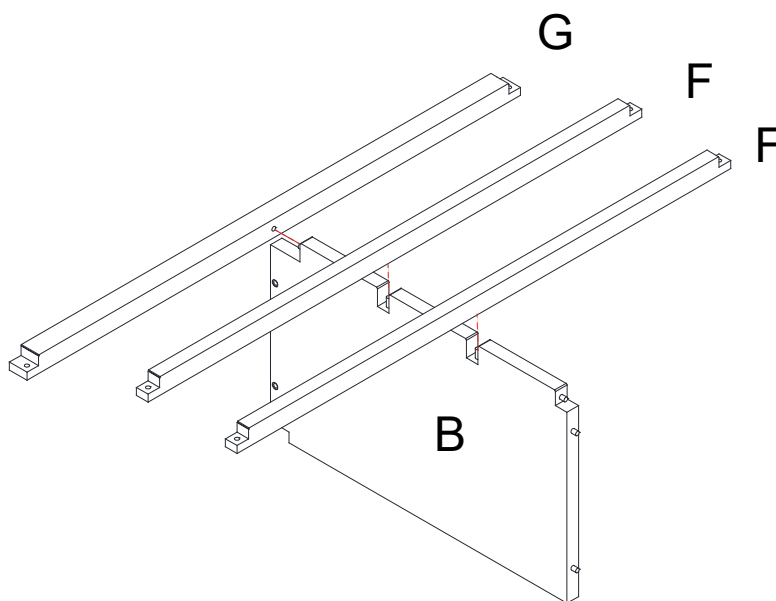


Figure 3

- ④ Attach the Middle Panel with Rails to Bottom Frame and Side Panel by using 6 Bolts ( d ) with Washers ( e & f ) as Figure 4 & Figure 4a.

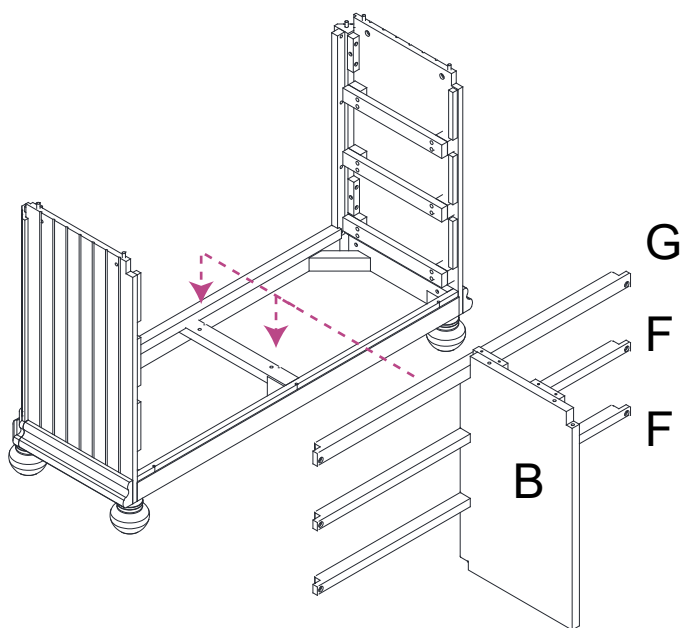


Figure 4


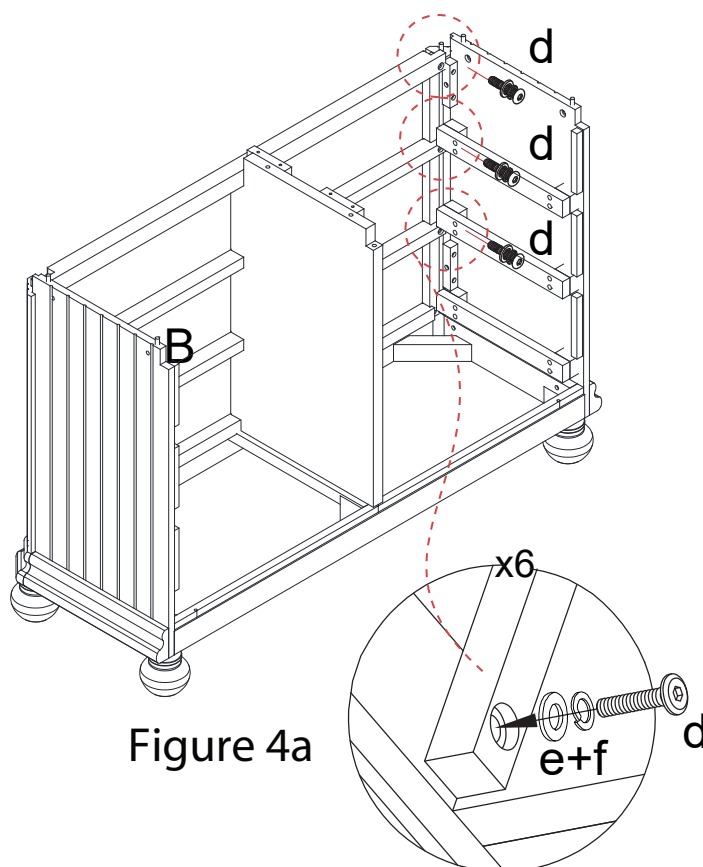



Figure 4a

# Finley Double Dresser Assembly

- ⑤ Attach Top Frame (I) to Dresser. As Figure 5.

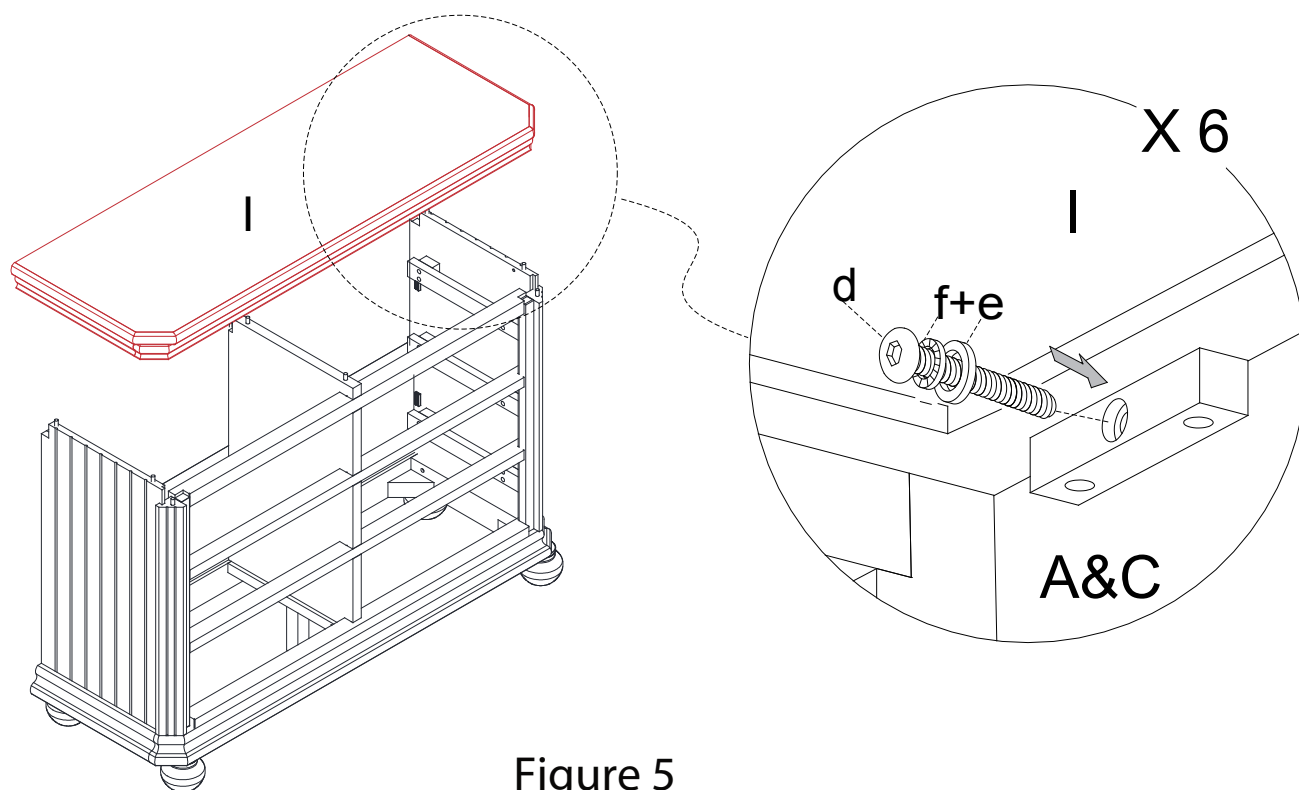


- ⑥ Attach Back- Upper Panel (J) to Dresser using 26 Phillips Screws (i) as Figure 6.

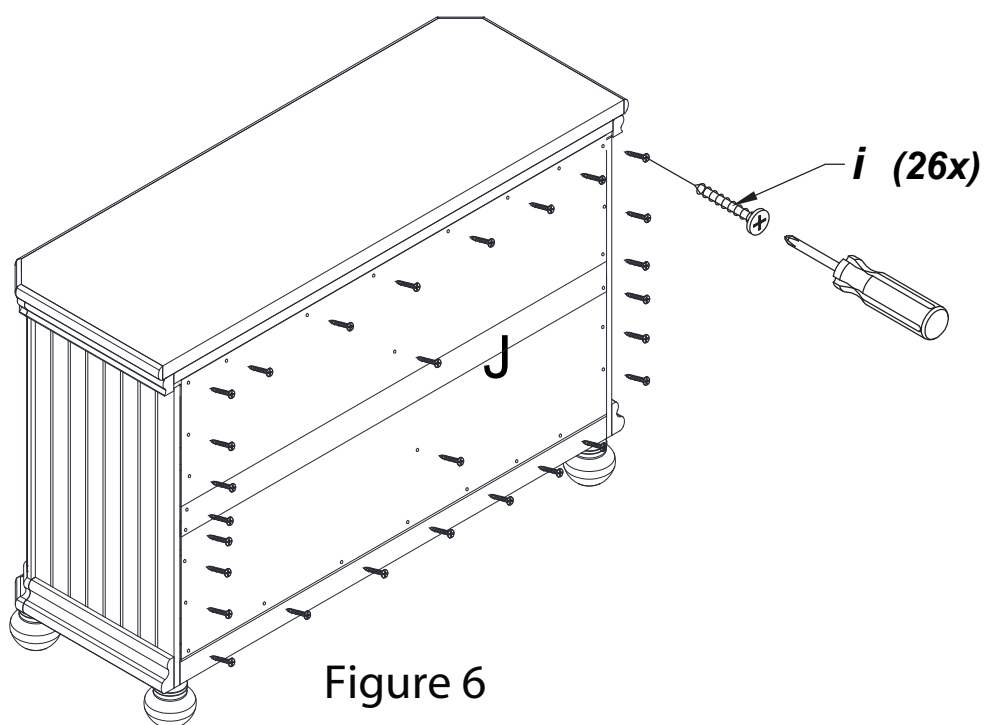


## Drawer Assembly



1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Drawer Screw(j). *Figure 1*

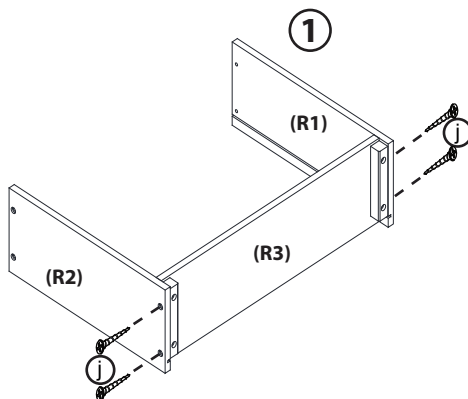

2. Slide Drawer Bottom (R4) and into drawer Bottom Support (R5) assembly. *Figure 2*

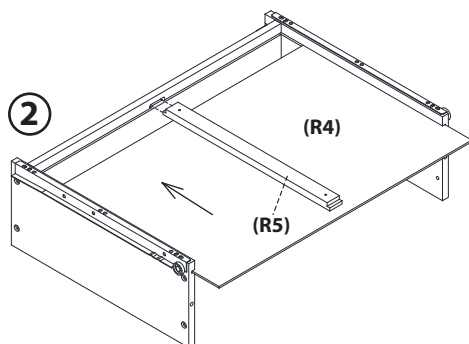


3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (j) . *Figure 3*

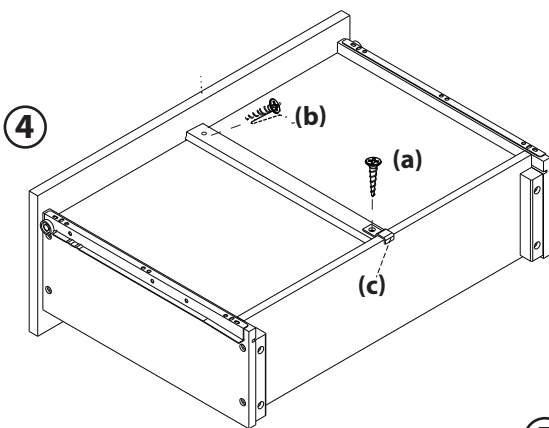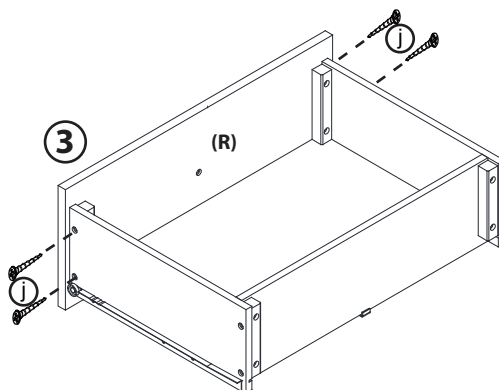

4. Attach Matel Connector A (l)and Matel Connector B (m). *Figure 4*

5. Using Drawer Knob Screw ( h ),install one (1) Knob ( g ) on Drawer. *Figure 5.*

**Repeat for all drawers.  
Set drawers aside for  
later use.**

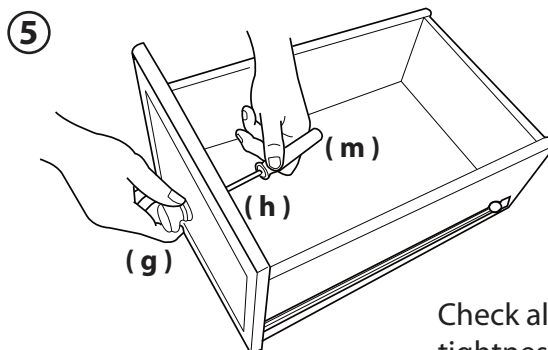

Check all screws for tightness.

## Finley Double Dresser Assembly

- ⑧ Assembly the drawer as Figure 8.

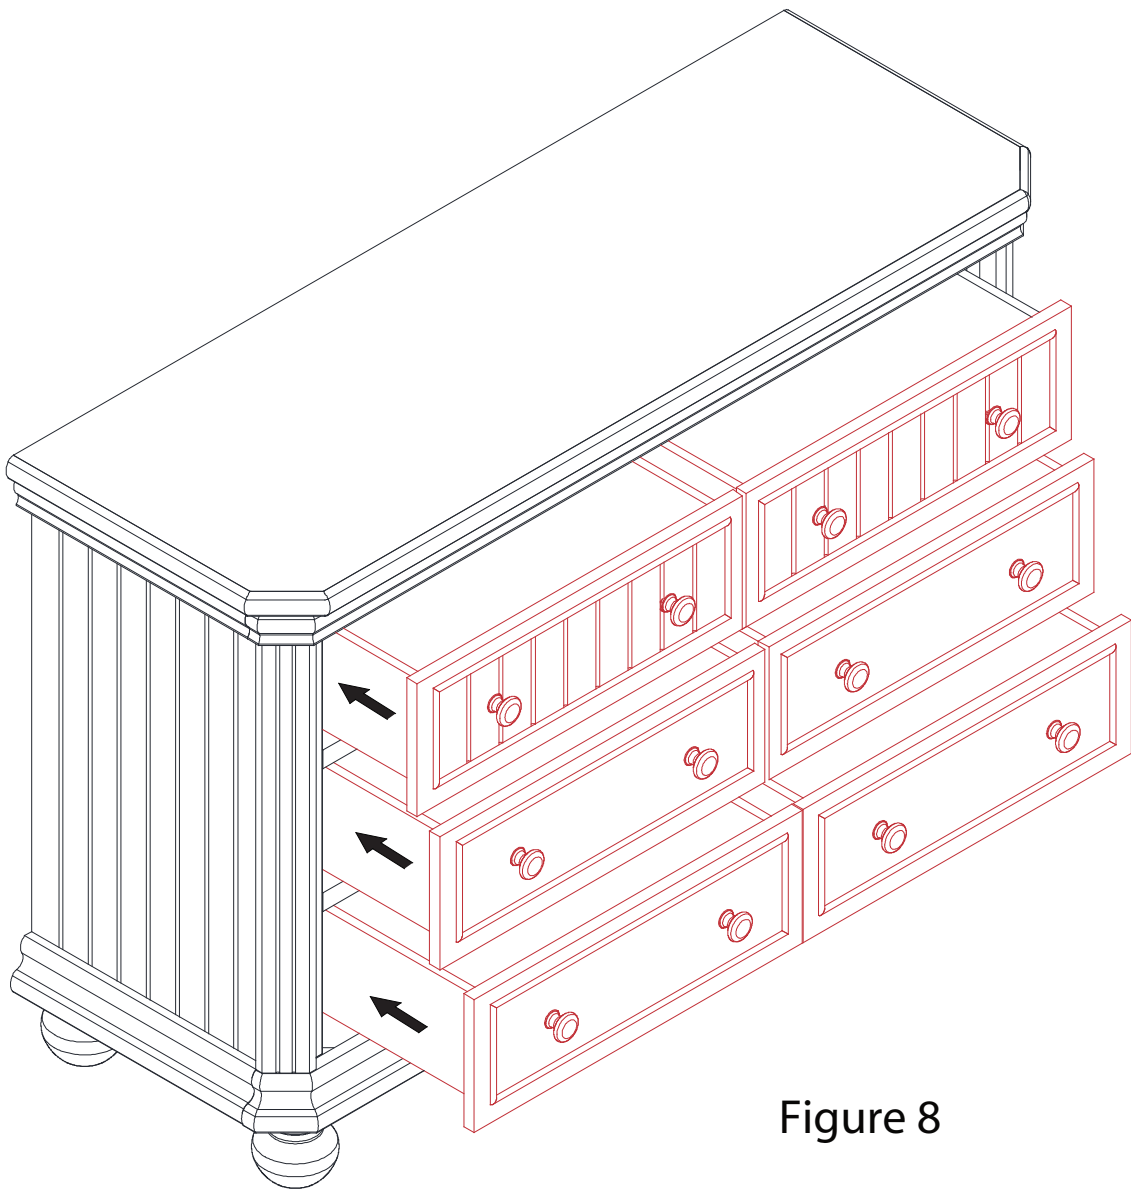


Figure 8