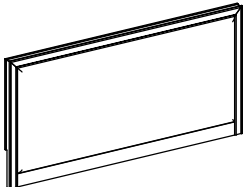









Warning:

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture **MUST BE ASSEMBLED BY TWO PEOPLE** on a soft surface such as a blanket or carpet.


Hardware and Parts packed with the Headboard

King Upholstered Headboard - 30795  (H-A) 1 pc	Headboard Post (Left)  (H-B) 1 pc	Headboard Post (Right)  (H-C) 1 pc	Headboard Stretcher  (H-D) 1 pc		
Allen Head Bolt M6-32 x 40mm  (H-E) 2 pcs	Flat Washer Ø6 x Ø13mm  (H-F) 2 pcs	Lock Washer Ø9 x Ø13mm  (H-G) 8 pcs	Allen Head Bolt M8-32 x 55mm  (H-H) 6 pcs	Flat Washer Ø8 x Ø20mm  (H-I) 6 pcs	Allen Key 4 x 110mm  (H-J) 1 pc

Hardware and Parts packed with the Footboard

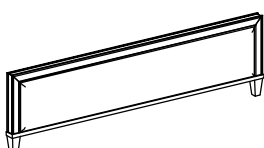King Upholstered Footboard - 30796  (F-A) 1 pc	Wood Slat (77" long)  (F-B) 1 set	Support leg (7-3/4" x 1-1/4" x 1-1/4")  (F-C) 14 pcs	Wood Screw Ø4 x 25mm  (F-D) 14 pcs	Tool Required (not provided) Phillips Screwdriver 
--	--	---	---	---

Hardware and Parts packed with the Bed Rails

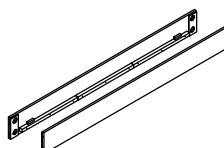
Bed Rails - 30772  (R-A) 2 pcs	Thread Bolt M8-32 x 70mm  (R-B) 8 pcs	Arc Washer 14 x 26mm  (R-C) 8 pcs	Lock Washer Ø10 x Ø15mm  (R-D) 8 pcs	Hex Nut M8-32 x 7mm  (R-E) 8 pcs	Open Wrench 13 mm  (R-F) 1 pc
--	--	--	---	---	--

6/6 King Bed

30795 - 6/6 Upholstered Headboard


30796 - 6/6 Upholstered Footboard

30772 - 5/0-6/6 Queen-King Bed Rails

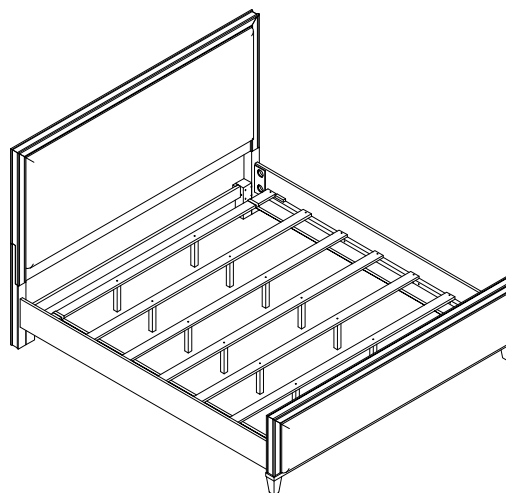


STEP 1


6/6 King Bed
30795 - 6/6 Upholstered Headboard

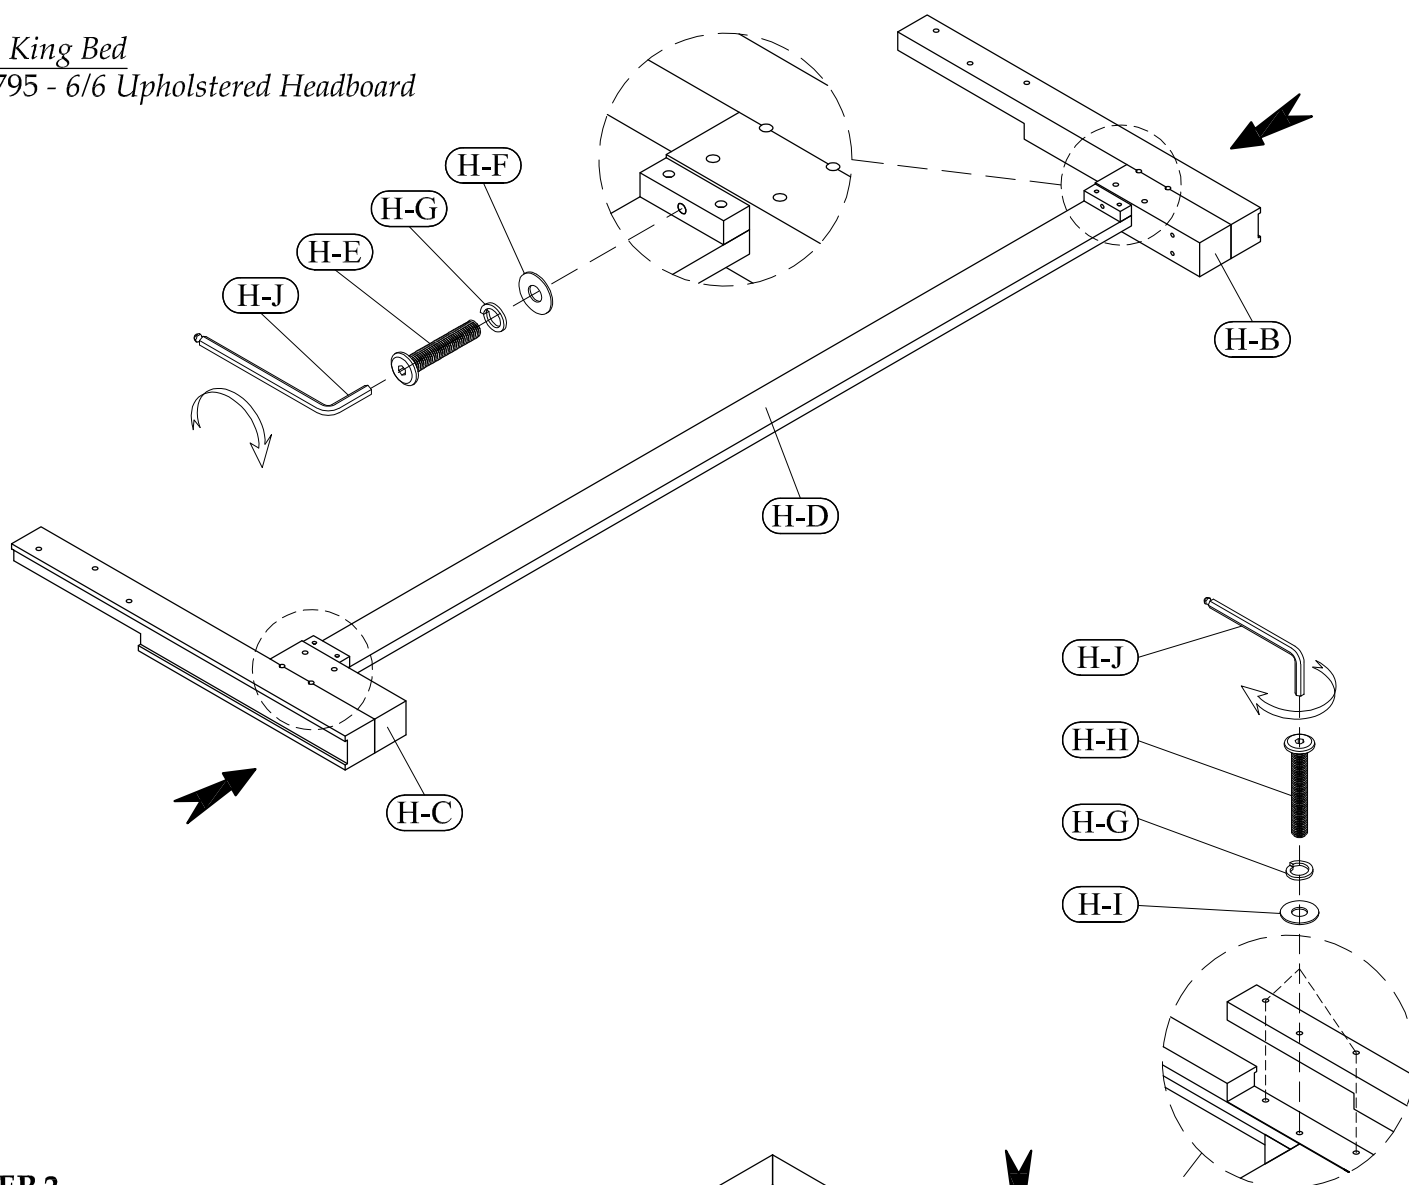


STEP 2

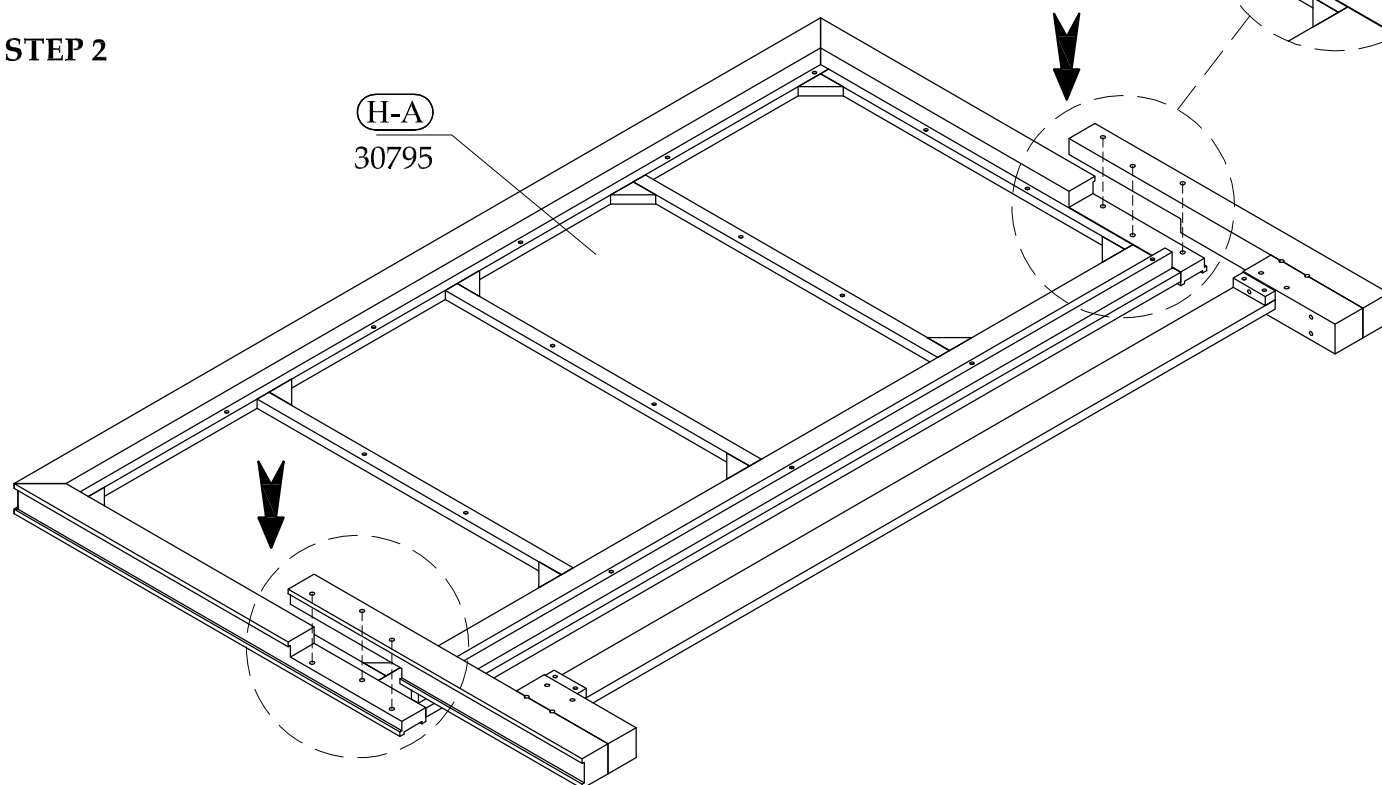


STEP 3

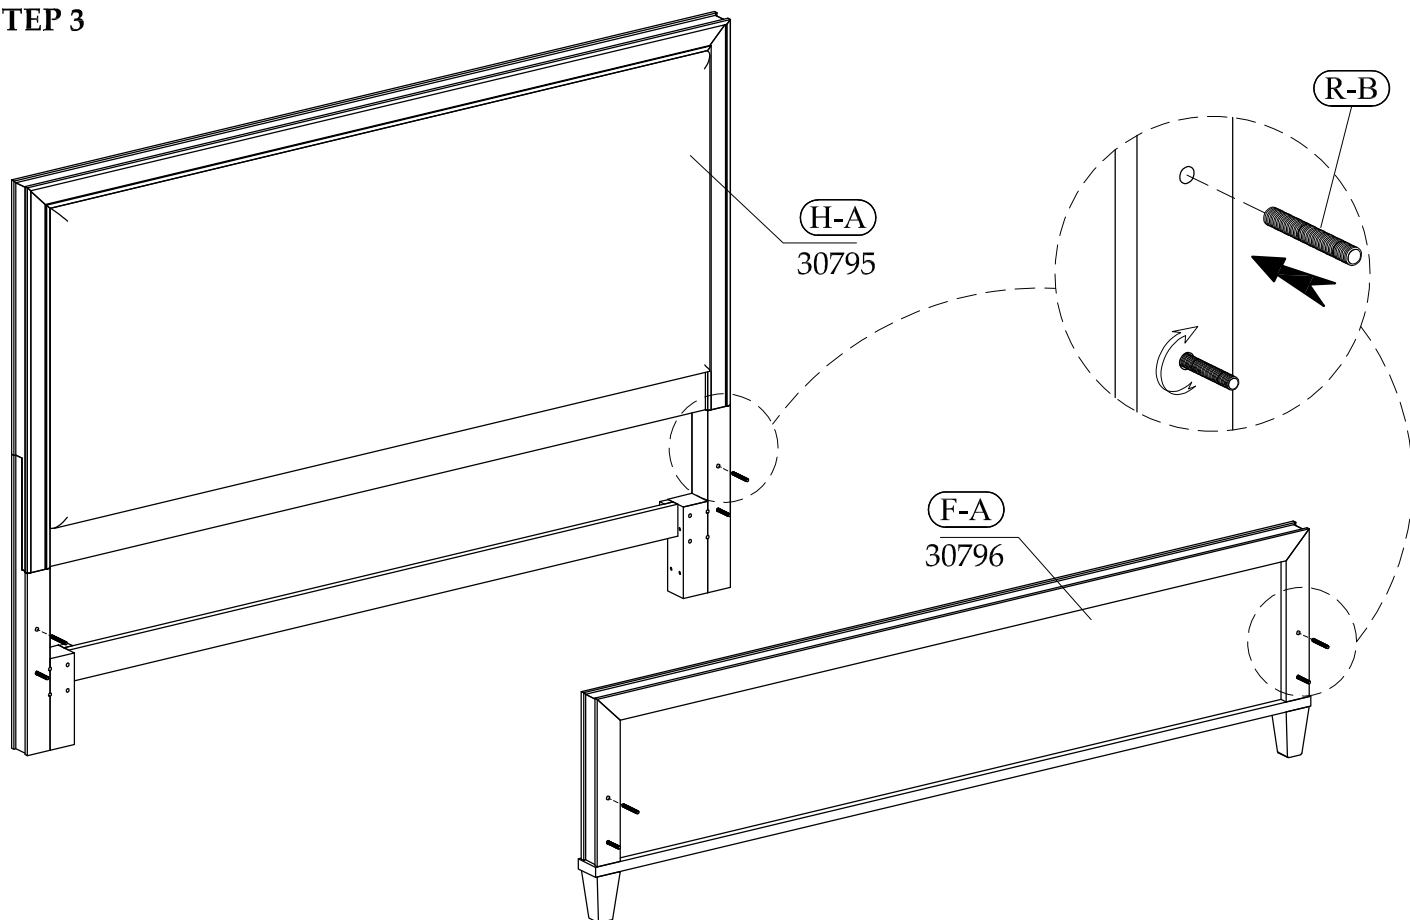


STEP 4

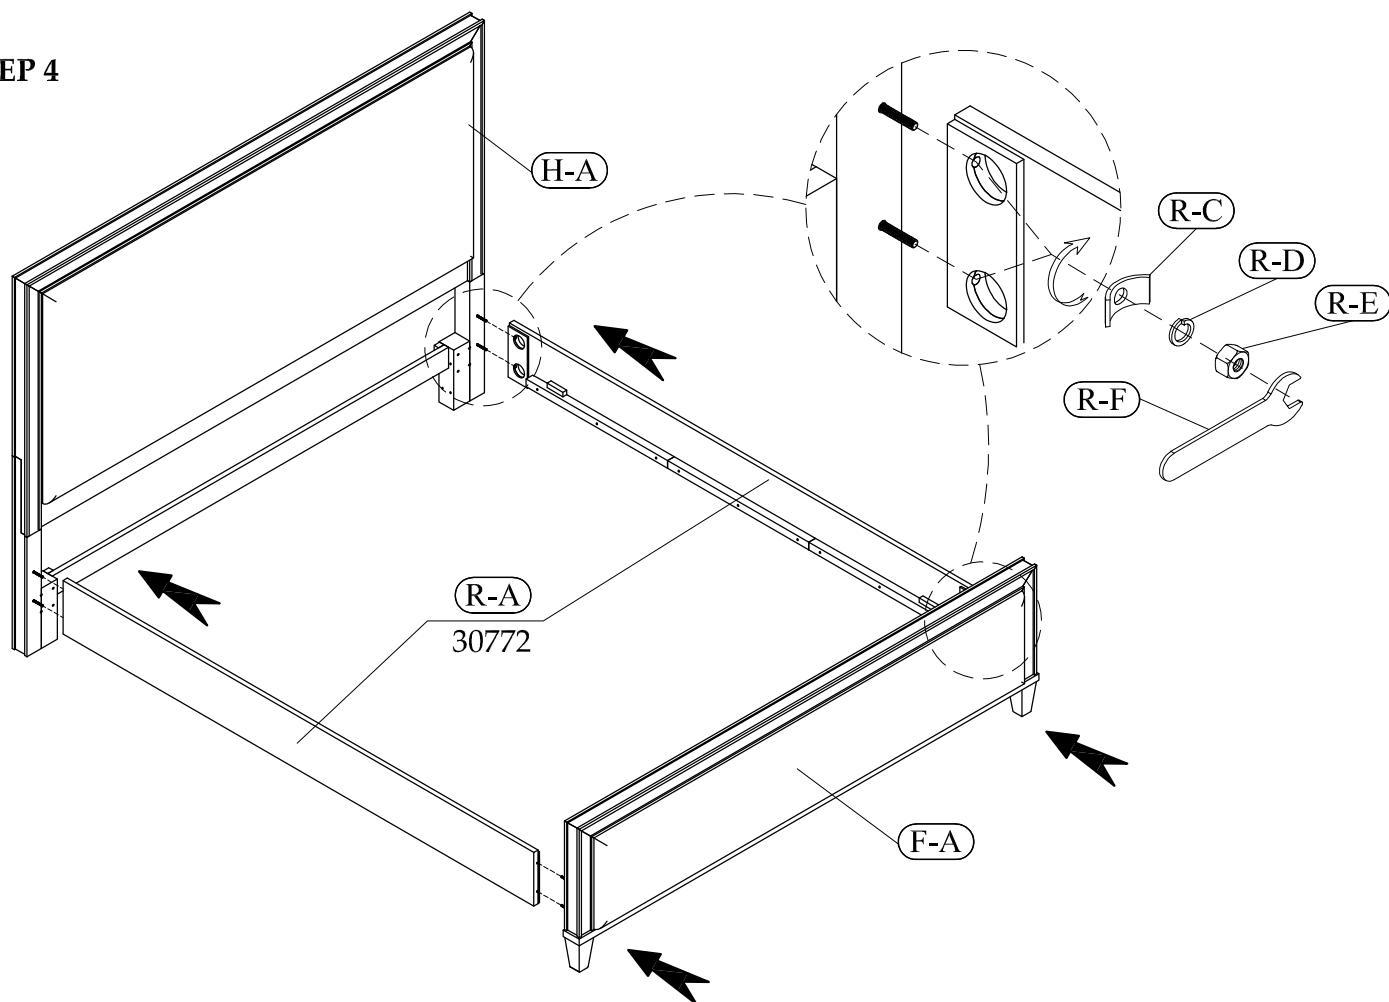

STEP 5

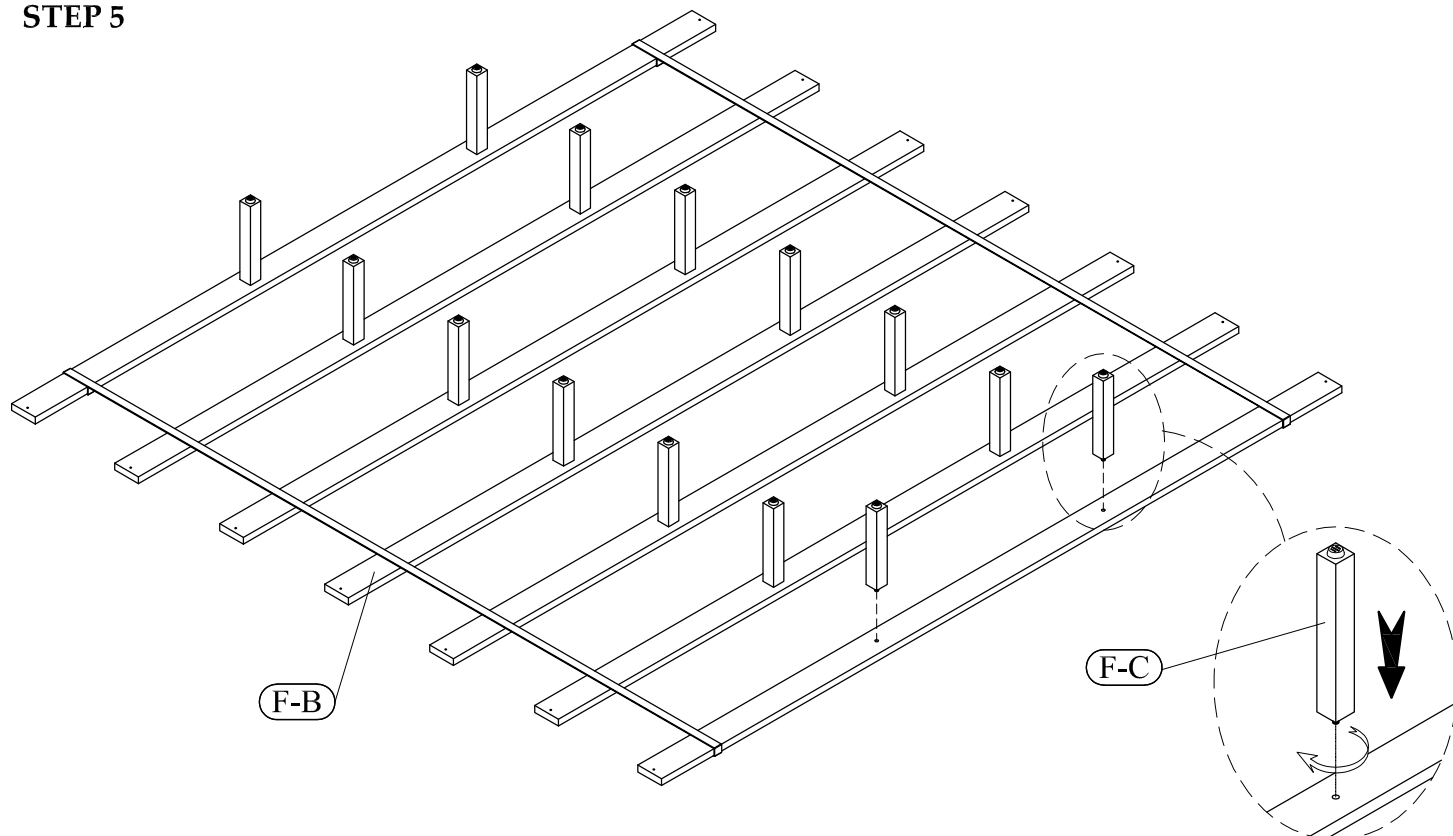


STEP 6

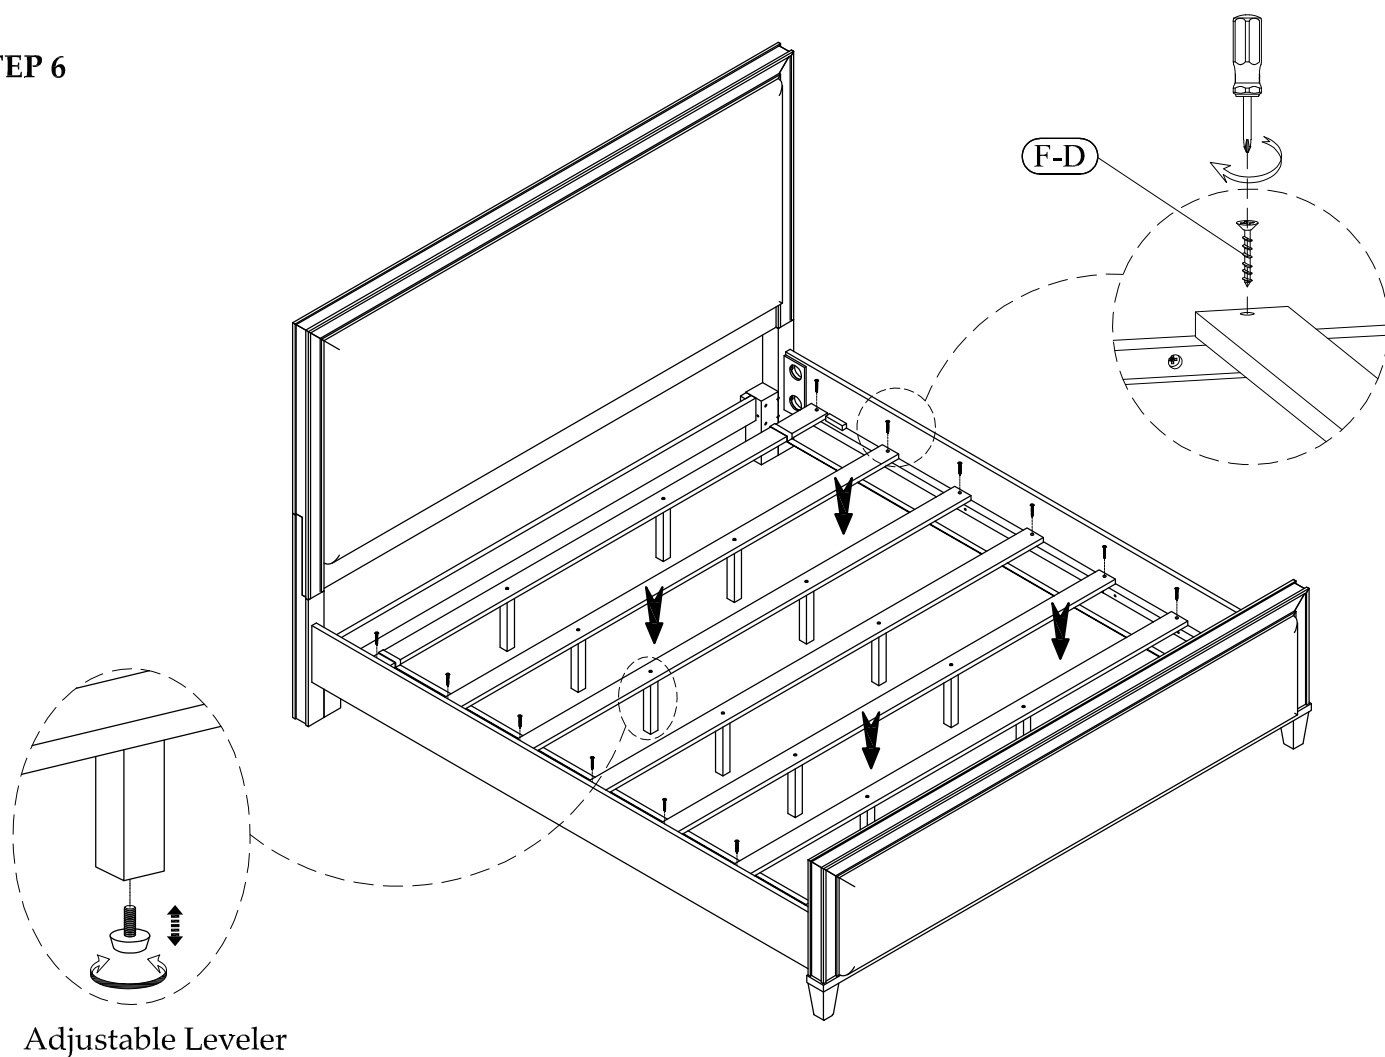

Adjustable Leveler

6/6 King Bed

30795 - 6/6 Upholstered Headboard

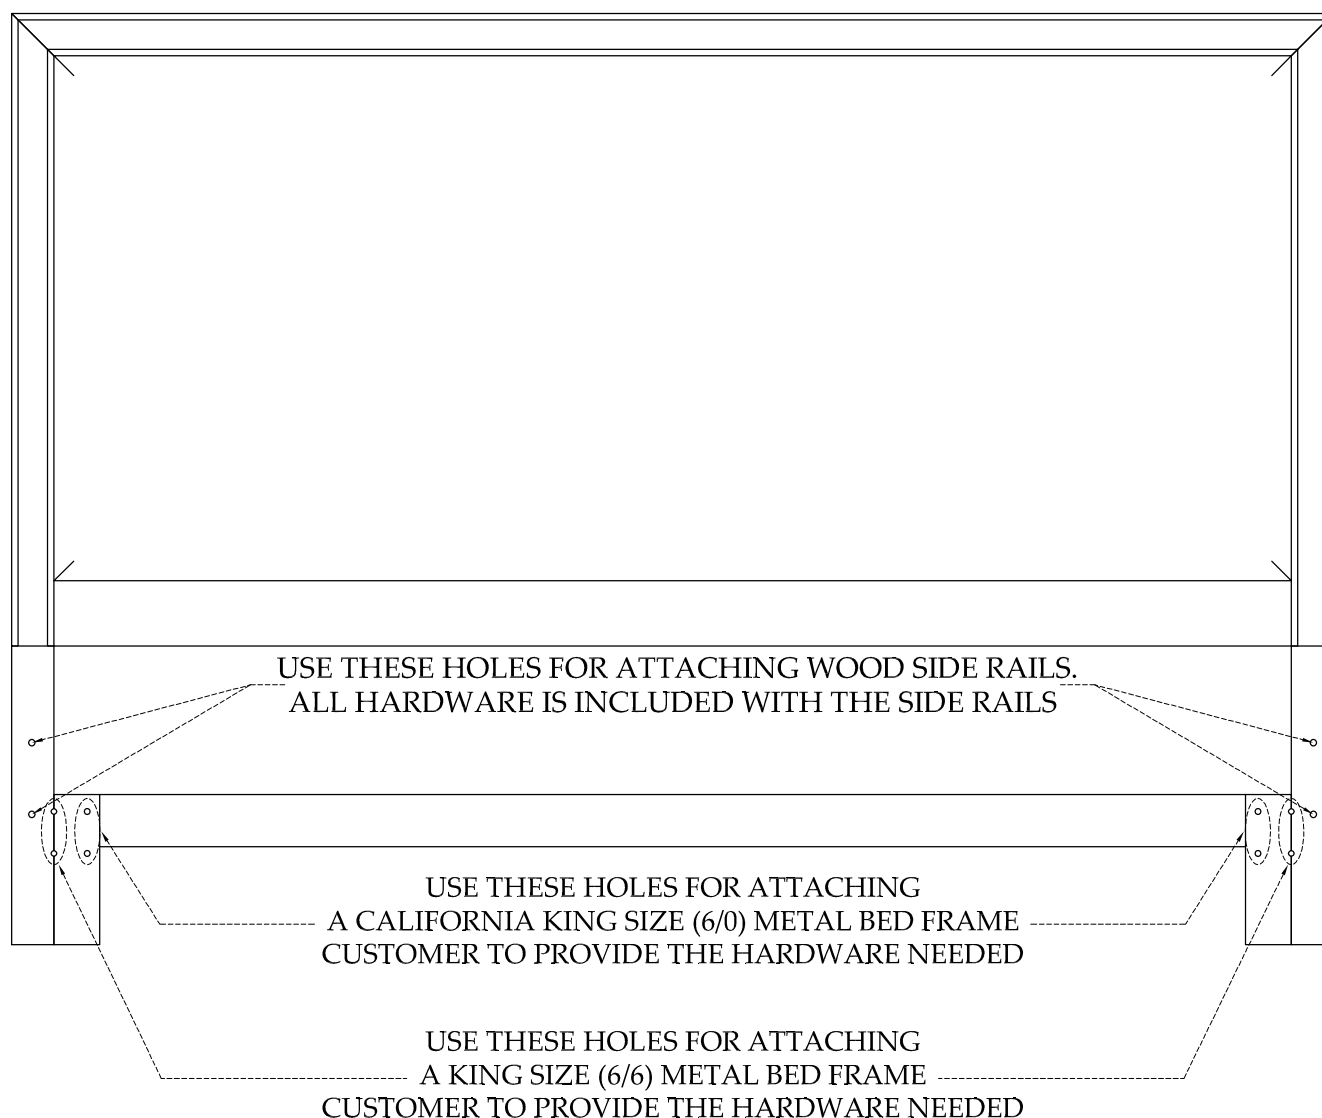

THE HEADBOARD MAY BE USED ALONE WITH
A EASTERN KING OR CALIFORNIA SIZE METAL BED FRAME