# Riverside FURNITURE

email: info@riverside-furniture.com

Dillon Home Office Assembly Instructions


#### Made in Viet Nam


### Warning:


- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture MUST BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.


## 96538 Upholstery Desk Chair



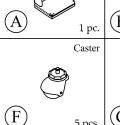


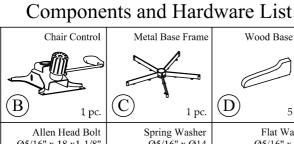





Ø5/16" x Ø18




Pneumatic

Cylinder & Cover










Chair Seat

& Back













Step 1

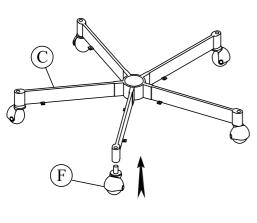

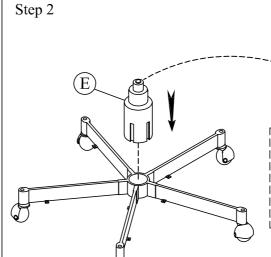

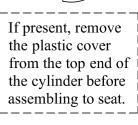



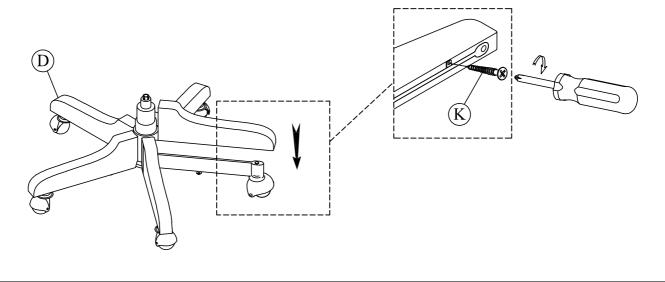

Page 2 of 2

Riverside


email: info@riverside-furniture.com


Dillon Home Office Assembly Instructions

Made in Viet Nam

96538 Upholstery Desk Chair

Step 4

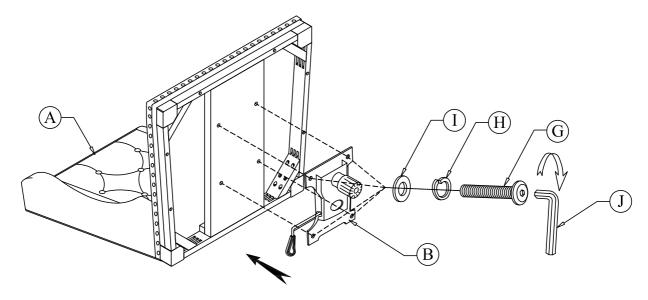

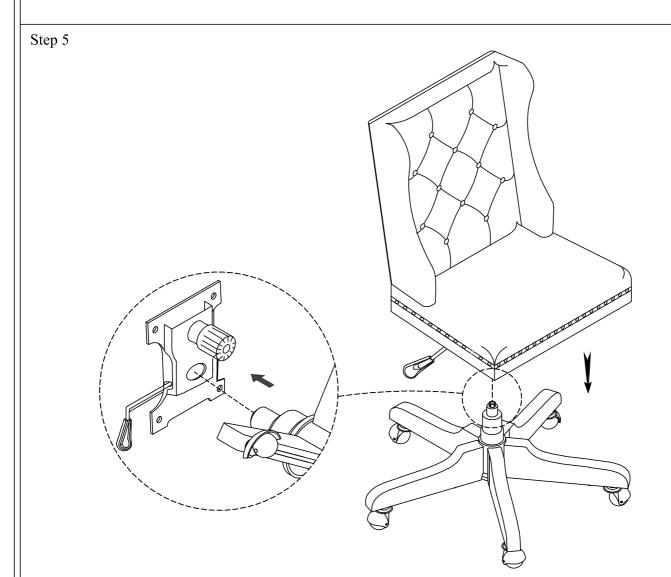

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring. The lift mechanism is in a locked position for shipping. To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.